

SIEMENS

SIMATIC

Industrial PC SIMATIC HMI IPC577C

Operating Instructions

| | |
|--|----|
| Preface | 1 |
| Safety | 2 |
| Description | 3 |
| Application planning | 4 |
| Installing/Mounting | 5 |
| Connecting | 6 |
| Integration into an Automation System | 7 |
| Commissioning | 8 |
| Operation | 9 |
| Functions | 10 |
| Expansions and Configurations | 11 |
| Maintenance and Service | 12 |
| Alarm, error and system messages | 13 |
| Troubleshooting/FAQs | 14 |
| Technical specifications | 15 |
| Dimension drawings | 16 |
| Detailed descriptions | 17 |
| Appendix | A |
| List of abbreviations | B |

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

| |
|--|
| ⚠ DANGER |
| indicates that death or severe personal injury will result if proper precautions are not taken. |
| ⚠ WARNING |
| indicates that death or severe personal injury may result if proper precautions are not taken. |
| ⚠ CAUTION |
| with a safety alert symbol, indicates that minor personal injury can result if proper precautions are not taken. |
| CAUTION |
| without a safety alert symbol, indicates that property damage can result if proper precautions are not taken. |
| NOTICE |
| indicates that an unintended result or situation can occur if the corresponding information is not taken into account. |

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation for the specific task, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

| |
|---|
| ⚠ WARNING |
| Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be adhered to. The information in the relevant documentation must be observed. |

Trademarks

All names identified by ® are registered trademarks of the Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Table of contents

| | | |
|----------|---|-----------|
| 1 | Preface | 9 |
| 2 | Safety | 11 |
| 2.1 | Safety information | 11 |
| 2.2 | General Information | 13 |
| 2.3 | ESD guidelines | 15 |
| 3 | Description | 17 |
| 3.1 | Overview | 17 |
| 3.2 | Configuration of the IPC577C with key panel..... | 18 |
| 3.3 | Configuration of the IPC577C with key panel..... | 20 |
| 3.4 | Connection elements and operator controls | 22 |
| 3.5 | Accessories..... | 24 |
| 3.6 | Windows Embedded Standard 2009 | 25 |
| 3.7 | Windows Embedded Standard 7 | 26 |
| 4 | Application planning | 29 |
| 4.1 | Unpacking and checking the delivery | 29 |
| 4.2 | Device identification data | 30 |
| 4.3 | Affixing Labeling Strips for Function Keys and Softkeys | 31 |
| 4.4 | Ambient and Environmental Conditions..... | 33 |
| 5 | Installing/Mounting | 35 |
| 5.1 | Installation guidelines..... | 35 |
| 5.2 | Permitted mounting positions..... | 37 |
| 5.3 | Preparing the mounting cut-out..... | 38 |
| 5.4 | Fastening and installation types..... | 40 |
| 5.5 | Securing the Device with Clamps | 40 |
| 5.6 | Securing the Device with Screws..... | 42 |
| 6 | Connecting | 45 |
| 6.1 | Connecting the 24 VDC power supply | 45 |
| 6.2 | Connecting the 100 - 240 V AC Power Supply..... | 46 |
| 6.3 | Connecting the equipotential bonding circuit | 49 |
| 6.4 | Connecting peripheral equipment..... | 50 |

| | | |
|----------|---|-----------|
| 7 | Integration into an Automation System | 51 |
| 7.1 | Overview | 51 |
| 7.2 | MPI/PROFIBUS-DP network..... | 52 |
| 7.3 | Connecting an S7 automation system | 52 |
| 7.4 | Networking via Industrial Ethernet | 53 |
| 7.5 | PROFINET | 53 |
| 8 | Commissioning | 55 |
| 8.1 | Note before initial start up | 55 |
| 8.2 | Commissioning Windows Embedded Standard..... | 56 |
| 8.2.1 | Basic commissioning - initial startup | 56 |
| 8.2.2 | Setting up the language selection in Windows Embedded Standard 2009 | 57 |
| 8.2.3 | Language selection in Windows Embedded Standard 7 | 58 |
| 8.3 | Commissioning Windows XP Professional | 59 |
| 8.3.1 | Basic commissioning - initial startup | 59 |
| 8.3.2 | Setting Up the Language Selection | 60 |
| 8.4 | Commissioning Windows 7 | 60 |
| 8.4.1 | Basic commissioning - initial startup | 60 |
| 8.4.2 | Setting Up the Language Selection | 61 |
| 8.4.3 | Recovery of Windows 7 | 61 |
| 8.4.4 | Installing drivers and software | 64 |
| 8.5 | Checking the Language Selection | 65 |
| 8.6 | Setting the panel type | 66 |
| 8.6.1 | First commissioning | 66 |
| 8.6.2 | Touch panel configuration..... | 67 |
| 8.6.3 | Key panel configuration..... | 68 |
| 8.6.4 | Automatic restart..... | 69 |
| 8.7 | Device with key panel | 69 |
| 8.7.1 | Activating KeyTools..... | 69 |
| 8.8 | Device with touch screen | 70 |
| 8.8.1 | Recalibrating the Touch Screen..... | 70 |
| 8.8.2 | Activating the Screen Keyboard..... | 73 |
| 8.9 | Controlling backlighting | 74 |
| 9 | Operation..... | 75 |
| 9.1 | Device with key panel | 75 |
| 9.1.1 | Safety | 75 |
| 9.1.2 | Overview | 76 |
| 9.1.3 | Keys | 77 |
| 9.1.3.1 | Control keys | 77 |
| 9.1.3.2 | Alphanumeric and numeric keys..... | 78 |
| 9.1.3.3 | Cursor keys | 79 |
| 9.1.3.4 | External keyboards | 79 |
| 9.2 | Device with touch screen | 80 |
| 9.2.1 | Overview | 80 |
| 9.2.2 | Using the touch screen | 80 |

| | | |
|-----------|---|-----------|
| 10 | Functions | 81 |
| 10.1 | Overview of the functions..... | 81 |
| 10.2 | Temperature monitoring/display | 82 |
| 10.3 | Watchdog (WD)..... | 82 |
| 10.4 | Enhanced Write Filter (EWF) | 83 |
| 10.5 | File Based Write Filter (FBWF) | 85 |
| 10.6 | HAL Tool | 87 |
| 11 | Expansions and Configurations | 89 |
| 11.1 | Open the device..... | 89 |
| 11.2 | Memory expansion..... | 91 |
| 11.2.1 | Installing the memory module | 91 |
| 11.3 | Installing PCI cards | 92 |
| 11.3.1 | Notes on the modules | 92 |
| 11.3.2 | Installing a PCI card..... | 93 |
| 11.4 | Installing/Removing Compact Flash Cards..... | 94 |
| 11.4.1 | Installation options for Compact Flash cards..... | 94 |
| 11.4.2 | Installing/removing the Compact Flash card in the external slot | 96 |
| 12 | Maintenance and Service | 99 |
| 12.1 | Cleaning the Device Front | 99 |
| 12.2 | Removing and installing hardware components | 99 |
| 12.2.1 | Repairs..... | 99 |
| 12.2.2 | Replace the backup battery | 101 |
| 12.2.3 | Installation/removal of SSD..... | 102 |
| 12.2.4 | Installation/removal of hard disk drive | 105 |
| 12.2.5 | Installing/removing the DVD drive..... | 107 |
| 12.3 | Reinstalling the operating system | 109 |
| 12.3.1 | Windows Embedded Standard 2009 or Windows Embedded Standard 7 | 109 |
| 12.3.1.1 | General installation procedure | 109 |
| 12.3.1.2 | Restoring the software to delivery state using the Restore CD/DVD | 109 |
| 12.3.2 | Windows XP Professional..... | 110 |
| 12.3.2.1 | General installation procedure | 110 |
| 12.3.2.2 | Restoring the software to delivery state using the Restore CD/DVD | 111 |
| 12.3.2.3 | Setting up the operating system via the Recovery DVD..... | 112 |
| 12.4 | Partitioning data media | 114 |
| 12.4.1 | Setting up the partitions under Windows Embedded Standard 2009..... | 114 |
| 12.4.2 | Setting up the partitions in Windows Embedded Standard 7 | 115 |
| 12.4.3 | Setting up the partitions under Windows XP Professional | 115 |
| 12.4.4 | Setting up partitions in Windows 7 Ultimate | 116 |
| 12.4.5 | Adapting partitions in Windows 7 and Windows Embedded Standard 7..... | 116 |
| 12.5 | Installing updates | 117 |
| 12.5.1 | Updating the operating system | 117 |
| 12.5.2 | Installing or updating application programs and drivers | 118 |
| 12.5.3 | Performing a BIOS update..... | 118 |

| | | |
|-----------|---|------------|
| 12.6 | Data backup | 119 |
| 12.6.1 | Creating an image | 119 |
| 12.7 | Installing drivers and software | 119 |
| 12.7.1 | Installing drivers for Windows Embedded Standard 2009 and Windows Embedded Standard 7 | 119 |
| 12.7.2 | Installation of driver and software | 119 |
| 12.8 | CP 1616 onboard | 120 |
| 13 | Alarm, error and system messages | 121 |
| 13.1 | Boot error messages | 121 |
| 14 | Troubleshooting/FAQs | 123 |
| 14.1 | General problems | 123 |
| 14.2 | Problems when using modules of third-party manufacturers | 124 |
| 15 | Technical specifications | 125 |
| 15.1 | General Technical Specifications | 125 |
| 15.2 | Power requirements of the components | 128 |
| 15.3 | Power supply | 129 |
| 15.4 | Keyboard table | 129 |
| 16 | Dimension drawings | 137 |
| 16.1 | Overview of the dimension drawings | 137 |
| 16.2 | Dimension drawing of the touch screen device, 12" display | 138 |
| 16.3 | Dimension drawing of the touch screen device, 15" display | 139 |
| 16.4 | Dimension drawing of the touch screen device, 19" display | 140 |
| 16.5 | Dimension drawing of the key panel device, 12" display | 141 |
| 16.6 | Dimension drawing of the key panel device, 15" display | 142 |
| 17 | Detailed descriptions | 143 |
| 17.1 | Components | 143 |
| 17.1.1 | Overview of internal components | 143 |
| 17.1.2 | Technical features of the motherboard | 144 |
| 17.1.3 | External ports | 144 |
| 17.1.3.1 | COM | 144 |
| 17.1.3.2 | DVI-I | 145 |
| 17.1.3.3 | Ethernet | 146 |
| 17.1.3.4 | PROFIBUS | 147 |
| 17.1.3.5 | PROFINET | 147 |
| 17.1.3.6 | USB | 148 |
| 17.1.3.7 | Compact Flash card interface | 148 |
| 17.1.3.8 | PCI interface | 149 |

| | | |
|----------|---|------------|
| 17.2 | BIOS Setup | 150 |
| 17.2.1 | Overview | 150 |
| 17.2.2 | Starting BIOS Setup..... | 151 |
| 17.2.3 | BIOS Setup menus | 152 |
| 17.2.4 | Main menu | 153 |
| 17.2.5 | Advanced Menu | 159 |
| 17.2.6 | Security menu | 162 |
| 17.2.7 | Boot menu..... | 163 |
| 17.2.8 | Version menu..... | 166 |
| 17.2.9 | Exit Menu | 167 |
| 17.2.10 | Default BIOS Setup entries..... | 168 |
| 17.3 | System resources | 170 |
| 17.3.1 | Currently allocated system resources..... | 170 |
| 17.3.2 | PCI Interrupt Lines | 171 |
| 17.3.3 | PCI Interrupt Lines (Graphics)..... | 173 |
| 17.4 | I/O Address Areas..... | 174 |
| 17.4.1 | Overview of the internal module registers | 174 |
| 17.4.2 | SRAM address register..... | 174 |
| 17.4.3 | SRAM control register (write only, address 066h) | 174 |
| 17.4.4 | General Purpose Ports (GPP) output register (read/write, address 404Dh) | 175 |
| 17.5 | CP 1616 onboard communications processor..... | 176 |
| 17.5.1 | Introduction | 176 |
| 17.5.1.1 | Properties..... | 176 |
| 17.5.1.2 | Network connections..... | 176 |
| 17.5.1.3 | Typical Communication Partners | 177 |
| 17.5.2 | Firmware loader | 178 |
| 17.5.3 | Loading firmware | 179 |
| 17.5.4 | Further actions in STEP 7/NCM PC | 180 |
| A | Appendix..... | 181 |
| A.1 | Guidelines and Declarations..... | 181 |
| A.2 | Certificates and Approvals | 182 |
| A.3 | Service and support..... | 183 |
| B | List of abbreviations..... | 185 |
| B.1 | Abbreviations | 185 |
| | Glossary | 191 |
| | Index..... | 203 |

Preface

Purpose of the Operating Instructions

These operating instructions contain all the information you need for commissioning and operation of the SIMATIC HMI IPC577C.

It is intended both for programming and testing personnel who commission the device and connect it with other units (automation systems, programming devices), as well as for service and maintenance personnel who install add-ons or carry out fault/error analyses.

Basic knowledge required

A solid background in personal computers and Microsoft operating systems is required to understand this manual. General knowledge in the field automation control engineering is recommended.

Scope of the operating instructions

These operating instructions are valid for all devices with order numbers 6AV7 885-... and describes the state of delivery as of October 2010.

Approbations

Information is available in the appendix in Certificates and Approvals (Page 182) .

CE marking

Information is available in the appendix in Guidelines and Declarations (Page 181) .

Standards

For additional information, refer to chapters Application planning (Page 29) and Technical specifications (Page 125).

Position in the information landscape

The documentation for the HMI IPC includes the following sections:

- SIMATIC HMI IPC577C, Operating Instructions (Compact)
- SIMATIC HMI IPC577C, Operating Instructions

The documentation is supplied in German and English with the HMI IPC in electronic form as a PDF file on the "Documentation and Drivers" CD/DVD.

Conventions


The "SIMATIC HMI IPC577C", "control unit" and "computer unit" are uniformly referred to as "device" in these operating instructions. For the designation "CP 1616 onboard" you will see the abbreviation "CP".


In these operating instructions, the term "Windows Embedded Standard" is used consistently as a substitute for the terms "Windows Embedded Standard 2009" and "Windows Embedded Standard 7". The abbreviation "Windows 7" denotes the term "Windows 7 Ultimate".

Note

A note is important information about the product, handling the product or a reference to specific sections of the documentation that require special consideration.

2.1 Safety information


| |
|--|
|  WARNING |
| Emergencies In the event of a device fault, interrupt the supply voltage immediately. Inform the competent customer service personnel. Malfunctions can occur when the operator controls or power cable are damaged or when liquids or foreign objects penetrate the device. |

| |
|--|
|  WARNING |
| Following the results of a risk analysis, additional protection equipment on the machine or the system is necessary to avoid endangering persons. With this, especially the programming, configuration and wiring of the inserted peripherals have to be executed, in accordance with the safety performance (SIL, PL or Cat.) identified by the necessary risk analysis. The intended use of the device has to be ensured. The proper use of the device has to be verified with a function test on the system. This test can detect programming, configuration and wiring errors. The test results have to be documented and if necessary inserted into the relevant inputs. |

Note

This device corresponds to the regulations of the EU low-voltage directive and the GPSG, verified by conformity with national and international standards (DIN EN, IEC) by a UL approval (cULus). Please comply with all the information in these operating instructions when assembling the device.

Electrical connection

| |
|--|
|  WARNING |
| Disconnect the device from the mains before every intervention. Do not touch power lines or data transmission lines during electrical storms and do not connect any cables. |

System expansions

Only install system expansion devices designed for this device. The installation of other expansions can damage the system and violate the safety regulations and guidelines for radio-interference suppression. Contact your technical support team or where you purchased your PC to find out which system expansion devices may safely be installed.

| |
|----------------|
| CAUTION |
|----------------|

| |
|---|
| If you install or exchange system expansions and damage your device, the warranty becomes void. |
|---|

| |
|----------------|
| CAUTION |
|----------------|

| |
|--------------------------------|
| Do not pinch any cables |
|--------------------------------|

| |
|---|
| Be careful when opening and closing the housing cover that you do not pinch any cables. |
|---|

High frequency radiation

| |
|----------------|
| CAUTION |
|----------------|

| |
|---|
| Unintentional operating situations |
|---|

| |
|---|
| High frequency radiation, from cell phones for example, can cause unintentional operating situations under some circumstances. For additional information, see chapter Technical specifications (Page 125) under electromagnetic compatibility. |
|---|

Handling and disposal of lithium batteries

| |
|--|
|  WARNING |
|--|

| |
|---|
| Danger of explosion and the release of harmful substances! |
|---|


| |
|---|
| Do not throw lithium batteries into fire, do not solder onto the cell body, do not open, do not short circuit, do not reverse pole, do not heat above 100 °C, dispose of according to regulations, and protect from direct sunlight, moisture and condensation. |
|---|

| |
|---|
| Replace lithium batteries with the same brand or a brand recommended by the manufacturer. |
|---|

| |
|---|
| Dispose of used lithium batteries as hazardous waste, individually, in accordance with the local regulations. |
|---|

Repairs

Only qualified technical personnel are permitted to repair the device.

| |
|--|
|  WARNING |
| Unauthorized opening of and improper repairs to the device may result in substantial damage to equipment or risk of personal injury to the user. |

2.2 General Information

Overview

| |
|--|
| CAUTION |
| The device must only be operated in closed rooms. Failure to comply nullifies the warranty |

Operate the device only in accordance with the ambient conditions specified in the technical specifications. Protect the device against dust, moisture and heat. Do not place the device in direct sunlight.

Transportation

Unpack the device at the its installation location. Transport the device only in the original packaging. Do not transport the device when it is mounted.

| |
|--|
| NOTICE |
| Adhere to these stipulations each time the device is transported, otherwise the guarantee is void. |


| |
|--|
| CAUTION |
| <p>Condensation When transporting the device at low temperatures, ensure that no moisture gets on or into the device. This also applies if the device is subjected to extreme changes in temperature.</p> <p>Commissioning Allow the device to slowly adjust to room temperature before commissioning the device. However, do not expose the device to direct heat radiation. If moisture condensation occurs, wait at least 12 hours before you switch on the device.</p> <p>Vibration Optical drives are sensitive to vibration. Inadmissible vibration during operation may result in loss of data or damage to the drive or data medium. Before transporting the device, wait at least 20 seconds to allow the drive to stop completely.</p> |

Tools & downloads

Please check regularly if updates and hotfixes are available for download to your device.

Downloads are available on the Internet at After-sales information system for SIMATIC PC/PG (<http://www.siemens.com/asis>).

Safety-relevant applications

| |
|--|
|  WARNING |
| Incorrect operation |
| Do not perform safety-relevant functions of the user software with the touch screen. |

Resistance to chemicals

| |
|---|
| CAUTION |
| Adhere to the information regarding chemical resistance of the panel front. For additional information, refer to the Internet at After-sales information system for SIMATIC PC/PG (http://www.siemens.com/asis) |

Sources of light

| |
|--|
| NOTICE |
| Position the screen so that it is not subject to direct sunlight or other strong sources of light. |

Defective pixels in the display

At present, the manufacturing process of modern displays does not guarantee that all pixels of the display will be perfect. A small number of defective pixels in the display is therefore unavoidable. This does not present a functional problem as long as the defective pixels are not bunched in one location.

Additional information is available in the section Technical specifications (Page 125).

Burn-in effect on TFT displays

A permanent picture with bright images can lead to a burn-in effect on the TFT LCD.

If a screen saver is activated, please observe the following:

- The liquid crystals in screen savers which actuate active black when the backlighting is on, for example, "starfield simulation," renew themselves. Pay attention to the length of time the backlighting is activated
- The following applies to screen savers that turn off the backlighting: Each time the backlighting is turned on, its life is reduced by 50 minutes.

Consider the following carefully:

- Screen saver
- Switch off the backlighting regularly
- Permanent display of the customer application

2.3 ESD guidelines

What does ESD mean?

Almost all electronic modules are equipped with highly integrated components and elements in MOS technology. For technological reasons, these electronic components are very sensitive to overvoltages and, consequently, to electrostatic discharge. These components are therefore marked as follows:

- **ESD: Electrostatically Sensitive Devices**
- **ESD:** Internationally recognized designation for electrostatic sensitive components and modules.

The following symbols on switch cabinets, module carriers or packaging indicate their susceptibility to electrostatic discharge:



ESD components are destroyed by voltage and energy far below the limits of human perception. Voltages of this kind occur as soon as a device or an assembly is touched by a person who is not electrostatically discharged. ESD components which were subject to such voltage are usually not recognized immediately as being defective, because the malfunction does not occur until after a longer period of operation.

Note

More information is located on the rating label. This rating label is described in chapter Application planning (Page 29).

Precautions against electrostatic discharge

Most plastics can be charged easily. Therefore, keep plastics away from ESD components!

When working with electrostatically sensitive components, make sure that the person, the workstation and the packaging are properly grounded. Conduct the electrostatic charge away from your body by touching the mounting plate for the interfaces, for example.

Handling electrostatic sensitive modules

As a rule: Only touch ESD components if unavoidable due to necessary tasks.

Only touch the components when the following holds true:

- You are permanently grounded by means of an ESD armband.
- You are wearing ESD shoes or ESD shoes grounding protective strips in connection with ESD floors.

Before you touch an electronic assembly, your body must be discharged. Touch a conductive object immediately beforehand, e.g. a bare metal part of a switch cabinet or the water pipe.

Do not allow chargeable, highly insulated materials, e.g. plastic films, insulating tabletops, synthetic clothing fibers, to come into contact with ESD components.

Place ESD components only on conductive surfaces (work surfaces with ESD surface, conductive ESD foam, ESD packing bag, ESD transport container).

Do not expose ESD components to visual display units, monitors or televisions. Maintain a distance of at least 10 cm to screens.

Handle flat components only by their edges. Do not touch component connectors or conductors. This prevents charges from reaching and damaging sensitive components.

Measuring and modifying electrostatic sensitive modules

Measure the ESD component under the following conditions only:

- The measuring device is grounded with a protective conductor, for example.
- The probe on the potential-free measuring device has been discharged, e.g. by touching the bare metal of a part of the switch cabinet.
- Your body is discharged. Do so by touching grounded metallic parts.

Solder only with grounded soldering irons.

Shipping electrostatic sensitive modules

Always store or ship ESD components in conductive packaging, e.g. metalized plastic boxes or metal cans. Leave the components and parts in their packaging until installation. If the packaging is not conductive, wrap the ESD component in a conductive material, e.g. rubber foam, ESD bag, household aluminum foil, or paper, before packing. Do not wrap the ESD component in plastic bags or plastic film.

In ESD components containing installed batteries, make sure that the conductive packaging does not touch the battery connectors or short circuit. Insulate the connectors with suitable material.

Description

3.1 Overview

Features

The SIMATIC HMI IPC577C provides high-level industrial performance.

- Compact design
- Rugged

The SIMATIC HMI IPC577C is available with different control units which are distinguished by the size of the display and by the key or touch panel. It is available in the following versions.

Key panel variants


- Backlit color display:
 - 12" TFT technology with 800 x 600 resolution
 - 15" TFT technology with 1024 x 768 resolution
- Membrane keyboard with alphanumeric keys, numeric keys, cursor keys and control keys
- Function keys and softkeys
- Integrated mouse
- Front-mounted USB 2.0 interface for connecting external peripheral devices.

Key panel variants

- Backlit color display
 - 12" TFT technology; 800 x 600 resolution
 - 15" TFT technology; 1024 x 768 resolution
 - 19" TFT technology; 1024 x 1280 resolution
- Front-mounted USB 2.0 interface for connecting external peripheral devices.

3.2 Configuration of the IPC577C with key panel

Front view

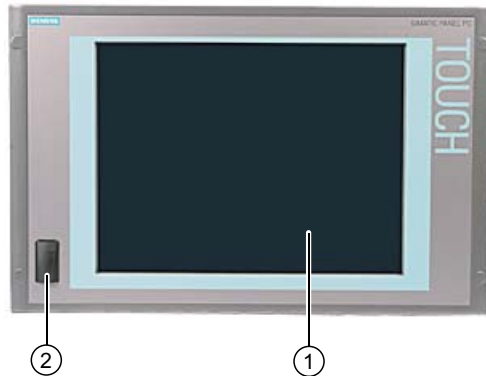


- ① Display / Touch screen
- ② USB port

View from above




- ① Fan

Bottom view

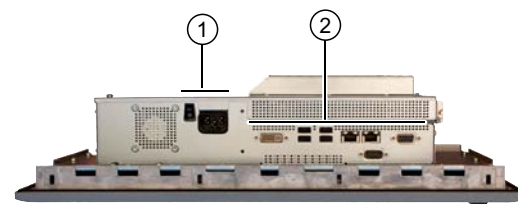


- ① Voltage supply
- ② Interfaces / Connection elements

Rear view

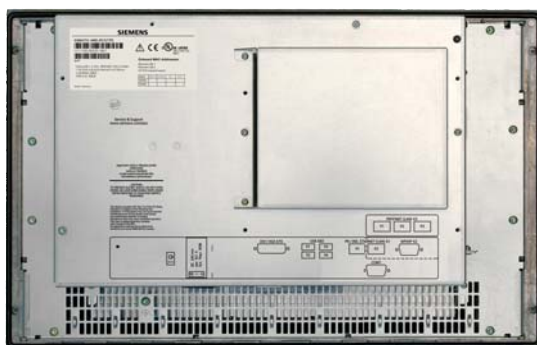


Side view

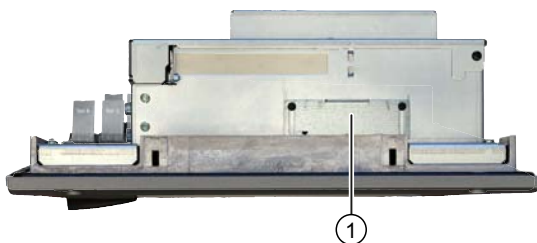

- ① CompactFlash slot (external slot)


3.3 Configuration of the IPC577C with key panel

Front view

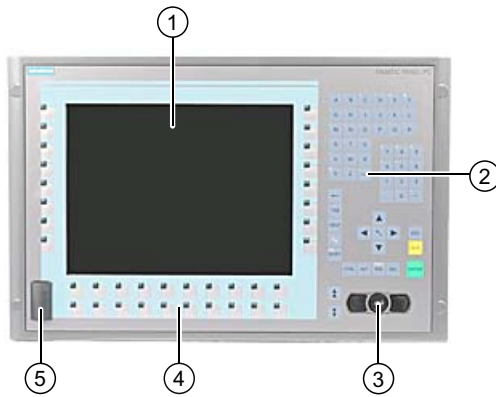


- ① LCD display
- ② Alphanumeric keys, numeric keys, cursor keys and control keys
- ③ Integrated mouse
- ④ Function keys, softkeys
- ⑤ USB port

View from above

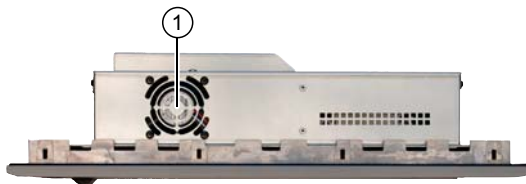


- ① Fan

Bottom view

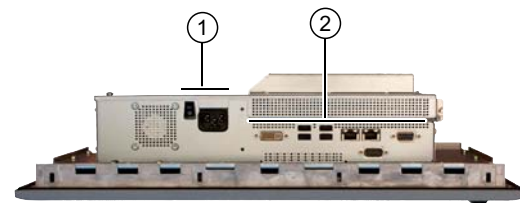

- ① Voltage supply
- ② Interfaces / Connection elements

Side view

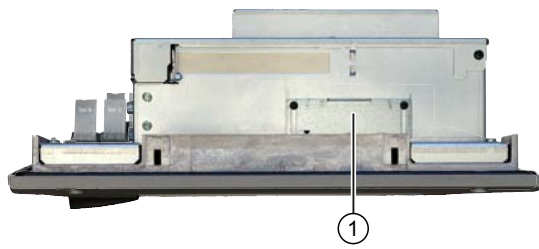

- ① CompactFlash slot (external slot)

Rear view


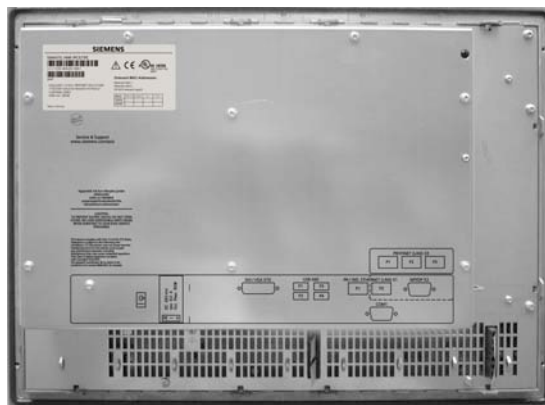


Figure 3-1 Device shown without DVD drive


3.4 Connection elements and operator controls

Connection components of computer unit

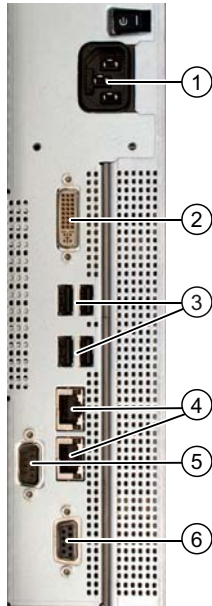

- ① 240 VAC/24 V DC Power supply connection
- ② DVI DVI-I socket
- ③ USB 4 x USB 2.0 / 500 mA connections
- ④ ETHERNET 2 RJ45 Ethernet connections for 10/100/1000 Mbps
- ⑤ COM 1 Serial port 1 (RS232)
9-pin Cannon socket
- ⑥ PROFIBUS DP/MPI PROFIBUS-DP/MPI interface
(RS 485, electrically isolated),
9-pin Cannon socket

Figure 3-2 Variants with PROFIBUS

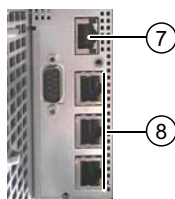

- ⑦ ETHERNET 1 RJ45 Ethernet connection for 10/100/1000 Mbps
- ⑧ PROFINET CP 1616 onboard interface, three RJ-45 jacks

Figure 3-3 Variants with PROFINET

Connection components of the control unit



①

- ① 1 connection USB 2.0 high current / 500 mA under sealed cover (not available with every product variant).

NOTICE

Ensuring degree of protection P65

When the sealed cover over the USB port is removed in order to connect a USB component, the IP65 degree of protection for the device is no longer guaranteed.

Note

Use of USB devices

- Wait at least ten seconds between removal and reconnection of USB devices. This also applies to control units with touch screen panels, especially for touch operation.
- When using standard USB peripherals, bear in mind that their EMC immunity level is frequently designed for office applications only. These devices may be used for commissioning and servicing. However, only industry-standard devices are allowed for industrial operation.
- Peripherals are developed and marketed by individual vendors. The respective manufacturers offer support for the peripherals. Moreover, the terms of liability of the individual vendors or suppliers apply here.

3.5 Accessories

The following accessories are available on order.

| Accessories | Order no. |
|-------------------------|------------------------|
| 2 GB Compact Flash card | 6ES7648 - 2BF02 - 0XF0 |
| 4 GB Compact Flash card | 6ES7648 - 2BF02 - 0XG0 |
| 8 GB Compact Flash card | 6ES7648 - 2BF02 - 0XH0 |
| 1 GB DDR3 memory module | 6ES7648 - 2AH40 - 0AH0 |
| 2 GB DDR3 memory module | 6ES7648 - 2AH50 - 0AH0 |
| 4 GB DDR3 memory module | 6ES7648 - 2AH60 - 0AH0 |
| Touch pen | 6AV7672-1JB00-0AA0 |

Note

Replace CompactFlash card only with replacement card of the same product version.

Only SIMATIC PC CompactFlash cards with product version 02 (ES 02 or higher) can be used with this device.



3.6 Windows Embedded Standard 2009

The supplied Windows Embedded Standard has the product version 2009. The overview shows the basic device functions under Windows Embedded Standard 2009:

| Function | Version HDD / SSD | CompactFlash card version |
|-----------------------------------|--|----------------------------------|
| Enhanced Write Filter (EWF) | In RAM RAM(REG) | In RAM RAM(REG) |
| SIMATIC IPC DiagBase | Available V1.2 | Available V1.2 |
| Pagefile | Deactivated in favor of the EWF | Deactivated in favor of the EWF |
| System Restore Core | Deactivated in favor of the EWF | Deactivated in favor of the EWF |
| File based Writefilter (FBWF) | Available | Available |
| Registryfilter | Available | Available |
| Device Update Agent (DUA) | Available | Available |
| HORM | Available | Available |
| Telnet Server | Available | Available |
| Windows Backup | Available | Available |
| User Mode Driver Framework (UMDF) | Available | Available |
| MUI | GER/FRA/ITA/SPA Default language: English | GER default language: English |
| Administrator Account | Available | Available |
| User Account | Available | Available |
| Explorer Shell | Available | Available |
| Internet Explorer (IE) | Available, IE7 | Available, IE7 |
| Internet Information Server (IIS) | Available V5.1 | Available V5.1 |
| Terminal Services | Available | Available |
| Bluetooth | Available | Available |
| Wireless Network Support | Available | Available |
| Windows Firewall | Available | Available |
| Windows Security Center | Available | Available |
| MSN Explorer | Available | Not available |
| Outlook Express | Available | Available |
| Administrative Tools | Available | Available |
| SMS Advanced Client | Available | Not available |
| Remote Desktop | Available V6.0 | Available V6.0 |
| Remote Assistance | Available | Available |
| .NET Framework | Available, V3.5 | Not available |
| ASP.NET | Available, V3.5 | Not available |
| Windows .NET Messenger | Available V4.7 | Available V4.7 |
| Code pages/User Location/Keyboard | Available | Selection available |
| Disk Management Services | Available | Available |
| Windows Installer Service | Available V3.1 | Available V3.1 |

| Function | Version HDD / SSD | CompactFlash card version |
|-------------------------------|-------------------|---------------------------|
| Class Installer | Available | Available |
| CoDevice Installer | Available | Available |
| Windows Movie Maker | Available V 2.1 | Not available |
| Media Player | Available, V11.0 | Available, V11.0 |
| Windows Media Player Tour | Available | Not available |
| DirectX | V9.0c | V9.0c |
| Accessories | Available | Available |
| Help files for all components | Available | Not available |
| Games | Available | Not available |
| Fonts | 316 | 118 |
| Windows XP Tour | Available | Not available |
| Microsoft Silverlight | Available V 1.0 | Available V 1.0 |
| NetMeeting | Available V 3.1 | Available V 3.1 |

Note**Activation of "HORM" and creation of a "Hiber File"**

When "HORM" is activated, the "Hibernate" function can be used for Windows Embedded Standard 2009:

- EWFMgr C: /activatehorm

"Hibernate" is activated following a restart. The system then always boots from this file.

3.7 Windows Embedded Standard 7

The overview shows the most important device functions under Windows Embedded Standard 7:

| Function | Version HDD / SSD | Compact Flash card version |
|---------------------------------------|-------------------|----------------------------|
| .Net Framework | Available, V3.5 | Available, V3.5 |
| Accessories | Available | Available |
| Aero background | Available | Available |
| Backup and Restore | Available | Available |
| Bluetooth | Available | Available |
| Dialog box filter | Available | Available |
| DirectX and Windows Device Experience | Available, V11 | Available, V11 |
| Domain services | Available | Available |
| Driver database | Available | Not available |
| Driver frameworks | Available | Available |
| Encrypted File System (EFS) | Available | Available |
| Enhanced Write Filter | Available | Available |

| Function | Version HDD / SSD | Compact Flash card version |
|--|-----------------------|----------------------------|
| Fax and Scan | Available | Available |
| File Based Write Filter (FBWF) | Available | Available |
| Fonts | 134 | 48 |
| Help and Support Engine | Available | Available |
| Hibernate Once Resume Many (HORM-EEF) | Available | Available |
| Image Mastering API V2 | Available | Available |
| IME Base Components | Available | Available |
| Internet Explorer | Available, IE 8 | Available, IE 8 |
| Internet Information Server (IIS) | Available, V7.0 | Available, V7.0 |
| Language (Standard) | English ¹⁾ | English ¹⁾ |
| Mobility Center | Available | Available |
| Network and Sharing Center | Available | Available |
| Network Diagnostics | Available | Available |
| Pagefile | Available | Available |
| Printing Utilities and Management | Available | Available |
| Registry Filter | Available | Available |
| Remote Assistance | Available | Available |
| Remote Client | Available | Available |
| Remote Desktop | Available | Available |
| SIMATIC IPC DiagBase | Available, V1.4 | Available, V1.4 |
| Speech | Available | Not available |
| System Management Administrative Tools | Available | Available |
| Telnet Server | Available | Available |
| User Account Control | Available | Available |
| Windows Explorer Shell | Available | Available |
| Windows Firewall | Available | Available |
| Windows Installer | Available | Available |
| Windows Media Player | Available, V12 | Available, V12 |
| Windows PowerShell 2.0 | Available | Available |
| Windows Search and Natural Language 6 | Available | Available |
| Windows Security Center | Available | Available |
| Windows Update | Available | Available |
| Wireless Networking | Available | Available |

1) Note the licensing agreements for Windows Embedded Standard 7.

Additional information on language selection is available in section Language selection in Windows Embedded Standard 7 (Page 58).

Description

3.7 Windows Embedded Standard 7

Application planning

4.1 Unpacking and checking the delivery

Procedure

1. Please check the packaging material for transport damage upon delivery.
2. If any transport damage is present at the time of delivery, lodge a complaint at the shipping company in charge. Have the shipper confirm the transport damage immediately.
3. Unpack the device.

CAUTION

Do not lie the device on its back. This will avoid any damage to an optical drive which may be present. Lie the front side on a soft surface to avoid damaging the front panel USB port.

4. Keep the packaging material in case you have to transport the unit again.

NOTICE

The packaging protects the device during transport and storage. Therefore, never dispose of the original packaging material!

5. Please keep the enclosed documentation in a safe place. You will need the documentation when you start up the device for the first time.
6. Check the package contents for completeness and any visible transport damage. Check for completeness using the enclosed scope of delivery list.
7. Should the contents of the package be incomplete or damaged, please inform the responsible supply service immediately and fax us the enclosed form "SIMATIC IPC/PG quality control report".

 **WARNING**

Make sure that a damaged device is not installed nor put into operation.

8. Note the identification information as described in the section Device identification data (Page 30).

4.2 Device identification data

The device can be clearly identified with the help of this identification data in case of repairs or theft.


Enter the following data in the table below:

- Serial number: The serial number (S VP...) is found on the rating plate.


SIMATIC HMI IPC577C rating plate

SIEMENS

SIMATIC HMI IPC577C






6AV7885-XXXXX-XXXX




SVPWO123456

AC 110/230V Industrial PS with Namur
Core2Duo 1.86GHz, PROFIBUS DP12,2x1GBit
1 GByte DDR3 533 SODIMM
DVD-RW-Laufwerk
1st mass storage: 80 GB HDD

Made in Germany

US LISTED
IND. CONT. EQ.
69B1



N117

Onboard MAC-Addresses:

Ethernet LAN:
Ethernet LAN:
CP1616 onboard Layer2:

| MOD | MECH | GRBG | SV | FW |
|------|------|------|----|----|
| VERS | | | | |
| AEND | | | | |


- Order number of the device
- Ethernet addresses:
 - The Ethernet addresses of the device can be viewed in the BIOS Setup (F2) under "Main > Hardware Options > Onboard Ethernet Address".

COA label

Microsoft Windows "Product Key" from the "Certificate of Authenticity" (COA):

A COA label is only attached to the rear panel of devices with preinstalled Windows Embedded Standard 2009, Windows Embedded Standard 7, Windows 7, or XP Professional.

The Windows Embedded Standard operating system is installed on the device shown here with the COA label.



The Windows XP Pro operating system is installed on the device shown here with the COA label.



| | |
|--|--------------|
| Serial number: | S VP ... |
| Order No. | 6AV7 885-... |
| Microsoft Windows Product Key | |
| Ethernet address 1 | |
| Ethernet address 2 (not for PROFINET versions) | |
| CP 1616 onboard MAC address layer 2 | |
| CP 1616 onboard Mac address PROFINET | |

4.3 Affixing Labeling Strips for Function Keys and Softkeys

Note

The following table applies only to devices with a key panel.

The control unit has two horizontal and two vertical keypads for the function keys and the softkeys. Assign user specific functions to the keys as needed. You can mark these keys with labeling strips. A4 films for creating the labeling strips are available as accessories.

Proceed as follows to affix the labeling strips:

Preparing the labeling strips

1. Label the DIN A4 film with a laser printer, for example using the printing templates provided on the Documentation and Drivers CD.
2. Cut the labeling strips along the pre-printed lines.

Note

Do not insert handwritten labeling strips until the ink has dried.

Affixing the labeling strips

Insert the labeling strips into the slots provided on the rear of the control unit.



- ① Labeling strips, vertical keypads
- ② Labeling strips, horizontal keypads

Figure 4-1 15" touch screen device: Rear of device with labeling strips

4.4 Ambient and Environmental Conditions

When you plan your project, you should make allowances for:


- The climatic and mechanical environmental conditions specified in the specifications given in your operating instructions.
- The device is approved for operation in closed rooms only.
- Avoid extreme ambient conditions. Protect the device against dust, moisture and heat.
- Do not place the device in direct sunlight.
- Always maintain a minimum clearance of 100 mm to components installed above or underneath the device, or to the walls of an enclosure.
- Do not cover the ventilation slots of the device.
- Always observe the mounting positions permitted for this device.
- The device with DC power supply does not fulfill the requirements according to EN 60950-1 in the power supply unit area. The device must therefore be installed in such a way as is part of an operating area with restricted access (e.g. a locked control cabinet, control panel or server room).
- The connected or added peripherals must not introduce a counter emf greater than 0.5 V into the device.

| |
|--|
|  WARNING |
|--|

| |
|--|
| Failure to adhere to these conditions when mounting the system voids the approvals based on UL 60950-1, UL 508 and EN 60950-1! |
|--|

5.1 Installation guidelines

Before installing the device, read the following general notes relating to installation.

| |
|--|
|  WARNING |
| Danger, high voltage Isolate the power supply to the control cabinet before opening it. Ensure that the power to the control cabinet cannot be turned on accidentally. |

| |
|--|
| CAUTION |
| The device is approved for operation in closed rooms only. |

| |
|--|
| NOTICE |
| Adhere to the SIMATIC assembly guidelines and the relevant DIN/VDE requirements or the country-specific regulations when mounting in control cabinets. |

- Ensure that the protective contact socket of the building installation is easily accessible and that there is a mains disconnect switch in control cabinet installations.

| |
|---|
| NOTICE |
| Ensure that the device is classified as "Open Type" when using the device in the area of Industrial Control Equipment (UL508). A UL508 conform enclosure is therefore a mandatory requirement for approval or operation according to UL508. |

- Provide adequate volume in the control cabinet for air circulation and heat transport. Keep at least 10 cm distance between the device and control cabinet.
- Ensure that the maximum air intake temperature, measured 10 cm before the air intake opening, does not exceed 45° C. The maximum air intake temperature must be accounted for especially when sizing closed control cabinets.
- The minimum distance between the device and the housing is 10 cm on the air output side at the fan.
- Ensure there is enough free space in the control cabinet to allow the sheet metal cover to be removed. You will otherwise have to remove the device from the control cabinet or swivel arm when replacing memory or the battery.
- Equip the control cabinet with struts for stabilizing the mounting cut-out. Install struts where necessary.

- Avoid extreme ambient conditions. Protect your device against dust, moisture and heat.
- Install the device in such a way that it poses no danger, for example, by falling over.
- During assembly, please comply with the approved installation positions.

NOTICE

If you mount the device in an impermissible installation position or you do not observe the environmental conditions (see chapter Technical specifications (Page 125)), you endanger the product safety provided by the UL-approval and compliance with the low-voltage directive (via EN 60950-1). In addition, the functionality of the device is no longer guaranteed.



WARNING

Function test while installing the device in machines or execute systems

Following the results of a risk analysis, additional protection equipment on the machine or the system is necessary to avoid endangering persons. With this, especially the programming, configuration and wiring of the inserted peripherals have to be executed, in accordance with the safety performance (SIL, PL or Cat.) identified by the necessary risk analysis. The intended use of the device has to be ensured.

The proper use of the device has to be verified with a function test on the system. This test can detect programming, configuration and wiring errors. The test results have to be documented and if necessary inserted into the relevant inputs.

- Position the screen in an ergonomic position favorable to the user. Choose a suitable installation height.
- Position the screen so that it is not subject to direct sunlight or other strong sources of light.


Additional information is available in the section Dimension drawings (Page 137).

5.2 Permitted mounting positions

Mounting positions

Only vertical installation with two mounting directions of up to +45° and -45° is permitted for the device.

With installed Compact Flash card

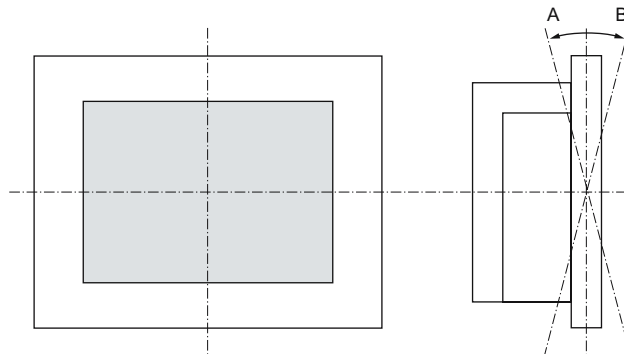

| Temperature at the device | | Angle A | Angle B |
|---------------------------|------------|---------|---------|
| Rear | Front | | |
| 0° - 50°C ¹⁾ | Max. 40°C | +45° | -45° |
| 0° to 45°C | 0° to 45°C | +45° | -45° |

¹⁾ = Installation according to RAL (Restricted Access Location)
(installation of device in operating facilities with restricted access, for example, a locked control cabinet)


| |
|--|
| ⚠ WARNING |
| The device with DC power supply does not fulfill the requirements according to EN 60950-1 in the power supply unit area. The device must therefore be installed in such a way that it is part of an operating area with restricted access (e.g. a locked control cabinet, control panel or server room). |

Mechanical environmental conditions

- Vibration
 - Operation, tested in accordance with DIN IEC 60068-2-6
10 to 58 Hz: 0.075 mm 58 to 200 Hz: 0.5 m/s²
 - Storage/transport, tested according to IEC 60068-2-27, IEC 60068-2-29
50 m/s², 30 ms,
250 m/s², 6 ms,

5.3 Preparing the mounting cut-out

The following illustration shows the dimensions for the mounting cut-out.

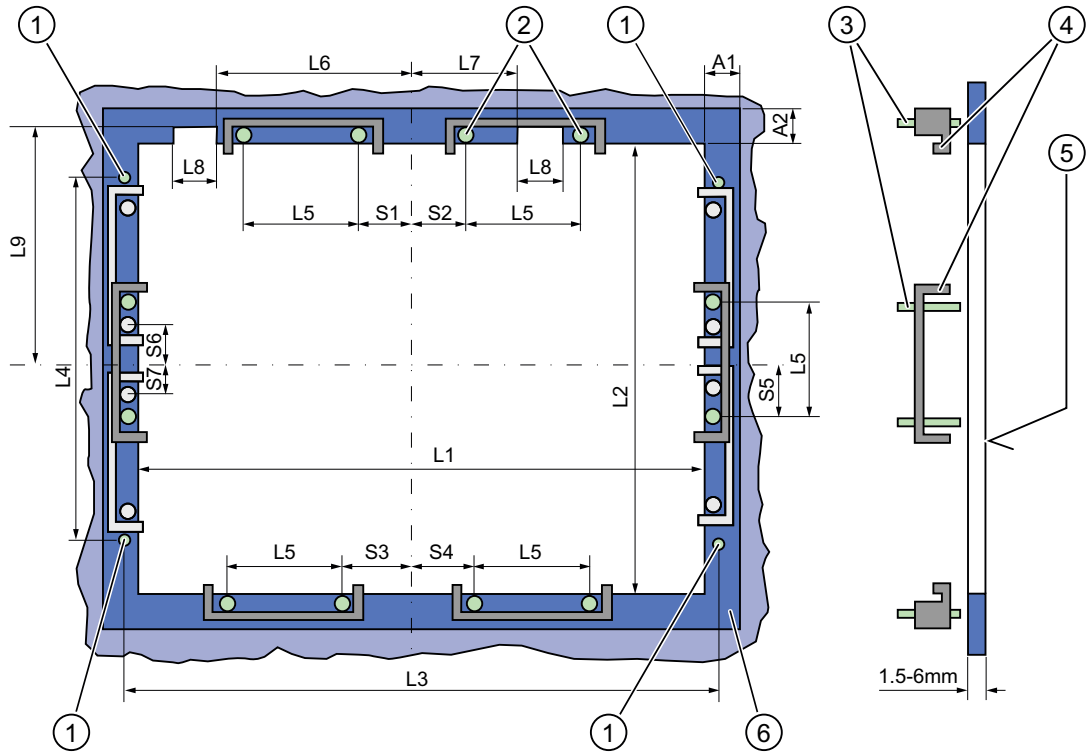

- | | |
|-------------------------------------|-----------------------------|
| (1) Drill hole for screw attachment | (4) Clamp |
| (2) Pressure points for clamp | (5) Rz 120 in the seal area |
| (3) Setscrews | (6) Seal area |

Figure 5-1 Drill holes for the screws and pressure points for the clamp screws

Note

Mounting dimensions can be read from the dimension overview or they can be transferred to the cabinet from the mounting template supplied.

Table 5- 1 Dimensions for the mounting cut-out in mm

| Control unit | L1 | L2 | L3 ¹⁾ | L4 ¹⁾ | L5 | L6 ²⁾ | L7 ²⁾ | L8 ²⁾ | L9 ²⁾ | A1 | A2 | S1 | S2 S3 S4 | S5 ³⁾ | S6 ³⁾ S7 ³⁾ |
|------------------|-----------|-----------|------------------|------------------|-------------|------------------|------------------|------------------|------------------|-----------|-----------|-----------|----------------|------------------|--------------------------------------|
| Tolerance | ±1 | +1 | ±0,2 | ±0,2 | ±0,5 | ±0,5 | ±0,5 | ±0,5 | +1 | ±1 | ±1 | ±1 | ±1 | ±1 | ±1 |
| Key panel | | | | | | | | | | | | | | | |
| 12" TFT | 450 | 290 | 465 | 235 | 112 | — | — | — | — | 16 | 10 | 78 | 78 | 56 | — |
| 15" TFT | 450 | 321 | 465 | 279 | 112 | 186 | 135 | 25 | 165 | 16 | 17 | 51 | 51 | 56 | — |
| Touch panel | | | | | | | | | | | | | | | |
| 12" TFT | 368 | 290 | — | — | 112 | — | — | — | — | 16 | 10 | 19 | 35 | 56 | — |
| 15" TFT | 450 | 290 | 465 | 235 | 112 | — | — | — | — | 16 | 10 | 81 | 81 | 56 | — |
| 19" TFT | 450 | 380 | 465 | 235 | 112 | — | — | — | — | 16 | 10 | 46 | 46 | — | 46 |

1) M6 thread or drill holes with a diameter of 7 mm

2) Cut-outs for the shafts of the insert strips are only necessary for 15" key panels.

3) Two clamps necessary for vertically securing clamps only for 19" touch panel fronts.

Preparing the mounting cut-out

| Steps for preparing the mounting cut-out | |
|--|---|
| 1. | Select a location suitable for mounting, taking into account the mounting position. |
| 2. | On the basis of the dimensions, check whether the required screw and pressure points on the rear and the seal area are easily accessible after the completion of the mounting cut-out. Otherwise the mounting cut-out is useless. |
| 3. | Complete the mounting cut-out in accordance with the dimensions. |

5.4 Fastening and installation types

Mounting methods

You can install the device by three methods:

- In a 19" rack
- On a swivel arm
- In a switchgear cabinet

Type of fixation

You can fasten the device by two methods:

- With clamps Clamp and grub screws are included in the contents of delivery.
- With screws

Note

You cannot use screws to secure the device variant with the 12" touch screen variant.

5.5 Securing the Device with Clamps

You require 6 clamps in order to mount the device. These are supplied with the device.

Required tool for fastening the clamps: Allen wrench 2.5 mm



Figure 5-2 Clamp assembly

Rack installation

| Steps for fastening the device with clamps | |
|--|--|
| 1. | Follow the installation instructions. |
| 2. | Disconnect the device from the power supply. |
| 3. | Working from the front, insert the device into the 19" rack. |
| 4. | Fasten the control unit in the rack from the rear using the clamps. Tighten the setscrews to a torque of 0.4-0.5 Nm. |

Swivel arm installation

| Steps for fastening the device with clamps | |
|---|--|
| 1. | Follow the installation instructions. |
| 2. | Disconnect the device from the power supply. |
| 3. | Working from the front, place the device onto the swivel arm. |
| 4. | Fasten the control unit on the swivel arm from the rear using the clamps. Tighten the setscrews to a torque of 0.4-0.5 Nm. |

Control cabinet installation

| Steps for fastening the device with clamps | |
|---|---|
| 1. | Follow the installation instructions. |
| 2. | Disconnect the device from the power supply. |
| 3. | Working from the front, insert the device into the mounting cut-out. |
| 4. | Secure the control unit in the mounting cut-out from behind with the clamps, as shown in the mounting cut-out in the dimensions. Tighten the setscrews to a torque of 0.4-0.5 Nm. |

IP65 degree of protection

The IP65 degree of protection is only provided for a clamp mounting together with a ring seal.

| NOTICE |
|---|
| Control cabinet installation: Material strength at the mounting cut-out Please ensure that the material strength at the mounting cut-out is a maximum of 6 mm. The degree of protection can only be guaranteed when the following requirements are met: 1. The material strength at the mounting cut-out must be at least 2 mm. 2. The deviation from the plane of the mounting cut-out in relation to the external dimensions for an installed HMI device is ≤ 0.5 mm. |

See also

Preparing the mounting cut-out (Page 38)

5.6 Securing the Device with Screws

IP54 degree of protection

This degree of protection is ensured for screw mounting.

| |
|---|
| NOTICE |
| Control cabinet installation: Material strength at the mounting cut-out |
| Please ensure that the material strength at the mounting cut-out is a maximum of 6 mm. Please note the specifications for the dimensions. |
| The degree of protection can only be guaranteed when the following requirements are met: 1. The material strength at the mounting cut-out must be at least 2 mm. 2. The deviation from the plane of the mounting cut-out in relation to the external dimensions for an installed HMI device is ≤ 0.5 mm. |

Note

Securing with screws is not possible with the 12" touch screen variant.

Required tool for fastening with screws: 7 mm drill

| |
|---|
| NOTICE |
| Only use the catalog-listed mounting material (order number 6AV7672-8KE00-0AA0) for 19" devices for screw mounting. |

| |
|---|
| NOTICE |
| Risk of damage |
| Ensure that no metal cuttings enter the device when the holes are drilled. Cover the device with film or when drilling, use removal by suction. |

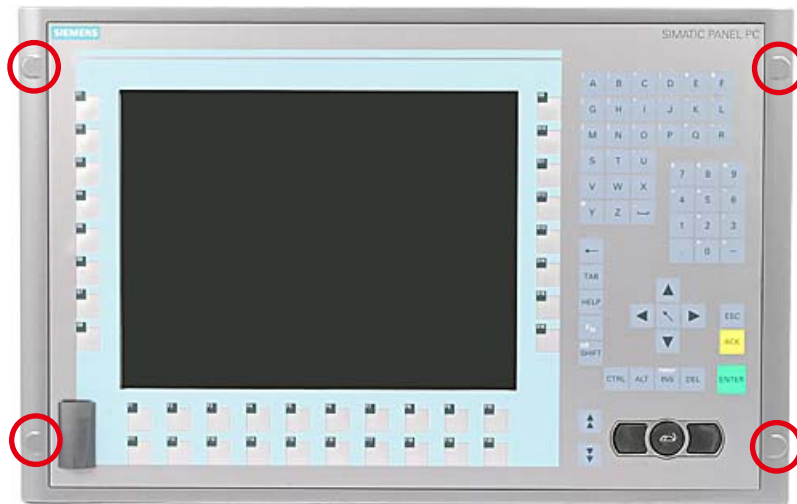


Figure 5-3 Designated location for holes on the control unit

Rack installation

| Steps for fastening the device with screws | |
|--|--|
| 1. | Follow the installation instructions. |
| 2. | Carefully drill the respective holes in the control unit at the designed location from the rear. |
| 3. | Working from the front, insert the device into the 19" rack. |
| 4. | Secure the control unit by inserting suitable screws through the holes and attaching nuts. |

Swivel arm installation

| Steps for fastening the device with screws | |
|--|--|
| 1. | Follow the installation instructions. |
| 2. | Carefully drill the respective holes in the control unit at the designed location from the rear. |
| 3. | Working from the front, place the device onto the swivel arm. |
| 4. | Secure the control unit by inserting suitable screws through the holes and attaching nuts. |

Control cabinet installation

| Steps for fastening the device with screws | |
|--|--|
| 1. | Follow the installation instructions. |
| 2. | Drill suitable holes at the prepared installation cut-out in accordance with the specifications for L4 and L5, as shown at the dimensions in the mounting cut-out. |
| 3. | Carefully drill the respective holes in the control unit at the designed location from the rear. |
| 4. | Working from the front, insert the device into the mounting cut-out. |
| 5. | Secure the control unit by inserting suitable screws through the holes and attaching nuts. |


See also


Preparing the mounting cut-out (Page 38)

6.1 Connecting the 24 VDC power supply

To be noted before you connect the device

Note the following in order to operate the device safely and according to regulation:

| |
|---|
|  CAUTION |
| Power is on The On/Off switch does not isolate the device from mains voltage. Always disconnect the power cord to isolate the device from mains voltage. |


| |
|---|
|  WARNING |
| The device should only be connected to a 24V DC power supply which satisfies the requirements of safe extra low voltage (SELV). You will also have to connect a protective earth conductor. The cable cross section must withstand the short-circuit current of the 24 VDC power source so that a short-circuit will not damage the cable. Connect only cables with a minimum cross-section of 1.3 mm ² (AWG16) and a maximum cross-section of 3.3 mm ² (AWG12). |

| |
|---|
| NOTICE |
| The 24V DC power source must be adapted to the input data of the device (see the technical specifications in the operating instructions). |

| |
|--|
| NOTICE |
| If a CompactFlash card is used in the device, make sure that the card is seated correctly before you connect it. |

Connecting the devices

| Steps for connecting the device to the 24 V DC power supply | |
|---|--|
| 1. | Switch off the 24 V DC power source. |
| 2. | Connect the DC plug (1) DC 24 V (2) ground (3) protective conductor |

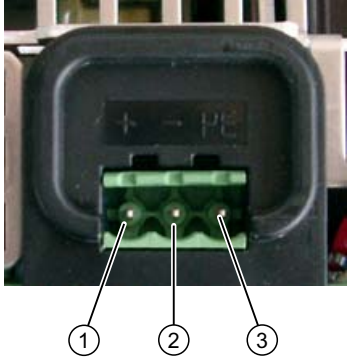

Power consumption

The power consumption at 24 V can be up to 90 W, depending on device.

Note equipotential bonding

A low-impedance earth connection ensures that interference signals generated by external power supply cables, signal cables or cables to the peripherals are safely discharged to earth.

Connect the equipotential bonding as described in section Connecting the equipotential bonding circuit (Page 49).

See also

Technical specifications (Page 125)

6.2 Connecting the 100 - 240 V AC Power Supply

General connection information

Note the following in order to operate the device safely and according to regulation:

Note

Voltage range

The varying voltage power supply module is designed for operation on 100 to 240 V AC networks. It is not necessary to adjust the voltage range.

NOTICE**Risk of damage**

Do not connect or disconnect power and data cables during thunderstorms.

**WARNING****Power supply network**

The device is designed for operation on grounded power supply networks (TN networks to VDE 0100, Part 300, or IEC 60364-3).

It is not designed for operation on ungrounded or impedance-grounded power networks (IT networks).

NOTICE**Permitted mains voltage**

The permitted nominal voltage of the device must conform with local mains voltage.

NOTICE**Power disconnection**

The mains connector must be disconnected to fully isolate the device from mains. Ensure easy access to this area.

A master mains disconnect switch must be installed if the device is mounted in a switch cabinet.

Always ensure free and easy access to the power inlet on the device or that the safety power outlet of the building installation is freely accessible and located close to the device.

NOTICE

If a Compact Flash card is used in the device, be sure that the card is properly installed before you connect it.

Note**Power Factor Correction**

The power supply contains an active PFC (Power Factor Correction) circuit to conform to the EMC guidelines.

Uninterruptible AC power systems (UPS) must supply a sinusoidal output voltage in the normal and buffered mode when used with SIMATIC PCs with an active PFC.

UPS characteristics are described and classified in the standards EN 50091-3 and IEC 62040-3. Devices with sinusoidal output voltage in the normal and buffered mode are identified with the classification "VFI-SS-...." or "VI-SS-....".

Country-specific connection information

For the USA and Canada:


For the United States and Canada, a CSA or UL-listed power cord must be used. The connector must be compliant with NEMA 5-15. Country-specific mains leads are available as accessories.

- **100 V supply voltage**
Use a flexible power cord which is approved to UL and CSA, and which has the following features: Type SJT with three leads, min. 18 AWG conductor cross-section, max. length 4.5 m, parallel grounding plug 15 A, min. 125 V.
- **240 V AC supply voltage**
To be used is a flexible power cord approved to UL and with CSA label, and which has the following features: Type SJT with three conductors, min. 18 AWG conductor cross-section, max. length 4.5 m, and tandem grounded connector 15 A, min. 250 V.


For countries other than the USA and Canada:

- **240 V supply voltage**
This device is equipped with a safety-tested power cord which may only be connected to ground contact power outlet. If you choose not to use this cable, you must use a flexible cable of the following type: Min. 18 AWG conductor cross-section and 15 A / 250 V shock-proof connector. The cable set must be compliant with safety regulations and stipulated IDs of the country where the system is to be installed.

Connecting the device

| | |
|---|----------------|
|  | WARNING |
| Risk of electric shock | |
| The On/Off switch does not isolate the device from mains voltage. | |
| Always disconnect the power cord to isolate the device from mains voltage. | |

| Steps for connecting the device to the 100 - 240 VAC power supply | |
|--|--|
| 1 | Turn off the AC power source: <ul style="list-style-type: none"> • Turn the power switch to the "Off" position (red marking). • Disconnect the power cord. |
| 2 | Insert the power cable in the electrical socket. |

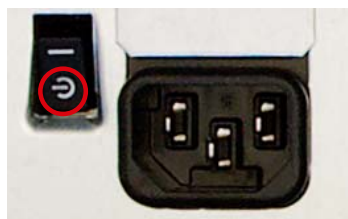

Power consumption

The power consumption at 240 V can be up to 90 W, depending on device.

6.3 Connecting the equipotential bonding circuit

Avoiding differences in potential

Differences in potential arise between separated system parts, which in some cases leads to high equalization currents. This situation may arise if the cable shielding is, for example, terminated at both ends and grounded at different system parts. Potential differences can be caused, for example, by different power inputs.

Reduce the differences in potential by laying the equipotential bonding cables in such a way that the affected electronic components function properly. Observe with the following guidelines when setting up equipotential bonding:

- The lower the impedance of the equipotential bonding cable, the greater the effectiveness of the equipotential bonding.
- When two system parts are connected by means of a shielded signal cable, and their shields are both connected to the ground or protected conductor, the following must be observed: The impedance of the additional equipotential bonding cable amounts to 10% of the shield impedance, at the most.
- Make sure that the equipotential bonding cable cross section is selected to accommodate the maximum equalization current.
- Use equipotential bonding conductors made of copper or galvanized steel. Connect the cables to the ground or protective conductor over a wide area. Protect the ground or protective conductor from corrosion.
- Lay the equipotential bonding cable in such a way that the area between the equipotential bonding cable and signal cables is as small as possible.

A low-impedance earth connection ensures that interference signals generated by external power supply cables, signal cables or cables to the peripherals are safely discharged to earth.

The connection for the equipotential bonding of the device is located at the connection elements of the computer unit and is identified by the following symbol:

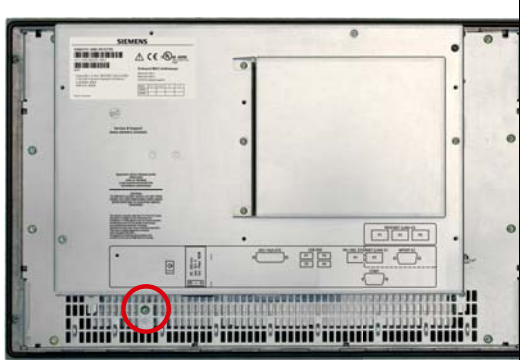


Figure 6-1 Equipotential bonding

Procedure

Required tool: TORX T20 screwdriver.

| Steps for connecting the equipotential bonding | |
|--|--|
| 1. | <p>Connect the equipotential bonding terminal (M4 thread) on the device (large surface, large-area contact) with the central grounding point of the control cabinet.</p> <p>The minimum conductor cross-section may not be less than 5 mm².</p> |



6.4 Connecting peripheral equipment

| |
|--|
| NOTICE |
| Ensure suitability for industrial applications |
| Connect only peripheral devices approved for industrial applications conforming to EN 61000-6-2 / IEC 61000-6-2. |

Note
Peripheral devices capable of hot-plugging (USB)
Hot-plug peripheral devices (USB) may be connected while the PC is in operation.

| |
|---|
| CAUTION |
| Peripheral devices incapable of hot-plugging |
| Peripheral devices that are incapable of hot-plugging may only be connected after the device has been disconnected from the power supply. |

| |
|---|
| CAUTION |
| Strictly adhere to the specifications for peripheral devices. |

Note
Strain relief
Use the eyes for connection strain relief on the device rear via cable ties.

Integration into an Automation System

7.1 Overview

Introduction

The following options are available for integrating the device in existing or planned system environments and networks.

Ethernet

The integrated Ethernet interface can be used for communication and for data exchange with automation devices such as SIMATIC S7.

You require suitable software for this: STEP 7, WinCC, WinCC flexible, WinAC, SIMATIC NET.

PROFIBUS/MPI

The isolated PROFIBUS interface can be used to connect distributed field devices or to link with SIMATIC S7.

You require suitable software for this: STEP 7, WinCC, WinCC flexible, WinAC, SIMATIC NET.

PROFINET

The CP 1616 onboard enables Panel PCs to be connected to Industrial Ethernet. Only one CP 1616 can be installed in a PC. Detailed information can be found in the next section or in the chapter *Detailed descriptions > CP 1616 onboard communications processor*.

Device driver CP16xx.sys

The device driver enables the Windows network protocols to be connected to the Ethernet PROFINET controller "CP 1616 onboard" which is optional on the SIMATIC PCs. The PROFINET interface will act like a 100 Mbit Ethernet interface with a MAC address when you use this driver. The three RJ45 sockets are connected with each other via a switch.

The drivers and documentation can be found in the user manual on the supplied Documentation and Drivers CD/DVD.

PROFINET IO application

You can create, run or configure PROFINET IO applications with the "Development Kit DK-16xx PN IO". It must be installed in addition to the device driver CP 16xx.sys. You can download this kit and the documentation free of charge at DK-16xx PN IO development kit (http://www.automation.siemens.com/net/html_00/produkte/040_cp_1616_devlopkit.htm).

SIMATIC NET

You can create, run and configure the SIMATIC installation with this software package. Information on this can be found on the SIMATIC NET Manual Collection CD. The software package and the documentation are not included in the package.

Additional information

Additional information is available in the catalog and in the Internet via Industrial Automation and Drive Technologies (<http://mall.automation.siemens.com>) .

7.2 MPI/PROFIBUS-DP network

You can connect the device to a SIMATIC S7 automation system or a PROFIBUS DP network via the MPI/DP interface. You can connect up to 32 PC, PG, or AS devices to one network segment. The use of repeaters allows you to interconnect several MPI/PROFIBUS DP network segments. The complete MPI/PROFIBUS DP network consists of a maximum of 127 stations.

The device is physically connected to the MPI/PROFIBUS DP network via an electrically isolated RS485 interface on the PC motherboard. The potential is isolated within the safety low voltage circuit (SELV).

The transmission rate is limited to 187.5 Kbps with the 5-meter MPI cable for connecting to the SIMATIC S7-CPU. To achieve baud rates over 1.5 Mbps, you require a 12 Mbps PROFIBUS cable with the order number 6ES7901-4BD00-0XA0. In the PROFIBUS DP MPI network, you can achieve data transmission rates of 9.6 Kbps to 12 Mbps.

7.3 Connecting an S7 automation system

Coupling

The device is coupled via the MPI/DP interface as follows:

- With MPI networks S7-200, S7-300, and S7-400
- PROFIBUS DP networks with DP components

Hardware requirements

You can use the following components for coupling or networking with PROFIBUS:

- RS 485 interface, MPI/DP interface, onboard
- PROFIBUS cable

Note

Refer to the SIMATIC Net catalog IK PI for more information about SIMATIC Net expansion cards.

Procedure

1. Disconnect the device from the mains.

| |
|----------------|
| CAUTION |
|----------------|

| |
|--------------------------------------|
| Risk of damage to the device! |
|--------------------------------------|

| |
|--|
| Neutralize the static charge of your body, the device, and the connecting cables. You can do this by briefly touching the metal housing with the cable in your hand. |
|--|

2. Insert the PROFIBUS cable in the MPI/DP socket.
3. Reconnect the device to the electrical power system.

7.4 Networking via Industrial Ethernet

You can establish a network between the device and other computers via Industrial Ethernet. The on-board LAN interface is a twisted-pair (TP) interface for data transfer rates of 10/100/1000 Mbps.

| |
|---------------|
| NOTICE |
|---------------|

| |
|--|
| A category 6 Ethernet cable is required for 1000 Mbps operation. |
|--|

7.5 PROFINET

CP 1616 onboard

The basic characteristics of the CP 1616 onboard are:

- Optimized for PROFINET IO
- With Ethernet-Real-Time-ASIC ERTEC 400
- Three RJ45 sockets for connecting terminal devices or addition network components
- Integrated 3-port real-time switch
- Automatic hardware detection

Additional documentation on PROFINET

Get an overview of the information available on the topic of PROFINET.

| Document designation | What is contained in this document? |
|---|--|
| This documentation is not included in the product package: | |
| Getting Started PROFINET IO Getting Started: Manual Collection | The documents use concrete examples to provide step-by-step instructions on how to commission a fully functional application. |
| Manual PROFINET System Description | This gives you the basic knowledge about the PROFINET IO topics: Network components, data exchange and communication, PROFINET IO, Component Based Automation, application example of PROFINET IO and Component Based Automation. |
| Manual From PROFIBUS DP to PROFINET IO | Read this document if you want to convert an installed PROFIBUS system to a PROFINET system. |
| Readme file for CP 1616/CP 1604 and DK-16xx PN IO | This provides the latest information about the SIMATIC NET products CP 1616/CP 1604, CP 1616 onboard, the developer kit. |
| Configuration Manual Commissioning PC Stations | This provides you with all the information necessary for commissioning and configuring a PC as a PROFINET IO Controller or IO Device. |
| Manual SIMATIC NET Industrial Communication with PG/PC: Volume 1 - Basics SIMATIC NET Industrial Communication with PG/PC: Volume 2 - Interfaces | This manual introduces you to industrial communication and explains the available communication protocols. It also describes the OPC interface as an alternative to the IO-based user programming interface. |
| S7 CPs for Industrial Ethernet Configuring and Commissioning | This provides the following support: - For commissioning S7 stations - For establishing effective communication |
| Manual SIMATIC NET - Twisted Pair and Fiber-Optic Networks | Configure and build your Industrial Ethernet networks based on this document. |
| This documentation is part of the supplied Documentation and Drivers CD: | |
| Operating Instructions CP 1616/CP 1604/CP 1616 onboard | This provides you with all information required for operation. |
| Installation guide Device Driver CP16xx.sys | Read this guide if you want to install the NDIS device driver, CP16xx.sys. |

Further information

You can find the information on specific products in the Internet at the address: Product-related information SIMATIC NET (<http://www.siemens.com/simatic-net>) .

8.1 Note before initial start up

Check list

Before starting up the device for the first time, go through the following checklist:

- Have you taken into account the proper ambient and environmental conditions for the device, as described in the specifications?
- Have you connected the equipotential bonding if required?
- Have you checked that the power supply is connected correctly and that the values are appropriate?
- Read over this information in the chapter Connecting (Page 45) of the operating instructions. Please follow all guidelines.

CAUTION

Condensation

When transporting the device at low temperatures, ensure that no moisture gets on or into the device. This also applies if the device is subjected to extreme changes in temperature. Wait 12 hours before switching the device on.

Allow the device to slowly adjust to room temperature before commissioning the device. Do not subject the device to direct heat radiation from devices such as heaters.

NOTICE

Windows Embedded Standard 2009 and Windows Embedded Standard 7: Observe the EWF rules

A configurable write filter (Enhanced Write Filter) is made available for Windows Embedded Standard 2009 and Windows Embedded Standard 7. Please observe the EWF rules during commissioning, since a data loss may otherwise occur.

Delivery state

The following operating systems are available for the IPC577C:

- Windows Embedded Standard 2009 is pre-installed on CompactFlash card, or SSD, or hard disk
- Windows XP Professional (32-bit) pre-installed on SSD or hard disk
- Windows Embedded Standard 7 pre-installed on CompactFlash card, or SSD, or hard disk
- Windows 7 Ultimate (32-bit) pre-installed on SSD or hard disk

8.2 Commissioning Windows Embedded Standard

8.2.1 Basic commissioning - initial startup

Requirement

- The device is connected to the power supply.
- The equipotential bonding is connected.
- The cables are correctly plugged in.

Setting up the operating system

Note

Initial commissioning of Windows Embedded Standard 2009

System startup can take longer than usual for the initial commissioning. Only a blue screen is displayed for several minutes.

The devices with Touch Panel require a USB mouse for commissioning.

On completion of the **initial** startup of the computer, the operating system on the CompactFlash card, or Solid State Drive (SSD), or hard disk is set up automatically on the computer.

Proceed as follows:

1. Switch the device on using the On/Off switch. The PC performs a self-test (POST). During the self-test, this message appears:
`Press <F2> to enter SETUP or <ESC> to show the boot menu`
2. Wait until this message is cleared, then follow the instructions on the screen.

| |
|---|
| NOTICE |
| The device may not be switched off at any time during the installation process. Do not change the default BIOS settings, otherwise the operating system setup may become corrupted. |

3. Restart
After you have entered all the necessary information and the operating system is configured, you are prompted to restart the system. Acknowledge this prompt with **Yes**.

Note

System startup can take longer than usual for the initial commissioning. The screen will display "FBResseal Resealing in progress..." for several minutes.

Note

Errors and warnings can be displayed in the status bar, with the first and second switch on of the initial commissioning or after a restore procedure. This will have no effect on the device functions.

As of now, the operating system automatically opens its user interface immediately upon completion of the startup sequence.

Note

To prevent data loss, it is advisable to create an image of your system partition after basic commissioning.

Switching off the device

When you work with Windows Embedded Standard, always shut down the PC with the command **Start > Shut Down**.

Note

The Enhanced Write Filter should be enabled following the installation of Windows Embedded Standard on a CompactFlash card, or SSD, or hard disk.

8.2.2 Setting up the language selection in Windows Embedded Standard 2009

Windows Embedded Standard 2009 offers the option of selecting the menu and dialog languages. You can select the German and English languages.

Setting up the language selection

Windows Embedded Standard 2009 is set up by default with English menu and dialog language and US international keyboard layout. You can change the language in the Control Panel by selecting:

Start > Settings > Control Panel > Regional and Language Options > Languages tab, Language used in menus and dialogs field.

In addition to the menu and dialog language, select **Regional and Language Options** and set the default to **non-Unicode programs** in the **Advanced** section.

8.2.3 Language selection in Windows Embedded Standard 7

Changing languages is possible using the Restore CD/DVD (forms part of the scope of delivery). The CD/DVD contains the required language packages and help for changing the system language.

Note

Note the license terms of Windows Embedded Standard 7

Please note the license terms for Windows Embedded Standard 7 and especially the extended SIEMENS AG Software terms for Windows Embedded Standard 7.

You can find the license terms in the delivered document "MICROSOFT SOFTWARE LICENSE TERMS for Windows Embedded Standard 7(E)" and in the system drive under \\Windows\System32\license.rtf.

Change system language

To change the language for Windows Embedded Standard 7, follow these steps:

Prerequisite:

The "Legacy USB Support" option has to be set to "Enabled" in the Advanced menu of the BIOS so that the device can address a USB CD-ROM drive.

1. Connect a USB CD-ROM drive to the device.
2. Insert the Restore CD/DVD in the drive, restart the device and when the BIOS message:
`Press <F2> to enter Setup or <ESC> to show Boot menu`
appears, press the F2 key.
3. Select the Boot menu and move the entry "CD-ROM Drive" to the first position.
4. End the BIOS setup with the "Exit Saving Changes" entry.
5. Follow the on-screen instructions.
6. After selecting the menu dialog language of the Restore CD/DVD, select the menu entry "Select language packages".

Depending on the current language setup, you have the following options in the "Select language packages" menu:

- Display language settings
- Install language
- Change language
- Remove the "Non-system language".

Note

The "Install language or Deinstall language" process can take several minutes.

Note

The "Legacy USB Support" option has to be set to "Enabled" in the **Advanced menu** of the **BIOS** so that the device can address a USB CD-ROM drive.

See also

Advanced Menu (Page 159)

8.3 Commissioning Windows XP Professional

8.3.1 Basic commissioning - initial startup

Setting up the operating system

When the computer starts up for the **first** time, the Windows XP Professional operating system preinstalled on the HDD or SSD will be configured automatically on the computer. Proceed as follows:

1. Connect the device to the 24 V DC / 100 - 240 V AC power supply. The PC performs a self-test (POST). During the self-test, this message appears:

Press <F2> to enter SETUP or <ESC> to display the boot menu

2. Wait until this message is cleared, then follow the instructions on the screen.

| |
|---|
| NOTICE |
| The device may not be switched off at any time during the installation process. Do not change the default BIOS settings, otherwise the operating system setup may become corrupted. |

3. Automatic restart
After you have entered all necessary information and the operating system is configured, the PC is automatically restarted and displays the user interface of the respective operating system.

Note

System startup can take longer than usual during initial commissioning.

When you switch on the PC now, the user interface of the Windows XP Professional operating system is automatically opened when the startup routine is completed.

Note

To prevent data loss, it is advisable to create an image of your system partition after you have completed initial commissioning.

Switching off the device

When you work with Windows XP Professional, always shut down the PC with the command **Start > Turn Off Computer**.

8.3.2 Setting Up the Language Selection

The Multilanguage User Interface (MUI) allows you to set up the Windows XP Professional menus and dialogs for additional languages.

Setting up the language selection

The default setting on your device is Windows XP MUI with English menus and dialog boxes and a US keyboard layout. You can change the language in the Control Panel by selecting

Start > Control Panel > Regional and Language Options Languages, tab **Language used in menus and dialogs** field.
For the **Regional and Language Options** set the default as **non-Unicode programs** under **Advanced** in addition to the language for menus and dialogs.

8.4 Commissioning Windows 7

8.4.1 Basic commissioning - initial startup

Setting up the operating system

When the computer starts up for the **first** time, the Windows 7 operating system preinstalled on the HDD or SSD will be configured automatically on the computer. Proceed as follows:

1. Connect the device to the 24 V DC / 100 - 240 V AC power supply. The PC performs a self-test (POST). During the self-test, this message appears:

Press <F2> to enter SETUP or <ESC> to display the boot menu

2. Wait until this message is cleared, then follow the instructions on the screen.

| |
|---|
| NOTICE |
| The device may not be switched off at any time during the installation process. Do not change the default BIOS settings, otherwise the operating system setup may become corrupted. |

3. Automatic restart

After you have entered all necessary information and the operating system is configured, the PC is automatically restarted and displays the user interface of the respective operating system.

Note

System startup can take longer than usual during initial commissioning.

As of now, the Windows 7 operating system automatically opens its user interface immediately on completion of the startup sequence.

Note

To prevent data loss, it is advisable to create an image of your system partition after you have completed initial commissioning.

Switching off the device

To shut down the PC in Windows 7, always select **Start > Turn Off Computer**.

8.4.2 Setting Up the Language Selection

The **Multilanguage User Interface (MUI)** supports changes of the Windows 7 menu and dialog language.

Setting up the language selection

The default setting on your device is Windows 7 MUI with English menu and dialog language and US keyboard layout. You can change the language in the Control Panel by selecting:

Start > Control Panel > Regional and Language Options **Languages**, tab **Language used in menus and dialogs** field.
In addition to the menu and dialog language, select **Regional and Language Options** and set the default to **non-Unicode programs** in the **Advanced** section.

8.4.3 Recovery of Windows 7

There is a full graphical user interface available for recovery of Windows 7. It may take several minutes before the first input window appears. In this window, you can set the time and currency formats and select the keyboard language.

English is the basic language and other languages can be installed later with the MUI. The MUI is on the recovery DVD.

Now follow the on-screen instructions. It may take several minutes before the next prompt for the product key is displayed.


Note

Due to the previous activation, you do not need to enter the product key (COA number). This is entered automatically during the installation.


Setting up and formatting partitions


After you have installed a new HDD or SSD, or if partitions are faulty, or when you wish to change the partitioning on your HDD or SSD, you need to create or reconfigure partitions on the HDD or SSD.

In the next dialog box, you can set up the HDD or SSD according to your requirements and add controllers that are not yet known to the system.

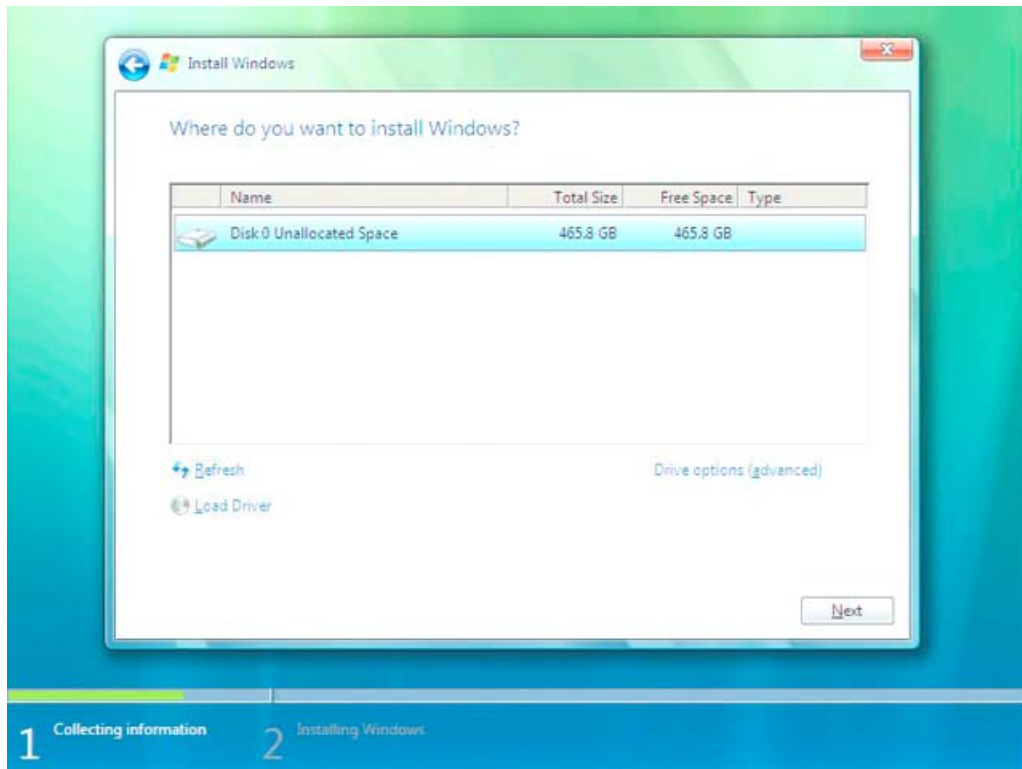

| Options | Meaning |
|--------------------------|--|
| Drive options (advanced) | Additional functions will be displayed with which you can set up the HDD or SSD. |
| Load Driver | To implement new drivers |

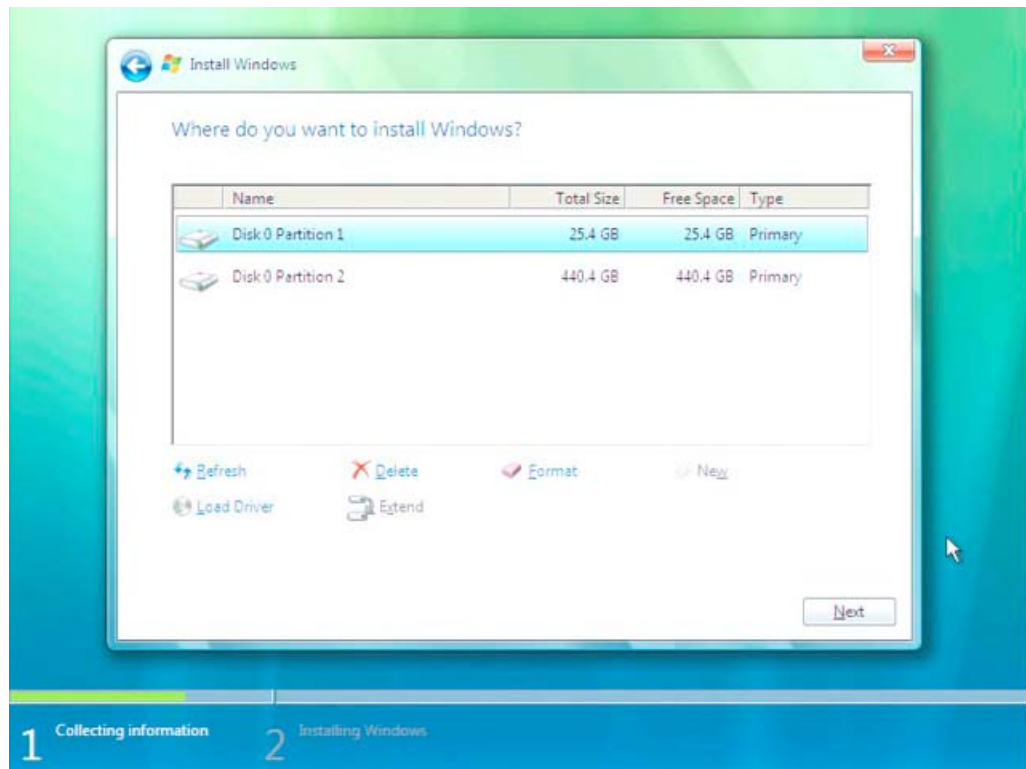

| Options | Meaning |
|---|---|
| Refresh | Updating |
| Delete | Deleting a partition |
| Format | Formatting a partition |
| New | Creating new partitions |
| Load Driver | To implement new drivers |
| Extend | Changing the partition size |
|  | Any error messages that occur are displayed behind this icon, for example if the hard disk was not formatted in the required "NTFS" format. |

The first partition should be at least 25 GB. The operating system must be installed on this partition. You can use the rest of the HDD or SSD as a data partition. Both partitions must be installed as the NTFS file system.

When shipped, the partitions are set up as follows:

| Partition | Operating system | Name | Size | File system |
|-----------|------------------|--------|-----------|---------------------|
| First | Windows 7 | SYSTEM | 25 GB | NTFS not compressed |
| Second | Windows 7 | DATA | Remainder | NTFS not compressed |

Following a required reboot, Windows will be installed on the HDD or SSD. This process takes at least 20 minutes.

Now follow the instructions on the screen.

Note

If you want to reinstall drivers from a USB floppy disk drive, select Floppy Drive (A:).

Note

If you want to use Microsoft Windows as a professional user, you should have the following manuals available (not included in the scope of delivery):

- Windows 7 Technical Reference (MS Press No. 5913)

These manuals contain specific information for administrators who install, manage and integrate Windows in networks or multi-user environments.

Setting up the language selection in Windows 7

With the Multilanguage User Interface (MUI), you can set up the Windows menus and dialogs for additional languages. When shipped, Windows 7 is installed with English menus and dialogs. You can change this in the Control Panel with the "Regional and Language options" or "Time and Date" dialogs.

Here, you can change all system formats:

Start > Control Panel > Clock, Language, and Region > Change display language > Regional and Language options

Here, you can only change the date and time formats:

Start > Control Panel > Clock, Language, and Region > Change display language > Time and Date

If you want to install additional languages, you can install these later in the Control Panel, as follows. You will find the necessary files on the recovery DVD in the "Languagepacks" folder.

Start > Control Panel > Clock, Language, and Region > Change display language > Regional and Language options > Keyboards and Languages

Additional languages can be integrated through Windows Update.

8.4.4 Installing drivers and software

| |
|---------------|
| NOTICE |
|---------------|

| |
|---|
| Before you install new drivers or updates for multilingual operating systems, (MUI versions), reset the regional settings for menus and dialogs and the default language to US English. |
|---|

Install the drivers and software from the included "Documentation and Drivers" CD.

Procedure:

1. Insert the CD/DVD into the drive.
2. Run *START*.

3. Select *Drivers & Updates* from the index.
4. Select the operating system in *Drivers & Updates*.
5. Install the required driver.

NOTICE

Once you completed installation of a new Windows 7, always install the chipset driver before you install any other drivers.

8.5 Checking the Language Selection

You can have the languages currently set and their ID numbers displayed by using the "CheckLanguageID" tool. These include:


- SystemDefaultLangID: System language
- UserDefaultLangID: Standard language
- UserDefaultUILangID: User interface language

Note

This tool is only installed for the hard disk variants on devices running Windows Embedded Standard 2009, Windows Embedded Standard 7, or Windows XP Professional.

Checking the Language Selection

Call up the "CheckLanguageID" tool by using `c:\drivers\checklang\checklangid.exe`.

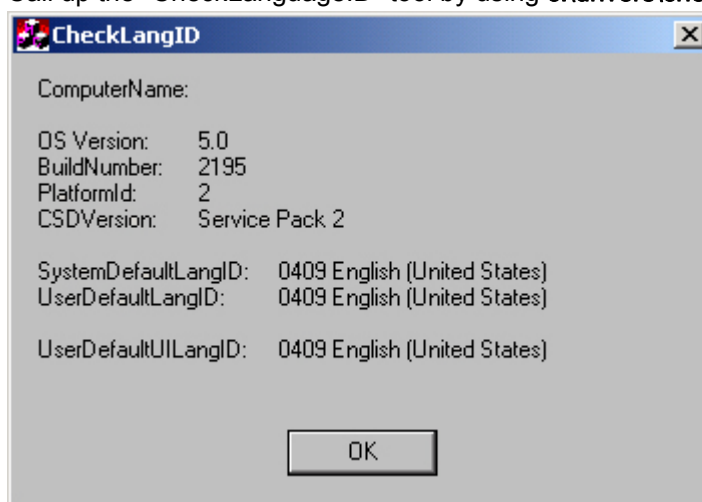**NOTICE**

All three languages displayed should have the same ID assigned. If this is not the case, change the language selection as described in the section "Setting Up the Language Selection".

8.6 Setting the panel type

8.6.1 First commissioning

Initial commissioning


- The "SIMATIC PC Wizard" program is automatically started once during commissioning.
- The "SIMATIC PC Wizard" implements the specific settings for the SIMATIC Panel PC during the initial startup of the operating system.
- Several dialogs appear on screen during initial commissioning of the SIMATIC Panel PC.

NOTICE

Start the PC for commissioning in an unchanged delivery state and follow the dialogs until their conclusion.

Procedure

Device-specific drivers are set during the hardware detection and configuration phase.

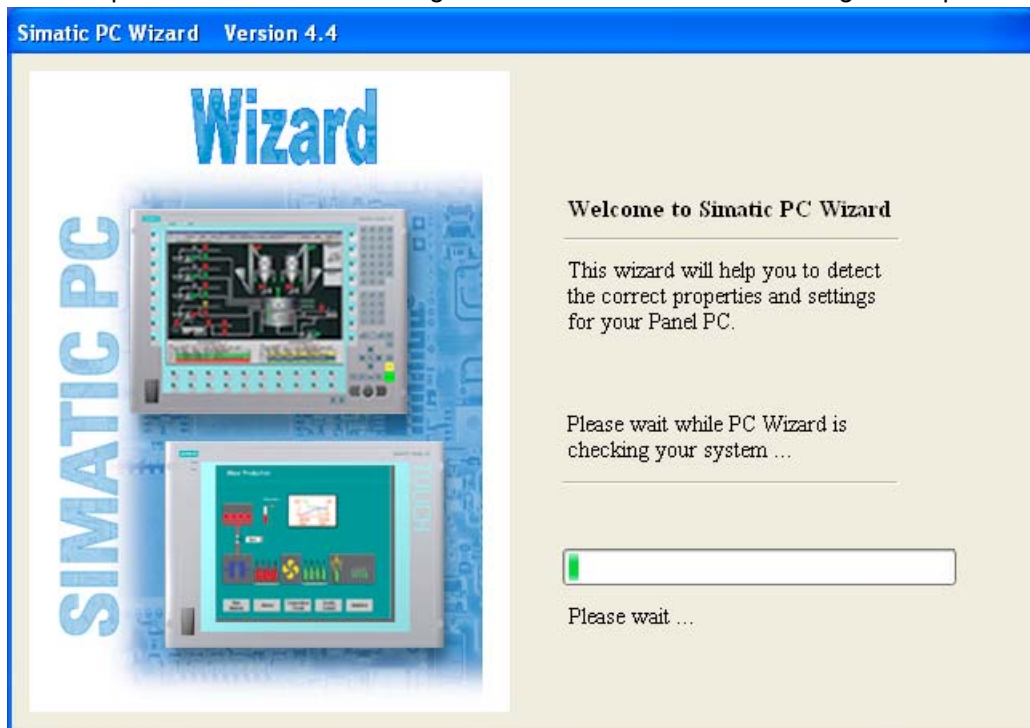


The type of SIMATIC PC is selected and detected automatically.


8.6.2 Touch panel configuration

Touch screen calibration

1. Calibrate the touch screen by clicking the wizard.

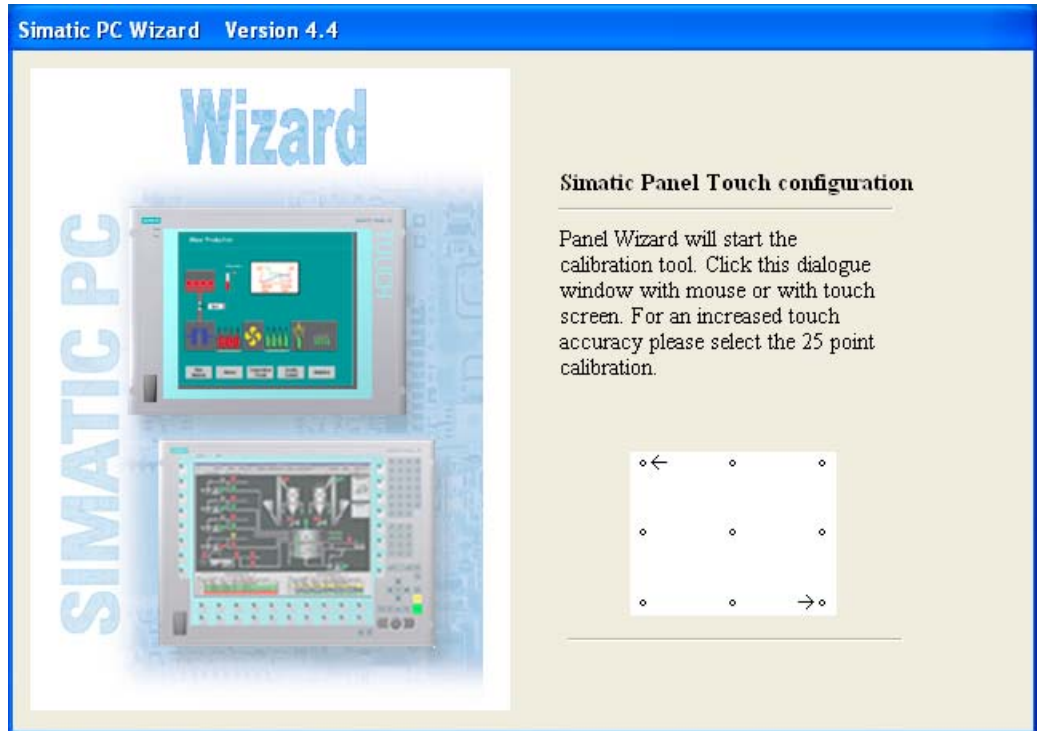

2. Click "Finish".

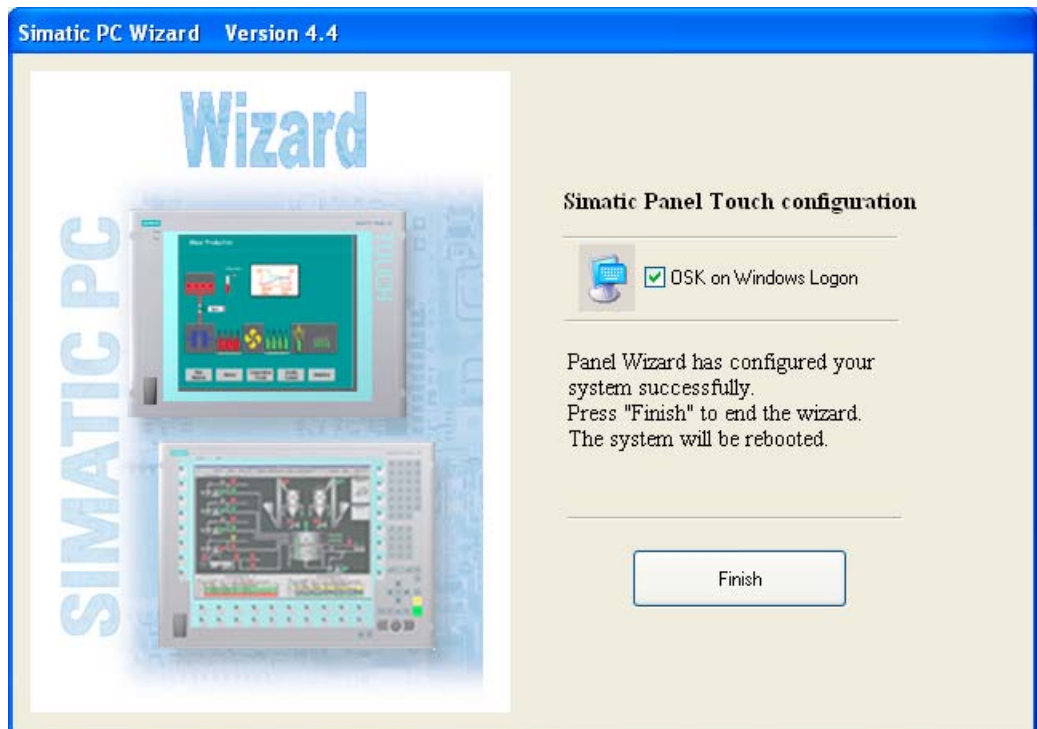

Note

On-screen keyboard (OSK)

- If the "enable" checkbox is selected, the Windows on-screen keyboard is displayed for logon at every program start. You can use this keyboard to enter the administrator password, for example. An external keyboard is then not necessary.
- If you clear the checkbox, the on-screen keyboard is not displayed.
- In Windows 7, the on-screen keyboard is not displayed until a password is assigned to the user account.

-
3. Use the "Finish" button to close the wizard. The HMI device will be restarted automatically for the respective configuration.

8.6.3 Key panel configuration

1. Follow all dialogs until the end.
2. Click "Finish".



Note


On-screen keyboard (OSK)

- If the "enable" checkbox is selected, the Windows on-screen keyboard is displayed for logon at every program start. You can use it, for example, to enter the administrator password. An external keyboard is then not necessary.
- If you clear the checkbox, the on-screen keyboard is not displayed.
- In Windows 7, the on-screen keyboard is not displayed until a password is assigned to the user account.

-
1. Use the "Finish" button to close the wizard. The HMI device will be restarted automatically for the respective configuration.

8.6.4 Automatic restart

An automatic restart is performed after every configuration.

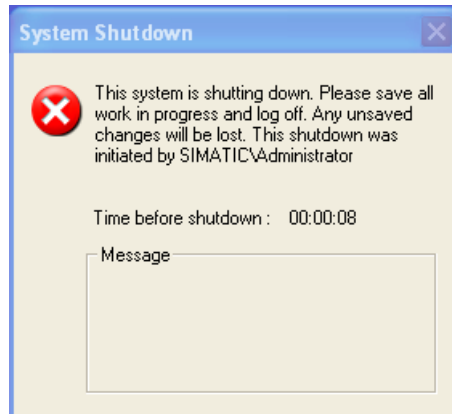

8.7 Device with key panel

8.7.1 Activating KeyTools

SIMATIC KeyTools is one selection of the applications for SIMATIC Panel PC. These applications allow you to adapt key codes that are sent by the key panel of the control unit. SIMATIC KeyTools consists of the following applications:

- Key code table: Loading and editing of key code tables.
- WinCC hotkey function: WinCC hotkey function activation and deactivation.
- Security features: Lock function that prevents two function keys from being activated simultaneously. This prevents incorrect operations and undefined states of the application program.

Note

For a detailed description of the SIMATIC KeyTools, refer to the help menu and the application description on the Documentation & Drivers DVD.

Opening Keytools

1. Open Keytools with the command **Start > Settings > Control Panel > SIMATIC KeyTools**.
2. Select the desired application and follow the instructions on the screen.

| |
|--|
| NOTICE |
| Malfunctions of the user software |
| For security reasons always use the "Security features". If you deactivate it nevertheless, serious malfunctions of the user software may occur when the additional function keys and softkeys F13 to S16 are used or if own key code tables are used. |

8.8 Device with touch screen

8.8.1 Recalibrating the Touch Screen

If the touch screen does not react as expected when touched, repeat the calibration.

Procedure for standard calibration

1. Select "Start > Programs > UPDD > Settings".
The "UPDD Console" dialog box opens.

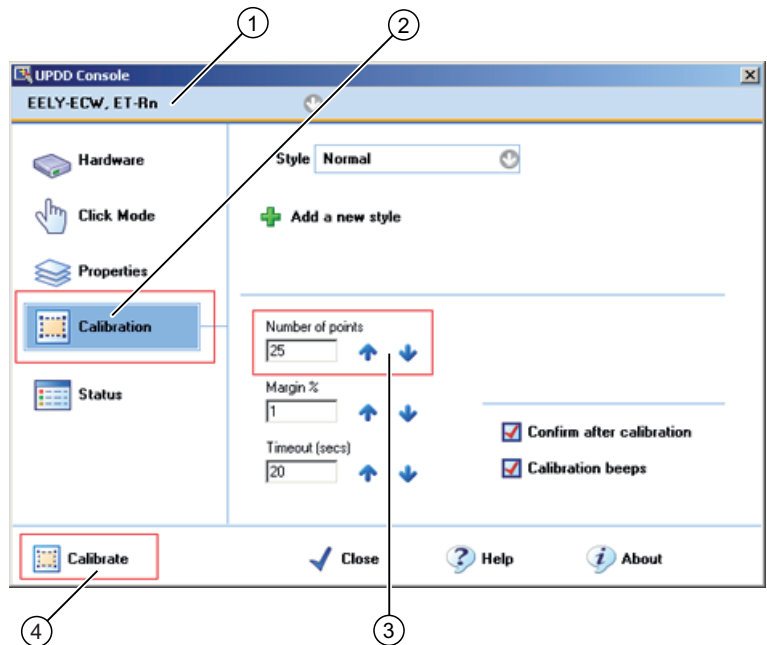


Figure 8-1 Point calibration

2. Select the controller ① you wish to calibrate.

3. Click the "Calibration" tab ②.
4. Select the "Number of points" option with the "25 point calibration" ③.
5. Click "Calibrate" ④.
The calibration mask is output on the selected display.
6. Quickly touch the corresponding selections one after the other.
The entry is confirmed by a check mark, the next selection is displayed.
7. Confirm all input prompts (arrows, or crosses in the center) until the complete screen has been calibrated.
8. Finally, confirm the prompt with "Confirm".

Procedure for EEPROM calibration

1. Select "Start > Programs > UPDD > Settings".

The "UPDD Console" dialog box opens.

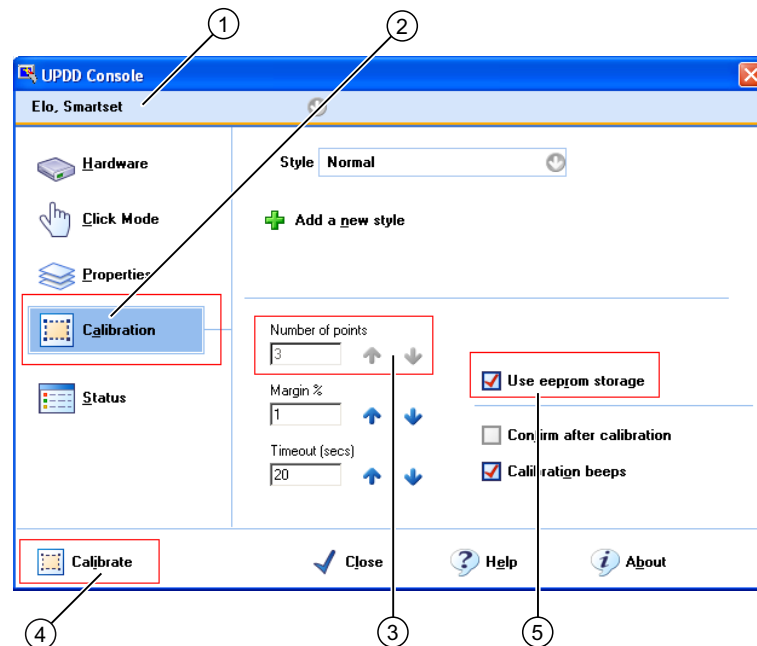


Figure 8-2 Point calibration

2. Select the controller ① you wish to calibrate.
3. Click the "Calibration" tab ②.
The "Use eeprom storage" ⑤ option is selected by default for touch controllers with EEPROM.
The "Number of points" option box indicates "3-point calibration" ③.
4. Click "Calibrate" ④.
The calibration mask is output on the selected display.

5. Quickly touch the corresponding selections one after the other.
The entry is confirmed by a check mark, the next selection is displayed.
6. Confirm all input prompts (arrows, or crosses in the center) until the complete screen has been calibrated.

Note

If the screen does not respond to touching as expected, check the specified controller (marked in black) in "UPDD Console" and repeat the calibration.


Only an active controller can be calibrated. A removed controller is marked in red.

If 3 point calibration does not suffice for the operator panel, you can clear it in the "Use eeprom storage" option box and use the standard calibration (25 point calibration).

Currently only the Touch Controller "ELO 2216 (USB)" supports EEPROM calibration.

Extended Touch touch functionality

1. Select "Start > Programs > UPDD > Settings". The "UPDD Console" dialog box opens.

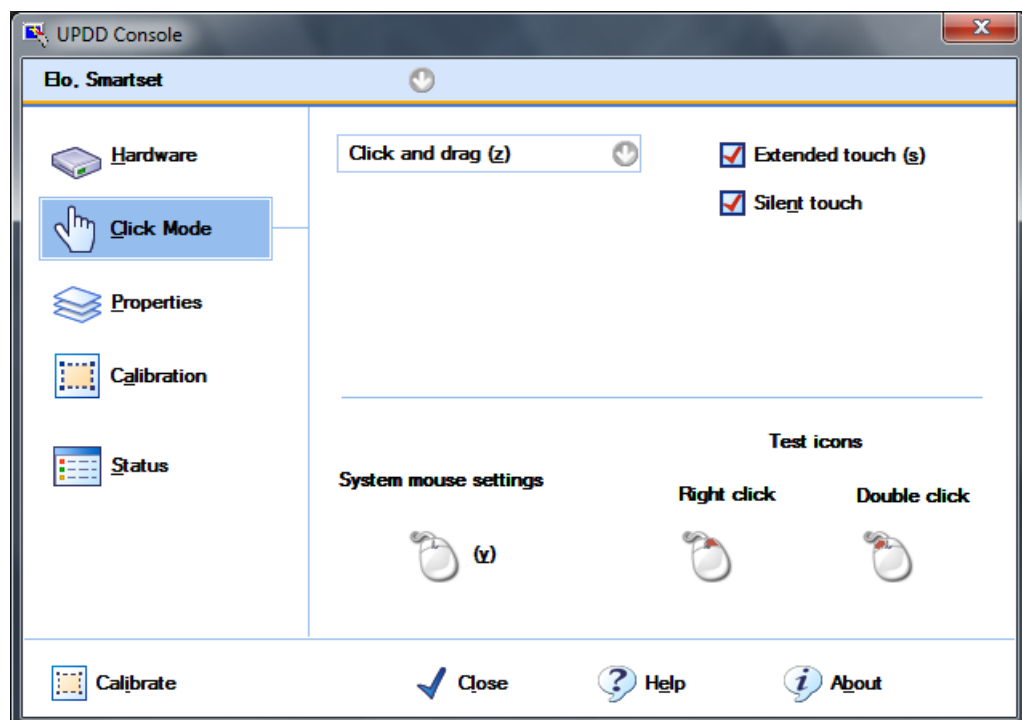

2. Select the corresponding controller.

The "Extended touch" option is preset for Windows 7.

Note

The "Extended touch" functionality is only available for Windows 7 Ultimate.

If "Extended touch" is selected, the extended touch functions of Windows 7 will be available, such as "operating touch permanently", which corresponds to the right mouse button function.

Note

The "EventSelector" program works only with disabled "Extended touch" function.

8.8.2 Activating the Screen Keyboard

You can operate the device by means of a virtual screen keyboard. You can use it to enter the characters directly on the touch screen or with the mouse.

Starting Touch Input

Start the "Touch Input" application on the desktop. The screen keyboard is displayed.




(1) Button for language selection: German, English, Italian, Spanish, French

8.9 Controlling backlighting

The Panel PC Tool program installs two software applications:


Controlling backlighting

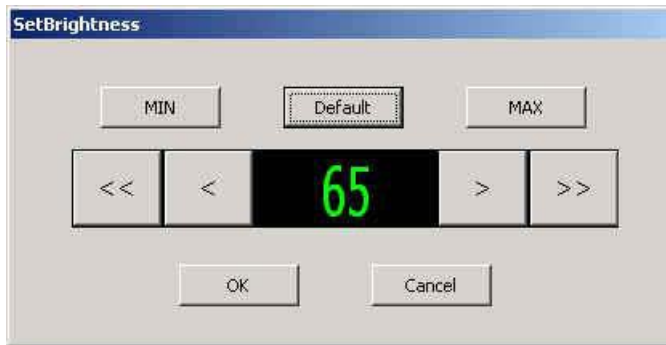

Controls the screen brightness via the backlight function. The default is 65. To open this application, click the "Set Brightness" icon on the desktop.

Use the "<" and ">" buttons for single-step changes to the value, or "<<" and ">>" to make changes in steps of ten. "MIN" sets the brightness to 0, and "MAX" sets it to 100.

Controlling backlighting using the screen saver

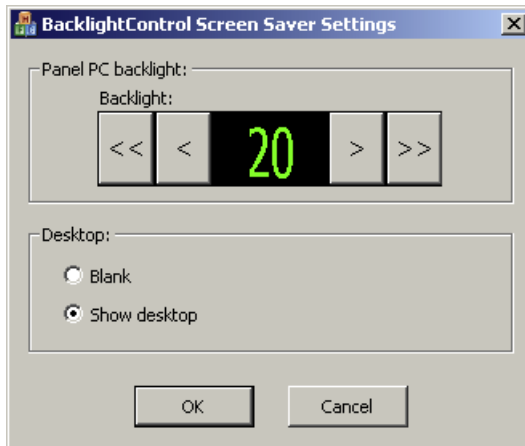

Controls the screen brightness while the screensaver is active. In the "Desktop" area, select a black screen, or a translucent desktop.

9.1 Device with key panel

9.1.1 Safety

NOTICE**Maloperation**

If you activate several keys simultaneously, a malfunction on the device cannot be excluded. Activate function keys and softkeys only in sequence!

Malfunctions of the user software

For security reasons, always use "Security features" of the KeyTools. If you deactivate it nevertheless, serious malfunctions of the user software may occur when the additional function keys and softkeys F13 to S16 are used or if own key code tables are used.


Risk of damage

Activating a key using a hard or pointed object, for example a screwdriver, reduces the life of the key or can damage it.

9.1.2 Overview

Overview

The number of keys, their labeling and function is the same on all key panels. The various panel types differ in the arrangement of the keys and in the size and type of the display.

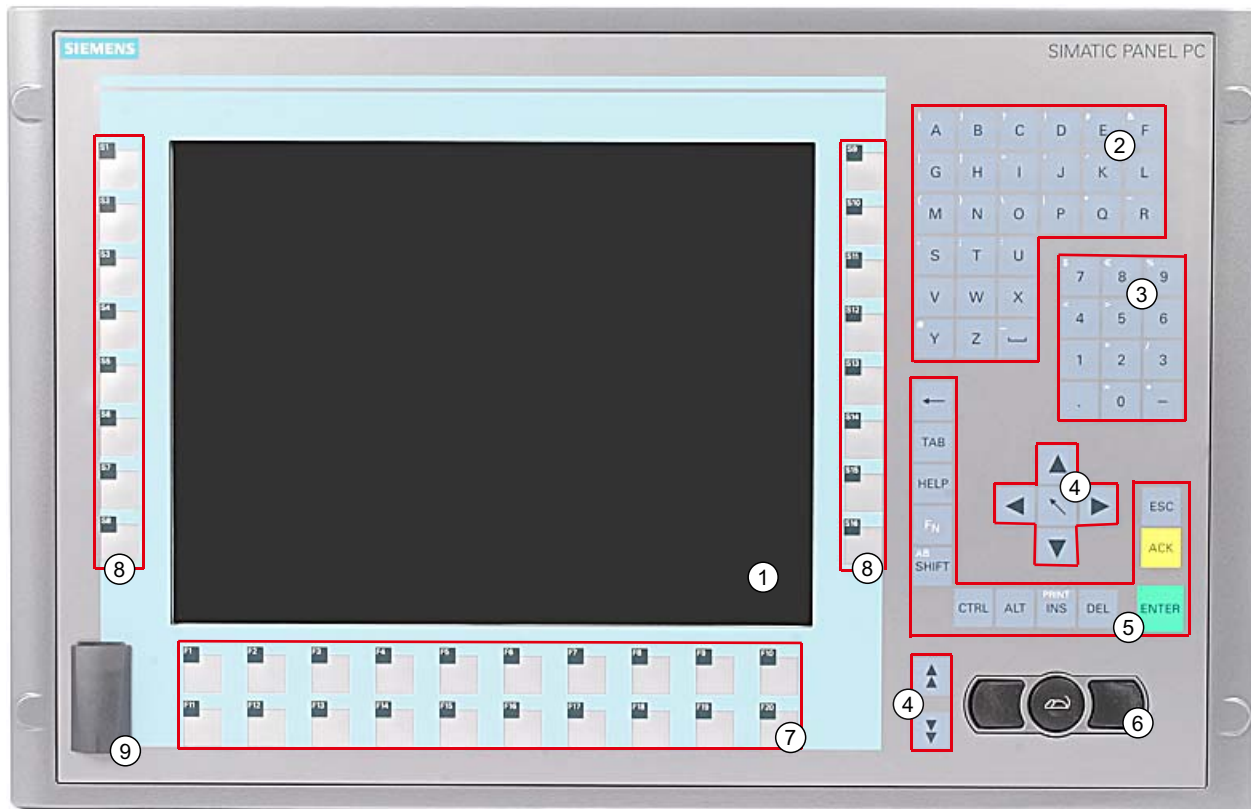

- (1) Display
- (2) Alphanumeric keys
- (3) Numeric keys
- (4) Cursor keys
- (5) Control keys
- (6) Integrated mouse
- (7) Function keys
- (8) Softkeys
- (9) USB ports (optional)


Figure 9-1 Example of a 12" key panel

9.1.3 Keys

9.1.3.1 Control keys

Control keys

The control keys activate editing functions and control functions in different applications.

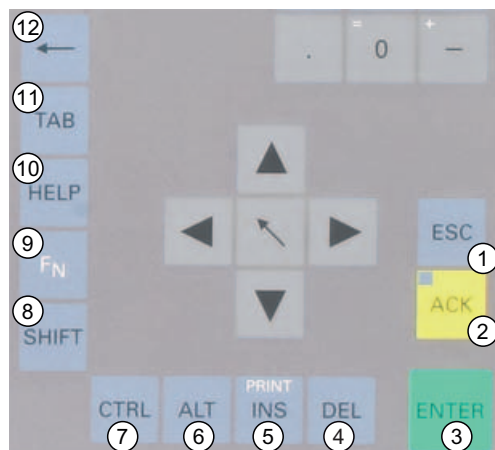


- (1) Cancel
- (2) Acknowledge
- (3) Enter
- (4) Delete
- (5) Insert/Print screen (in combination with F_N)
- (6) Application-specific function key codes (see key code table in appendix)
- (7) Application-specific function key codes (see key code table in appendix)
- (8) Toggling between lower-case letters and upper-case letters
- (9) Function key
- (10) Call up the help function
- (11) Tabulator
- (12) Backspace

9.1.3.2 Alphanumeric and numeric keys

Alphanumeric keys

Enter letters, special characters, blank spaces and underline using the alphanumeric keys.

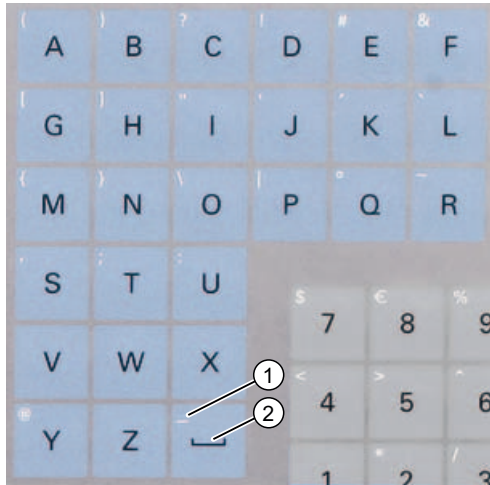

- (1) Underline
- (2) Space character

Toggleing between lower-case and upper-case letters

Enter the lower-case letters using the pre-defined assignment of the alphanumeric keys. To enter an upper-case letter, proceed as follows:

1. Hold down the <Shift> key.
2. Activate the desired alphanumeric key at the same time. The displayed upper case letter will be entered.
3. To enter lower case letters, release the <Shift> key.
4. You can, however, also activate the Caps Lock function using the <F_N> and <Shift> keys. The LED on the <Shift> key is then also lit.

Numeric keys

Enter the numerals "0" to "9" and special characters, e.g. the decimal point, using the pre-defined assignment of the numeric keys.

Enter special characters, arithmetic signs and signs

Special characters, arithmetic signs and signs are also assigned to most of the alphanumeric and numeric keys. These signs are indicated by white symbols on the top left of the keys. To enter such a sign, proceed as follows:

1. Hold down the <F_N> control key.
2. Activate the desired alphanumeric or numeric key at the same time. The displayed special character, arithmetic sign or signs will be entered.
3. To enter the signs of the pre-defined assignment again, release the <F_N> key.

9.1.3.3 Cursor keys

Navigate, scroll or move the writing mark using the cursor keys. The cursor keys correspond to the usual keys of the PC keyboard.



- (1) <Left> key
- (2) <Up> key
- (3) <Right> key
- (4) <Down> key
- (5) Position 1 key (Home)
- (6) <Page up> key
- (7) <Page down> key

9.1.3.4 External keyboards

The keyboard layout has been set to "English/USA international". If you use a keyboard with a layout other than the "English/USA international" layout, the key codes of the internal and external keyboards might no longer correspond.

9.2 Device with touch screen

9.2.1 Overview

The 12" variant and the 15" variant differ in their dimensions and the size of the display. The 12" and 19" variants do not have side drill hole covers.

The following figure is only an example using the front view of the 15" variant.

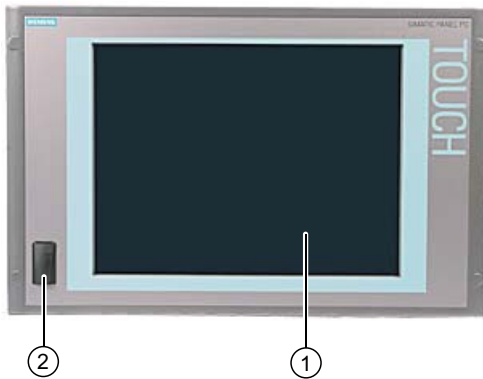


Figure 9-2 Example of a 15" touch screen front

- (1) Display with touch screen
- (2) USB port

9.2.2 Using the touch screen

Application-specific user interface elements, for example buttons, are shown on the display. When you tap the command button with your finger, the function assigned to the button is activated.

The following types of pressure are permissible:

- Using a plastic pen with a 1 mm radius at the point: 25 g.
- Using a silicone finger with a diameter of 1.6 cm: 50 g.

| |
|---|
| CAUTION |
| Only touch one point on the touch screen and not several points at one time. You may otherwise trigger unintended reactions. |
| Do not touch the screen in the following situations: |
| <ul style="list-style-type: none">• During the boot process.• When plugging or unplugging USB components.• While Scandisk is running. |

Operation with touch pen

You can operate the operator controls of the touch screen by using the touch pen (see chapter Accessories (Page 24)).

Functions

10.1 Overview of the functions

Even in its basic version, the device comes with optional monitoring functions. When used in combination with the appropriate software, the following functions for displaying, monitoring and controlling are available:

- Temperature monitoring (over-temperature, under-temperature or cable break at a temperature sensor)
- Fan monitoring (fan speed too low, fan failure, or a break in a tachometer line)
- Monitoring of the battery level
- Monitoring of HDD or SSD with S.M.A.R.T functionality even in RAID systems
- Watchdog (hardware or software reset of the computer)
- Operating hours meter (information on the cumulative run time)

SIMATIC IPC DiagBase software

With the SIMATIC IPC DiagBase software (included in the scope of delivery), you can use these functions for local monitoring. You can use the DiagBase Management Explorer application for general monitoring or DiagBase Alarm Manager for notification of individual alarms.

Additional information on the functions of the SIMATIC IPC DiagBase software is available in the online help.

SIMATIC IPC DiagMonitor software

The SIMATIC IPC DiagMonitor software is available on CD. (not included in the scope of delivery) It contains the monitoring software, the software for the stations to be monitored and a library for creating custom applications.

10.2 Temperature monitoring/display

Temperature monitoring

The temperature is recorded by two temperature sensors. One sensor monitors the processor temperature and the other monitors the temperature near the RAM module.

When the temperature exceeds one of the two defined temperature thresholds, the following error reactions are triggered:

| Reaction | Option |
|---|--------|
| The DiagBase or DiagMonitor software is enabled | None |

The temperature error is retained until the temperatures have fallen below the thresholds and are reset by one of the following measures:

- Acknowledgement of error messages
- Restart of the device

10.3 Watchdog (WD)

Function

If the user program does not respond to the watchdog within the predetermined monitoring time, the watchdog monitors the program process and informs the user about various reactions.

The watchdog is idle when the PC is switched on or after a HW RESET(cold restart), which means no reaction of the WD is triggered.

Watchdog reactions

If the WD is not triggered again within the set time (by application with the help of the DiagBase driver), the following reactions will be triggered:

| Reaction | Option |
|---|--------------|
| Trigger a PC reset | Configurable |
| DiagBase or DiagMonitor software is enabled | None |

Note

If the desired device reset does not occur, set Bit 7 to the value 0 in the General Purpose Ports (GPP) output register (address 404D) .

WD monitoring times (TWD)

The monitoring times are defined as follows:

Normal mode: 94 ms, 210 ms, 340 ms, 460 ms, 590 ms, 710 ms, 840 ms and 960 ms.

Macro mode: 2 s, 4 s, 6 s, 8 s, 16 s, 32 s, 48 s and 64 s.

Note

Default mode

The macro mode is selected as the default during DiagBase operation.

Note

If the watchdog time is changed after the watchdog was enabled (i.e., while the watchdog is running), the watchdog is retriggered!

10.4 Enhanced Write Filter (EWF)

Purpose and function

The EWF (Enhanced Write Filter) is a function that is only available with Windows Embedded operating systems. It provides write protection that can be configured by the user.

The Enhanced Write Filter allows you to boot Windows Embedded Standard 2009 or Windows Embedded Standard 7 from write-protected media (such as CD-ROM), to write protect individual partitions, and customize file system performance (when using Compact Flash cards, for example).

EWF can be used to minimize write access to Compact Flash cards. This is important because the write cycles on Compact Flash cards are limited due to technical reasons. We therefore recommend using EWF if you work with Compact Flash cards.

| |
|----------------|
| CAUTION |
|----------------|

| |
|--|
| Activate only one write filter per partition - otherwise you may incur data loss. |
|--|

| |
|---|
| Both EWF and FBWF are preinstalled in the SIMATIC IPC images. |
|---|

| |
|---|
| Ensure that only one write filter is enabled on a partition, otherwise you may incur data loss. |
|---|

Note

The Enhanced Write Filter is disabled by default for Windows Embedded Standard 2009 or Windows Embedded Standard 7. After the operating system has been set up, you should back up your data and then enable the EWF.

Set EWF

The EWFMgr.EXE program can be used to install, enable or disable the EWF. Use the command prompt to call up the program. The following functions are available:

| Function | Command |
|---|--|
| Write-protect drive C: Switching on | <code>ewfmgr c: -enable</code> |
| Write-protect drive C: disable (modified files are accepted) | <code>ewfmgr c: -commitanddisable</code> |
| Modified files on drive C: Accept | <code>ewfmgr c: -commit</code> |
| Display information about the EWF drive | <code>ewfmgr c:</code> |
| Display help | <code>ewfmgr c: /h</code> |

Note

The EWF commands affecting the write protection do not become active until after the next booting process.

Note

The EWF command `ewfmgr c: -commitanddisable` cannot be used in combination with the `-live` option (e.g.: `ewfmgr c: -commitanddisable -live`).

Special features for the use of Enhanced Write Filters (EWF)

- In the event of a power failure, if the EWF is enabled changes made after the boot sequence on drive C: are lost.
To prevent data loss in the event of a power failure, the use of a USV is recommended.
- You can save the files in the EWF RAM overlay to the Compact Flash card and the HDD or SSD before you shut down the device. To do so, enter the following command in the command prompt:

```
ewfmgr c: -commitanddisable
```

Then restart the system.

```
ewfmgr c: -enable
```

Then restart the system.

Note

When the system is set to automatically adjust the clock for daylight saving time adjustment, systems without central time management and with activated EWF set the clock forward or backward by one hour in the daylight saving time or standard time period each time the system boots.

The reason for this behavior is that Windows Embedded Standard 2009 or Windows Embedded Standard 7 has a registry entry that detects the conversion to daylight saving time. Since this file is also protected against modification by the EWF, the marker is lost during the boot sequence and the adjustment is made again.

We therefore recommend that you deactivate the automatic adjustment and change the clock manually.

Procedure:

1. Switch off the EWF filter (ewfmgr c: -commitanddisable) and reboot the system.
2. Deactivate automatic adjustment in the Control Panel. Select Start > Control Panel > Date and Time > Time Zone tab to clear the check mark from the "Automatically adjust clock for daylight saving changes" check box.
3. Enable EWF again (ewfmgr c: -enable) and reboot the system.

10.5 File Based Write Filter (FBWF)

Purpose and function

With the Feature Pack 2007 for Windows XP Embedded, Microsoft introduced a second write filter, File Based Write Filter (FBWF).

In contrast to EWF, which protects partitions based on sectors, FBWF works on the file level. When FBWF is enabled, all files and folders of a partition are protected unless they are included in an exception list.

FBWF is disabled by factory default in the operating system images for SIMATIC IPC and must be enabled and configured by the user.

When you enable FBWF, the folders C:\FBWF and D:\FBWF are authorized for writing by default.

CAUTION

Activate only one write filter per partition - otherwise you may incur data loss.

Both EWF and FBWF are preinstalled in the SIMATIC IPC images.

Ensure that only one write filter is enabled on a partition, otherwise you may incur data loss.

Comparison between EWF and FBWF

- You should prefer FBWF, because it is more flexible in its configuration and allows immediate writing without rebooting.
- If you use HORM or compressed NTFS, EWF is indispensable.

CAUTION

Activate only one write filter per partition - otherwise you may incur data loss.

Both EWF and FBWF are preinstalled in the SIMATIC IPC images.

Ensure that only one write filter is enabled on a partition, otherwise you may incur data loss.

Configuring FBWF

FBWF can be configured in command console using the program FBWFMGR.EXE.

NOTICE

- Observe the following syntax: Enter a **space** after the drive designation colon.
- Changes for direct write access only take effect after rebooting.
- Only existing files and folders can be entered in the exception list.

| Function | Command |
|---|---|
| Display the current FBWF status | <code>fbwfmgr /displayconfig</code> |
| Enable FBWF after the next startup | <code>fbwfmgr /enable</code> |
| Write to protected files | <code>fbwfmgr /commit c: \Test.txt</code> |
| Adding/removing elements in the exception list: | |
| • Add file | <code>fbwfmgr /addexclusion C: \Test.txt</code> |
| • Add folder | <code>fbwfmgr /addexclusion C: \Test folder</code> |
| • Remove file | <code>fbwfmgr /removeexclusion C: \Test.txt</code> |
| • Remove folder | <code>fbwfmgr /removeexclusion C: \Test folder</code> |
| Call up the help function | <code>fbwfmgr /?</code> |

You can find detailed instructions on FBWF in the Internet.

See also

Instructions on FBWF ([http://msdn.microsoft.com/en-us/library/aa940926\(WinEmbedded.5\).aspx](http://msdn.microsoft.com/en-us/library/aa940926(WinEmbedded.5).aspx))

10.6 HAL Tool

The HAL tool is used to convert a SIMATIC IPC with uniprocessor from the install Multiprocessor PC HAL to Uniprocessor PC HAL mode. The HAL tool is used in Windows Embedded Standard 2009.

Installing the HAL tool

1. Unzip the "HAL-Tool.zip" file to a folder.
2. Convert to HAL mode:
 - Switching to Multiprocessor PC HAL:
Run "HAL_Multiprocessor.bat"
 - Switching to Uniprocessor PC HAL:
Run "HAL_Uniprocessor.bat"
1. Restart the computer.
2. Once again, restart the computer when prompted in Windows.

Restoring to delivery state in Windows Embedded Standard 2009

1. Boot Windows Embedded Standard 2009.
2. Open the following folder: C:\Windows\HAL-Backup\original
3. Run the "undo.bat" batch file.
4. Restart Windows Embedded Standard 2009.

Restoring to delivery state in Windows PE

1. Boot Windows PE (e.g. from the Restore CD/DVD).
2. Open a console window.
3. Open the following folder: C:\Windows\HAL-Backup\original
4. Run the "undo.bat" batch file.
5. Restart Windows Embedded Standard 2009.

11.1 Open the device.

CAUTION

Only qualified technical personnel are permitted to carry out any work on the open device. Within the warranty time, you are only allowed to install expansions for memory and expansion card modules.



WARNING

Danger to life

- Separate the device from the mains before opening it.
- Use the supplied screws to close the device before commissioning.

CAUTION

The device contains electronic components which may be destroyed by electrostatic charge.

You therefore need to take precautionary measures before you open the device. Refer to the ESD guidelines on handling electrostatically sensitive components under ESD guidelines (Page 15).



Tools

- Device backplane: Torx T10
- Securing SSD and hard disk drive: Torx T10
- Equipotential bonding terminal: Torx T20

Preparatory steps

Disconnect the device from the power supply.

Open IPC577C
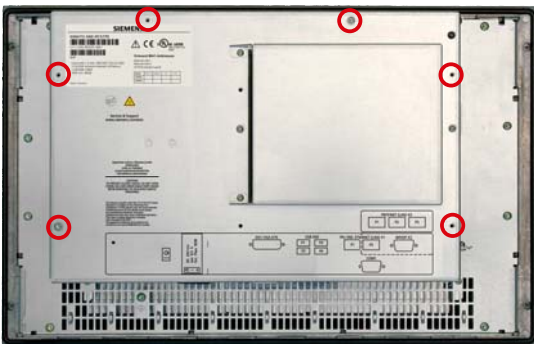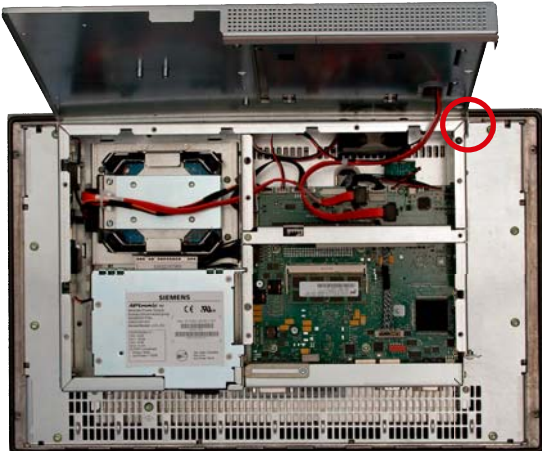
| How to open the device | |
|--------------------------------------|---|
| 1. Remove the six screws. |  A photograph showing the back of the device. Six screws are circled in red, indicating they need to be removed. The screws are located at the top-left, top-right, bottom-left, and bottom-right corners, and two in the center of the top edge. |
| 2. Open the cover and lock in place. |  A photograph showing the front of the device with the cover open. A red latch on the right side of the cover is circled in red, indicating it should be locked in place. The internal components, including a power supply and a main board, are visible. |

Note

Before you can close the device, you will have to release the cover.

11.2 Memory expansion

11.2.1 Installing the memory module

Memory expansion options

The motherboard is equipped with one slot for an SO-DIMM DDR3 memory module. This lets you expand the memory capacity of your device to a maximum of 4 GB. 3.2 GB of this memory is available for the operating system and applications.

Note

We recommend using the original spare parts for memory configuration.


Preparatory steps

Disconnect the device from the power supply.


CAUTION

The electronic components on the PCBS are highly sensitive to electrostatic discharge. Always take appropriate precautionary measures when handling these components. Refer to the ESD directives on handling electrostatically sensitive components ESD guidelines (Page 15).

Removing a memory module

| How to remove a memory module | |
|-------------------------------|--|
| 1. | Remove the cover at the rear of the device. |
| 2. | Press the latch (1) downward. Tilt the memory module forward. |
| |  |
| 3. | Pull the memory module out of the slot. |

Installing a memory module

| How to install a memory module | |
|--------------------------------|--|
| 1. | Place the memory module in the slot at an angle.  |
| 2. | Lightly press the memory module down until it snaps into the latch. |
| 3. | Mount the expansion cover. |

Display of the current memory configuration

A new memory module is automatically detected. System RAM, Extended RAM and Cache SRAM are displayed during device startup.

11.3 Installing PCI cards

11.3.1 Notes on the modules

Notes on module specifications

You can install a PCI card into the device.

Note

Fasten the slot plate to the housing with screws to secure the PCI card.

You can use a card holder for cards that exceed the slot in length.

11.3.2 Installing a PCI card

Tools

Use a TORX T 10 screwdriver to fasten the PCI card slot plate.


Preparatory steps


- Disconnect the device from the power supply.

CAUTION

The electronic components on the PCBs are highly sensitive to electrostatic discharge. Always take appropriate precautionary measures when handling these components. Refer to the ESD guidelines on handling electrostatic sensitive devices.

Installing a PCI card
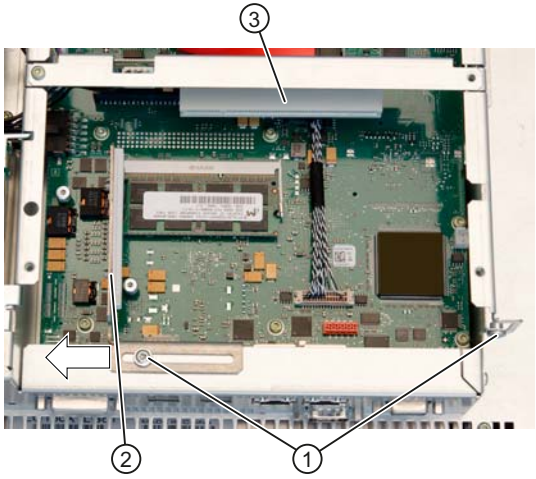
| Steps for mounting an expansion module | |
|--|--|
| 1. | Open the device as described in section Open the device. (Page 89). |
| 2. | Loosen the screws ① and push the card holder ② to the left. Remove the slot plate.  |
| 3. | Insert the card into the slot ③. |
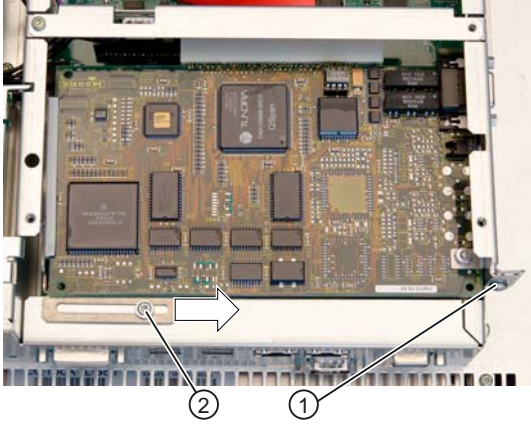
| Steps for mounting an expansion module | |
|--|--|
| <p>4. Use screws to fasten the card slot plate ① to the computer housing.</p> |  |
| <p>5. Slide the card holder to the PCI card and fasten it with screw ②.</p> | |
| <p>The PCI card is now installed. Open the device in the reverse order as described in the section Open the device. (Page 89).</p> | |

11.4 Installing/Removing Compact Flash Cards

11.4.1 Installation options for Compact Flash cards

Memory expansion options

The device can be expanded with CompactFlash cards (Types I / II). The following options are available:

- Installing a CompactFlash card in the external slot

Only use SIMATIC PC CompactFlash cards for industrial application.

Note

Replace CompactFlash cards only with cards of the same product versions

Only SIMATIC PC Compact Flash cards with product version number 02 (ES 02 or higher) can be used for this device.



Figure 11-1 SIMATIC PC CompactFlash®



Figure 11-2 SIMATIC PC CompactFlash 4GB - rear with product version ES 02

NOTICE

Risk of damage

The CompactFlash slots are not hot-plug capable. The CompactFlash card must be installed before the device is switched on and should only be removed when the device is switched off.

Note

The CompactFlash slots are coded against reversed insertion. Insert the CompactFlash card so that its upper side (label side) is facing right.

CAUTION

If the CompactFlash card meets resistance, flip it over. Never insert the CompactFlash card with force.



11.4.2 Installing/removing the Compact Flash card in the external slot

Preparatory steps

Disconnect the device from the power supply.


| |
|--|
| ⚠ CAUTION |
| The electronic components on the PCBs are highly sensitive to electrostatic discharge. Always take appropriate precautionary measures when handling these components. Refer to the ESD directives on handling electrostatically sensitive components ESD guidelines (Page 15). |

Installing the Compact Flash card in an external slot
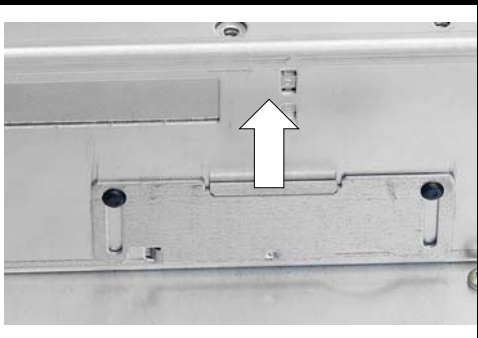
| How to install a Compact Flash card | |
|--|--|
| 1. Slide the cover of slot up. |  |
| 2. Insert the Compact Flash card into the slot with the connector facing in until it locks into place. |  |
| 3. Close the cover. | |

Removing the Compact Flash card from the external slot

| How to remove a Compact Flash card | |
|------------------------------------|--|
| 1. | Open the cover of the slot. |
| 2. | Press the eject key and remove the Compact Flash card. |
| 3. | Close the cover. |

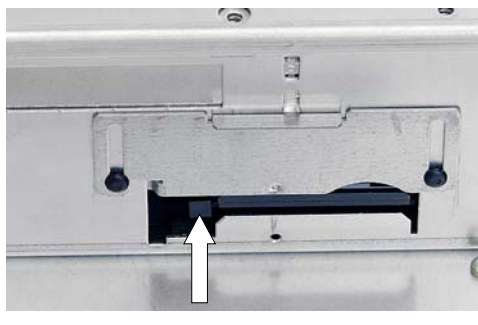

12.1 Cleaning the Device Front

The device is designed for low-maintenance operation. You should still clean the device front regularly, however.

Cleaning Agents

Use dish soap or foaming screen cleaner only as cleaning agents.

| |
|---|
| NOTICE |
| Risk of damage Do not clean the device with aggressive solvents or scrubbing agents or with pressurized air or steam cleaner. |

Cleaning the Device Front

1. Switch off the device. This prevents the accidental triggering of functions when the screen and/or the membrane keyboard is touched.
2. Dampen the cleaning cloth.
3. Spray the cleaning agent on the cloth and not directly on the device.
4. Clean the device with the cleaning cloth.

12.2 Removing and installing hardware components

12.2.1 Repairs

Performing repairs

Only qualified technical personnel are permitted to repair the device.

| |
|---|
|  WARNING |
| Danger to life <ul style="list-style-type: none">• Separate the device from the mains before opening it.• Use the supplied screws to close the device before commissioning. |

 **WARNING**

Unauthorized opening and improper repairs on the device may result in substantial damage to equipment or endanger the user.

- Only install system expansion devices designed for this device. If you install other expansion devices, you may damage the device or violate the safety requirements and regulations on RF suppression. Contact your technical support team or where you purchased your PC to find out which system expansion devices may safely be installed.

If you install or exchange system expansions and damage your device, the warranty becomes void.

NOTICE

Check the ESD guidelines (Page 15).

Limitation of Liability

All specifications and approvals are only valid when the expansion component feature the CE symbol. Observe the safety and installation instructions for the expansion components.

The UL approval of the device only applies when the UL-approved components are used according to the "Conditions of Acceptability".

No liability can be accepted for impairment of functions caused by the use of third-party devices or components.

Tools

- Torx T6 (DVD installation)
- Torx T10 (backplane of housing)
- Torx T10 (SSD, DVD and hard disk installation)
- Torx T20 (equipotential bonding terminal)

12.2.2 Replace the backup battery

Note before you replace the battery

Note

The service life of a backup battery is approximately 5 - 8 years, depending on the operating conditions.

CAUTION**Risk of damage**

The lithium battery may only be replaced with an identical battery or with a type recommended by the manufacturer (Order no.: A5E00331143).

 **WARNING****Danger of explosion and release of harmful substances!**

For this reason, do not burn lithium batteries, do not solder on the cell body, do not open, do not short circuit, do not reverse polarity, do not heat above 100°C, dispose of correctly, and protect against direct sunlight, dampness and dew.

Disposal**CAUTION**

Depleted batteries must be disposed of in accordance with local regulations.


Preparatory steps

Note

The configuration data and contents of the SRAM in the device are buffered for at least 30 seconds.

1. Note down the current settings of the BIOS setup.
A list in which you can note down this information is found in the BIOS description.
2. Disconnect the device from the power supply.

Replacing the battery of the IPC577C
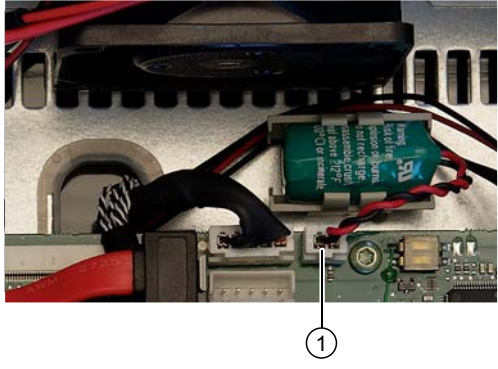
| Steps for replacing the battery | |
|---------------------------------|--|
| 1. | Open the device as described in section Open the device. (Page 89). |
| 2. | Pull the battery plug ①. |
| 3. | Remove the battery from the bay. |
| |  |
| 4. | Install the new battery and plug in the battery plug. |
| 5. | Close the device. |

Reconfiguring the BIOS setup

When a battery is exchanged, the configuration data of the device are lost and must be reentered in the BIOS setup.

12.2.3 Installation/removal of SSD

⚠ CAUTION

Only qualified technical personnel are permitted to replace an SSD.

Tools

You need a TORX T10 screwdriver to carry out the mounting work.

You will need a TORX T20 screwdriver to loosen the equipotential bonding terminal.


Preparatory steps




1. Disconnect the device from the power supply.
2. Unplug all peripherals (mouse, keyboard, external monitor, for example) from the device.

Removing the SSD

| |
|----------------------------|
| NOTICE |
| Note the ESB instructions. |

| Steps for removing an SSD | |
|---------------------------|---|
| 1. | Open the device as described in section Open the device. (Page 89). |
| 2. | Pull the SATA and power supply cables (②) and ①) from the basic module. |

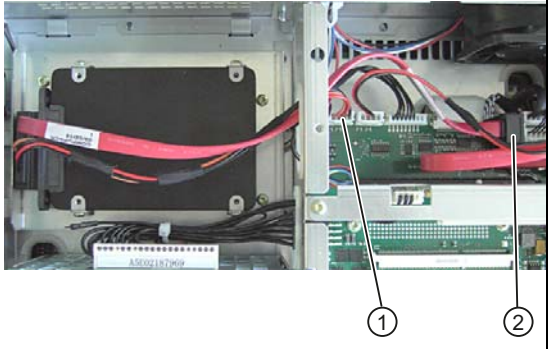
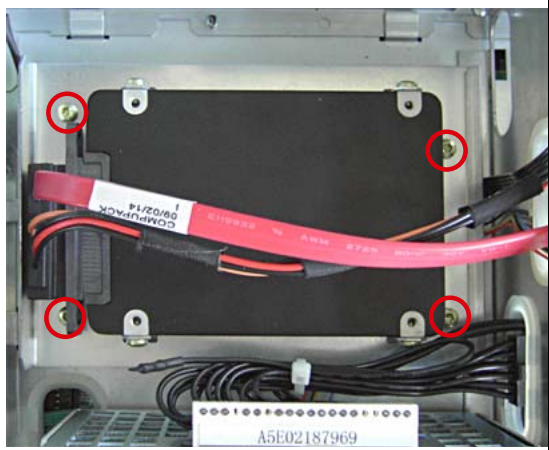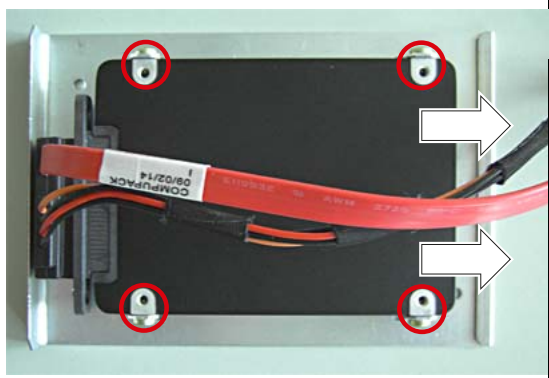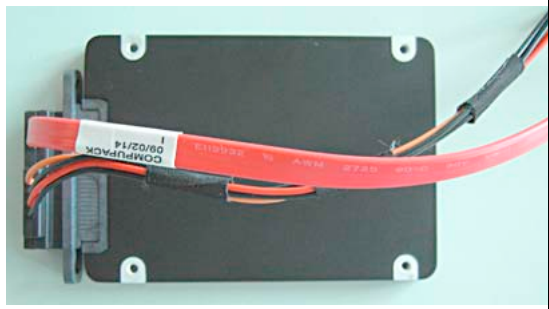
| Steps for removing an SSD | |
|--|--|
| <p>3. Remove the four screws which secure the SSD bracket to the computer housing. Remove the SSD bracket including SSD from the computer housing.</p> |  |
| <p>4. Remove two screws at the front and rear to remove the SSD from the SSD bracket.</p> |  |
| <p>5. Carefully pull the loose SSD from the SSD bracket.</p> |  |

Installing SSD

To install an SSD, perform the actions described in "Removing the SSD" in the reverse order.

12.2.4 Installation/removal of hard disk drive

CAUTION

Only qualified technical personnel are permitted to replace a hard disk.

Tools

You need a TORX T10 screwdriver to carry out the mounting work.

You will need a TORX T20 screwdriver to loosen the equipotential bonding terminal.

Preparatory steps

1. Disconnect the device from the power supply.
2. Unplug all peripherals (mouse, keyboard, external monitor, for example) from the device.


Removing the hard disk




NOTICE

Note the ESB instructions.

Steps for removing the hard disk

1. Open the device as described in section Open the device. (Page 89).
2. Pull the plug ② from the socket and remove the cable ties ①.

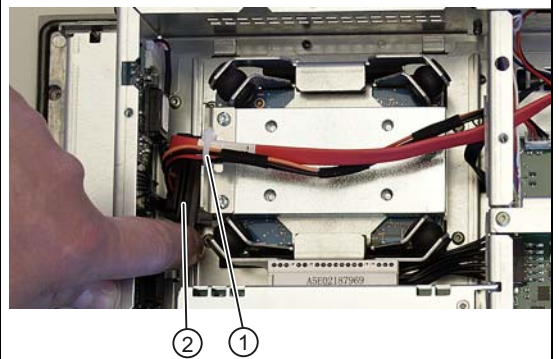
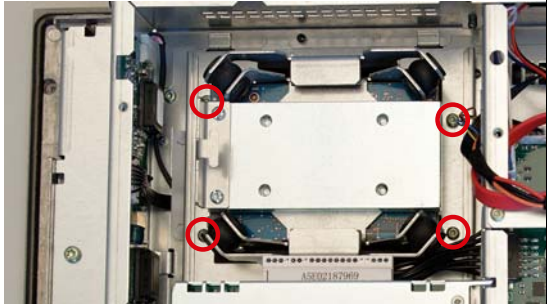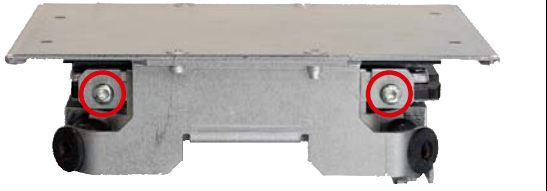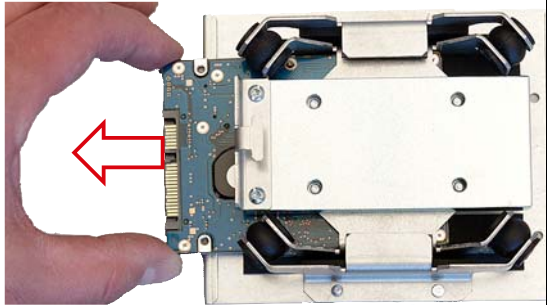
| Steps for removing the hard disk | |
|--|---|
| <p>3. Remove the four screws which secure the hard disk to the computer housing. Remove the hard disk bracket including hard disk from the computer housing.</p> |  |
| <p>4. Remove two screws at the front and rear to remove the hard disk from the hard disk bracket.</p> |  |
| <p>5. Carefully pull the hard disk out of the hard disk bracket.</p> |  |

Installing hard disk

To install a hard disk, perform the actions described in "Removing the hard disk" in the reverse order.

12.2.5 Installing/removing the DVD drive

CAUTION

Only qualified technical personnel are permitted to replace the DVD drive.

Tools

You need a TORX T10 and a T6 screwdriver to carry out the mounting work.

Preparatory steps

1. Disconnect the device from the power supply.
2. Unplug all peripherals (mouse, keyboard, external monitor, for example) from the device.


Removing a DVD drive

NOTICE

Note the ESB instructions.


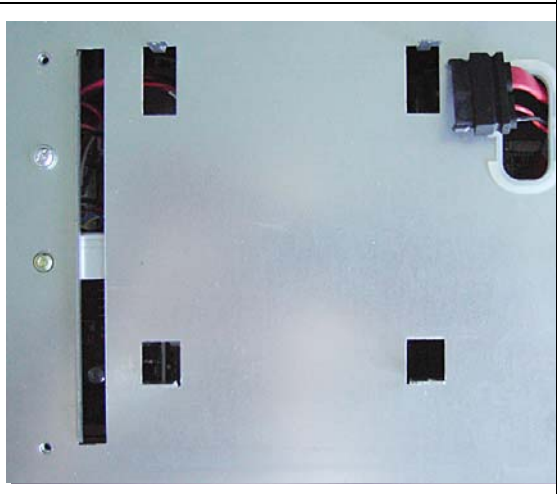
Steps for replacing the DVD drive

1. Remove the two screws.

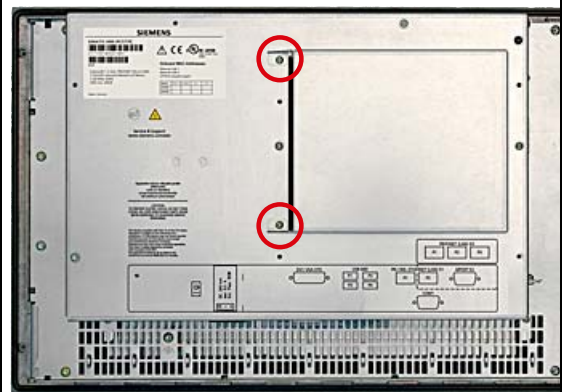

2. Slide the cover up.

3. Lift the cover and remove it.

| Steps for replacing the DVD drive | |
|---|---|
| 4. Remove the three screws with a Torx screwdriver of size T6. |  |
| 5. Pull off the plug ① with SATA cable and the power supply from the DVD drive. | |
| 6. Remove the DVD drive. |  |

Installing a DVD drive

To install a DVD drive, perform the actions described in "Removing the DVD drive" in the reverse order.

12.3 Reinstalling the operating system

12.3.1 Windows Embedded Standard 2009 or Windows Embedded Standard 7

12.3.1.1 General installation procedure

If your software becomes corrupt for any reason, you can reinstall it from the Restore CD/DVD. The Restore CD/DVD contains an image file with the original software and is included with the product as a software package.

Note

You require a USB keyboard and a USB mouse to reinstall the operating system.

12.3.1.2 Restoring the software to delivery state using the Restore CD/DVD

You can reinstall the original factory software using the Restore CD/DVD (forms part of the scope of delivery). The CD/DVD contains the necessary images and tools for transferring the factory software to the SSD, hard disk, or CompactFlash card of your PC. The following options are available for restoring software:

- You can restore the entire hard disk with drive C: (system) and drive D:.
- or only drive C:.. This allows you to retain any user data on drive D:.
- Restore the entire Compact Flash card.

| |
|--|
| CAUTION |
| With the option "Restore system partition only", all data on drive C: (system partition) will be deleted. All data, user settings and all authorizations or license keys on drive C: are lost! All data on drive C: of your hard disk drive will be deleted. Setup formats the hard disk partition and reinstalls the original factory software. |
| When you select the "Restore entire hard disk" option, ALL data, user settings and existing authorizations or license keys will be lost on the hard disk. |

Restoring the delivery state

To restore the delivery state, proceed as follows:

1. Connect a USB CD-ROM drive to the device.
2. Insert the Restore CD/DVD in the drive and reboot the device. When the BIOS message appears
Press <F2> to enter Setup or <ESC> to show Boot menu
appears, press the F2 key.
3. Select the Boot menu and move the entry "CD-ROM Drive" to the first position.

4. End the BIOS setup with the "Exit Saving Changes" entry.
5. Now follow the instructions on the screen.

| |
|----------------|
| CAUTION |
|----------------|

| |
|--|
| All existing data, programs, user settings and authorizations or license keys will be deleted from the hard disk and therefore lost. |
|--|

For information on the functions, refer to the README.TXT file on the Restore CD/DVD.

Note

The "Legacy USB Support" option has to be set to "Enabled" in the Advanced menu of the BIOS so that the device can address a USB CD-ROM drive.

12.3.2 Windows XP Professional

12.3.2.1 General installation procedure

If your software becomes corrupt for any reason, you have two possibilities:

- **Restoring the factory state of the software by means of the Restore CD/DVD**
The Restore CD/DVD contains an image file of the original supplied software (operating system with installed hard ware drivers) and is included in the Windows XP Professional supply variant.
- **Setting up the operating system with the Recovery DVD**
The recovery DVD contains the tools required to set up the HDD or SSD as well as the Windows XP Professional operating system. After the required data have been copied to the HDD or/ SSD, you can run Windows XP Professional Setup to install the operating system.
The Recovery DVD can be obtained from the Customer Support.

Note

You require a USB keyboard in order to reinstall the operating system.

12.3.2.2 Restoring the software to delivery state using the Restore CD/DVD

You can reinstall the original factory software (included in the Windows XP Professional supply variant) using the Restore CD/DVD. The CD/DVD contains the necessary images and tools for transferring the factory software to the HDD or SSD of your PC. The following options are available for restoring software: :

- You can restore the entire hard disk with drive C: (system) and drive D:.
- Only for restoring drive C:.. This allows you to retain any user data on drive D:.

CAUTION

With the option "Restore system partition only", all data on drive C: (system partition) will be deleted. All data, user settings and all authorizations or license keys on drive C: are lost! All data on drive C: of your hard disk drive will be deleted. Setup formats the hard disk partition and reinstalls the original factory software.

When you select the "Restore entire hard disk" option, ALL data, user settings and existing authorizations or license keys will be lost on the hard disk.

Restoring the delivery state

To restore the delivery state, proceed as follows:

1. Connect a USB DVD-ROM drive to the device.
2. Insert the Restore CD/DVD in the drive and reboot the device. When the BIOS message appears
Press <F2> to enter Setup or <ESC> to show Boot menu
appears, press the F2 key.
3. Select the Boot menu and move the entry "CD-ROM Drive" to the first position.
4. End the BIOS setup with the "Exit Saving Changes" entry.
5. Now follow the instructions on the screen.

CAUTION

All existing **data, programs, user settings** and **authorizations or license keys will be deleted** from the hard disk and therefore lost.

For information on the functions, refer to the README.TXT file on the Restore CD/DVD.

Note

The "Legacy USB Support" option has to be set to "Enabled" in the Advanced menu of the BIOS so that the device can address a USB DVD-ROM drive.

Setting up the language selection for Windows XP Professional

The Multilanguage User Interface (MUI) allows you to set up the Windows XP Professional menus and dialogs for additional languages.

Default language of your Windows XP MUI installation is English and a US keyboard layout. You can change the language in the Control Panel by selecting

Start > Control Panel > Regional and Language Options Languages,
tab **Language used in menus and dialogs** field.
For the **Regional and Language Options** set the default as **non-Unicode programs** under **Advanced** in addition to the language for menus and dialogs.

12.3.2.3 Setting up the operating system via the Recovery DVD

Use the Recovery DVD to install Windows to suit your particular requirements. You also need the included Documentation and Drivers CD/DVD.

Note

Prerequisite is that you connect a USB CD-ROM drive to the device and have set the "Legacy USB Support" option to "Enabled" in the BIOS setup.

Booting with the Recovery DVD

1. Insert the Recovery CD in your drive, restart the device and press the ESC key when the BIOS message
Press <F2> to enter Setup or <ESC> to show Boot Menu
appears. The "Boot Menu" is displayed when initialization is completed.
2. Follow the on-screen instructions until the "Windows XP Professional Setup" window opens.

Partition setup

After you have installed a new hard disk or SSD, or if partitions are faulty, or when you wish to change the partitioning on your hard disk, you need to create or reconfigure partitions on the hard disk.

| |
|----------------|
| CAUTION |
|----------------|

| |
|---|
| When you delete or create partitions or logical DOS partitions, you lose all data on the hard disk. All drives on the hard disk or SSD will be deleted. |
|---|

With Windows XP operating systems, the factory state features two partitions with an NTFS file system on the hard disk. To restore the partitions to factory state, follow the on-screen instructions:

- To install the selected partition, select "ENTER"
- To create a new partition in an unpartitioned area, press C.
- To delete the selected partition, press D.

Note

The on-screen instructions are in English.

Installation of the operating system.

Follow the on-screen instructions when the "Windows XP Professional Setup" window appears.

Note

Note that there must still be free space on the drive after the selected recovery data has been transferred:
1500 MB for Windows XP

Note

If you want to use Windows XP as a professional you should have the following manual (not included in the product package) available:
Microsoft Windows XP Professional, the technical reference" (MSPress Nr 934).

This manual contains information specifically for administrators involved in installing, managing and integrating Windows in networks or multi-user environments.

12.4 Partitioning data media

12.4.1 Setting up the partitions under Windows Embedded Standard 2009

You need to set up the partitions on the CompactFlash card after installing a new drive, to repair corrupt partitions or to change the partitioning.

Partitioning the CompactFlash card

In delivery state, the following default partitions are set up on the CompactFlash card for Windows Embedded Standard 2009:

| Partition | Name | Size of the card | | | File system |
|--------------|--------|------------------|-------------|-------------|-------------------|
| | | 2 GB | 4 GB | 8 GB | |
| 1. Partition | SYSTEM | 1536 MB | 2560 MB | 5120 MB | NTFS (compressed) |
| 2. Partition | DATA | Remainder * | Remainder * | Remainder * | NTFS (compressed) |

* Due to partitioning/formatting, the actual CompactFlash capacity does not correspond to the memory size specified on the CompactFlash.

Partitioning the hard disk

The following partitions are configured in the delivery state of the hard disk with Windows Embedded Standard 2009:

| Partition | Name | Size | File system |
|--------------|--------|-----------|-----------------------|
| 1. Partition | system | 25 GB | NTFS (not compressed) |
| 2. Partition | DATA | Remainder | NTFS (not compressed) |

Partitioning the SSD

The following partitions are configured in the delivery state of the SSD with Windows Embedded Standard 2009:

| Partition | Name | Size | File system |
|--------------|--------|-----------|-----------------------|
| 1. Partition | system | 15 GB | NTFS (not compressed) |
| 2. Partition | DATA | Remainder | NTFS (not compressed) |

To restore the original partition to its delivery state, it is recommended to use the software tool **SIMATIC IPC Image & Partition Creator**. Detailed information about using this tool is available in the manufacturer documentation.

12.4.2 Setting up the partitions in Windows Embedded Standard 7

You must partition a new drive and re-partition drives on which you have to repair corrupted partitions, or change the partitioning.

Partitioning the CompactFlash card

In delivery state, the following default partitions are set up on the CompactFlash card for Windows Embedded Standard 7:

| Partition | Name | Size of the card | | File system |
|--------------|--------|------------------|-------------|-------------------|
| | | 4 GB | 8 GB | |
| 1. Partition | SYSTEM | 3690 MB | 6150 MB | NTFS (compressed) |
| 2. Partition | DATA | Remainder * | Remainder * | NTFS (compressed) |

* Due to partitioning/formatting, the actual CompactFlash capacity does not correspond to the memory size specified on the CompactFlash card.

Partitioning of the HDD or SSD

The following partitions are configured in the delivery state of the HDD or SSD with Windows Embedded Standard 7:

| Partition | Name | Size | File system |
|--------------|--------|-----------|-----------------------|
| 1. Partition | SYSTEM | 25 GB | NTFS (not compressed) |
| 2. Partition | DATA | Remainder | NTFS (not compressed) |

To restore the original partition to its delivery state, it is recommended to use the software tool **SIMATIC IPC Image & Partition Creator**. Detailed information about using this tool is available in the manufacturer documentation.

12.4.3 Setting up the partitions under Windows XP Professional

You must partition a new drive and re-partition drives on which you have to repair corrupted partitions, or change the partitioning.

Partitioning the hard disk

The delivery state of the hard disk with Windows XP Professional includes the following partitions:

| Partition | Name | Size | File system |
|--------------|--------|-----------|-----------------------|
| 1. Partition | system | 25 GB | NTFS (not compressed) |
| 2. Partition | DATA | Remainder | NTFS (not compressed) |

Partitioning the SSD

The following partitions are configured in the delivery state of the SSD with Windows XP Professional:

| Partition | Name | Size | File system |
|--------------|--------|-----------|-----------------------|
| 1. Partition | system | 15 GB | NTFS (not compressed) |
| 2. Partition | DATA | Remainder | NTFS (not compressed) |

To restore the original partition to its delivery state, it is recommended to use the software tool **SIMATIC IPC Image & Partition Creator**. Detailed information about using this tool is available in the manufacturer documentation.

12.4.4 Setting up partitions in Windows 7 Ultimate

You must partition a new drive and re-partition drives on which you have to repair corrupted partitions, or change the partitioning.

Partitioning of the HDD or SSD

The following partitions are configured in the delivery state of the HDD or SSD with Windows 7 Ultimate:

| Partition | Name | Size | File system |
|--------------|--------|-----------|-----------------------|
| 1. Partition | system | 25 GB | NTFS (not compressed) |
| 2. Partition | DATA | Remainder | NTFS (not compressed) |

To restore the original partition to its delivery state, it is recommended to use the software tool **SIMATIC IPC Image & Partition Creator**. Detailed information about using this tool is available in the manufacturer documentation.

12.4.5 Adapting partitions in Windows 7 and Windows Embedded Standard 7

You can adapt the partitioning of your CF, SSD or HDD with the partition manager.

You can reduce or delete an available partition to acquire unassigned memory space, which you can use to set up a new partition or to increase an existing partition.

| NOTICE |
|--|
| Data lost in the case of deleting a partition! If you delete a partition, all the data on this partition is lost. Back up your data before you change partitions. |

Requirements

You are logged on as an administrator.

Reduce partition

1. Click with the right mouse button on the partition to be reduced and click on "Reduce size".
2. Follow the instructions.

Increase partition

Note

To increase a partition, this partition must not be formatted with a data system or the partition must be formatted with an "NTFS" data system.

1. Click in the partition manager with the right mouse button on the partition to be increased and click on "Increase size".
2. Follow the on-screen instructions.

Additional information is available in the "Help" menu under "Help topics" and "Search".

12.5 Installing updates

12.5.1 Updating the operating system

Windows Embedded Standard 2009 and Windows Embedded Standard 7

An update of the operating system is only possible with a new version of the Restore CD/DVD. Please contact customer support for more information about its availability.

Windows XP Professional / Windows 7

Monthly updates for the Windows XP Professional and Windows 7 operating system are available on the Internet at Microsoft Side Guide (<http://www.microsoft.com>).

| |
|---|
| NOTICE |
| Before you install new drivers or operating system updates for Windows XP Professional and Windows 7 MUI versions, the regional settings for menus and dialogs and the default language have to be reset to US English. |

Other operating systems

Please contact the corresponding manufacturer.

12.5.2 Installing or updating application programs and drivers

To install software for Windows Embedded Standard / Windows XP Professional / Windows 7 from CD or floppy disk, connect a corresponding external USB drive to the computer.

The drivers for USB floppy drives and CD-ROM drives are included in Windows Embedded Standard / Windows XP Professional / Windows 7 and do not have to be installed from other sources.

For information about installation of SIMATIC software packages, refer to the respective manufacturer documentation.

For updates of drivers and application programs from third-party manufacturers, contact the respective manufacturer.

| |
|---------------|
| NOTICE |
|---------------|

| |
|--|
| Before you install new drivers or operating system updates at Windows XP Professional MUI versions, the regional settings for menus and dialogs and the default language have to be reset to US English. |
|--|

12.5.3 Performing a BIOS update

Download from BIOS update

Check regularly if updates are available for download to your device.

You can find the downloads in the Internet (<http://www.siemens.com/asis>) in the "Support" tab under "Tools & Downloads". Using the global search function, you can then also search for any downloads you require.

12.6 Data backup

12.6.1 Creating an image

Data backup in Windows Embedded Standard / Windows XP Professional / Windows 7

To backup data in Windows Embedded Standard / Windows XP Professional / Windows 7, it is recommended to use the "SIMATIC IPC Image & Partition Creator" software tool. This tool provides simple and efficient functions for backup and restoring the full content of Compact Flash cards, of HDDs and of individual partitions (images).

The software can be ordered from the Siemens A&D online ordering system. For more information about "SIMATIC IPC Image & Partition Creator", refer to the corresponding product documentation.

12.7 Installing drivers and software

12.7.1 Installing drivers for Windows Embedded Standard 2009 and Windows Embedded Standard 7

Install the drivers for Windows Embedded Standard 2009 or Windows Embedded Standard 7 as for Windows XP Professional or Windows 7. Observe the Setup instructions of the driver manufacturer.

During driver installation in Windows Embedded Standard 2009, Setup may prompt you to insert the Windows XP Installation CD or SP2 CD.

In this case, insert the Restore DVD. The required files are in the \Drivers_XPE folder.

12.7.2 Installation of driver and software

| |
|---|
| NOTICE |
| Before you install new drivers or updates for multilingual operating systems, (MUI versions), reset the regional settings for menus and dialogs and the default language to US English. |

Install the drivers and software from the included "Documentation and Drivers" CD.

Procedure:

1. Insert the CD/DVD into the drive.
2. Start the program with "START".
3. Select "Drivers & Updates" from the index.

4. Select the operating system in "Drivers & Updates".
5. Install the required driver.

Note

During driver installation in Windows Embedded Standard 2009, Setup may prompt you to insert the "Windows XP Installation CD", or SP2 CD. You will find the necessary drivers on the recovery DVD in the \Drivers_XPE folder.

| |
|---------------|
| NOTICE |
|---------------|

| |
|--|
| For new Windows XP / Windows 7 installations, you must always install the chipset driver before you install any other drivers. |
|--|

12.8 CP 1616 onboard

NDIS device driver

Read the information in the description Installation_CP16xx.pdf document on the supplied Documentation and Drivers CD.

PROFINET IO

Please observe the information on the SIMATIC devices and SIMATIC NET documentation listed in the chapter "Integration".

Alarm, error and system messages

13.1 Boot error messages

During startup (the boot process), the BIOS first performs a **Power On Self Test (POST)** and checks whether certain functional units of the PC are operating error-free. The boot sequence is immediately interrupted if critical errors occur.

If the POST does not return an error, the BIOS initializes and tests further functional units. In this startup phase, the graphics controller is initialized and any error messages are output to the screen.

The following lists the error messages from the system BIOS. For information on error messages output by the operating system or programs, refer to the corresponding manuals.

On-screen error messages

| On-screen error message | Meaning / suggestions |
|--|--|
| Address conflict | Plug-and-Play problem. Contact your technical support team. |
| Combination not supported | Plug-and-Play problem. Contact your technical support team. |
| IO device IRQ conflict | Plug-and-Play problem. Contact your technical support team. |
| Invalid system configuration data | Plug-and-Play problem <ul style="list-style-type: none"> Set the RESET CONFIGURATION DATA option in the "Advanced" menu of Setup. Contact your technical support team. |
| Allocation Error for ... | Plug-and-Play problem <ul style="list-style-type: none"> Please undo the last hardware change. Contact your technical support team. |
| System battery is dead. Replace and run SETUP | The battery on the CPU module is defective or dead. Contact your technical support team. |
| System CMOS checksum bad Run SETUP | Call up SETUP, adjust settings and save. If this message appears during each startup, contact your technical support team. |
| Failure Fixed Disk | Error accessing the hard drive. Check the SETUP settings. Contact your technical support team. |
| System RAM Failed at offset: | Memory error. Contact your technical support team. |
| Shadow RAM Failed at offset: | Memory error. Contact your technical support team. |
| Extended RAM Failed at offset: | Memory error. Contact your technical support team. |
| Failing Bits: | Memory error. Contact your technical support team. |

13.1 Boot error messages

| On-screen error message | Meaning / suggestions |
|--|---|
| Operating system not found | Possible causes: <ul style="list-style-type: none">• No operating system present• Incorrect active boot partition• Wrong boot drive settings in SETUP |
| Previous boot incomplete Default configuration used | Abort of the previous BOOT procedure, for example, due to a power failure. Adjust the settings in SETUP. |
| System time-out | Hardware error. Contact your technical support team. |
| Real-time clock error | Clock chip error. Contact your technical support team. |
| Keyboard controller error | Controller error. Contact your technical support team. |

Troubleshooting/FAQs

14.1 General problems

This chapter provides you with tips on how to locate and troubleshoot common problems.

| Problem | Possible cause | Possible solution |
|---|--|--|
| The device is not operational. | There is no power supply to the device. | Check the power supply. |
| Display remains dark | Display is set to dark. | Press any key on the keyboard. |
| | The brightness button has been set to dark. | Set the monitor brightness button to obtain more light. For detailed information, refer to the operating instructions of the display. |
| | The power cord is not connected. | Check whether the power cord has been properly connected to the monitor and to the system unit or to the grounded shockproof outlet. If the display still remains dark after you have performed these checks, please contact your technical support team. |
| The mouse pointer does not appear on the display. | The mouse driver is not loaded. | Check whether the mouse driver is properly installed and present when you start the application program. For more detailed information, refer to the manuals for the mouse or application programs. |
| | The mouse is not connected. | Check whether the mouse cord is properly connected to the system unit. If you use an adapter or extension on the mouse cable, also check the connectors. If the mouse pointer still does not appear on the screen after you have performed these checks and measures, please contact your technical support team. |
| Wrong time and/or date on the PC. | | 1. Press <F2> within the boot sequence to open the BIOS Setup. 2. Set the time and date in the setup menu. |
| Although the BIOS setting is OK, the time and data are still wrong. | The backup battery is dead. | In this case, please contact your technical support team. |
| USB device not responding. | Operating system does not support the USB interfaces. | No solution |
| | The operating system does not have a suitable driver for the USB device. | Install a suitable driver; the correct driver can often be downloaded from the homepage of the device's manufacturer. The EWF must be disabled before you install drivers for Windows Embedded Standard 2009 and Windows Embedded Standard 7. |

14.2 Problems when using modules of third-party manufacturers

| Problem | Possible cause | Possible solution |
|--------------------------------|--|--|
| The PC crashes during startup. | <ul style="list-style-type: none"> • I/O addresses are assigned twice. • Hardware interrupts and/or DMA channels are assigned twice • Signal frequencies or signal levels are not adhered to • Different connector pin assignments • No "Reset Configuration" in BIOS-SETUP | <p>Check your computer configuration:</p> <ul style="list-style-type: none"> • If the computer configuration corresponds with factory state, please contact your technical support team. • If the computer configuration has changed, restore the original factory settings. Remove all third-party modules, then restart the PC. If the error no longer occurs, the third-party module was the cause of the fault. Replace this module with a Siemens module or contact the module supplier. • Force a "Reset Configuration" using the BIOS Setup. |
| | | <p>If the PC still crashes, contact your technical support team.</p> |

Technical specifications

15.1 General Technical Specifications

| General technical specifications | |
|---|---|
| Order numbers | See the order documents |
| Dimensions | Device with touch screen, 12" display 400x310x105 (WxHxD in mm) Device with touch screen, 15" display: 483x310x110 (WxHxD in mm) Device with touch screen, 19" display: 483x400x115 (WxHxD in mm) Device with key panel, 12" display 483x310x105 (WxHxD in mm) Device with key panel, 15" display 483x355x104 (WxHxD in mm) |
| Weight | Device with touch screen, 12" display 8.1 kg Device with touch screen, 15" display: 9.0 kg Device with touch screen, 19" display: 11.6 kg Device with key panel, 12" display 8.6 kg Device with key panel, 15" display 9.3 kg |
| Supply voltage | 24 V DC ¹ (19.2 to 28.8 V) 100 to 240 VAC (85 to 264 V) |
| Brief power failure according to Namur | Min. 20 ms (DC) (at 20.4 V) / 20 ms (AC) (at 93 V) Max. 10 events per hour; min. 1 s recovery time |
| Max. power consumption (DC): | |
| 12" and 15" devices | 3.8 A continuous current (starting current 12 A/ 40 ms) |
| 19" devices | 4.7 A (starting current 12 A/ 40 ms) |
| Maximum power consumption (AC): | |
| 12" and 15" devices | 1.1 A continuous current (starting current 50 A/ 1 ms) |
| 19" devices | 1.35 A (starting current 50 A/ <1 ms) |
| Noise emission | <45 dB (A) to DIN 45635-1 at operation with hard disk < 30 dB (A) to DIN 45635-1 at operation with CompactFlash card / in no.load mode |
| Degree of protection | IP 20 to IEC 60529 |
| ¹ The generation of the 24 V DC supply voltage by the line-side power supply must be made as functional extra-low voltage with safe electrical isolation according to IEC 60364-4-41 or as SELV according to IEC/UL/EN/DIN-EN 60950-1. | |

Technical specifications

15.1 General Technical Specifications

General technical specifications

Safety

| | |
|-----------------------|--------------------------------------|
| Protection class | Protection class I to IEC 61140 |
| Safety specifications | EN60950-1, UL 508; CSA C22.2 No. 142 |

Electromagnetic compatibility (EMC)

| | |
|--|--|
| Emitted interference | EN 61000-6-4; CISPR22:2004 class A; FCC class A |
| Noise immunity on signal lines | ± 1 kV (to IEC 61000-4-4, burst, length < 30 m) ± 2 kV; (to IEC 61000-4-4; burst; length > 30 m) ± 2 kV (to IEC 61000-4-5, surge symmetrical, length > 30 m) |
| Immunity to conducted interference on the supply lines | ± 2 kV (to IEC 61000-4-4, burst) ± 1 kV (to IEC 61000-4-5, surge symmetrical) ± 2 kV (to IEC 61000-4-5, surge asymmetrical) |
| Immunity to discharges of static electricity | ± 6 kV, contact discharge (to IEC 61000-4-2) ± 8 kV, air discharge (to IEC 61000-4-2) |
| Immunity to RF interference | 10 V/m, 80 - 1000 MHz, 80% AM; (to IEC 61000-4-3) 10 V/m, 1,4 - 2 GHz, 80% AM; (to IEC 61000-4-3) 1 V/m, 2 - 2,7 GHz, 80% AM; (to IEC 61000-4-3) 10 V, 9 kHz - 80 MHz; (to IEC 61000-4-6) |
| Immunity to magnetic fields | 100A/m, 50/60 Hz; (to IEC 61000-4-8) |

Climatic Conditions

| | |
|---|---|
| Temperature | tested to IEC 60068-2-1, IEC 60068-2-2 |
| -Operation | |
| Vertical mounting position with ± 45° angle | 0 - 45°C (at front and rear of device) with full removal 0 - 50°C (rear), 40°C (front) |
| Gradient | max. 10°C/h, no condensation |
| - Storage/transport | -20 °C to +60 °C |
| Gradient | max. 20 °C/h, no condensation |
| Relative humidity | Tested to DIN IEC 60068-2-78 |
| -Operation | 5% to 85% at 30° C (no condensation) |
| -Storage/transport | 5% to 95% at 25°C/55°C (no condensation) |
| Barometric pressure | |
| - Operation | 1080 to 795 hPa (corresponds to an altitude of -1000 m to 2000 m) |
| - Storage/transport | 1080 to 660 hPa (corresponds to an altitude of -1000 m to 3500 m) |

Mech. Ambient conditions

| | |
|--|--|
| Vibration | Tested to DIN IEC 60068-2-6 |
| -Operation (with Compact Flash card and SSD) | 10 to 58 Hz: 0.075 mm, 58 to 500 Hz: 9.8 m/s ² |
| -Operation (with hard disk) | 10 to 58 Hz: 0.0375 mm; 58 to 500 Hz: 4.9 m/s ² |
| -Storage/transport | 5 to 9 Hz: 3.5 mm, 9 to 500 Hz: 9.8 m/s ² |
| Resistance to shock | Tested to IEC 60068-2-27, IEC 60068-2-29 |
| -Operation | 50 m/s ² , 30 ms |
| -Storage/transport | 250 m/s ² , 6 ms |

| General technical specifications | |
|--|--|
| Special features | |
| Quality assurance | acc. to ISO 9001 |
| Motherboard | |
| Processor | Intel Celeron M 1.2 GHz, 800 MHz FSB or Intel Pentium Core 2 Solo 1.2 GHz, 800 MHz FSB, 3 MB SLC or Intel Pentium Core 2 Duo 1.86 GHz, 800 MHz FSB, 6 MB SLC |
| Main memory | SO-DIMM modules; 512/1024/2048/4096 MB DDR3-SDRAM |
| Buffer memory | 2 MB SRAM (128 KB of this can be backed up in the buffer time of the power supply) |
| Drives / storage media | |
| CompactFlash card | 256/2048/4096/8192 MB |
| Hard disk drive | ≥250 GB; 2.5" SATA-HDD optional |
| SSD | ≥32 GB; 2.5" SATA-HDD optional |
| Graphics | |
| Display | 12" screen diagonal with background illumination, resolution 800x600 pixels 15" screen diagonal with background illumination, resolution 1024x768 pixels 19" screen diagonal with background illumination, resolution 1280x1024 pixels |
| Touch controller (only touch screen devices) | Resistive Semtech controller ELO CTR-2216SU-AT-CHP-00 Touchscreen analog resistive Touch force (with test pen of 2 mm diameter): 5N |
| Graphic connector | DVI connection with external VGA output |
| Resolutions / controller | From 640x480 to 1600x1200 |
| Interfaces | |
| COM1 | RS232, max. 115 Kbps., 9-pin SUB D, male |
| DVI | VGA integrated in the DVI-I |
| Keyboard | USB support |
| Mouse | USB support |
| USB | 1x USB 2.0 / 500 mA (device front) 4x USB 2.0 / 500 mA (device rear) |
| PROFIBUS / MPI interface, isolated | 9-pin SUB D socket, 2-row |
| - Transmission speed | 9.6 Kbps to 12 Mbps |
| - Operating modes | DP master: DP-V0, DP-V1 with SOFTNET-DP DP slave: DP-V0, DP-V1 with SOFTNET-DP slave (only for devices with PROFIBUS feature) |

| General technical specifications | |
|----------------------------------|---|
| Ethernet | 2x Ethernet ports (RJ45) Intel Tekoa 82573L 10/100/1000 Mbps, isolated Teaming-capable |
| PROFINET | 3x PROFINET via 100 Mbps Ethernet (only for devices with PROFINET feature) - Transmission rate 10/100 Mbps - Half/full duplex - Autocrossover, Autonegotiation - Autopolarity for 10 Mbit - LED functions for link and activity |

15.2 Power requirements of the components

Maximum power consumption of the auxiliary components

| Auxiliary components | | Maximum permitted power consumption | | | | Max. total power |
|----------------------|--------------|-------------------------------------|--------|-------|-------|---------------------------|
| | | +5 V | +3.3 V | +12 V | -12 V | |
| USB device | High current | 500 mA | -- | -- | -- | 6 W (for all USB devices) |
| | Low current | 100 mA | -- | -- | -- | |

Note

Permitted power loss of supported PCI modules

The power loss of a PCI expansion module must not exceed 10 W.

15.3 Power supply

DC power supply

| | |
|--------------------------------|--|
| Input voltage | 24 V DC (19.2 to 28.8 V DC) |
| Input current | Up to 4.7 A continuous current (up to 12 A for 40 ms at startup) |
| Power consumption (continuous) | 115 W |
| Power failure buffering | DC_FAIL will become active after ≥ 5 ms, SV continues buffering for ≥ 20 ms at ≥ 20.4 V |
| Protection class | VDE 0106 |

AC voltage supply

| | |
|--------------------------------|---|
| Input voltage | 100 to 230 VAC (85 to 264 V) |
| Input current | Up to 1.35 A continuous current (up to 50 A for < 1 ms at startup) |
| Power consumption (continuous) | 115 W |
| Power failure buffering | AC_FAIL will become active after ≥ 20 ms, SV continues buffering for ≥ 20 ms at ≥ 93 V |
| Protection class | VDE 0106 |

15.4 Keyboard table

Key codes

The following table applies only to control units with key panels. It contains all characters that can be entered in SIMATIC KeyTools in the "Key code table" area and under "User specific". The character that is triggered by pressing a specific key is listed in the "Display/function" column. Additional information is available in the documentation for SIMATIC KeyTools on the "Documentation and Drivers" CD/DVD.

| Name | Code (Hex) 0x | Check-box | Display/function |
|------|---------------|-----------------------|------------------|
| | | | |
| a A | 4 | — | a |
| | | L Shift/R Shift | A |
| | | R Alt | á |
| | | R Alt+L Shift/R Shift | Á |
| b B | 5 | — | b |
| | | L Shift/R Shift | B |

| Name | Code (Hex) 0x | Check-box | Display/function |
|------|---------------|-----------------------|------------------------|
| c C | 6 | — | c |
| | | L Shift/R Shift | C |
| | | R Alt | © |
| | | R Alt+L Shift/R Shift | ¢ |
| | | L Ctrl/R Ctrl | Copy |
| d D | 7 | — | d |
| | | L Shift/R Shift | D |
| | | R Alt | ð |
| | | R Alt+L Shift/R Shift | Ð |
| e E | 8 | — | e |
| | | L Shift/R Shift | E |
| | | R Alt | é |
| | | L Shift/R Shift | É |
| | | L Gui/R Gui | Start Windows Explorer |
| f F | 9 | — | f |
| | | L Shift/R Shift | F |
| | | L Gui/R Gui | Find folder and file |
| g G | 0A | — | g |
| | | L Shift/R Shift | G |
| h H | 0B | — | h |
| | | L Shift/R Shift | H |
| i I | 0C | — | i |
| | | L Shift/R Shift | I |
| | | R Alt | í |
| | | R Alt+L Shift/R Shift | Í |
| j J | 0D | — | j |
| | | L Shift/R Shift | J |
| k K | 0E | — | k |
| | | L Shift/R Shift | K |
| l L | 0F | — | l |
| | | L Shift/R Shift | L |
| | | R Alt | ø |
| | | R Alt+L Shift/R Shift | Ø |
| m M | 10 | — | m |
| | | L Shift/R Shift | M |
| | | R Alt | μ |
| | | L Gui/R Gui | Minimize all windows |

| Name | Code (Hex) 0x | Check-box | Display/function |
|------|---------------|-----------------------|----------------------|
| n N | 11 | — | n |
| | | L Shift/R Shift | N |
| | | R Alt | ñ |
| | | R Alt+L Shift/R Shift | Ñ |
| o O | 12 | — | o |
| | | L Shift/R Shift | O |
| | | R Alt | ó |
| | | R Alt+L Shift/R Shift | Ó |
| | | L Ctrl/R Ctrl | Open |
| p P | 13 | — | p |
| | | L Shift/R Shift | P |
| | | R Alt | ö |
| | | R Alt+L Shift/R Shift | Ö |
| | | L Ctrl/R Ctrl | Printing |
| q Q | 14 | — | q |
| | | L Shift/R Shift | Q |
| | | R Alt | ä |
| | | R Alt+L Shift/R Shift | Ä |
| r R | 15 | — | r |
| | | L Shift/R Shift | R |
| | | R Alt | ® |
| | | L Gui/R Gui | Display "Run" dialog |
| s S | 16 | — | s |
| | | L Shift/R Shift | S |
| | | R Alt | ß |
| | | R Alt+L Shift/R Shift | § |
| | | L Ctrl/R Ctrl | Save |
| t T | 17 | — | t |
| | | L Shift/R Shift | T |
| | | R Alt | þ |
| | | R Alt+L Shift/R Shift | Þ |
| u U | 18 | — | u |
| | | L Shift/R Shift | U |
| | | R Alt | ú |
| | | R Alt+L Shift/R Shift | Ú |

| Name | Code (Hex) 0x | Check-box | Display/function |
|------|---------------|-----------------------|------------------|
| v V | 19 | — | v |
| | | L Shift/R Shift | V |
| | | L Ctrl/R Ctrl | Paste |
| w W | 1A | — | w |
| | | L Shift/R Shift | W |
| | | R Alt | å |
| | | R Alt+L Shift/R Shift | Å |
| x X | 1B | — | x |
| | | L Shift/R Shift | X |
| | | L Ctrl/R Ctrl | Cut |
| y Y | 1C | — | y |
| | | L Shift/R Shift | Y |
| | | R Alt | ü |
| | | R Alt+L Shift/R Shift | Ü |
| z Z | 1D | — | z |
| | | L Shift/R Shift | Z |
| | | R Alt | æ |
| | | R Alt+L Shift/R Shift | Æ |
| | | L Ctrl/R Ctrl | |
| 1 ! | 1E | — | 1 |
| | | L Shift/R Shift | ! |
| | | R Alt | i |
| | | R Alt+L Shift/R Shift | ¹ |
| 2 @ | 1F | — | 2 |
| | | L Shift/R Shift | @ |
| | | R Alt | ² |
| 3 # | 20 | — | 3 |
| | | L Shift/R Shift | # |
| | | R Alt | ³ |
| 4 \$ | 21 | — | 4 |
| | | L Shift/R Shift | \$ |
| | | R Alt | ¤ |
| | | R Alt+L Shift/R Shift | £ |
| 5 % | 22 | — | 5 |
| | | L Shift/R Shift | % |
| | | R Alt | € |

| Name | Code (Hex) 0x | Check-box | Display/function |
|-----------|---------------|-----------------------|------------------|
| 6 ^ | 23 | — | 6 |
| | | L Shift/R Shift | ^ |
| | | R Alt | ¼ |
| 7 & | 24 | — | 7 |
| | | L Shift/R Shift | & |
| | | R Alt | ½ |
| 8 * | 25 | — | 8 |
| | | L Shift/R Shift | * |
| | | R Alt | ¾ |
| 9 (| 26 | — | 9 |
| | | L Shift/R Shift | (|
| | | R Alt | ' |
| 0) | 27 | — | 0 |
| | | L Shift/R Shift |) |
| | | R Alt | ' |
| Return | 28 | — | Return |
| Escape | 29 | — | Escape |
| Backspace | 2A | — | Backspace |
| Tab | 2B | — | Tab |
| Space | 2C | — | Space |
| - _ | 2D | — | - |
| | | L Shift/R Shift | _ |
| | | R Alt | ¥ |
| = + | 2E | — | = |
| | | L Shift/R Shift | + |
| | | R Alt | × |
| | | R Alt+L Shift/R Shift | ÷ |
| [{ | 2F | — | [|
| | | L Shift/R Shift | { |
| | | R Alt | « |
|] } | 30 | — |] |
| | | L Shift/R Shift | } |
| | | R Alt | » |
| \ | 31 | — | \ |
| | | L Shift/R Shift | |
| | | R Alt | ¬ |
| | | R Alt+L Shift/R Shift | ¡ |

15.4 Keyboard table

| Name | Code (Hex) 0x | Check-box | Display/function |
|-----------|---------------|-----------------------|------------------|
| Europe 1 | 32 | — | Europe 1 |
| ; : | 33 | — | ; : |
| | | L Shift/R Shift | : |
| | | R Alt | ¶ |
| | | R Alt+L Shift/R Shift | ° |
| ' " | 34 | — | ' " |
| | | L Shift/R Shift | " |
| | | R Alt | ' |
| | | R Alt+L Shift/R Shift | '' |
| ' ~ | 35 | — | ' ~ |
| | | L Shift/R Shift | ~ |
| , < | 36 | — | , < |
| | | L Shift/R Shift | < |
| | | R Alt | ç |
| | | R Alt+L Shift/R Shift | Ç |
| . > | 37 | — | . > |
| | | L Shift/R Shift | > |
| / ? | 38 | — | / ? |
| | | L Shift/R Shift | ? |
| | | R Alt | ¿ |
| Caps Lock | 39 | — | Caps Lock |
| F1 | 3A | — | F1 |
| | | L Shift/R Shift | F13 |
| | | L Ctrl/R Ctrl | S5 |
| F2 | 3B | — | F2 |
| | | L Shift/R Shift | F14 |
| | | L Ctrl/R Ctrl | S6 |
| F3 | 3C | — | F3 |
| | | L Shift/R Shift | F15 |
| | | L Ctrl/R Ctrl | S7 |
| F4 | 3D | — | F4 |
| | | L Shift/R Shift | F16 |
| | | L Ctrl/R Ctrl | S8 |
| F5 | 3E | — | F5 |
| | | L Shift/R Shift | F17 |
| | | L Ctrl/R Ctrl | S9 |
| F6 | 3F | — | F6 |
| | | L Shift/R Shift | F18 |
| | | L Ctrl/R Ctrl | S10 |

| Name | Code (Hex) 0x | Check-box | Display/function |
|-----------------------------------|---------------|-----------------|-----------------------------------|
| F7 | 40 | — | F7 |
| | | L Shift/R Shift | F19 |
| | | L Ctrl/R Ctrl | S11 |
| F8 | 41 | — | F8 |
| | | L Shift/R Shift | F20 |
| | | L Ctrl/R Ctrl | S12 |
| F9 | 42 | — | F9 |
| | | L Shift/R Shift | S1 |
| | | L Ctrl/R Ctrl | S13 |
| F10 | 43 | — | F10 |
| | | L Shift/R Shift | S2 |
| | | L Ctrl/R Ctrl | S14 |
| F11 | 44 | — | F11 |
| | | L Shift/R Shift | S3 |
| | | L Ctrl/R Ctrl | S15 |
| F12 | 45 | — | F12 |
| | | L Shift/R Shift | S4 |
| | | L Ctrl/R Ctrl | S16 |
| Print Screen, F _N +INS | 46 | — | Print Screen, F _N +INS |
| Scroll Lock | 47 | — | Scroll Lock |
| Break, Ctrl+Pause | 48 | — | Break, Ctrl+Pause |
| Pause | 48 | — | Pause |
| Insert | 49 | — | Insert |
| Home | 4A | — | Home |
| Page Up | 4B | — | Page Up |
| Delete | 4C | — | Delete |
| End | 4D | — | End |
| Page Down | 4E | — | Page Down |
| Right Arrow | 4F | — | Right Arrow |
| Left Arrow | 50 | — | Left Arrow |
| Down Arrow | 51 | — | Down Arrow |
| Up Arrow | 52 | — | Up Arrow |
| Num Lock | 53 | — | Num Lock |
| Keypad / | 54 | — | Keypad / |
| Keypad * | 55 | — | Keypad * |
| Keypad - | 56 | — | Keypad - |
| Keypad + | 57 | — | Keypad + |
| Keypad Enter | 58 | — | Keypad Enter |
| Keypad 1 End | 59 | — | Keypad 1 End |
| Keypad 2 Down | 5A | — | Keypad 2 Down |
| Keypad 3 PageDn | 5B | — | Keypad 3 PageDn |
| Keypad 4 Left | 5C | — | Keypad 4 Left |

15.4 Keyboard table

| Name | Code (Hex) 0x | Check-box | Display/function |
|-----------------|---------------|-----------|------------------|
| Keypad 5 | 5D | — | Keypad 5 |
| Keypad 6 Right | 5E | — | Keypad 6 Right |
| Keypad 7 Home | 5F | — | Keypad 7 Home |
| Keypad 8 Up | 60 | — | Keypad 8 Up |
| Keypad 9 PageDn | 61 | — | Keypad 9 PageDn |
| Keypad 0 Insert | 62 | — | Keypad 0 Insert |
| Keypad . Delete | 63 | — | Keypad . Delete |
| Europe 2 | 64 | — | Europe 2 |
| App | 65 | — | App |
| Keyboard Power | 66 | — | Keyboard Power |
| Keypad = | 67 | — | Keypad = |
| F13 | 68 | — | F13 |
| F14 | 69 | — | F14 |
| F15 | 6A | — | F15 |
| F16 | 6B | — | F16 |
| F17 | 6C | — | F17 |
| F18 | 6D | — | F18 |
| F19 | 6E | — | F19 |
| F20 | 6F | — | F20 |
| F21 | 70 | — | F21 |
| F22 | 71 | — | F22 |
| F23 | 72 | — | F23 |
| F24 | 73 | — | F24 |
| Left Control | E0 | — | Left Control |
| Left Shift | E1 | — | Left Shift |
| Left Alt | E2 | — | Left Alt |
| Left GUI | E3 | — | Left GUI |
| Right Control | E4 | — | Right Control |
| Right Shift | E5 | — | Right Shift |
| Right Alt | E6 | — | Right Alt |
| Right GUI | E7 | — | Right GUI |

Dimension drawings

16.1 Overview of the dimension drawings

This section contains the following dimension drawings:

- Dimension drawing of the touch screen device, 12" display (Page 138)
- Dimension drawing of the touch screen device, 15" display (Page 139)
- Dimension drawing of the touch screen device, 19" display (Page 140)
- Dimension drawing of the key panel device, 12" display (Page 141)
- Dimension drawing of the key panel device, 15" display (Page 142)

Note

The dimensions are always given in in mm and inch (above: Millimeter, below: Inch).

16.2 Dimension drawing of the touch screen device, 12" display

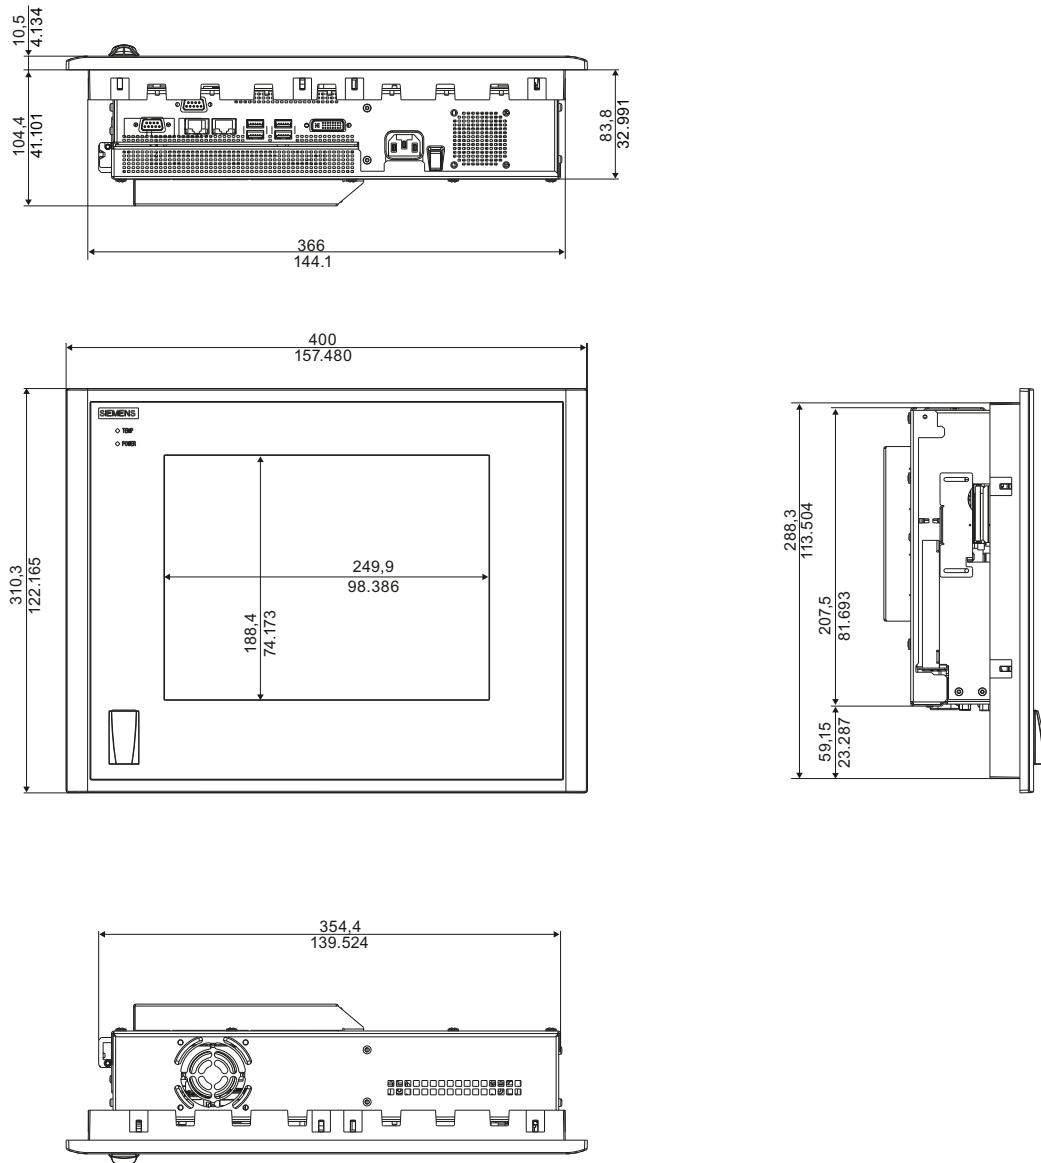


Figure 16-1 Dimension drawing of the touch screen device with 12" display

16.3 Dimension drawing of the touch screen device, 15" display

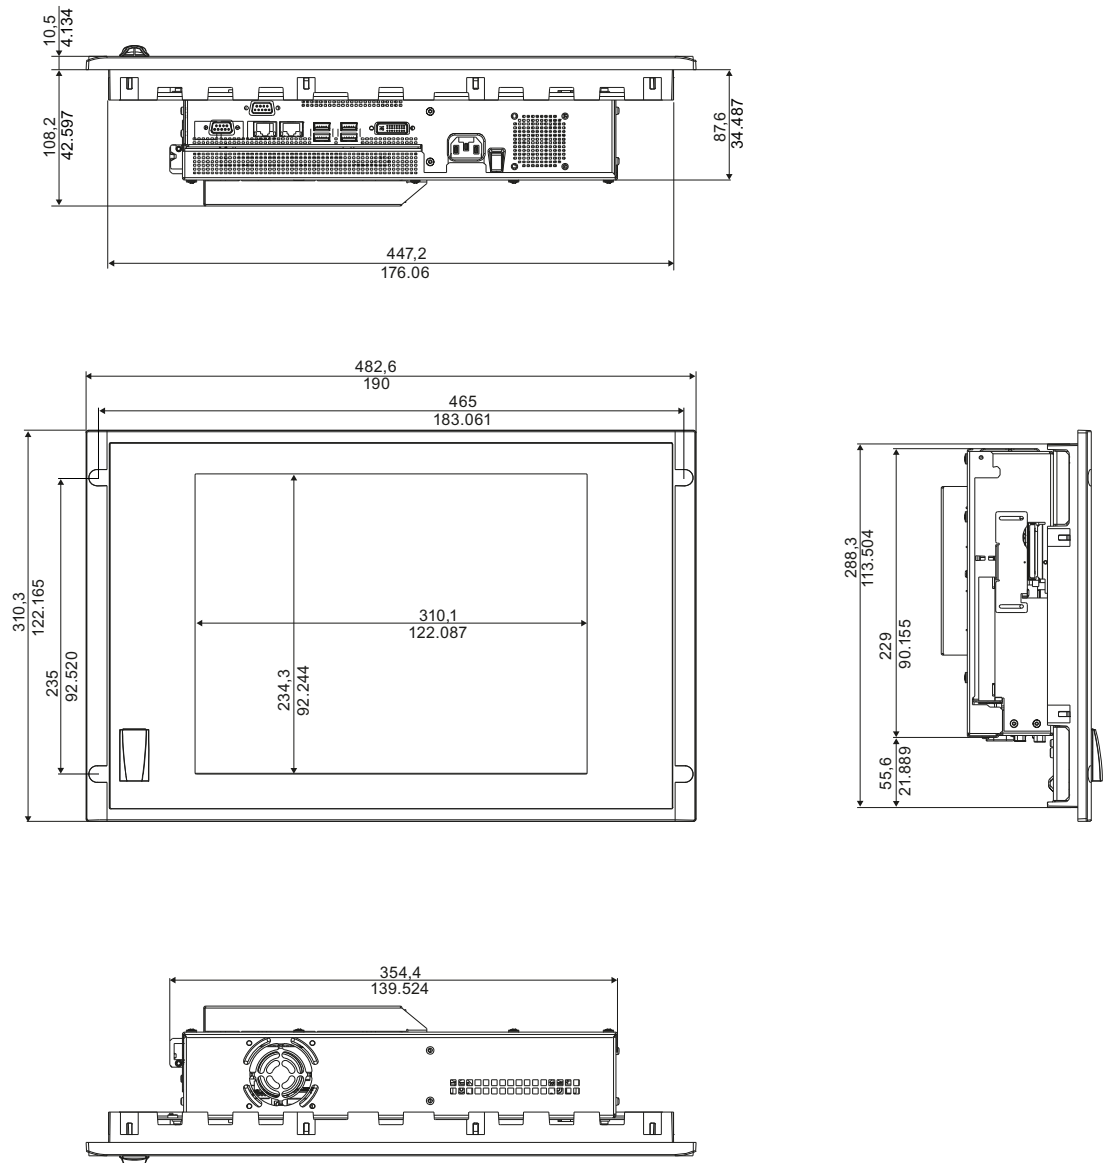


Figure 16-2 Dimension drawing of the touch screen device with 15" display

16.4 Dimension drawing of the touch screen device, 19" display

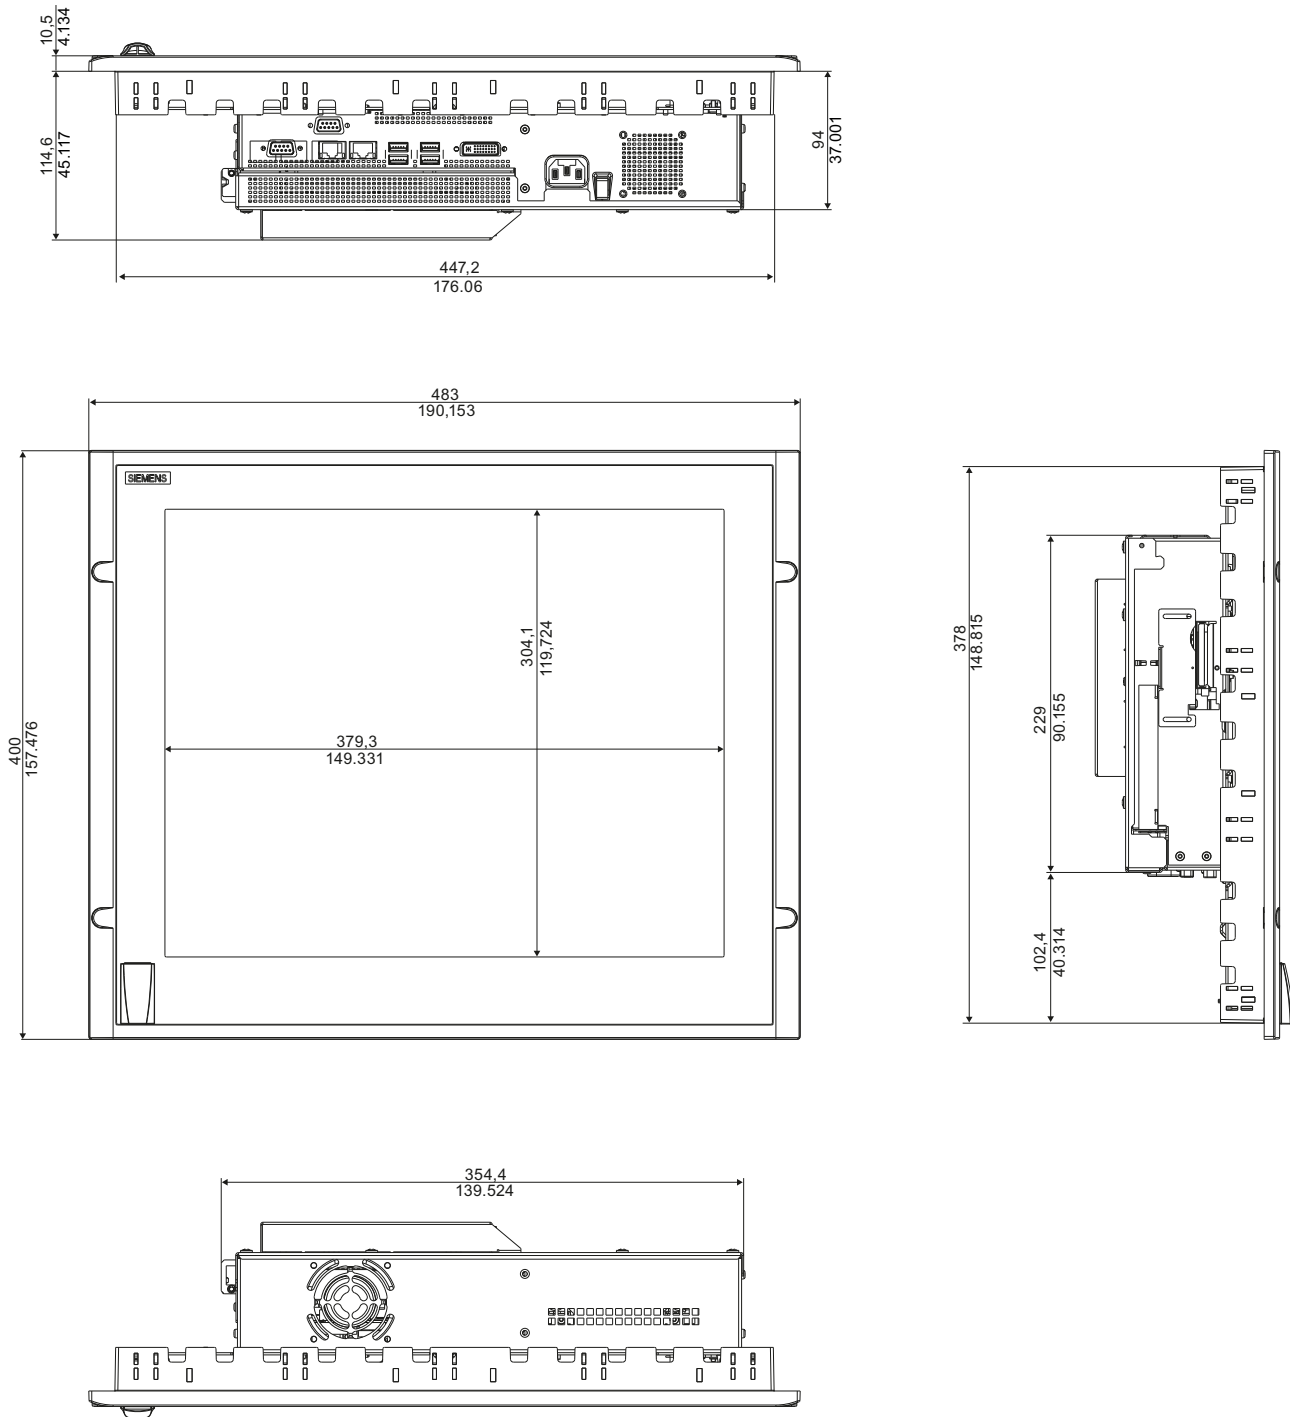


Figure 16-3 Dimension drawing of the touch screen device with 19" display

16.5 Dimension drawing of the key panel device, 12" display

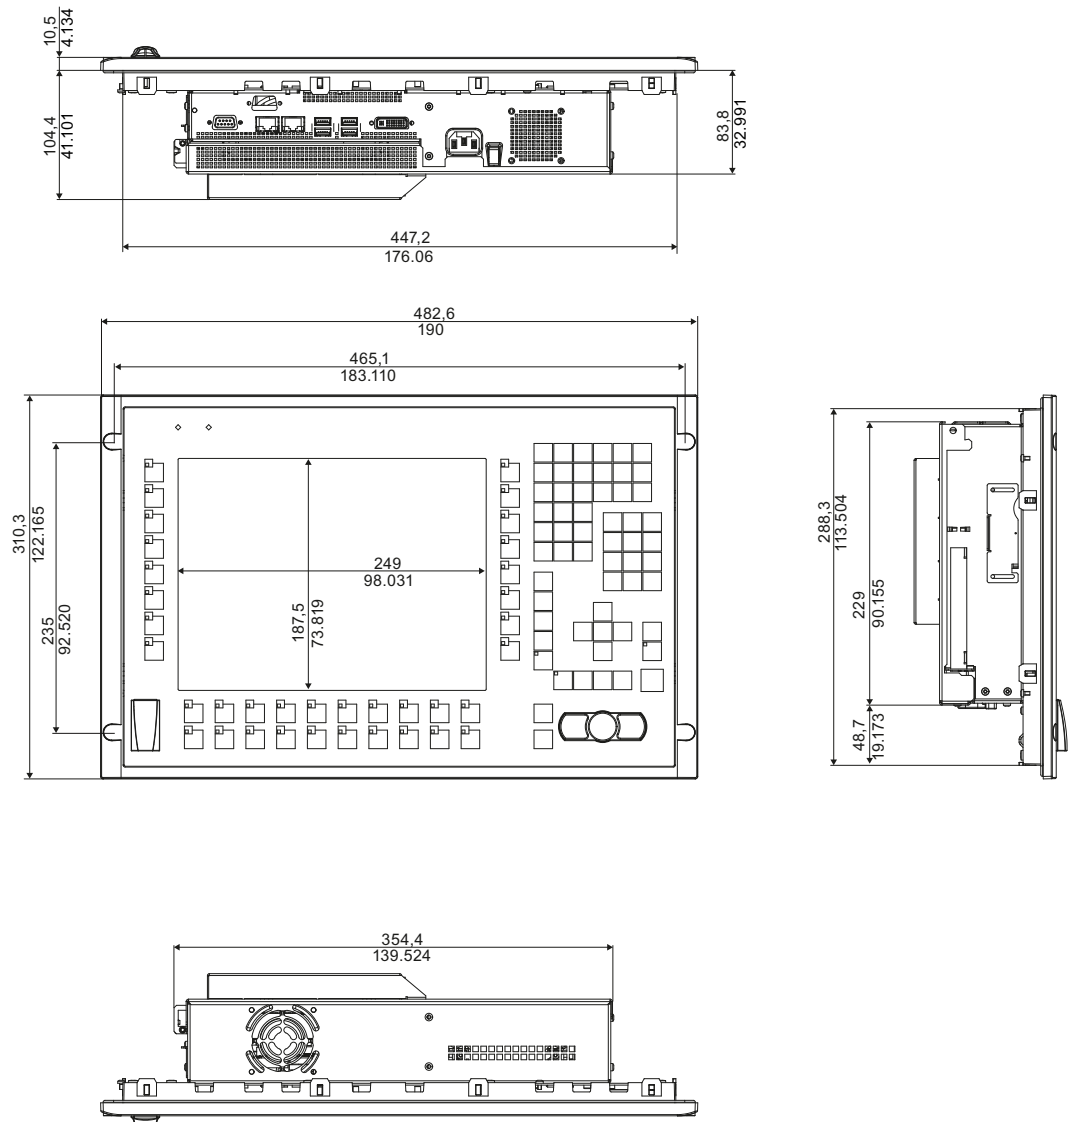


Figure 16-4 Dimension drawing of the key panel device with 12" display

16.6 Dimension drawing of the key panel device, 15" display

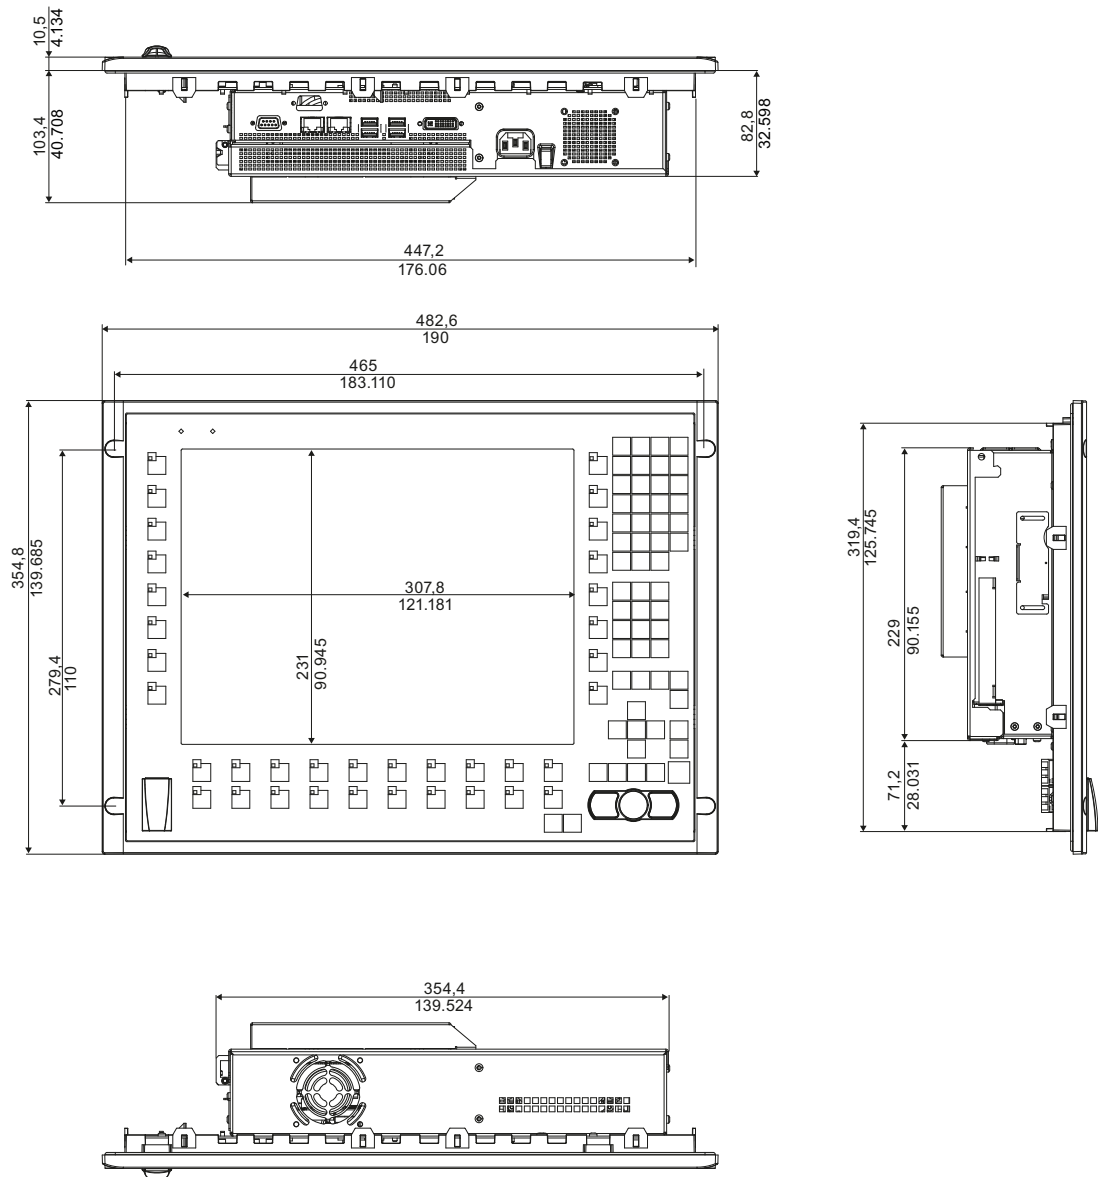


Figure 16-5 Dimension drawing of the key panel device with 15" display


Detailed descriptions

17.1 Components

17.1.1 Overview of internal components

The basic components of the device are

- the motherboard with processor, the chipset, one slot for a RAM module, internal and external ports, the Flash BIOS and
- Power supply of the device

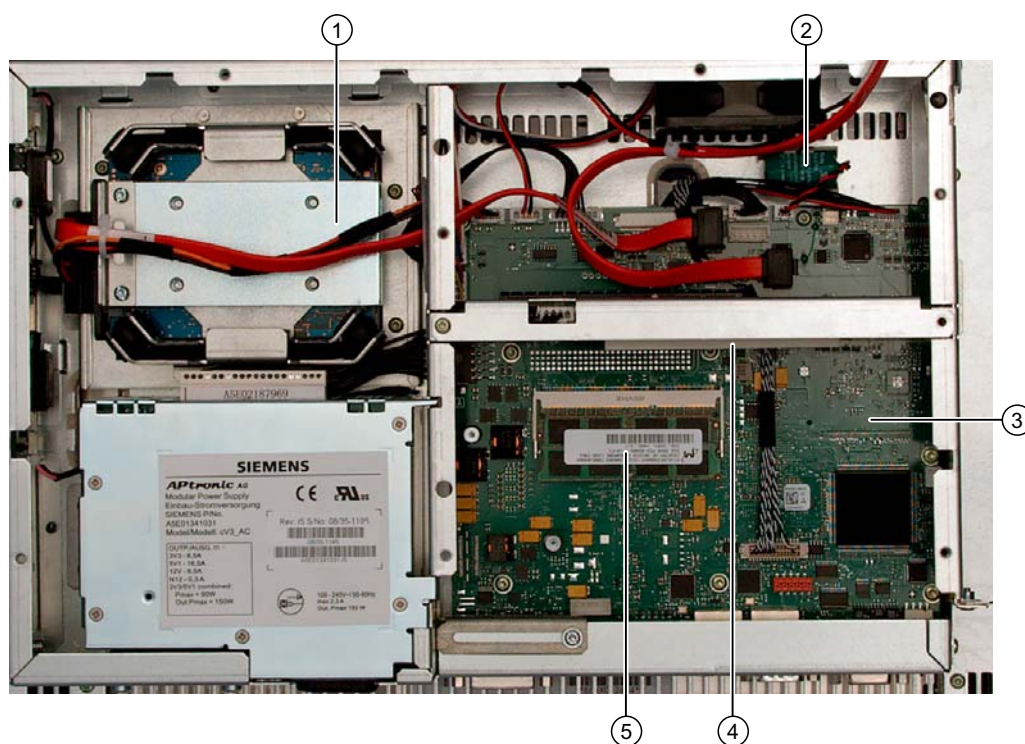

- ① SSD or hard disk
- ② Backup battery
- ③ Motherboard
- ④ Slot for PCI card
- ⑤ Slot for a memory module


Figure 17-1 Internal design of the device

17.1.2 Technical features of the motherboard

| Component / interface | Description | Parameters |
|-----------------------|--|--|
| Chipset | Intel GM45+ICH-9m | |
| BIOS | Insyde H20... | |
| CPU | Intel Celeron M Inter Pentium Core 2 Solo Intel Pentium Core 2 Duo | 1.2 GHz, 1 MB SLC 1.2 GHz, 3 MB SLC 1.86 GHz, 6 MB SLC |
| Memory | DDR 3 SO-DIMM module | 1024 MB / 2048 MB / 4096 MB |
| Graphics | Intel GMA4500 | 8 - 512 MB graphics memory taken dynamic from RAM |

17.1.3 External ports

17.1.3.1 COM
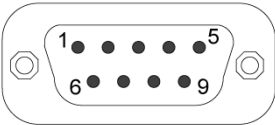
| Serial port COM1, 9-pin (plug) | | |
|---|-------------------|-------------------------|
|  | | |
| Pin no. | Short designation | Meaning |
| 1 | DCD | Data carrier detect (I) |
| 2 | RxD | Received data (I) |
| 3 | TxD | Transmitted data (O) |
| 4 | DTR | Data terminal ready (O) |
| 5 | GND | |
| 6 | DSR | Data set ready (I) |
| 7 | RTS | Request to send (O) |
| 8 | CTS | Clear to send (I) |
| 9 | RI | Incoming call (I) |

17.1.3.2 DVI-I

| DVI-I interface, standard socket | | |
|----------------------------------|--|------------------------------------|
| | | |
| Pin no. | Short designation | Meaning |
| 1 | TMDS Data2- | DVI data channel (O) |
| 2 | TMDS Data2+ | DVI data channel (O) |
| 3 | TMDS Data2/4 shield | Cable shield |
| 4 | NC* | |
| 5 | NC | |
| 6 | DDC clock (SCL) | Display data channel – clock (I/O) |
| 7 | DDC data (SDA) | Display data channel – data (I/O) |
| 8 | Analog vertical sync (VSYNC) | Analog vertical sync signal (O) |
| 9 | TMDS Data1- | DVI data channel (O) |
| 10 | TMDS Data1+ | DVI data channel (O) |
| 11 | TMDS Data1/3 shield | Cable shield |
| 12 | NC | |
| 13 | NC | |
| 14 | +5V power (VCC) | +5V power for DCC (O) |
| 15 | Ground (return for +5V, Hsync and Vsync) (GND) | Analog ground |
| 16 | Hot Plug Detect | |
| 17 | TMDS data 0- | DVI data channel (O) |
| 18 | TMDS data 0+ | DVI data channel (O) |
| 19 | TMDS Data0/5 shield | Cable shield |
| 20 | NC | |
| 21 | NC | |
| 22 | TMDS clock shield | Cable shield |
| 23 | TMDS clock+ | DVI clock channel (O) |
| 24 | TMDS clock- | DVI clock channel (O) |
| C1 | Analog red (R) | Analog red signal (O) |
| C2 | Analog green (G) | Analog green signal (O) |
| C3 | Analog blue (B) | Analog blue signal (O) |
| C4 | Analog horizontal sync (HSYNC) | Analog horizontal sync signal (O) |
| C5 | Analog ground (analog R, G, & return) (GND) | Analog ground |

17.1.3.3 Ethernet

Pin assignment of port with 1 Gbps operating mode


| Ethernet RJ45 connection | | | |
|--------------------------|-------------------|---|----------------|
| | | | |
| Pinno. | Short designation | Meaning | Input / output |
| 1 | BI_DA+ | Bi-directional data A+ | Input/output |
| 2 | BI_DA- | Bi-directional data A- | Input/output |
| 3 | BI_DB+ | Bi-directional data B+ | Input/output |
| 4 | BI_DC+ | Bi-directional data C+ | Input/output |
| 5 | BI_DC- | Bi-directional data C- | Input/output |
| 6 | BI_DB- | Bi-directional data B- | Input/output |
| 7 | BI_DD+ | Bi-directional data D+ | Input/output |
| 8 | BI_DD- | Bi-directional data D- | Input/output |
| S | | Shield | – |
| | LED 1 | Off: 10 Mbps Lit in green: 100 Mbps Lit in orange: 1000 Mbps | – |
| | LED 2 | Lit: Active connection (to a hub, for example) Flashing: Activity | – |

Pin assignment of port with 100 Mbps operating mode


| Ethernet RJ45 connection | | | |
|--------------------------|-------------------|------------|----------------|
| | | | |
| Pinno. | Short designation | Meaning | Input / output |
| 1 | Rx+ | Receive + | Input |
| 2 | RX- | Receive - | Input |
| 3 | TX+ | Transmit + | Output |
| 4 | | | – |

| Ethernet RJ45 connection | | | |
|--------------------------|-------|---|--------|
| 5 | | | - |
| 6 | TX- | Transmit - | Output |
| 7 | | | - |
| 8 | | | - |
| S | | Shield | - |
| | LED 1 | Off: 10 Mbps Lit in green: 100 Mbps | - |
| | LED 2 | Lit: Active connection (to a hub, for example) Flashing: Activity | - |

17.1.3.4 PROFIBUS


| PROFIBUS interface, 9-pin (socket) | | |
|--|-------------------|-----------------------------|
|  | | |
| Pin no. | Short designation | Meaning |
| 1-2 | NC | Not connected |
| 3 | LTG_B | Data line (I/O) |
| 4 | RTS_AS | Turn on PLC transmitter (O) |
| 5 | GND | Ground isolated |
| 6 | P5V_dp_fused | +5 V (fused) isolated |
| 7 | NC | Not connected |
| 8 | LTG_A | Data line (I/O) |
| 9 | RTS_PG | PG Request to send (O) |

17.1.3.5 PROFINET
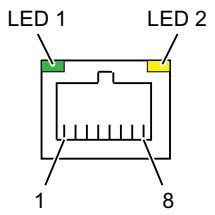
| Ethernet RJ45 connection | | | |
|---|-------------------|-----------|----------------|
|  | | | |
| Pinno. | Short designation | Meaning | Input / output |
| 1 | Rx+ | Receive + | Input |

| Ethernet RJ45 connection | | | |
|--------------------------|-------|---|--------|
| 2 | RX- | Receive - | Input |
| 3 | TX+ | Transmit + | Output |
| 4 | | | - |
| 5 | | | - |
| 6 | TX- | Transmit - | Output |
| 7 | | | - |
| 8 | | | - |
| S | | Shield | - |
| | LED 1 | Off: 10 Mbps Lit in green: 100 Mbps | - |
| | LED 2 | Lit: Active connection (to a hub, for example) Flashing: Activity | - |

17.1.3.6 USB

| USB interface, 4 channels (2* low current, 2* high current) | | |
|---|-------------------|--|
|  | | |
| Pin no. | Short designation | Meaning |
| 1 | USB_P5V_fused (O) | + 5 V (fused) for external USB interface |
| 2 | USB_D0M (I/O) | Data+, USB channel 0 |
| 3 | USB_D0P (I/O) | Data-, USB channel 0 |
| 4 | USB_GND | Ground for external USB interface |

17.1.3.7 Compact Flash card interface

| CompactFlash card interface, X3 | | |
|---------------------------------|-------------------|-------------------------------------|
| Pin no. | Short designation | Meaning |
| 41 | RESET# | Reset (output) |
| 7 | CS0# | Chip select 0(output) |
| 32 | CS1# | Chip select 1(output) |
| 34 | IORD# | I/O read (output) |
| 35 | IOWR# | I/O write (output) |
| 20, 19, 18, | A0-A2 | Address bit 0-2 (output) |
| 17, 16, 15, 14, 12, 11, 10, 8 | A3-A10 | Address bit 3-10 (output) to ground |

| CompactFlash card interface, X3 | | |
|---|---------------|--|
| 21, 22, 23, 2, 3, 4, 5, 6, 47, 48, 49, 27, 28, 29, 30, 31 | D0-D15 | Data bits 0-15 (in/out) |
| 37 | INTRQ | Interrupt request (input) |
| 9 | OE# /ATA SEL# | Enables True IDE mode |
| 24 | IOCS16# | I/O-chip select 16 (input) |
| 39 | CSEL# | Cable select (output) |
| 42 | IORDY | I/O ready (input) |
| 46 | PDIAG# | Passed diagnostic |
| 45 | DASP# | Drive active/slave present (not connected) |
| 26, 25 | CD1#, CD2# | Card detect (not connected) |
| 33, 40 | VS1#, VS2# | Voltage sense (not connected) |
| 43 | DMARQ | DMA request (input) |
| 44 | DMACK# | DMA acknowledge (output) |
| 36 | WE# | Write enable |
| 1, 50 | GND | Ground |
| 13, 38 | VCC | + 5V power |

17.1.3.8 PCI interface

| PCI interface, X7 | | | | |
|-------------------|---------------|----------|---------------|---------------|
| Pin no. | O | B | C | D |
| 1 | GND | Reserved | +5 | AD00 |
| 2 | VI/O 5V | AD02 | AD01 | +5V |
| 3 | AD05 | GND | AD04 | AD03 |
| 4 | C/BE0# | AD07 | GND | AD06 |
| 5 | GND | AD09 | AD08 | GND |
| 6 | AD11 | VI/O | AD10 | M66EN |
| 7 | AD14 | AD13 | GND | AD12 |
| 8 | +3.3V | C/BE1# | AD15 | +3.3V |
| 9 | SERR# | GND | -- | PAR |
| 10 | GND | PERR# | +3.3V | -- |
| 11 | STOP# | +3.3V | LOCK# | GND |
| 12 | +3.3V | TRDY# | GND | DEVSEL# |
| 13 | FRAME# | GND | IRDY# | +3.3V |
| 14 | GND | AD16 | +3.3V | C/BE2# |
| 15 | AD18 | +3.3V | AD17 | GND |
| 16 | AD21 | AD20 | GND | AD19 |
| 17 | +3.3V | AD23 | AD22 | +3.3V |
| 18 | IDSEL0 = AD28 | GND | IDSEL1 = AD29 | IDSEL2 = AD30 |
| 19 | AD24 | C/BE3# | VI/O | IDSEL3 = AD31 |

| PCI interface, X7 | | | | |
|-------------------|-------|----------|----------|-------|
| 20 | GND | AD26 | AD25 | GND |
| 21 | AD29 | +5V | AD28 | AD27 |
| 22 | +5V | AD30 | GND | AD31 |
| 23 | REQ0# | GND | REQ1# | VI/O |
| 24 | GND | REQ2# | +5V | GNT0# |
| 25 | GNT1# | VI/O | GNT2# | GND |
| 26 | +5V | CLK0 | GND | CLK1 |
| 27 | CLK2 | +5V | CLK3 | GND |
| 28 | GND | INTD# | +5V | RST# |
| 29 | +12V | INTA# | INTB# | INTC# |
| 30 | -12V | Reserved | Reserved | GND |

17.2 BIOS Setup

17.2.1 Overview

BIOS Setup program

BIOS Setup program is stored in ROM BIOS. System configuration data are stored in battery-backed RAM of the device.

SETUP can be used to define the hardware configuration (for example, the hard disk type) and system properties. SETUP is also used to set the time and date of the realtime clock.

Changing the device configuration

Your device configuration is preset for operating with the included software. You should only change the default values if you have modified the technical configuration your device, or if a fault occurs when the unit is powered up.


17.2.2 Starting BIOS Setup

Starting BIOS Setup

Start the setup program as follows:

1. Reset the device (warm or cold restart).

In the figures shown, the default settings differ based on the device versions. With the default setting of your device, the display shown below appears following power-on, **for example**:

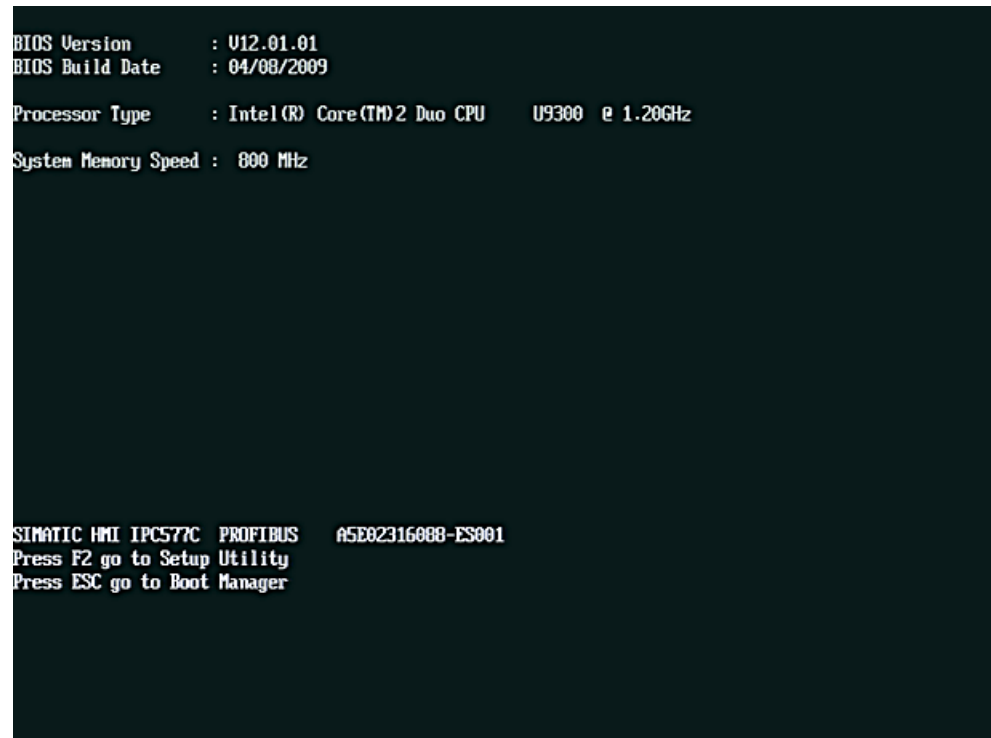

```
BIOS Version      : U12.01.01
BIOS Build Date   : 04/08/2009

Processor Type    : Intel(R) Core(TM)2 Duo CPU   U9300 @ 1.20GHz
System Memory Speed : 800 MHz

SIMATIC HMI IPC577C PROFIBUS A5E02316088-ES001
Press F2 go to Setup Utility
Press ESC go to Boot Manager
```

Figure 17-2 Diagnostics screen of the IPC577C

On completion of the POST, the BIOS gives you the opportunity of starting the SETUP program. The following message appears on the screen:

```
PRESS F2 go to Setup Utility OR
Press ESC go to Boot Manager
```

2. Press F2 key as long as BIOS prompt appears on screen.

17.2.3 BIOS Setup menus

The various menus and submenus are listed on the next pages. You can obtain information on the selected SETUP item from the "Item-specific help" part of the respective menu.

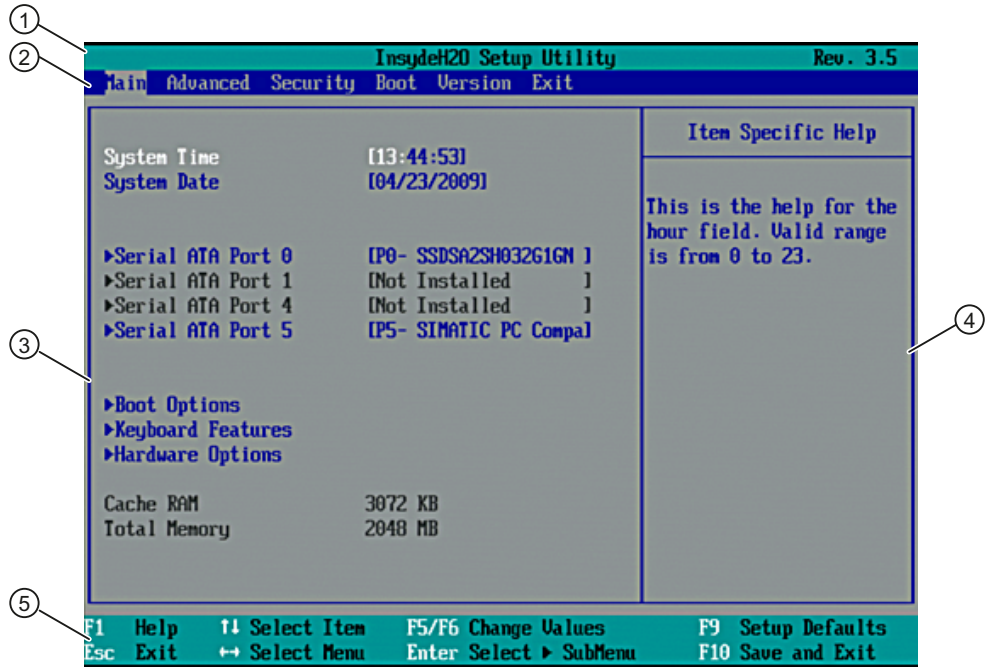


Figure 17-3 BIOS SETUP menu (example)

| | |
|----------------------|----------------|
| ① Header | ④ Help window |
| ② Menu bar | ⑤ Command line |
| ③ Selectable submenu | |

Menu layout

The screen is divided into four sections. In the top section ②, you can select the submenus [Main] [Advanced] [Security] [Boot] [Version] [Exit]. You can select various settings or submenus in the left middle section ③. Short help texts are displayed on the right ④ for currently selected menu entries; the bottom section contains information for operator input.

The following figures represent examples of specific device configurations. The screen content may deviate slightly depending on the equipment actually supplied.

You can move between the menu forms using the cursor keys [←] left and [→] right.

| Menu | Meaning |
|----------|---|
| Main | System functions are set here |
| Advanced | An extended system configuration can be set here |
| Security | Security functions are set here, for example, a password. |
| Boot | This is where the boot priority is specified. |
| Version | Information about the programming device (for example, release status) can be found here. |
| Exit | Used for terminating and saving. |

17.2.4 Main menu

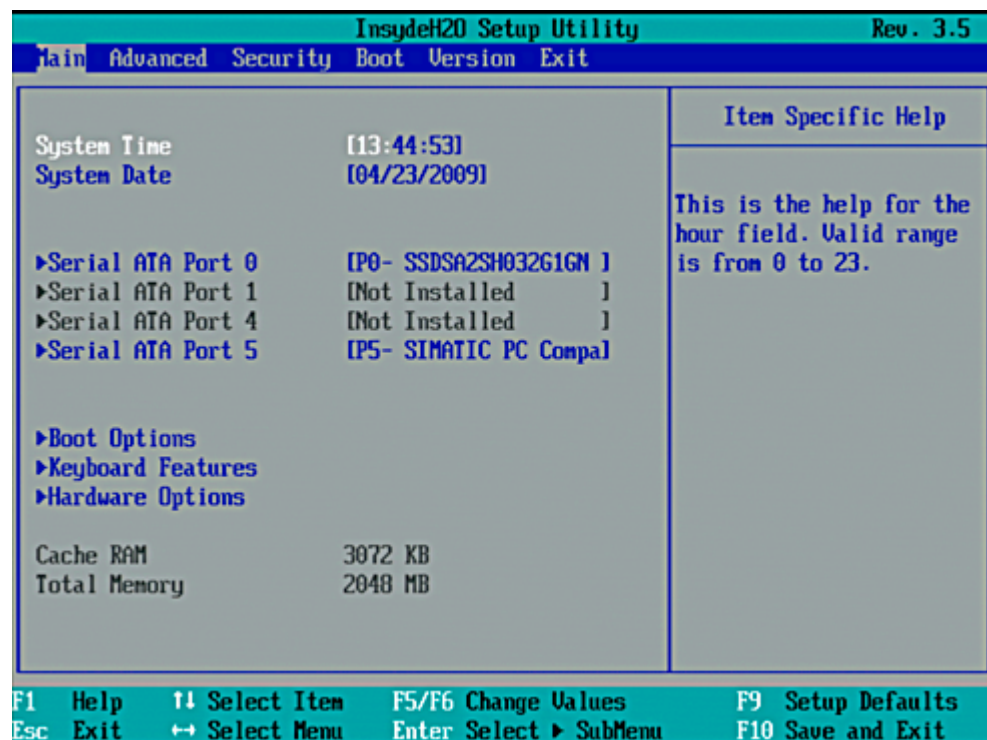


Figure 17-4 Main menu

Settings in the main menu

In the main menu, you can move up and down to select the following system configuration boxes by means of the [↑] up and [↓] down cursor keys:

| Field | Meaning |
|--------------------|---|
| System Time | For viewing and setting the current time |
| System Date | For viewing and setting the current date |
| by submenus | |
| Serial ATA Port 0 | Type of installed drives |
| Serial ATA Port 1 | Type of installed drives |
| Boot options | Used for setting the boot options |
| Keyboard Features | Used for setting the keyboard interface (Numlock) |
| Hardware Options | Used for setting the hardware options |

System time and date

System Time and System Date indicate the current values. Once you have selected the appropriate option, you can use the [+] and [-] keys to modify the time setting

Hour: Minute: Second

and for the date

Month/Day/Year

You can navigate through the entries within the date and time fields (for example, from hour to minute) using the Enter key.

Serial ATA Port 0, Serial ATA Port 1

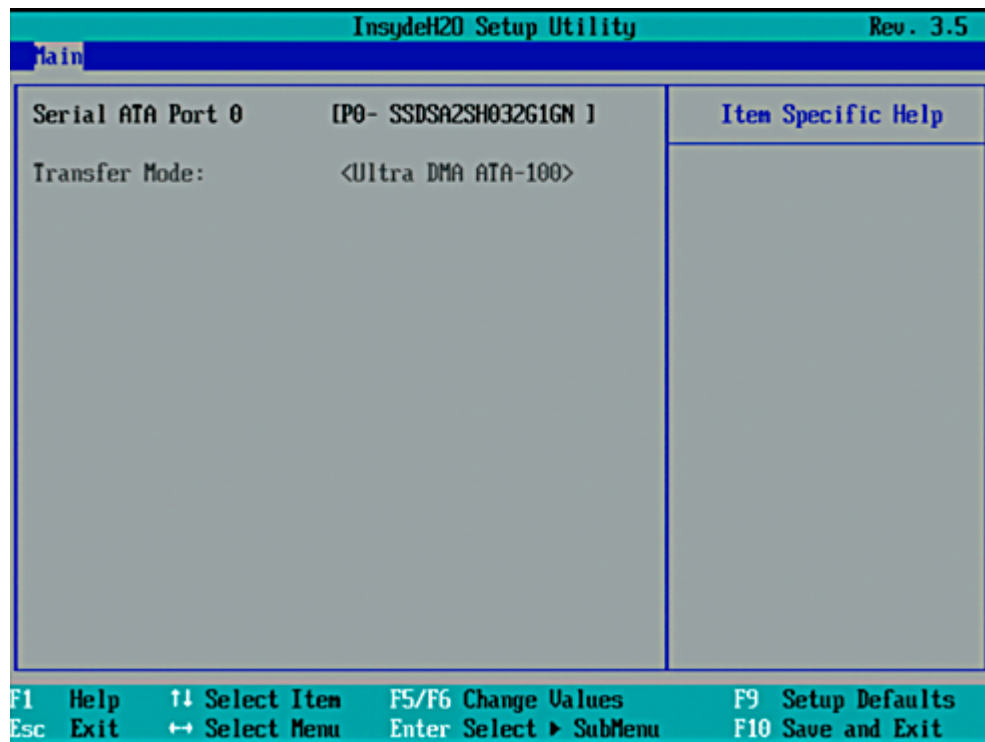


Figure 17-5 "Serial ATA Port 0" submenu (example)

| | | |
|---------------|-------------------|--|
| Transfer Mode | Fast PIO | This field shows the transmission speed of the interface. The displayed value depends on the type of drive connected. Exit the submenu by pressing ESC. |
| | Ultra DMA ATA-33 | |
| | Ultra DMA ATA-66 | |
| | Ultra DMA ATA-100 | |

"Boot Options" submenu

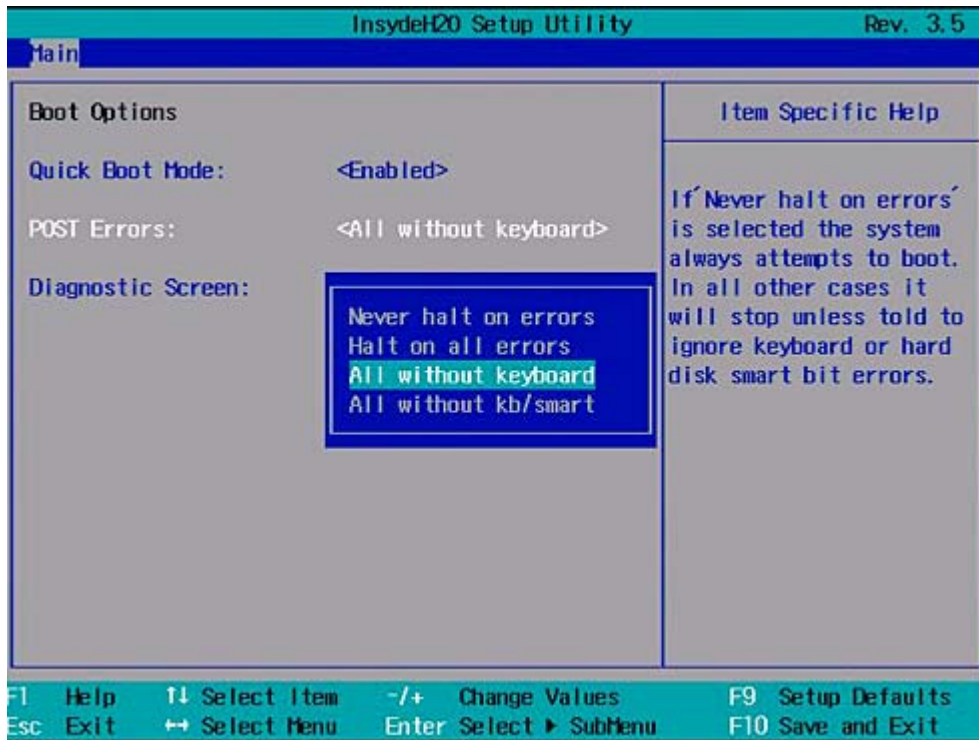


Figure 17-6 "Boot Options" submenu

| | | |
|-------------------|--|--|
| Quick Boot Mode | Some hardware tests are skipped to speed up the boot sequence. | |
| POST errors | The boot sequence is stopped if an error is detected during booting; you must press F1 to acknowledge. | |
| | Never halt on errors | Bootting continues if errors occur |
| | Halt on all errors | Bootting is stopped if an error is detected |
| | All without keyboard | Bootting is stopped if any error except a keyboard error occurs |
| | All without kb/smart | Stop at any error, but not with a keyboard or S.M.A.R.T storage media error. |
| Diagnostic screen | Shows the diagnostics messages on the monitor during booting. | |

"Keyboard Features" submenu

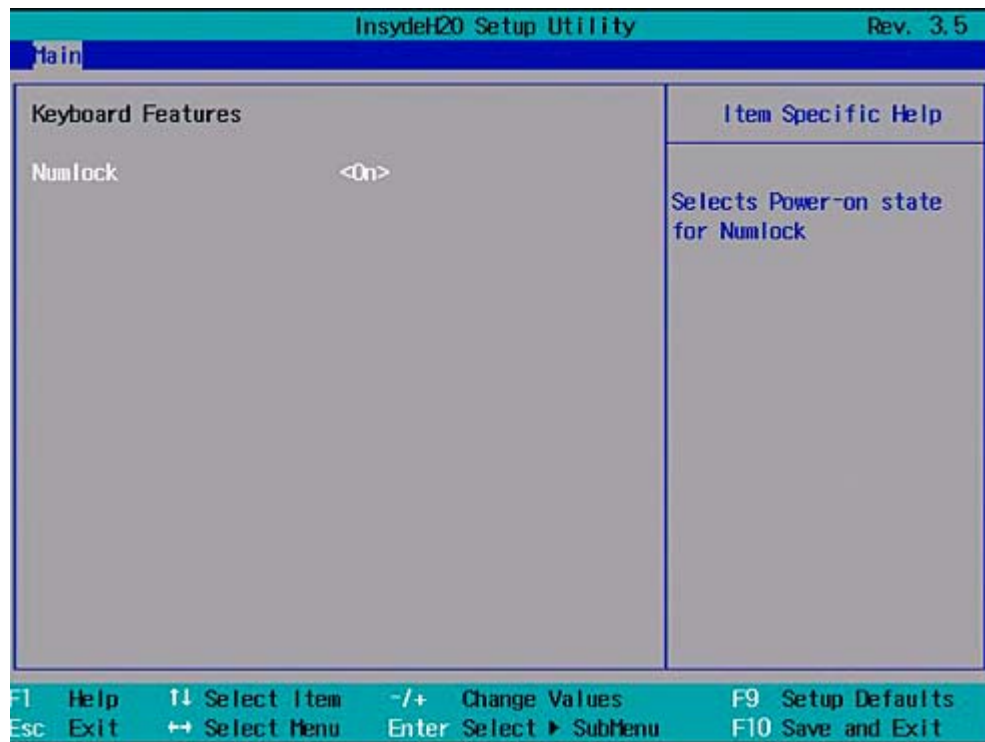


Figure 17-7 "Keyboard Features" submenu

| | | |
|---------|-----|--|
| Numlock | On | Switches Numlock on or off following power on. |
| | Off | |

"Hardware Options" submenu

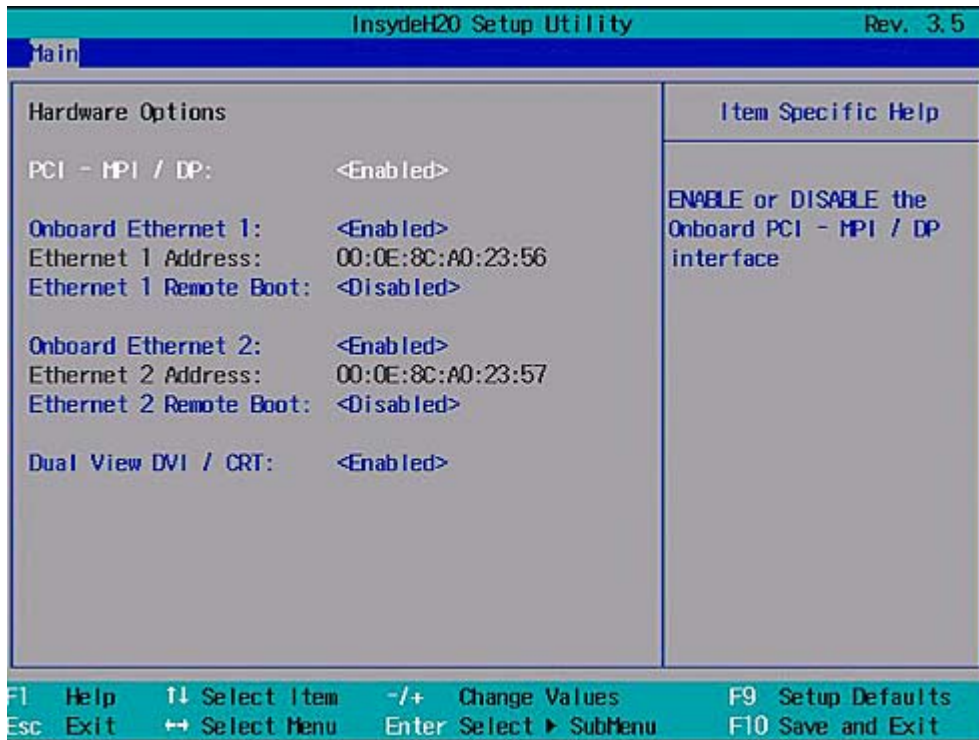


Figure 17-8 "Hardware Options" field

The parameters of the interfaces present on the motherboard are set here.

| Entry | Meaning | |
|--------------------------|--|--|
| PCI - MPI / DP | Enabled | Sharing the MPI/DP interface. The resources are managed by the BIOS PCI Plug and Play mechanism. |
| | Disabled | The MPI/DP interface is disabled. |
| Onboard Ethernet 1/2 | Enabled | The Ethernet port on the motherboard is enabled. |
| | Disabled | The Ethernet port on the motherboard is disabled. |
| Ethernet 1/2 Address | Shows the individual Ethernet address. | |
| Ethernet 1/2 Remote Boot | Enabled | Booting via a connected LAN is possible. |
| | Disabled | Booting via LAN is not possible. |
| Dual view DVI/CRT | Enabled | Dual view DVI/CRT is available via the DVI-I socket (not relevant for Panel PC). |
| | Disabled | Only one monitor can be enabled via the DVI-I socket (not relevant for Panel PC). |

Note

The second Ethernet interface support is OS dependent. For DOS based applications, use the first Ethernet interface and disable the second Ethernet interface in BIOS Setup. This is practical because some programs use the second Ethernet interface because it is the first one found on the PCI bus.

17.2.5 Advanced Menu

Menu layout

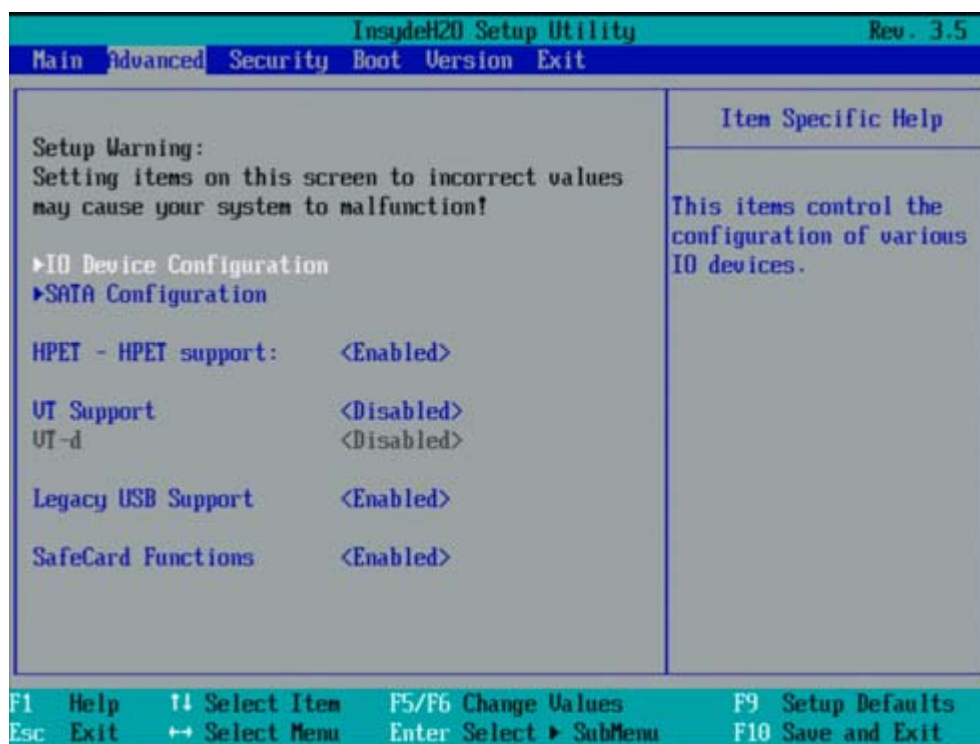


Figure 17-9 Advanced Menu

Settings in the Advanced Menu

| | | |
|---------------------|----------|---|
| HPET - HPET support | Disabled | High Precision Event Timer is disabled |
| | Enabled | High Precision Event Timer is enabled |
| Legacy USB support | Disabled | Disables Legacy Universal Serial Bus support Booting via USB media is not possible: but USB keyboard and USB mouse work. |
| | Enabled | Enables Legacy Universal Serial Bus support Booting via USB media is possible and the USB keyboard and USB mouse work. The USB Boot function must be enabled to allow booting from a USB device, or if the system is to be operated without USB support with a USB keyboard or mouse. |
| SafeCard functions | Enabled | Watchdog reset is enabled. |
| | Disabled | Watchdog reset is disabled. |
| | | The relevant driver and the application must be started for operation of the monitoring functions. |

"IO Device Configuration" submenu

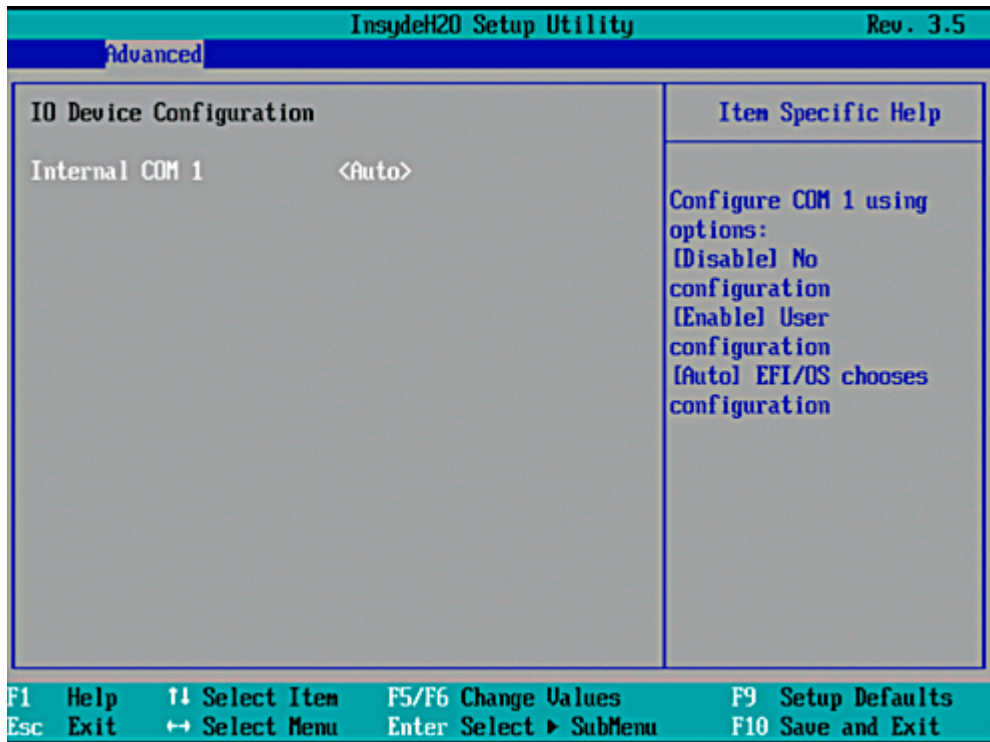


Figure 17-10 "IO Device Configuration" submenu

| | | |
|----------------|----------|---|
| Internal COM 1 | Disabled | COM 1 is always disabled. |
| | Auto | BIOS switches on the COM. Resources are assigned in the OS per reconfiguration. |
| | Enabled | COM 1 is always enabled. BIOS assigns resources to COM. |

"SATA Configuration" submenu

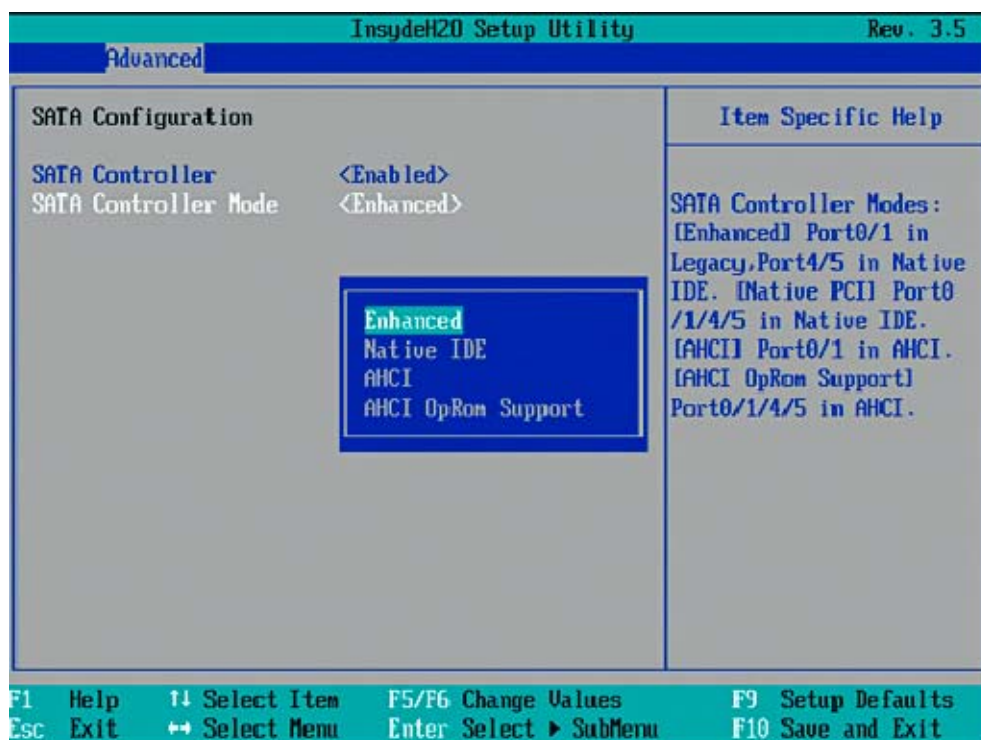


Figure 17-11 "SATA Configuration" submenu

| | | |
|----------------------|-------------------------|---|
| SATA Controller | [Enabled] [Disabled] | Disables or enables the SATA controller |
| SATA Controller mode | [Enhanced] | Serial ATA Ports 0/1 work in Legacy Mode. Serial ATA Ports 4/5 work in Native IDE Mode. |
| | Native PCI | Serial ATA Ports 0/1/4/5 work in Native IDE Mode. |
| | AHCI | Serial ATA Ports 0/1 work in AHCI Mode (not relevant for HMI IPC577C). |
| | AHCI OpRom Support | Serial ATA Ports 0/1/4/5 work in AHCI Mode with the ROM support option (setting for Panel IPC). |

17.2.6 Security menu

You can only edit the fields enclosed in square brackets. Two passwords can be assigned to protect your PC from unauthorized use. The Supervisor password can be used to restrict access to the hard disks.

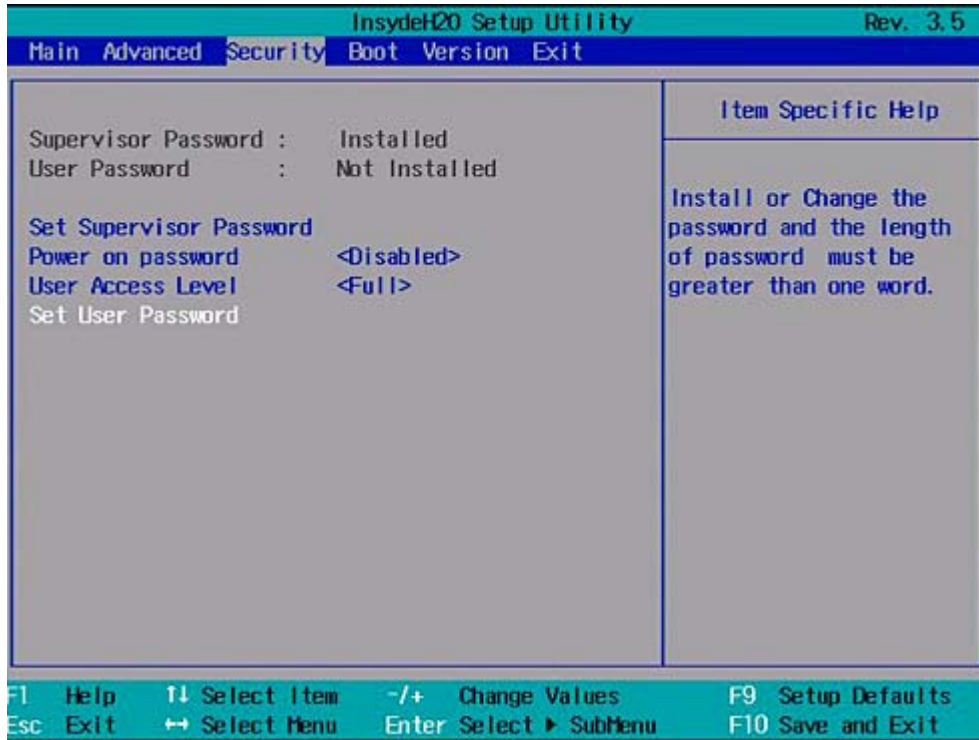


Figure 17-12 "Security" menu (example)

| | | |
|-------------------------|--|---|
| Supervisor Password | Installed | Certain Setup fields are configurable by the user, including the user password. |
| | Not installed | The password is disabled. |
| User password | Installed | Certain setup fields can be changed by the user, including the user password. |
| | Not installed | The password is disabled. |
| Set Supervisor Password | This field opens the password input dialog. Authorized logged on users can change the supervisor password, or delete and deactivate it by pressing "Return." | |
| Power on password | Enabled | Password must be entered to boot. |
| | Disabled | Password must be entered to access BIOS Setup. |
| User Access Level | View only | Setup is accessible, but fields cannot be changed. |
| | Limited | Some setup entries can be changed. |
| | Full | All setup entries can be changed, except for the supervisor password. |
| Set User Password | This field opens the password input dialog. Logged on users can change the password, or clear and deactivate it by pressing "Return." | |

17.2.7 Boot menu

This menu allows you to assign a priority for the boot devices.

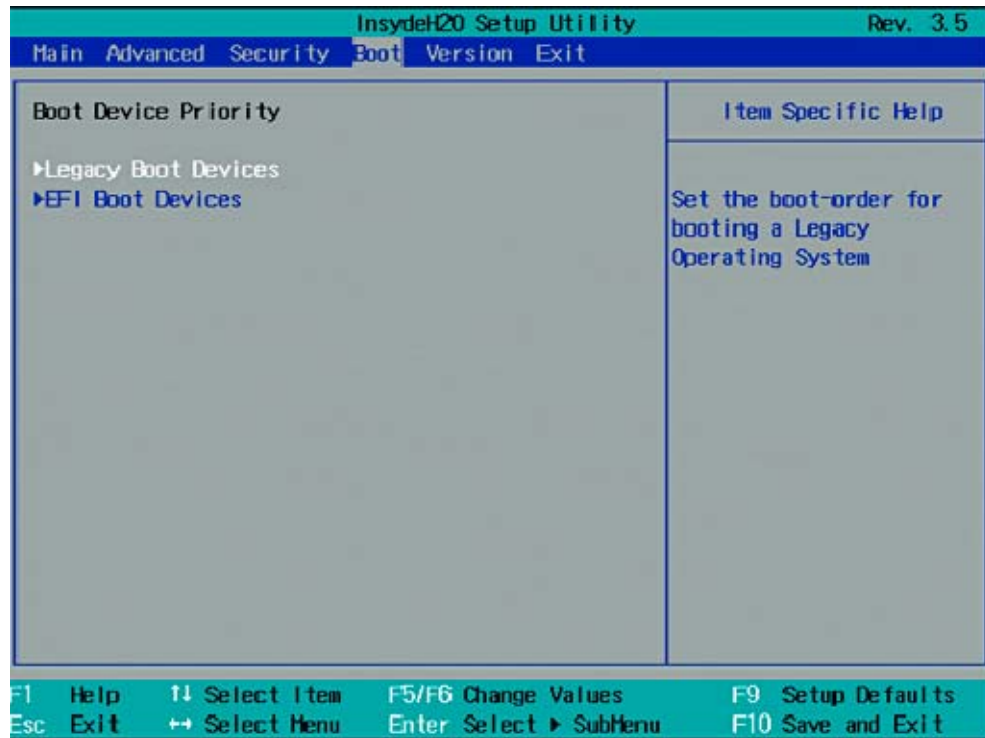


Figure 17-13 "Boot" menu

Legacy

Specifies the boot sequence for boot devices with Legacy operating systems.

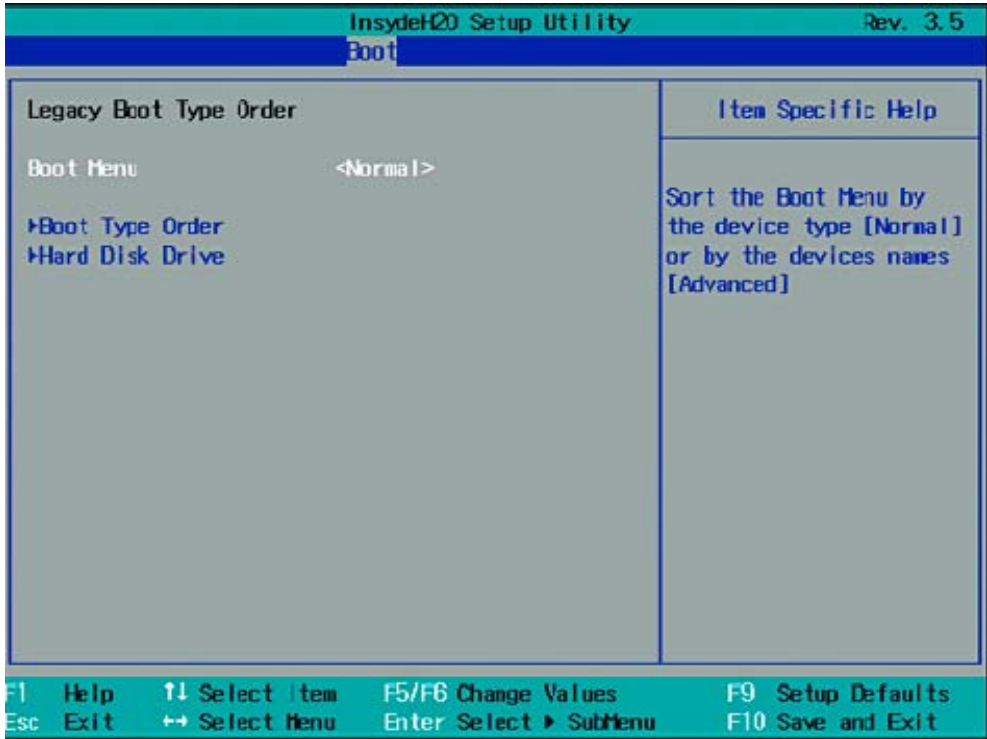


Figure 17-14 "Legacy" submenu


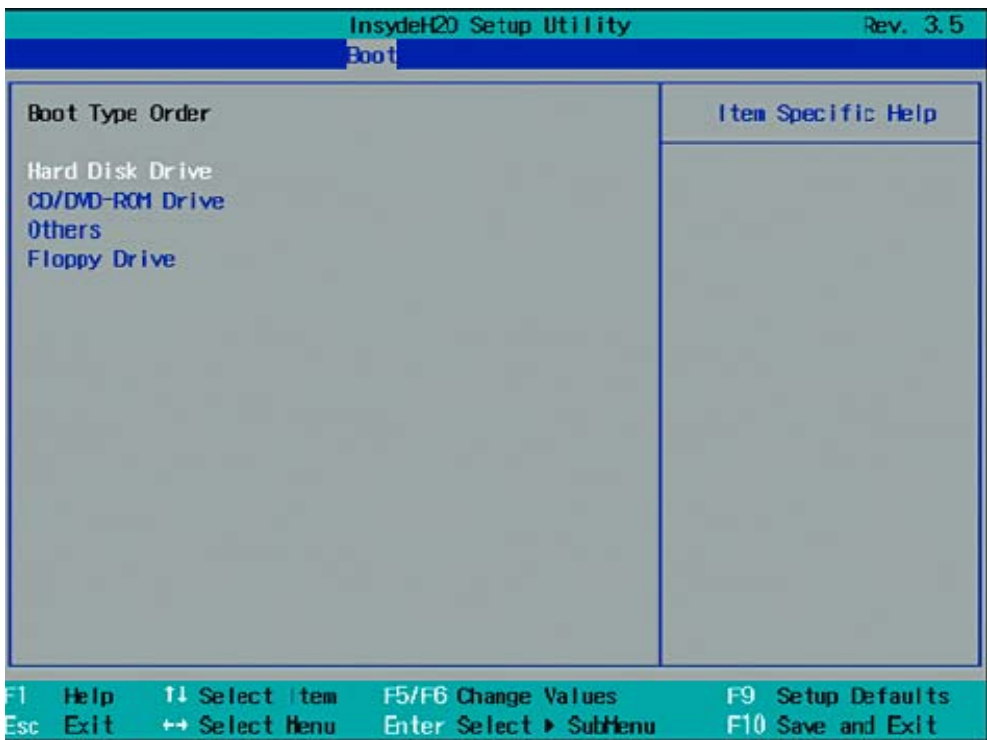


Figure 17-15 "Boot Type Order" field

This screen shows all possible legacy boot types. The boot type with highest boot priority is shown at the top. To change the sequence:

Select the boot source with the ↑↓ keys, move to the desired position with + or -.

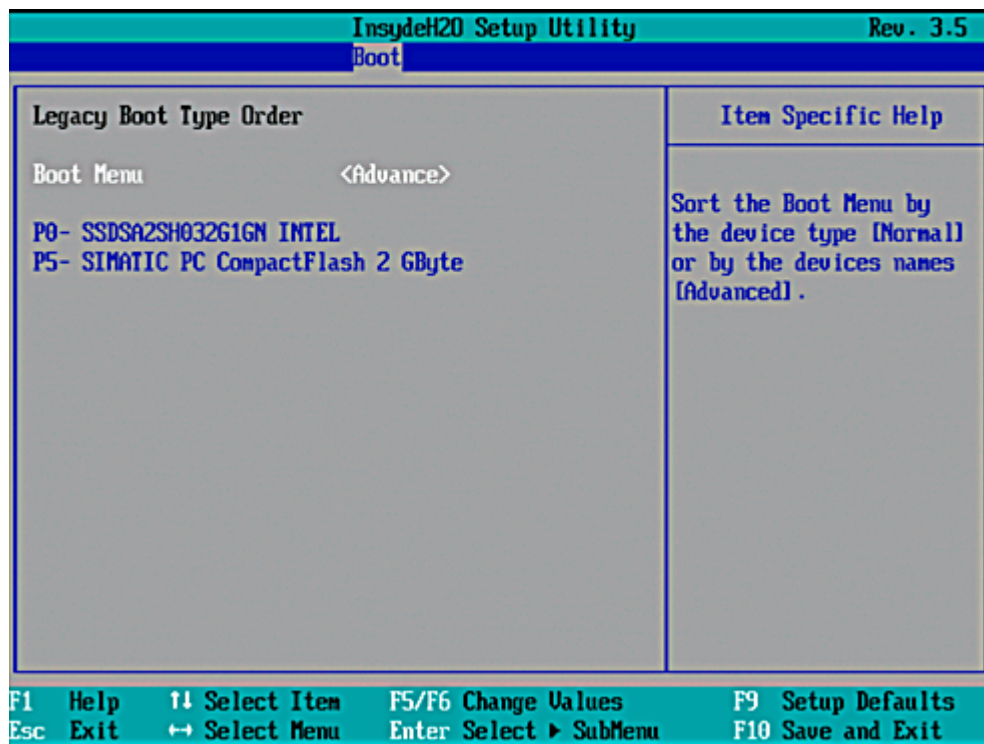

Note

You can open the Boot menu and select the boot volume by pressing the ESC key during system startup.

17.2.8 Version menu

Keep this information at hand if customer support has technical questions about your system.

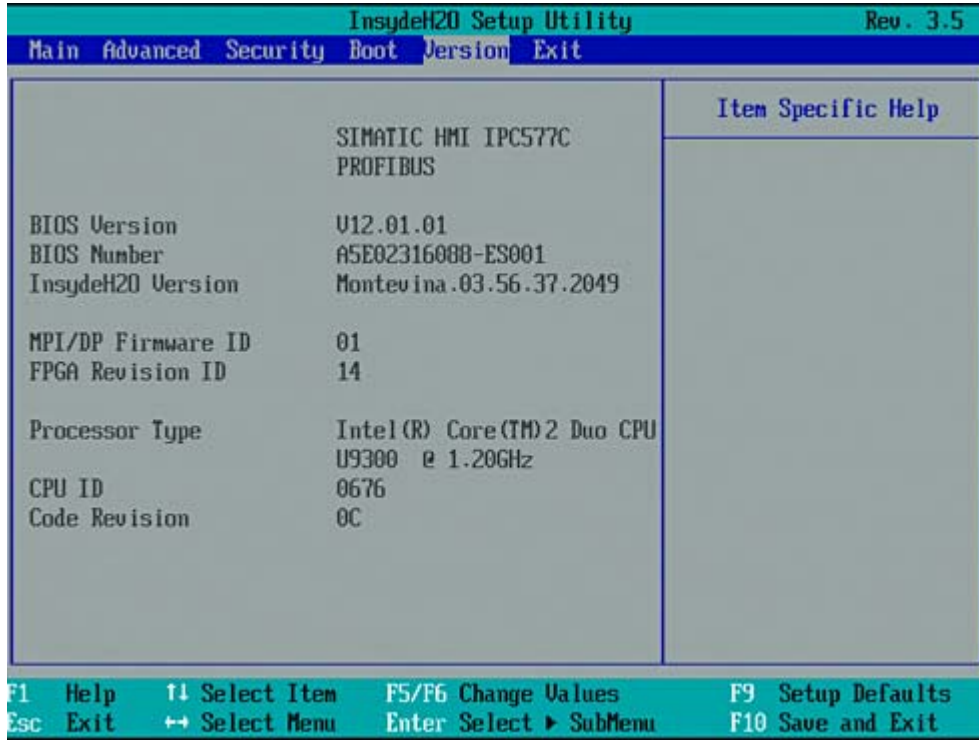


Figure 17-16 Version menu (example)

17.2.9 Exit Menu

You always exit BIOS Setup in this menu.

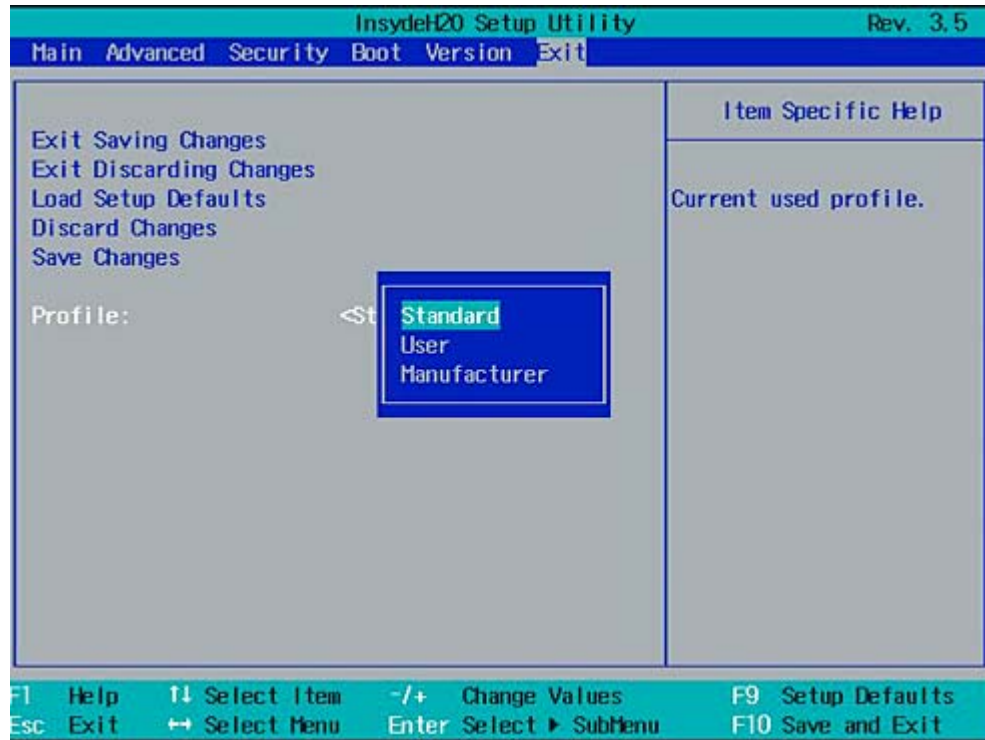


Figure 17-17 Exit menu

| | | |
|-------------------------|--|--|
| Exit Saving Changes | All changes are saved and the system is restarted with the new parameters. | |
| Exit Discarding Changes | All changes are discarded and the system is restarted with the old parameters. | |
| Load Setup Defaults | The default values are loaded. | |
| Discard Changes | All changes are discarded. | |
| Save Changes | All changes are saved. | |
| Profiles | Standard | The BIOS settings are backed up to buffered CMOS |
| | User | The BIOS settings are saved in the non-volatile FLASH memory. |
| | Manufacturer | This setting is only used for production purposes. Do not use. |

17.2.10 Default BIOS Setup entries

Documenting your device configuration

If you have changed any default settings in Setup, you can enter them in the following table. You can then refer to these entries for any future hardware modifications.

Note

Print out the table below and keep the pages in a safe place once you made your entries.

BIOS Setup default settings

| System parameters | Defaults | Custom entries |
|-------------------|------------|----------------|
| Main | | |
| System Time | hh:mm:ss | |
| System Date | MM/DD/YYYY | |

| Serial ATA Port 0, Serial ATA Port 1 | | |
|--------------------------------------|--|--|
| Type | | |
| 32-bit I/O | | |
| Block Mode | | |
| Transfer Mode | | |
| Security Mode | | |

| Boot options | | |
|-------------------|----------------------|--|
| Quick Boot Mode | Enabled | |
| POST errors | All without keyboard | |
| Diagnostic screen | Enabled | |

| Keyboard Features | | |
|-------------------|----|--|
| Numlock | On | |

| Hardware Options | | |
|----------------------------|-----------------|--|
| PCI - MPI/DP ¹⁾ | Enabled | |
| On-board Ethernet 1 | Enabled | |
| Ethernet 1 Address | 00.0E.8C.xxxxxx | |
| Ethernet 1 Remote Boot | Disabled | |
| On-board Ethernet 2 | Enabled | |
| Ethernet 2 Address | 00.0E.8C.xxxxxx | |
| Ethernet 2 Remote Boot | Disabled | |
| Dual view DVI/CRT | Disabled | |

¹⁾ only with PROFIBUS versions

| Advanced | | |
|---------------------|---------|--|
| HPET - HPET support | Enabled | |
| Legacy USB support | Enabled | |
| SafeCard functions | Enabled | |

| IO device configuration | | |
|-------------------------|------|--|
| Internal COM 1 | Auto | |

| SATA Configuration | | |
|----------------------|----------|--|
| SATA Controller | Enabled | |
| SATA Controller mode | Enhanced | |

| Security | | |
|-------------------------|---------------|--|
| Supervisor Password | Not installed | |
| User password | Not installed | |
| Set Supervisor Password | | |
| Power on password | | |
| User Access Level | | |
| Set User Password | | |

| Boot | | |
|---------------------|--|--|
| Legacy Boot Devices | | |
| EFI Boot Devices | | |

| Legacy Boot Type Order | | |
|------------------------|----------|--|
| Boot menu | Standard | |

| Version | | |
|----------------------|-------------------------|--|
| SIMATIC PC | IPC577C PROFIBUS | |
| BIOS Version | V12.01.xx | |
| BIOS Number | A5E02316088-ES0xx | |
| InsideH20 Version | Montevina.03.56.37.20xx | |
| MPI / DP Firmware ID | xx | |
| FPGA Revision ID | xx | |
| Processor Type | | |
| CPU ID | | |
| Code Revision | | |

17.3 System resources

17.3.1 Currently allocated system resources

All system resources (hardware addresses, memory configuration, interrupt assignment, DMA channels) are assigned dynamically by the Windows OS, depending on the hardware configuration, drivers, and connected peripheral devices. You can view the current configuration of system resources or possible conflicts with the following operating systems:

| | |
|--------------------------------|---|
| Windows Embedded Standard 2009 | Select Start > Run > Open , enter <i>msinfo32</i> > confirm with OK |
| Windows XP Pro | Select Start > Run > Open , enter <i>msinfo32</i> > confirm with OK |
| Windows Embedded Standard 7 | In Start > > Search function enter <i>cmd</i> > enter <i>msinfo32</i> in the input box > confirm with OK |
| Windows 7 Ultimate | In Start > > Search function enter <i>cmd</i> > enter <i>msinfo32</i> in the input box > confirm with OK |

The following tables and pictures describe the system resources for the factory state of the device.

17.3.2 PCI Interrupt Lines

The interrupts are assigned to devices by BIOS. Exclusive non-shared interrupts are available for the first two PCI slots as well as for DP12 and the first Ethernet interface.

This means that applications or realtime operating system extensions can operate these devices exclusively and with high-performance without having to share the interrupt with other devices.

Table 17- 1 Interrupt sharing in APIC mode


| Interrupt | | Interrupt type |
|-----------|--|------------------------------|
| IRQ0 | System timer | ISA-exclusive |
| IRQ1 | PS/2 keyboard controller emulation | ISA-exclusive |
| IRQ2 | Interrupt controller 2 | ISA-exclusive |
| IRQ3 | Reserved for Com Port 2 (COM2) | Free or ISA exclusive (COM2) |
| IRQ4 | Com Port 1 (COM1) | ISA-exclusive |
| IRQ5 | Free | Free |
| IRQ6 | Reserved | Reserved |
| IRQ7 | Free | Free |
| IRQ8 | Realtime clock | ISA-exclusive |
| IRQ9 | ACPI-SCI (system control interrupt) | ISA/PCI-shareable |
| IRQ10 | Free | Free |
| IRQ11 | Free | Free |
| IRQ12 | PS/2 mouse controller emulation | ISA-exclusive |
| IRQ13 | Coprocessor | ISA-exclusive |
| IRQ14 | IDE controller 2 (enhanced mode) or IDE controller 1 (compatible mode) | ISA-exclusive |
| IRQ15 | IDE controller 1 (compatible mode) or free (enhanced mode) | ISA-exclusive |
| IRQ16 | Graphics, PCI Express Bridge | PCI-shared |
| IRQ17 | LAN1-exclusive | PCI-exclusive |
| IRQ18 | LAN2, IDE controller 1 (enhanced mode) | PCI-shared |
| IRQ19 | DP12/MPI exclusive | PCI-exclusive |
| IRQ20 | PCI slot 1 | PCI-exclusive |
| IRQ21 | PCI slot 2 | PCI-exclusive |
| IRQ22 | USB UHCI controller (USB1.1) | PCI-shared |
| IRQ23 | USB-EHCI controller (USB2.0) | PCI-shared |

Table 17- 2 Interrupt sharing in PIC mode

| Interrupt | | Interrupt type |
|-----------|------------------------------------|------------------------------|
| IRQ0 | System timer | ISA-exclusive |
| IRQ1 | PS/2 keyboard controller emulation | ISA-exclusive |
| IRQ2 | Interrupt controller 2 (cascade) | ISA-exclusive |
| IRQ3 | Reserved for Com Port 2 (COM2) | Free or ISA exclusive (COM2) |
| IRQ4 | Com Port 1 (COM1) | ISA-exclusive |

| Interrupt | | Interrupt type |
|-----------|---|---|
| IRQ5 | LAN1-exclusive | PCI-exclusive |
| IRQ6 | Reserved | Reserved |
| IRQ7 | PCI slot 1/2 | PCI / PCI-exclusive |
| IRQ8 | Realtime clock | ISA-exclusive |
| IRQ9 | ACPI-SCI (system control interrupt) or free (no ACPI Besy) | ISA/PCI-shareable or free |
| IRQ10 | DP12/MPI (optional) or free | PCI exclusive (DP12) or free |
| IRQ11 | Graphics, PCI-Express Bridge, LAN2, IDE controller 1, USB-UHCI controller (USB1.1), USB-EHCI controller (USB2.0), PCI104 slot 3/4 | PCI-shared |
| IRQ12 | PS/2 mouse controller emulation | ISA-exclusive |
| IRQ13 | Coprocessor | ISA-exclusive |
| IRQ14 | IDE controller 2 (enhanced mode) or IDE controller 1 (compatible mode) | ISA-exclusive (compatible mode) |
| IRQ15 | IDE controller 1 (compatible mode) or free (enhanced mode) | ISA-exclusive (compatible mode or PCI (enhanced mode) |

17.3.3 PCI Interrupt Lines (Graphics)

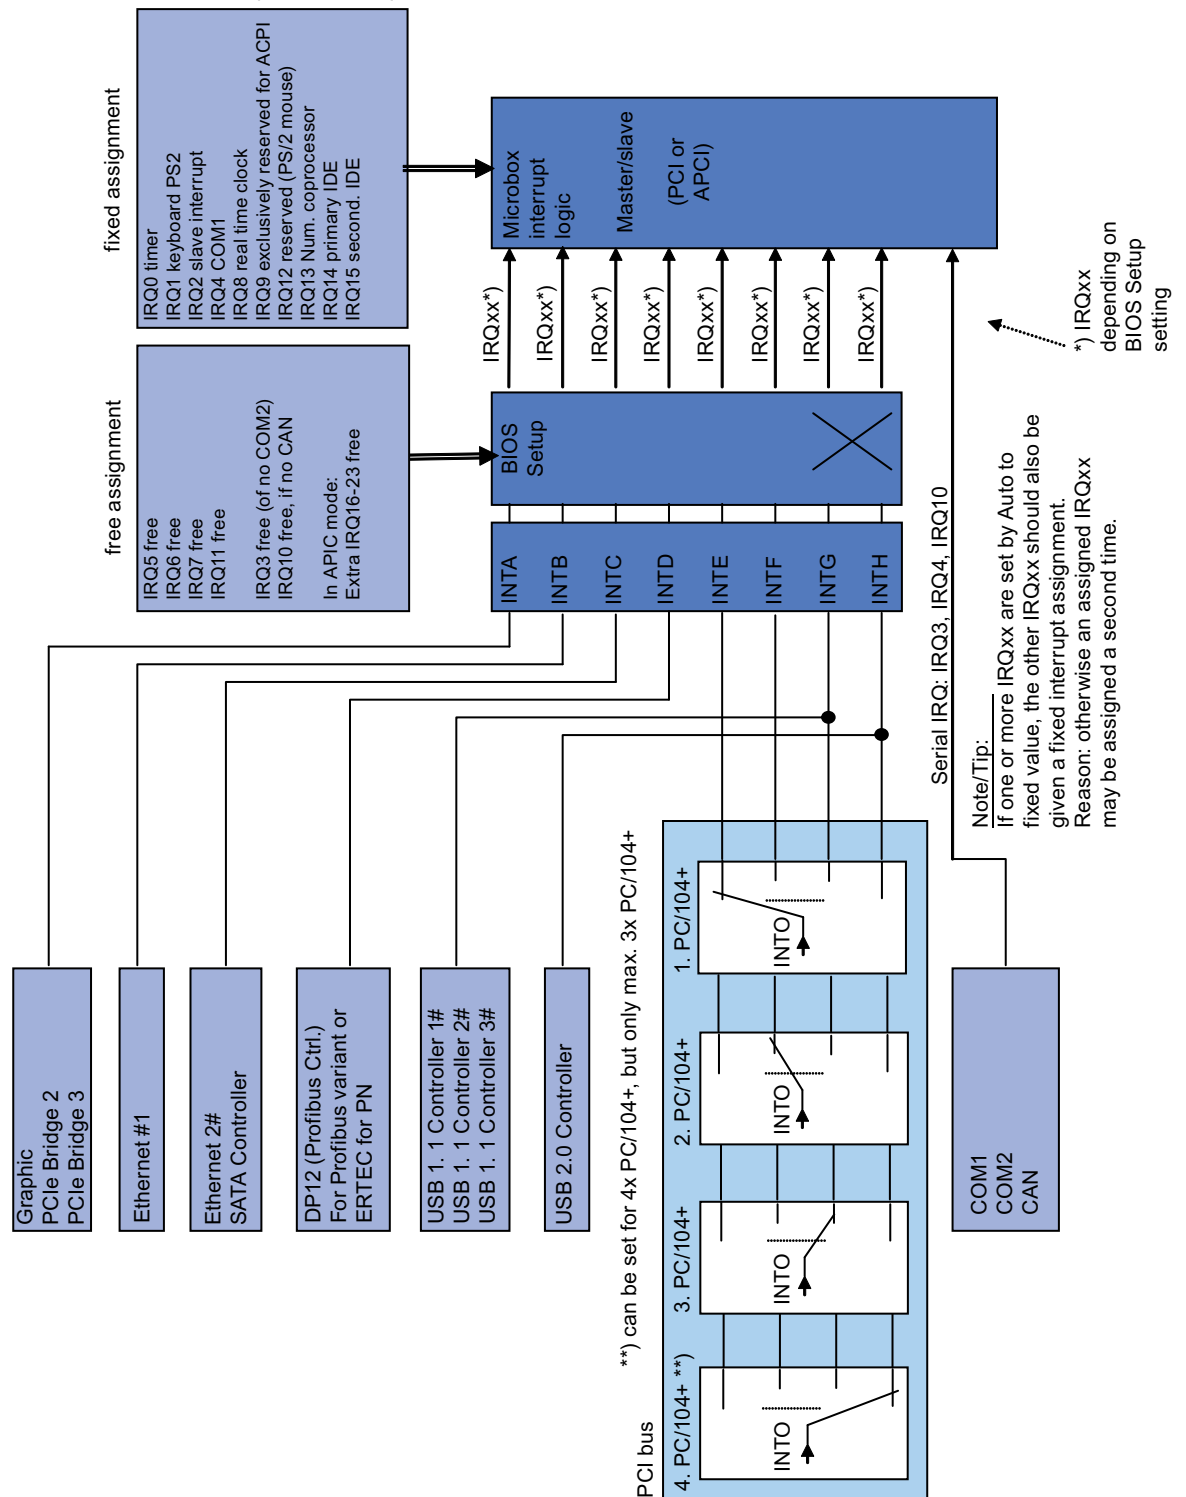

17.4 I/O Address Areas

17.4.1 Overview of the internal module registers

Overview of the internal module registers

The following addresses are used for the internal registers:

| Addresses | Input/output unit |
|-----------|--|
| I/O 062h | Watchdog enable register / 066h select register |
| I/O 066h | Watchdog trigger register (Watchdog enable register bit 2=0) |
| I/O 118Fh | Battery status register (read-only) |

17.4.2 SRAM address register

The battery-buffered SRAM uses a 2 MB memory address area, which can be read via the PCI register.

Meaning of the bits

| SRAM address register | | |
|----------------------------|--|---------------------------|
| PCI register address: | PCI register content: | Length of the memory area |
| SRAM base address register | SRAM memory address (default) | |
| 8010 2010h | 9040 0000h Address is assigned dynamically (depending on device) | 20 0000h |

17.4.3 SRAM control register (write only, address 066h)

The length and enable of the SRAM address range is made through the SRAM control register (write only, address 066h).

Note

The SRAM control register shares its I/O address with other registers. The watchdog enable register therefore must be selected before access.

Meaning of the bits¹

| SRAM control register (write only, address 066h, address register selection 1) | | | | | | | | |
|--|---|---|---|---|---|---|---|------------------------------|
| Bit | | | | | | | | Length in KB |
| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | |
| 0 | 0 | 0 | | | | | | Disabled |
| 0 | 0 | 1 | | | | | | 4 |
| 0 | 1 | 0 | | | | | | 8 |
| 0 | 1 | 1 | | | | | | 16 |
| 1 | 0 | 0 | | | | | | 32 |
| 1 | 0 | 1 | | | | | | 64 |
| 1 | 1 | 0 | | | | | | 128 ² |
| 1 | 1 | 1 | | | | | | Disabled |
| | | | 0 | 0 | 0 | 0 | 0 | Reserved (write 0 0 0 0 0 0) |

¹ It is possible that selection is limited by default in the BIOS Setup.

² This setting is only practical when memory is activated.

17.4.4 General Purpose Ports (GPP) output register (read/write, address 404Dh)

Meaning of the bits

| General Purpose Ports output register (read/write, address 404Dh) | | | | | | | | |
|---|---|---|---|---|---|---|---|--|
| Bits | | | | | | | | Meaning |
| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | |
| | | | | | 1 | | | Write protection for BIOS Flash Memory is active (default) |
| | | | | | 0 | | | Write protection for BIOS Flash Memory is inactive |
| | 1 | | | | | | | SW reset for PROFIBUS ASIC ASPC2 is inactive (default) |
| | 0 | | | | | | | SW reset for PROFIBUS ASIC ASPC2 is active |
| 1 | | | | | | | | Watchdog locking is active (default) |
| 0 | | | | | | | | Watchdog locking is inactive |
| | | 1 | 1 | 1 | | | | Reserved (read/write) |

NOTICE

Data loss

If SIMATIC products are installed on your device, the ASPC2 may not be reset by a user program under any circumstances.

17.5 CP 1616 onboard communications processor

17.5.1 Introduction

17.5.1.1 Properties

The CP 1616 onboard allows the connection of industrial PCs to Industrial Ethernet.

The basic characteristics of the PCS 1616 onboard are:

- Optimized for PROFINET IO
- Enhanced Real Time Ethernet Controller 400 = ERTEC 400
- Three RJ45 sockets for connecting terminal devices or addition network components
- Integrated 3-port real-time switch
- Automatic hardware detection

17.5.1.2 Network connections

Ethernet

The CP 1616 is designed for operation in Ethernet networks. Additional features are:

- The connectors are designed for 10BaseT and 100BaseTX.
- Data transfer rates of 10 and 100 Mbps in full/half duplex mode are supported.
- The handshake is performed automatically (auto negotiation).
- A 3-port realtime switch is located in the module.
- Autocrossing

Three RJ45 connectors

The CP 1616 is connected to the LAN (Local Area Network) via one of the three RJ45 sockets of the PC.

These three sockets lead to the integrated realtime switch.


17.5.1.3 Typical Communication Partners

CP 1616 onboard as an IO controller

The following diagram shows a typical application: CP 1616 onboard as PROFINET IO controller on the IO controller layer.

The IO base controller user program runs on the PC. This program accesses the functions of the IO base user program interface.

Data traffic is routed via the communication processor to several SIMATIC S7 PROFINET IO devices, ET 200S over Industrial Ethernet.

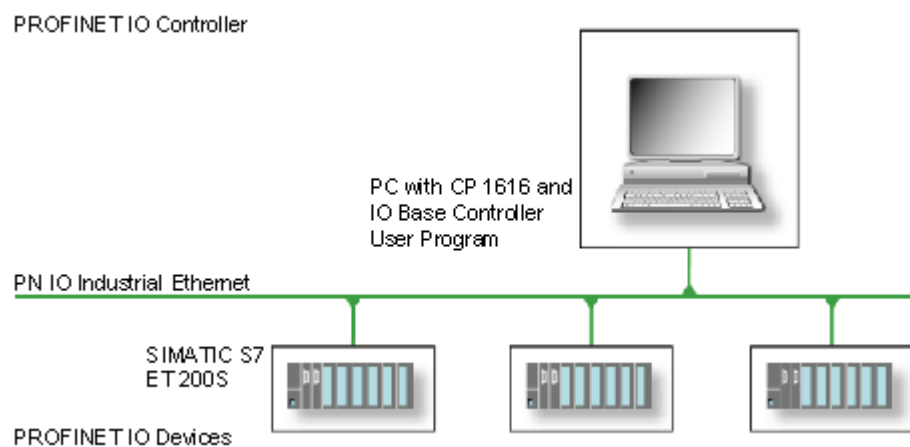


CP 1616 onboard as IO device

The following diagram shows a typical application: Two PCs each with a CP as a PROFINET IO device on the IO device layer.

A PC with a CP as PROFINET IO controller, a SIMATIC S7-400 with a CP 443-1 as PROFINET IO controller and two SIMATIC S7 ET 200S PROFINET IO devices are also connected in the network.

The IO base device user program runs on the IO device PC. This program accesses the functions of the IO base user program interface. Data traffic is routed via the CP 1616 onboard communication processor to a PC as PROFINET IO controller, or to an S7-400 automation system with CP 443-1 over Industrial Ethernet.

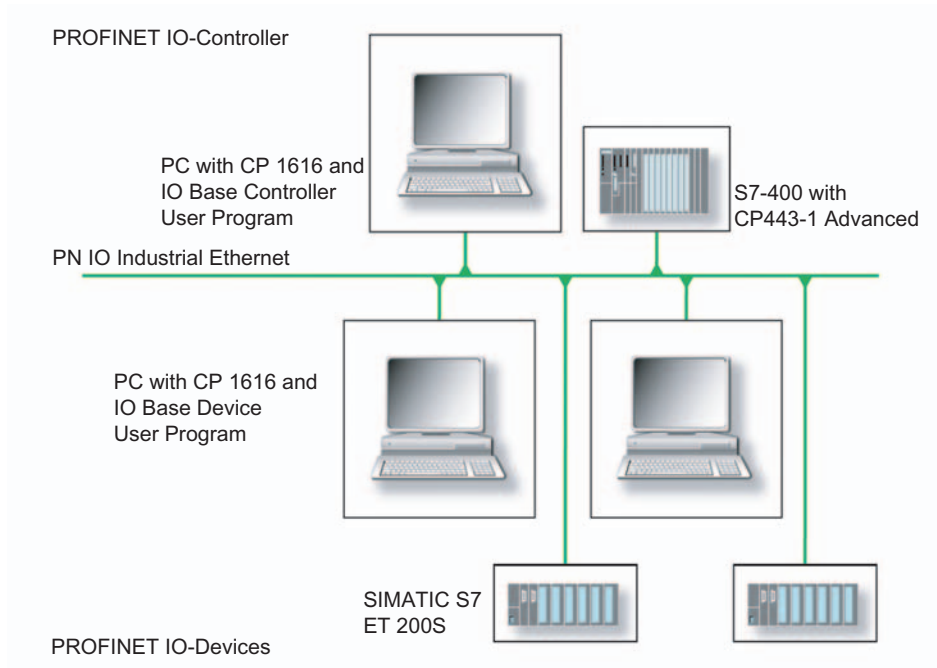

17.5.2 Firmware loader

Scenario for using the firmware loader

The CP 1616 onboard is supplied with the latest version of the firmware. If new functions become available due to product development, you can make them available by performing a firmware download.

Description

This section will familiarize you with the application area and use of the firmware loader. You can find additional, detailed information about the individual loader variants in the integrated help of the program.

Firmware

This refers to the system program in the SIMATIC NET modules.

Application area for the firmware loader

The firmware loader enables you to reload new firmware releases to SIMATIC NET modules. It is used for:

- PROFIBUS modules
- Industrial Ethernet modules
- Modules for gateways, for example IE/PB link

Installation

The firmware loader is available on your PG/PC under Windows following the installation of STEP 7/NCM PC.

Loader files

The firmware loader supports the following file types:


- <file>.FWL
A file form that contains further information, which is displayed by the firmware loader. The firmware loader can use this information to check if the firmware is compatible to the device.

Read the information provided along with the loader file, for example, in the readme file. This information is also displayed in the firmware loader when the FWL file is loaded.

17.5.3 Loading firmware

Start downloading procedure

1. In the Windows Start menu, select the menu command SIMATIC > STEP 7 > NCM S7 > Firmware Loader.

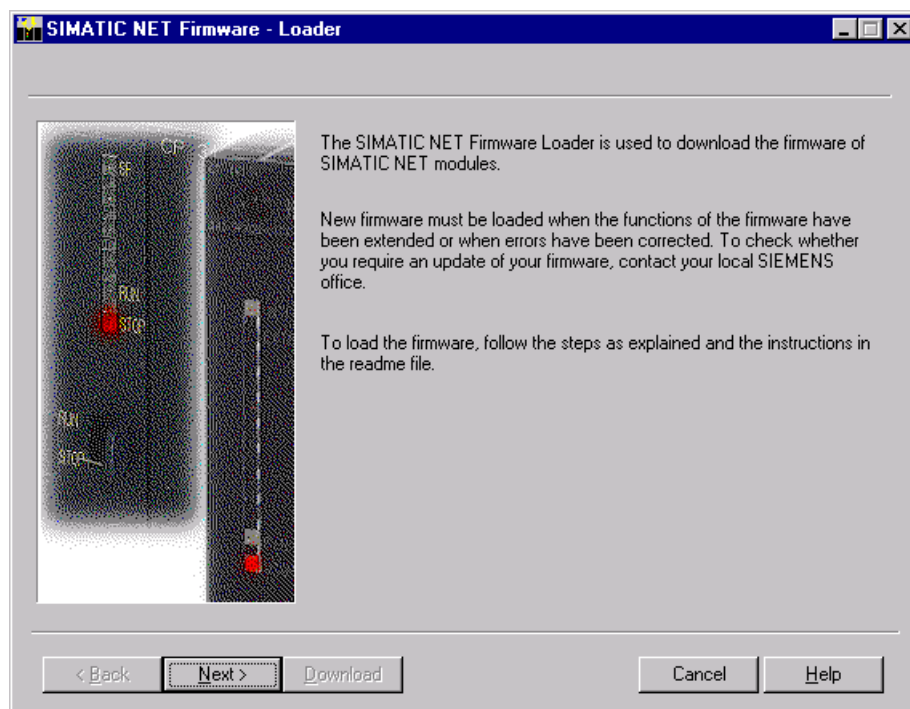

2. Click "Next" and follow the instructions in the dialog fields that follow. A help function is integrated in the software as support.

CAUTION

Ensure that the loader file you are using for the update is suitable for the version of firmware on your module. If you have any doubts, contact your local Siemens consultant.

CAUTION

Be aware that aborting the loading process may result in an inconsistent state in your module.

You can find additional, detailed information about the individual loader variants in the integrated help.

NOTICE

When loading the firmware or commissioning the module, be aware that the CP 1616 onboard takes five MAC addresses (always in direct sequence). The first two are shown in the BIOS.

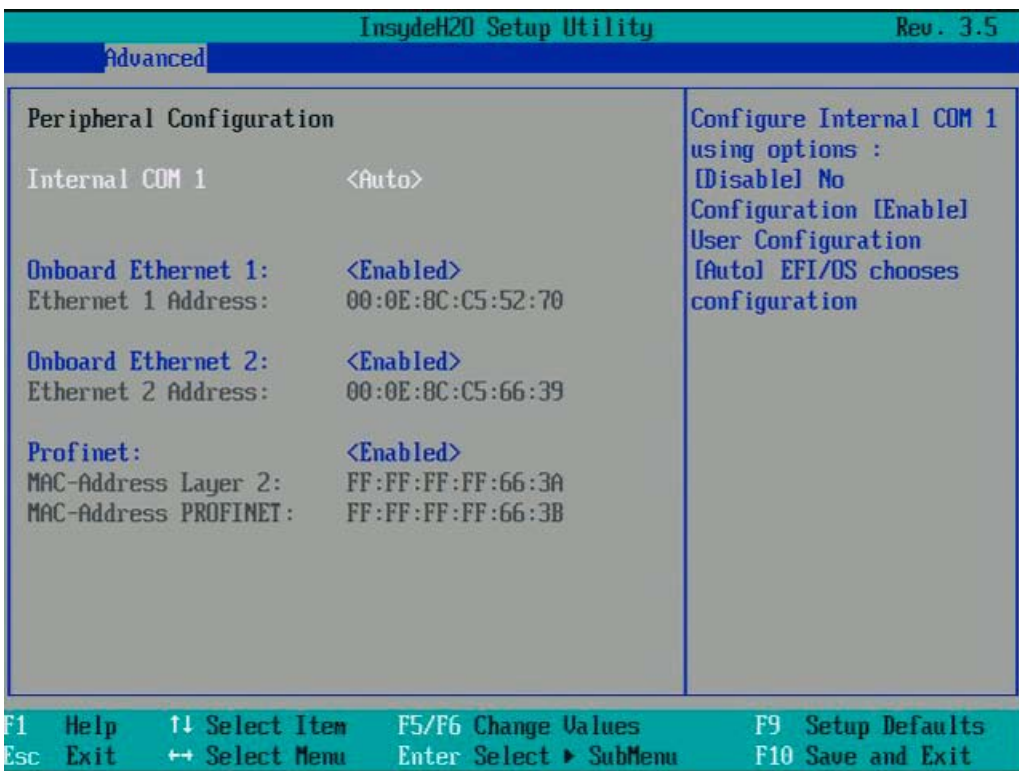


Figure 17-18 Advanced menu Peripheral Configuration

Example

The lower MAC address at "Profinet" is provided for Layer 2 communication, while the second one is used for Ethernet/PROFINET communication.

17.5.4 Further actions in STEP 7/NCM PC

Configuring

Your PC is now ready, although you still have to configure the SIMATIC NET communication software. The rest of the procedure is described in the "Commissioning PC Stations" manual (on the Windows PC that also contains STEP 7/NCM PC: Start > Simatic > Documentation > English > Commissioning PC Stations).

Appendix

A.1 Guidelines and Declarations

Notes on the CE marking

CE The following applies to the SIMATIC product described in this documentation:

EMC directive

The devices fulfill the requirements for the EC directive "2004/108/EC Electromagnetic Compatibility", and the following fields of application applies according to this CE marking:

| Area of application | Requirements | |
|---------------------|----------------------|-----------------------|
| | Emitted interference | Interference immunity |
| Industry | EN 61000-6-4: 2007 | EN 61000-6-2: 2005 |

The device is also compliant with the EN 61000-3-2:2006 (harmonic currents) and EN 61000-3-3:2008 (voltage fluctuation and flicker) standards.

Low-voltage directive

Devices with AC power supply meet the requirements set forth in EC directive 2006/95/EC "Low-Voltage Directive". Compliance with this directive has been verified in accordance with EN 60950 1:2006 + EN 60950-1/A11:2009.

Declaration of conformity

The EC declaration of conformity and the corresponding documentation are made available to authorities in accordance with the EC directives stated above. Your sales representative can provide these on request.

Note the installation guidelines

The installation guidelines and safety instructions given in this documentation have to be noted during commissioning and operation.

Connecting peripherals

Noise immunity requirements to EN 61000-6-2 are met if connected peripherals are suitable for industrial applications. Peripheral devices are only be connected via shielded cables.

A.2 Certificates and Approvals

DIN ISO 9001 certificate

The Siemens quality management system for all production processes (development, production and sales) meets DIN EN ISO 9001:2000 requirements.

This has been certified by DQS (the German society for the certification of quality management systems).


EQ Net Certificate No.: DE-001108 QM

Software license agreement

The device can be supplied with or without preinstalled software. For devices with preinstalled software, please note the relevant license agreements.

Approvals for USA and Canada


Product safety

| | |
|---|--|
| The following approval is available for the device: | |
|  | Underwriters Laboratories (UL) according to standard UL508 and C22.2 No. 142 or C 22.2 No. 14-05 (IND.CONT.EQ) |

EMC

| USA | |
|---|---|
| Federal Communications Commission Radio Frequency Interference Statement | This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. |
| Shielded cables | Shielded cables must be used with this equipment to maintain compliance with FCC regulations. |
| Modifications | Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. |
| Conditions of operations | This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. |

| CANADA | |
|-----------------|--|
| Canadian Notice | This Class A digital apparatus complies with Canadian ICES-003. |
| Avis Canadian | Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada. |

| AUSTRALIA | |
|---|---|
|  | This product conforms to requirements to EN 61000-6-4:2007 Generic standards - Emission standard for industrial environments. |

A.3 Service and support

Local information

Contain your Siemens representative (<http://www.siemens.com/automation/partner>) if you have questions about the products described here.

Technical documentation for SIMATIC products

You can find additional documentation for SIMATIC products and systems in the Internet: SIMATIC Guide manuals (<http://www.siemens.com/simatic-tech-doku-portal>)

Easy shopping at the mall

You can find the online catalog and order system under:
Industrial Automation and Drive Technologies (<http://mall.automation.siemens.com>)

Training center

All the training options are listed at:
SITRAIN homepage (<http://www.sitrain.com>)

Technical support

You can contact technical support for all Industry Automation and Drive Technologies products by:

- E-mail: support.automation@siemens.com
- Internet: Online support request form: (<http://www.siemens.com/automation/support-request>)

When you contact the customer support, please have the following information for the technician on hand:

- BIOS version
- Order No. (MLFB) of the device
- Installed additional software
- Installed additional hardware

Online Service & Support

Information about the product, Support and Service, right through to the Technical Forum, can be found at: Industry Automation and Drive Technologies - Homepage (<http://www.siemens.com/automation/service&support>)

After-sales information system for SIMATIC PC / PG

Information about contacts, drivers, and BIOS updates, FAQs and Customer Support can be found at: After-sales information system for SIMATIC PC/PG (<http://www.siemens.com/asis>)

List of abbreviations

B.1 Abbreviations

| Abbreviation | Term | Meaning |
|--------------|--|---|
| AC | Alternating current | Alternating current |
| ACPI | Advanced Configuration and Power Interface | |
| PLC | Programmable controller | |
| AGP | Accelerated Graphics Port | High speed bus system |
| AHCI | Advanced Host Controller Interface | Standardized controller interface for SATA devices. This is supported in Microsoft Windows XP as of SP1 and IAA driver. |
| APIC | Advanced Programmable Interrupt Controller | Extended programmable interrupt controller |
| APM | Advanced Power Management | Tool for monitoring and reducing power consumption of the PC |
| AS | Automation system | |
| ASIS | After Sales Information System | |
| AT | Advanced Technology | |
| ATA | Advanced Technology Attachment | |
| ATX | AT-Bus-Extended | |
| AWG | American Wire Gauge | US standard for the cable diameter |
| BIOS | Basic Input Output System | Basic Input Output System |
| CAN | Controller Area Network | |
| CD-ROM | Compact Disc – Read Only Memory | Removable storage medium for large data volumes |
| CD-RW | Compact Disc – Rewritable | Rewritable CD |
| CE | Communauté Européenne (CE symbol) | The product is in conformance with all applicable EC directives |
| CF | Compact Flash | |
| CGA | Color Graphics Adapter | Standard monitor interface |
| CLK | Clock pulse | Clock signal for controllers |
| CMOS | Complementary Metal Oxide Semiconductors | Complementary metal oxide semiconductors |
| COA | Certificate of authentication | Microsoft Windows Product Key |
| CoL | Certificate of License | License authorization |
| COM | Communications Port | Term for the serial interface |
| CP | Communication Processor | Communication computer |

List of abbreviations

B.1 Abbreviations

| Abbreviation | Term | Meaning |
|----------------|--|---|
| CPU | Central Processing Unit | CPU |
| CRT | Cathode Ray Tube | |
| CSA | Canadian Standards Association | Canadian organization for tests and certifications according to own or binational standards (with UL / USA) standards |
| CTS | Clear To Send | Clear to send |
| DRAM | Dynamic Random Access Memory | |
| DC | Direct Current | DC current |
| DCD | Data Carrier Detect | Data carrier signal detection |
| DMA | Direct Memory Access | Direct memory access |
| DOS | Disk Operating System | Operating system without GUI |
| DP | Display Port | New powerful digital monitor port |
| DQS | Deutsche Gesellschaft zur Zertifizierung von Qualitätsmanagement mBH | |
| DDRAM | Double Data Random Access Memory | Memory chip with high-speed interface |
| DSR | Data Set Ready | Ready for operation |
| DTR | Data Terminal Ready | Data terminal is ready |
| DVD | Digital Versatile Disk | Digital versatile disk |
| DVI | Digital Visual Interface | Digital display interface |
| DVI-I | Digital Visual Interface | Digital display interface with digital and VGA signals |
| ECC | Error checking and correction | Error correction code |
| ECP | Extended capability port | Extended parallel port |
| EFI | Extensible Firmware Interface | |
| EGA | Enhanced Graphics Adapter | PC to monitor interface |
| ESD | Components sensitive to electrostatic charge | |
| DM | Electronic Manual | |
| EIDE | Enhanced Integrated Drive Electronics | An enhancement of the IDE standard |
| EISA | Extended Industry Standard Architecture | Extended ISA standard |
| EMM | Expanded Memory Manager | Manages memory expansions |
| EM64T | Extended Memory 64 technology | |
| EN | European standard | |
| EPROM / EEPROM | Erasable Programmable Read-Only Memory / Electrically Erasable Programmable Read-Only Memory | Plug-in submodules with EPROM/EEPROM chips |
| EPP | Enhanced Parallel Port | Bi-directional Centronics interface |
| ESC | Escape character | Control character |
| EWf | Enhanced Write Filter | |
| FAQ | Frequently Asked Questions | FAQs |
| FAT 32 | File Allocation Table 32-bit | 32-bit file allocation table |
| FBWF | File-Based Write Filter | |
| FD | Floppy disk | Disk drive, 3.5" |
| FSB | Front Side Bus | |

| Abbreviation | Term | Meaning |
|--------------|--|---|
| GND | Ground | Chassis ground |
| HD | Hard disk | Hard disk |
| HDA | High Definition Audio | |
| HDD | Hard Disk Drive | HDD |
| HU | Height unit | |
| HMI | Human Machine Interface | User interface |
| HORM | Hibernate Once - Resume Many | |
| HT | Hyper-Threading | |
| HTML | Hyper Text Markup Language | Script language for creating Internet pages. |
| HTTP | Hypertext Transfer Protocol | Protocol for data transfer on the Internet |
| Hardware | Hardware | |
| IAMT | Intel Active Management Technology | Technology that permits the diagnostics, management and remote control of PCs |
| I/O | Input/Output | Data input/output on computers |
| IAA | Intel Application Accelerator | |
| IDE | Integrated Device Electronics | |
| IEC | International Electrotechnical Commission | |
| IGD | Integrated Graphics Device | |
| IP | Ingress Protection | Degree of protection |
| IR | Infrared | Infrared |
| IRDA | Infrared Data Association | Standard for data transfer via IR module |
| IRQ | Interrupt Request | Interrupt request |
| ISA | Industry Standard Architecture | Bus for expansion modules |
| ITE | Information Technology Equipment | |
| L2C | Level 2 cache | |
| LAN | Local Area Network | Computer network that is limited to a local area. |
| LCD | Liquid Crystal Display | Liquid crystal display |
| LEDs | Light Emitting Diode | Light emitting diode |
| LPT | Line Printer | Printer port |
| LVDS | Low Voltage Differential Signaling | |
| LW | Drive | |
| MAC | Media access control | Media access control |
| MC | Memory Card | Memory card in credit card format |
| MLFB | Machine-readable product designation | |
| MMC | Micro Memory Card | Memory card of the format 32 mm x 24.5 mm |
| MPI | Multipoint-capable interface for programming devices | |
| MS-DOS | Microsoft Disc Operating System | |
| MTBF | Mean Time Between Failures | |
| MUI | Multilanguage User Interface | Language localization in Windows |
| NA | Not Applicable | |

List of abbreviations

B.1 Abbreviations

| Abbreviation | Term | Meaning |
|--------------|--|--|
| NAMUR | Normenarbeitsgemeinschaft for Mess- und Regelungstechnik in der chemischen Industrie (standardization body for instrumentation and control technology in the chemicals industry) | |
| NC | Not Connected | Not connected |
| NCQ | Native Command Queuing | Automatic re-sorting of the file and disk access, for increased performance |
| NEMA | National Electrical Manufacturers Association | Syndicate of manufacturers of electrical components in the USA |
| NMI | Non Maskable Interrupt | Interrupt the processor can not reject |
| NTFS | New Techniques File System | Secure file system for Windows versions (2000, XP, 7) |
| ODD | Optical Disk Drive | |
| OPC | OLE for Process Control | Standardized interface for industrial processes |
| PATA | Parallel ATA | |
| PC | Personal computer | |
| PCI | Peripheral Component Interconnect | High-speed expansion bus |
| PCIe | Peripheral Component Interconnect express | High-speed serial, differential full-duplex PtP interface with high data rate. |
| PCMCIA | Personal Computer Memory Card International Association | |
| PE | Protective Earth | Protective conductor |
| PEG | PCI Express Graphics | |
| PG | Programming device | |
| PIC | Programmable Interrupt Controller | Programmable interrupt controller |
| POST | Power On Self Test | |
| PXE | Preboot Execution Environment | Software for running new PCs without hard disk data via the network |
| RAID | Redundant Array of Independent Disks | Redundant hard disk array |
| RAL | Restricted Access Location | Installation of device in operating facilities with restricted access - for example, a locked switchgear cabinet |
| RAM | Random Access Memory | |
| RI | Ring Input | Incoming call |
| ROM | Read-Only Memory | |
| RS 485 | Reconciliation Sublayer 485 | Bi-directional bus system designed for up to 32 nodes |
| RTC | Real Time Clock | Real-time clock |
| RTS | Reliable Transfer Service | Request to send |
| RxD | Receive Data | Data transfer signal |
| SATA | Serial Advanced Technology Attachment | |
| SCSI | Small Computer System Interface | |
| SDRAM | Synchronous DRAM | |
| SELV | Safety Extra Low Voltage | Safety extra low voltage |

| Abbreviation | Term | Meaning |
|--------------|--|---|
| SLC | Second Level Cache | |
| SMART | Self Monitoring Analysis and Reporting Technology | Hard disk error diagnostics program |
| SMS | Short Message Service | Short message via telecommunication network |
| SNMP | Simple Network Management Protocol | Network protocol |
| SO-DIMM | Small Outline Dual Inline Memory Module | |
| SOM | SafeCard on Motherboard (SOM) | |
| SPP | Standard Parallel Port | Synonym for parallel port |
| SRAM | Static Random Access Memory | Static RAM |
| SSD | Solid State Drive | |
| SVGA | Super Video Graphics Array | Enhanced VGA standard with at least 256 colors |
| SVP | Serial number of the device | |
| SW | Software | |
| TCO | Total Cost of Ownership | |
| TFT | Thin-Film-Transistor | Type of LCD flat-screen |
| TTY | Tele Type | Asynchronous data transfer |
| TxD | Transmit Data | Data transfer signal |
| TXT | Trusted Execution Technology | Hardware implementation |
| TWD | Watchdog Time | Watchdog monitoring time |
| UEFI | Unified Extensible Firmware Interface | |
| UL | Underwriters Laboratories Inc. | US organization for tests and certifications according to own or binational standards (with CSA / Canada) standards |
| UMA | Unified Memory Architecture | Video memory |
| URL | Uniform Resource Locator | Designation of the full address of an Internet page |
| USB | Universal Serial Bus | |
| UXGA | Ultra Extended Graphics Array | Graphic standard, maximum resolution 1600x1200 pixels. |
| V.24 | | ITU-T standardized recommendation for data transfer via serial ports |
| VCC | | Positive supply voltage of integrated circuits |
| VDE | Verein deutscher Elektrotechniker (Union of German Electrical Engineers) | |
| VGA | Video Graphics Array | Video adapter which meets industrial standard |
| VRM | Voltage Regulator Module | |
| VT | Virtualization Technology | Intel technology with which a virtually closed environment can be made available. |
| VT-D | Virtualization Technology for Directed I/O | Enables the direct assignment of a device (e.g. network adapter) to a virtual device. |
| W2k | Windows 2000 | |
| WAN | Wide Area Network | |
| WAV | Wave Length Encoding | Loss-free file format for audio data |
| WD | Watchdog | Program monitoring with error detection and alarming. |

List of abbreviations

B.1 Abbreviations

| Abbreviation | Term | Meaning |
|---------------------|----------------------------|---|
| WLAN | Wireless LAN | LWireless local area network |
| WoL | Wake on Local Area Network | |
| WWW | World Wide Web | |
| XD | Execute Disable Capability | Hardware implementation |
| XGA | Extended Graphics Array | Graphic standard, maximum resolution 1024x768 pixels. |

Glossary

AHCI mode

AHCI is a standardized method to address the SATA controller. AHCI describes a structure in the RAM, which contains a general area for control and status, as well as a command list.

APIC mode

Advanced peripheral interrupt controller. 24 interrupt lines are available.

ATAPI CD-ROM Drive

AT Bus Attachment Packet Interface (connected to AT bus) CD-ROM drive

Automation system (AS)

A programmable controller (PLC) of the SIMATIC S7 system consist of a central controller, one or several CPUs, and various I/O modules.

Backup

Duplicate of a program, data medium or database, used either for archiving purposes or for the protection of vital and non-replaceable data against loss when the working copy is corrupted. Certain applications automatically generate backup copies of data files, and manage both the current and the previous versions on the hard disk.

Baud

Physical unit for the step speed in signal transmission. Defines the number of transferred signal states per second. With only two states, one baud is equivalent to a transmission rate of 1 bps.

Boot disk

A boot disk is a disk with a "Boot" sector. This can be used to load the operating system from the disk.

Cache

High-speed access buffer for interim storage (buffering) of requested data.

CE marking

Communauté Européene The CE mark confirms compliance of the product with corresponding EC Directives, for example, with the EMC Directive.

Chipset

Located on the motherboard, connects the processor with the RAM, the graphics controller, the PCI bus, and the external interfaces.

Cold restart

A start sequence, starting when the computer is switched on. The system usually performs some basic hardware checks within the cold start sequence, and then loads the operating system from the hard disk to work memory -> boot

COM interface

The COM interface is a serial V.24 interface. The interface is suitable for asynchronous data transfer.

Compact Flash cards (CF)

Compact Flash is a digital storage medium in card format and without moving parts. The CF card contains the non-volatile memory and the controller. The interface of the CF card corresponds with the IDE interface. CF cards can be operated without additional electronics on PCMCIA or IDE hard disk controllers using a plug and socket adapter. There are two design forms: CF-I (42.6 x 36.4 x 3.3 mm) and CF-II (42.8 x 36.4 x 5 mm).

Configuration files

These are files containing data which define the configuration after restart. Examples of such files are CONFIG.SYS, AUTOEXEC.BAT and the registry files .

Configuration software

The configuration software updates the device configuration when new modules are installed . This is done either by copying the configuration files supplied with the module or by manual configuration using the configuration utility.

Controller

Integrated hardware and software controllers that control the functions of certain internal or peripheral devices (for example, the keyboard controller).

Device configuration

The configuration of a PC or programming device contains information on hardware and device options, such as memory configuration, drive types, monitor, network address, etc. The data are stored in a configuration file and enable the operating system to load the correct device drivers and configure the correct device parameters. . If changes are made to the hardware configuration, the user can change entries in the configuration file using the SETUP program. .

Disc-at-once

With this burning technique, data are written to a CD in a single session, and the CD is then closed. Further write access is then no longer possible.

DP

Display Port: New digital monitor interface.

Drivers

Program parts of the operating system. They adapt user program data to the specific formats required by I/O devices such as hard disk, printers, and monitors.

Dual Core CPU

Dual-core processors significantly increase the speed of computing and program execution compared to the previous generation of single-core processors with hyperthreading technology.

ECC

Error checking and correction is a method for detecting and correcting errors when saving and transferring data, frequently used in conjunction with RAM modules with and without ECC.

EMC directive

Directive concerning **E**lectromagnetic **C**ompatib**i**lity. Compliance is confirmed by the CE symbol and the EC certificate of conformity.

Energy management

The energy management functions of a modern PC allow individual control over the current consumption of vital computer components (e.g. of the monitor, hard disk and CPU), by restricting their activity based on the current system or component load. Energy management is of particular importance for mobile PCs.

Energy options

The energy options can be used to reduce energy consumption of the computer, while keeping it ready for immediate use. This can be configured in Windows by selecting Settings > Control Panel > Energy options.

Enhanced Write Filter (EWF)

Configurable write filter that allows you, for example, to boot Windows Embedded Standard from write-protected media (such as CD-ROM), to write protect individual partitions and adapt the performance of the file system to your needs (when using Compact Flash cards).

ESD directive

Directive for using electrostatic sensitive components.

Ethernet

Local network (bus structure) for text and data communication with a transfer rate of 10/100/1000 Mbps.

Execute Disable Capability

Hardware implementation that prevents mutual memory accesses by programs and applications. It is only effective when all relevant system components, such as processors, operating systems and applications are supported.

Extensible Firmware Interface (EFI)

Refers to the central interface between the firmware, the individual components of a computer and the operating system. EFI is located logically beneath the operating system and represents the successor to PC BIOS, focusing on 64-bit systems.

File Based Write Filter (FBWF)

Configurable write filter to protect individual files from write access.

Formatting

Basic partitioning of memory space on a magnetic data medium into tracks and segments. Formatting deletes all data on a data medium. All data media must be formatted prior to their first use.

Gender changer

Using the gender changer (25-pin / 25-pin), the COM1/V24/AG interface of the SIMATIC PC family can be converted to the usual 25-pin male connector.

HORM

Hibernate once, resume many is a method for fast booting from a single Hibernate file that only needs to be created once. HORM ensures restoration of a uniform, saved system state when booting. This reduces the writing to a CompactFlash medium to a minimum, for example, when starting up and shutting down Windows Embedded Standard 2009.

Hot plug

The SATA interface gives the device's hard drive system hot plugging capability. Prerequisite for this configuration is a RAID1 system with SATA RAID controller (onboard, or slot module), and at least two SATA removable cartridges. The advantage of hot plugging is that defective hard disks can be replaced without having to reboot the computer.

Hub

A term in network technology. In a network, a device joining communication lines at a central location, providing a common connection to all devices on the network.

Hyper Threading

HT technology (multi-threading) enables the parallel computing of processes. HT is only effective when all relevant system components, such as processors, operating systems and applications are supported.

IGD

Integrated Graphics Device. Graphics interface integrated in the chipset.

Image

This refers to the image, for example, of hard disk partitions saved to a file in order to restore them when necessary.

Intel Active Management Technology

This technology permits the diagnostics, management and remote control of PCs. It is only effective when all relevant system components, such as processors, operating systems and applications are supported.

Intel VT

The Intel Virtualization Technology (IVT) is the implementation of a secure closed environment for applications. Special (visualization) software on a VT-capable processor is required for its use.

Interface

See Interface

- Physical interconnection (cable) of hardware elements such as PLCs, PCs, programming devices, printers or monitors.
- Interface for interactive software applications.

Interface, multi-point

MPI is the programming interface of SIMATIC S7/M7. Allows remote access to programmable modules, text-based displays and OPs from central locations. The MPI nodes can intercommunicate.

LAN

Local Area Network: LAN is a local network that consists of a group of computers and other devices that are distributed across a relatively restricted range and are linked with communication cables. The devices connected to a LAN are called nodes. The purpose of networks is the mutual use of files, printers or other resources.

Legacy Boot Device

Conventional drives can be used as USB devices.

Legacy USB support

Support of USB devices (e.g. mouse, keyboard) on the USB ports without driver.

License key

The license key represents the electronic license stamp of a license. Siemens provides the license keys for protected software.

License key disk

The license key disk contains the authorizations or license keys required to enable protected SIMATIC software.

Low-voltage directive

EC Product Safety Directive relating to the safety of products which are operated on low voltage (50 VAC to 1000 VAC, 70 VDC to 1500 VDC) and not specified in other directives. Compliance is confirmed by the CE symbol and the EC certificate of conformity.

LPT interface

The LPT interface (Centronics interface) is a parallel interface that can be used to connect a printer.

Memory card

Memory cards in credit card format. Memory for user programs and parameters, for example, for programmable modules and CPs.

Module

Modules are plug-in units for PLCs, programming devices or PCs. They are available as local modules, expansion modules, interfaces or mass storage (Mass storage module).

Motherboard

The motherboard is the core of the computer. Here, data are processed and stored, and interfaces and device I/Os are controlled and managed.

NEC Class 2

The "NEC", National Electrical Code, is the USA collection of regulations that generally correspond to German VDE 0100 standards. All USA standards governing the safety of electrical equipment and corresponding "deviations" in IEC standards are based on NEC in terms of their country-specific requirements.

NEC Class 2 specifies higher safety requirements for protection against electric shock and National Fire Protection Association (NFPA) requirements for fire protection. Power supplies operating within the range from 20 VDC to 30 VDC must be equipped with an internal current limiting circuit which safely prevents output power higher than 100 VA.

Operating system

Generic term which describes all functions for controlling and monitoring user program execution, distribution of system resources to the user programs and the operating mode in cooperation with the hardware (for example Windows XP Professional).

Packet writing

The CD-RW is used as a disk medium. The CD can then be read only by packet-writing compatible software or has to be finalized. Finalization of a CD closes the CD within an ISO9660 shell. You can still write to the CD-RW several times in spite of finalization. Not all CD drives can read packet-written CDs. There are restrictions to using this method in general data transfer.

PATA

Interface for hard disk drives and optical drives, with parallel data transmission rate up to 100 Mbps.

PC card

Trademark of the Personal Computer Memory Card International Association (PCMCIA). Designation for auxiliary cards that conform with PCMCIA specifications. A PC card that has roughly the size of a credit card can be plugged into a PCMCIA slot. Version 1 specifies cards of Type I with a thickness of 3.3 millimeters, which are designed mainly for use as external memory. Version 2 of the PCMCIA specification also defines cards of Type II with a thickness of 5 mm and cards of Type III with a thickness of 10.5 mm. Type II cards can realize devices such as modems, fax cards and network interface cards. Type III cards are equipped with devices that require more space, for example wireless communications modules, or rotary storage media such as hard disk drives, for example.

PC/104 / PC/104-Plus

Two bus architectures are especially fashionable today in the industrial world. PC/104 and PC/104-Plus. Both are standard in single-board computers of the PC class. The electrical and logical layout of the two bus systems is identical with ISA (PC/104) and PCI (PC/104-Plus). Software cannot usually detect a difference between them and normal desktop bus systems. Their advantage is the compact design and the resulting space they save.

PCMCIA

Association consisting of approx. 450 member companies of the computer industry whose focus is set on providing worldwide standards for miniaturization and flexible use of PC expansion cards in order to provide basic technologies to the market.

PEG interface

PCI Express for Graphics. Graphics interface with 16 PCIe lanes for expansions with graphics modules.

PIC mode

Peripheral interrupt controller. 15 interrupt lines are available.

Pixel

PixElement (picture point). The pixel represents the smallest element that can be reproduced on-screen or on a printer.

Plug&Play

Generally, a reference to the ability of a computer to automatically configure the system for communication with peripheral devices (for example monitors, modems or printers). The user can plug in a peripheral and "play" it at once without manually configuring the system. A Plug&Play PC requires both a BIOS that supports Plug&Play and a Plug&Play expansion card.

POST

Self-test performed by the BIOS after the computer is switched on. Performs a RAM test and a graphics controller test, for example. The system outputs audible signals (beep codes) if the BIOS detects any errors; the relevant message indicating cause of error is output on the screen.

PROFIBUS/MPI

Process Field Bus (standard bus system for process applications)

PROFINET

PROFINET is the name of the standard for Industrial Ethernet developed and maintained by the PROFIBUS user organization. PROFINET unites protocols and specifications with which Industrial Ethernet meets the requirements of industrial automation technology.

Programmable controller (PLC)

The programmable controllers (PLC) of the SIMATIC S5 system consist of a central controller, one or more CPUs, and various other modules (e.g. I/O modules).

PXE server

A **Preboot Execution Environment** server is part of a network environment and can provide software to connected computers even before they boot. This can involve operating system installations or servicing tools, for example.

RAID

Redundant Array of Independent Disks: Data storage system which is used to save data and the corresponding error correction codes (parity bits, for example) to at least two hard disk volumes in order to enhance reliability and performance. The hard disk array is controlled by management programs and a hard disk controller for error correction. The RAID system is usually implemented in network servers.

RAL

Restricted Access Location: Installation of the device in a production facility with restricted access, for example, a locked control cabinet.

Recovery CD

Contains the tools for configuring hard disks and the Windows operating system.

Reset

Hardware reset: Reset/restart of the PC using a button/switch.

Restart

Warm restart of a computer without switching the power off (Ctrl + Alt + Del)

Restore DVD

The Restore DVD is used to restore the system partition or the entire hard disk to factory state if the system has crashed. The bootable DVD contains all the necessary image files. You can also create a boot disk allowing restoration via the network.

ROM

Read-Only Memory ROM is a read-only memory in which every memory location can be addressed individually. The programs or data are permanently stored and are not lost in the event of a power failure.

S.M.A.R.T

The Self-Monitoring, Analysis and Reporting Technology (SMART or S.M.A.R.T.) is an industry standard integrated in storage media. It makes for permanent monitoring of important parameters and early detection of imminent problems.

SATA

Serial ATA Interface for hard disk drives and optical drives with serial data transmission rates of up to 300 Mbps.

SCSI interface

Small Computer System Interface Interface for connecting SCSI devices such as hard disk drives or optical drives.

Session at once

In session at once, the CD can be written to both with an audio session and a data session. The two sessions are written to at once (as in disc at once).

SETUP (BIOS Setup)

A program in which information about the device configuration (that is the configuration of the hardware on the PC/PG) is defined. The device configuration of the PC/PG is preset with defaults. Changes must therefore be entered in the SETUP if a memory expansion, new modules or a new drive are added to the hardware configuration.

SSD (Solid State Drive)

A Solid State Drive is a drive that can be installed like any other drive; it does not contain a rotating disk or other moving parts because only semiconductor memory chips of similar capacity will be used. This design makes SSDs more rugged, provides shorter access times, low energy consumption and rapid data transfer.

STEP 7

Programming software for the creation of user programs for SIMATIC S7 controllers.

Track-at-once

In track-at-once recording, a CD can be written to in bits in several sessions if the CD was not closed.

Troubleshooting

Error cause, cause analysis, remedy

Trusted Execution Technology

Hardware implementation that allows secured execution of programs and applications. It is only effective when all relevant system components, such as processors, operating systems and applications are supported.

Turbo Mode

In this mode individual processor cores can be clocked higher in accordance with the load from the user programs and as required. It is only supported by Core i5 and Core i7 processors.

V.24 interface

V.24 is a standardized interface for data transfer. Printers, modems, and other hardware modules can be connected to a V.24 interface.

Wake on LAN (WoL)

Wake on Local area network. This function allows the PC to be started via the LAN interface.

Warm restart

The restart of a computer after a program was aborted. The operating system is loaded and restarted again. The CTRL+ ALT+ DEL hotkey can be used to initiate a warm restart.

WLAN

Wireless LAN is a local network that transmits data via radio waves, infrared light or another wireless technology. Wireless LAN is mainly used for mobile computer applications in office or factory environments.

Index

2

- 24 V DC power supply
 - Connecting, 45

A

- Abbreviations, 185, 190
- Accessories, 24
- Adapting
 - Partitioning, 116
- Ambient and environmental conditions, 33
- Approbation, 9
- Approvals, 33
- Assignment
 - Resources, 92

B

- Backlight, 17
- Battery replacement, 101
- BIOS Setup, 150
 - Advanced Menu, 159
 - Defaults, 168
 - Exit menu, 167
 - Main menu, 154
 - Menu layout, 153
 - Version menu, 166
- Boot options, 156
- Boot sequence, 121

C

- CAN
 - Base address register, 174
- CE marking, 9, 181
- Check list, 55
- Checking the package contents, 29
- Clamp, 40
- Cleaning Agents, 99
- COA label, 30
- Commissioning, 13, 55
- Compact Flash card
 - Installing in external slot, 96
- CompactFlash card

- Interface, 149
 - Partitioning, 95
- Condensation, 13, 55
- Configuration, 24
- Connecting
 - Couple device via MPI/PROFIBUS, 52
 - Device, 52
 - Electrical connection, 11
 - Peripherals, 181
 - S7 automation system, 52
- Control cabinet installation, 41, 43
- Control unit, 17
- couple, 52
 - Device, 52
- Coupling with SIMATIC S7, 51
- CP 1616 onboard, 53
- Cursor keys, 79

D

- Data exchange, 51
- Date
 - BIOS Setup, 154
- Declaration of conformity, 181
- Degree of protection
 - IP54, 42
 - IP65, 41
- Device, 52
 - Commissioning, 55
 - Connecting, 52
 - Connecting an S7 automation system, 52
 - couple, 52
 - Couple via MPI/PROFIBUS, 52
 - Open, 89, 100
- Device configuration, 168
- Device driver CP16xx.sys, 51
- DiagBase software, 81
- DiagMonitor software, 81
- Diagnostics
 - Error Messages, 121
 - Troubleshooting, 123
- Dimension drawings
 - Device, 137
- Directives, 181
- Display, 14, 15, 17
 - TFT-LC display, 15
- Distributed, 51
- Download, 14

Driver installation, 119
DVD drive
 Installation/removal, 107
DVI-I interface, 145

E

EEPROM calibration, 71
Electrostatic charge, 16
 Precautions, 16
EMC directive, 181, 182
Enhanced Write Filter, 83
Equipotential bonding, 50
Error messages
 Troubleshooting, 123
Error Messages
 on the screen, 121
ESD, 15
 Guideline, 15
 Handling, 16
 Measurement, 16
 Modify, 16
 Shipping, 16
Ethernet, 51
Ethernet RJ45 port, 146
EWF, 83
Extension
 Module, 93
External keyboard, 79

F

FAQs, 123
FBWF, 85
Field devices, 51
File Based Write Filter, 85

H

HAL tool, 87
Hard disk
 Installation/removal, 105
Hardware Options, 158
Hotfix, 14

I

Identification data, 30
Image
 Creating, 119

Initial commissioning
 for Windows Embedded Standard, 56
 for Windows XP Professional, 59
 SIMATIC PC Wizard, 66
 with Windows 7, 60

Installing
 Modules, 93

Integration
 Ethernet, 51
 PROFIBUS, 51
 PROFINET, 51

Interfaces
 COM, 144
 CompactFlash card, 149
 DVI-I, 145
 MPI/DP interface, 52
 PCI, 150
 PROFIBUS, 147
 PROFINET, 148
 RJ45 Ethernet, 146
 USB, 148

IT communication, 51

K

Key code, 129
Key panel, 76
Keyboard Features, 157
Keyboard table, 129

L

Labeling strips, 17, 31
Language selection
 Setting up, 60, 61
 Setup in Windows Embedded Standard 2009, 57
 Windows 7, 64
LED 1/2
 Output register, 175
License key, 109, 111
Limitation of Liability, 100
Lithium battery, 101

M

Measurement
 ESD, 16
Membrane keyboard, 17
Memory Hole, 175
Modify
 ESD, 16

Modules, 93
 Monitoring
 Watchdog, 82
 Motherboard
 Layout and function, 143
 Technical features, 144
 Mounting, 40
 Mounting methods, 40
 Mounting positions, 37
 Mouse, 17
 MPI network, 52

N

Non-Siemens modules, 124
 Note, 35
 General Information, 13
 Installation guidelines, 35
 Numeric keys, 78

O

On-board Ethernet, 158
 Operating system
 Setting up Windows 7, 60
 Setting up Windows Embedded Standard, 56
 Setting up Windows XP Professional, 59
 Windows 7 Recovery, 61
 Operation
 Touch screen, 80
 Output register LED 1 / 2, 175

P

Panel Wizard
 starting, 66
 Partitioning, 116
 Adapting, 116
 CompactFlash card, 114, 115
 Hard disk, 114
 HDD or SSD, 115
 SSD, 114, 116
 Windows 7 Ultimate, 116
 Windows Embedded Standard 2009I, 114
 Windows Embedded Standard 7, 115
 Windows XP Professional, 115
 PCI cards, 92
 PCI interface, 150
 PCI Interrupt Lines, 173
 Peripherals
 Connecting, 181

Pixel, 14
 Defective pixel, 14
 Power disconnection, 47
 Power Factor Correction, 47
 Power supply, 45
 Power requirements of the components, 128
 PROFIBUS, 52
 Integration, 51
 PROFIBUS-DP network, 52
 PROFINET, 51
 PROFINET IO application, 51

R

Rack installation, 40, 43
 radiation
 High frequency radiation, 12
 Ramp-up, 121
 Rating plate, 30
 Recovery
 Windows 7, 61
 Recovery DVD, 112
 Repairs, 13, 99
 Restart, 59, 60
 Restore CD/DVD
 for Windows Embedded Standard 7, 109
 for Windows XP Professional, 111
 Restoring the delivery state
 for Windows Embedded Standard 7, 109
 for Windows XP Professional, 111

S

Safety note, 11
 SATA/PATA Configuration, 161
 Scope, 9
 Screen keyboard
 calling, 73
 Shipping
 ESD, 16
 SIMATIC DiagBase software, 81
 SIMATIC DiagMonitor software, 81
 SIMATIC KeyTools, 69
 SIMATIC NET, 52
 SIMATIC PC Wizard
 Initial commissioning, 66
 SIMATIC S7, 51
 Integration, 51
 SRAM
 Control register, 175
 SSD

- Installation/removal, 103
- Partitioning, 114, 116
- Standard, 56
- Standard calibration, 70
- Supply voltage, 45, 48
- Swivel arm installation, 41, 43
- System Date, 154
- System partition, 109, 111
- System resources, 170
 - Currently allocated system resources, 170
- System Time, 154

T

- Temperature monitoring, 82
- TFT technology, 17
- Time
 - BIOS Setup, 154
- Touch input
 - Calling the screen keyboard, 73
- Touch screen
 - Operation, 80
- Transportation, 13
- Troubleshooting/FAQs, 123
- Type of fixation, 40

U

- Updates, 14
 - User programs and drives, 117, 118
- USB interface, 17
- User password, 162

V

- Ventilation slots, 33
- Voltage range, 46

W

- Warranty, 12
- Watchdog
 - Monitoring function, 82
 - Monitoring times, 83
- Windows 7
 - Recovery, 61
 - Setting up the operating system, 60
- Windows 7 Ultimate
 - Partitioning HDD or SSD, 116
- Windows Embedded Standard

- Setting up the operating system, 56
- Windows Embedded Standard 2009I
 - Partitioning the hard disk, 114
- Windows Embedded Standard 7
 - Partitioning the hard disk, 115
 - Updates, 117
- Windows XP Embedded Standard 7
 - Reinstalling the operating system, 109
- Windows XP Professional
 - Partitioning the hard disk, 115
 - Reinstalling the operating system, 110
 - Setting up the operating system, 59
 - Updates, 117
- Wiring information, 48