

# Rexroth IndraDrive Cs Drive Systems with HCS01

R911322210  
Edition 02

## Project Planning Manual



**Title** Rexroth IndraDrive Cs  
 Drive Systems with HCS01

**Type of Documentation** Project Planning Manual

**Document Typecode** DOK-INDRV\*-HCS01\*\*\*\*\*-PR02-EN-P

**Internal File Reference** RS-898e3e765ff4d61d0a6846a000329fdd-3-en-US-2

**Purpose of Documentation**

- Overview information of the Rexroth IndraDrive Cs drive system
- Description of the allowed combinations of Rexroth IndraDrive Cs system components
- Selection of the system components of the Rexroth IndraDrive Cs drive system
- Specification applying to all components (ambient and operating conditions)
- Application description of system characteristics

**Record of Revision**

Edition	Release Date	Notes
DOK-INDRV*-HCS01*****-PR01-EN-P	2009/08	-
DOK-INDRV*-HCS01*****-PR02-EN-P	2012/07	See index entry "Documentation → Editions"

**Copyright** © Bosch Rexroth AG 2012

This document, as well as the data, specifications and other information set forth in it, are the exclusive property of Bosch Rexroth AG. It may not be reproduced or given to third parties without its consent.

**Liability** The specified data is intended for product description purposes only and shall not be deemed to be a guaranteed characteristic unless expressly stipulated in the contract. All rights are reserved with respect to the content of this documentation and the availability of the product.

**Published by** Bosch Rexroth AG  
 Bgm.-Dr.-Nebel-Str. 2 ■ 97816 Lohr a. Main, Germany  
 Phone +49 9352 18 0 ■ Fax +49 9352 18 8400  
<http://www.boschrexroth.com/>  
 Dept. DC-IA/EDY (MW), DC-IA/EDY1 (RB/US/BB), DC-IA/EDY2 (CG, MR), DC-IA/EDY4 (CR)

# Table of Contents

	Page
<b>1 System Presentation.....</b>	<b>7</b>
1.1 Drive Range Rexroth IndraDrive Cs.....	7
1.1.1 Overview – Rexroth IndraDrive Cs.....	7
1.1.2 Target Applications.....	8
1.1.3 Features.....	9
Functional Features.....	9
Performance Features.....	11
Combination of HCS01 and MSM/MSK.....	12
Interfaces.....	12
Supported Encoder Systems.....	12
1.2 System Configuration.....	14
1.2.1 System Structure.....	14
1.2.2 Components of the System.....	15
Drive Controllers HCS01.....	15
Control Panel HAP01.....	16
Firmware.....	17
1.2.3 About This Documentation.....	18
Purpose.....	18
Editions.....	19
Documentations.....	20
Your Feedback.....	21
<b>2 Important Directions for Use .....</b>	<b>23</b>
2.1 Appropriate Use .....	23
2.1.1 Introduction.....	23
2.1.2 Areas of Use and Application.....	23
2.2 Inappropriate Use.....	24
<b>3 Safety Instructions for Electric Drives and Controls.....</b>	<b>25</b>
3.1 Definitions of Terms.....	25
3.2 General Information.....	26
3.2.1 Using the Safety Instructions and Passing Them on to Others.....	26
3.2.2 Requirements for Safe Use.....	26
3.2.3 Hazards by Improper Use.....	27
3.3 Instructions with Regard to Specific Dangers.....	28
3.3.1 Protection Against Contact With Electrical Parts and Housings.....	28
3.3.2 Protective Extra-Low Voltage as Protection Against Electric Shock .....	29
3.3.3 Protection Against Dangerous Movements.....	30
3.3.4 Protection Against Magnetic and Electromagnetic Fields During Operation and Mounting.....	31
3.3.5 Protection Against Contact With Hot Parts.....	32
3.3.6 Protection During Handling and Mounting.....	32
3.3.7 Battery Safety.....	32
3.3.8 Protection Against Pressurized Systems.....	33

## Table of Contents

	Page
3.4	Explanation of Signal Words and the Safety Alert Symbol..... 33
<b>4</b>	<b>Combining the Individual Components..... 35</b>
4.1	Documentations..... 35
4.2	Brief Description of the Individual Components..... 35
4.2.1	HCS01 - Brief Description and Design..... 35
4.3	Configuring the Drive System..... 35
4.3.1	Converter..... 35
4.3.2	Functional Equipment..... 37
4.3.3	Firmware..... 38
	Firmware and Device Types..... 38
	Firmware-Types..... 38
	Firmware Variants..... 39
4.3.4	Motors..... 39
	IndraDyn..... 39
	Third-Party Motors..... 40
4.3.5	Cables..... 45
	Motor Power Cables..... 45
	Encoder Cables..... 46
4.4	Installation Conditions..... 47
4.4.1	Ambient and Operating Conditions..... 47
4.4.2	Control Cabinet Design and Cooling..... 49
4.4.3	UL Ratings..... 50
4.4.4	Compatibility With Foreign Matters..... 51
4.5	Mechanical Project Planning..... 51
4.5.1	Drive Controller..... 51
	Dimensional Drawings..... 51
	Dimensions, Mass, Insulation, Sound Pressure Level..... 55
	Temperatures, Cooling, Power Dissipation, Distances..... 56
	Mounting Positions of Components..... 58
4.6	Electrical Project Planning..... 60
4.6.1	Overall Connection Diagram..... 60
4.6.2	Project Planning of Control Voltage..... 60
	Control Voltage for Drive Systems..... 60
	Sizing the Control Voltage Supply..... 61
4.6.3	Mains Connection ..... 66
	Residual-Current-Operated Circuit Breakers (RCD, RCCB) as Additional Fusing..... 66
	Mains Types..... 69
	Type of Mains Connection..... 72
	Mains Connected Load and Mains Current ..... 76
	Dimensioning the Line Cross Sections and Fuses ..... 77
	Dimensioning and Selecting the Mains Transformer..... 83
	Dimensioning the Mains Filter..... 84
	Selecting the Mains Filter..... 86
	Determining the Mains Choke..... 90
	Dimensioning the Mains Contactor..... 90

Table of Contents

	Page
	91
	92
4.6.4	93
	93
	93
	94
	96
	99
	100
	100
4.7	101
<b>5</b>	<b>105</b>
5.1	105
5.1.1	105
	105
5.1.2	105
5.2	106
5.2.1	106
	106
	106
5.2.2	107
5.3	108
5.4	108
<b>6</b>	<b>109</b>
6.1	109
6.2	110
6.2.1	110
6.2.2	111
	111
6.2.3	114
	114
	115
	117
	119
	121
	123
	125
	125
	127
	127
	128
	129
	129

## Table of Contents

	Page
	131
	134
	135
6.2.4	135
	135
	136
	137
	137
	141
	142
6.2.5	142
	142
	144
	149
	150
	151
<b>7</b>	<b>153</b>
7.1	153
7.1.1	153
	153
	153
	167
	169
	170
	172
7.1.2	173
	173
	173
	175
	175
7.1.3	177
	177
	178
	179
7.1.4	180
7.1.5	180
7.1.6	181
	181
	181
	183
	184
7.1.7	185
7.1.8	185
	185

Table of Contents

	Page
7.2	Control Panel..... 186
7.2.1	Design..... 186
	Standard Control Panel..... 186
	ADVANCED Control Panel..... 186
7.3	Power Section..... 187
7.3.1	Control Voltage..... 187
7.3.2	Mains Voltage..... 189
7.3.3	DC Bus..... 195
7.3.4	Integrated Braking Resistor..... 197
7.3.5	Inverter..... 199
<b>8</b>	<b>Cables, Accessories, Additional Components..... 203</b>
8.1	Overview..... 203
8.1.1	Cables..... 203
8.1.2	Accessories..... 203
8.1.3	Additional Components..... 204
8.2	Accessories..... 205
8.2.1	Mounting and Connection Accessories (HAS09)..... 205
8.2.2	DC Bus Connector (RLS0778/K06)..... 210
8.2.3	Battery Box for MSM Motors (SUP-E01-MSM-BATTERYBOX)..... 211
8.2.4	Battery and Refresh Resistor (SUP-E03-DKC*CS-BATTERY)..... 213
8.2.5	Encoder Cable for MSM Motors with Absolute Value Encoder (RKG0041)..... 217
	Use..... 217
	Properties..... 218
	Project Planning..... 219
	Installation..... 220
	Replacing the Device..... 222
8.2.6	D-Sub Connector for Encoder Cable and Battery Connection (RGS0001/K01)..... 223
8.2.7	Hall Sensor Adapter Box (SHL03.1-NNN-S-NNN)..... 227
8.3	Additional Components..... 232
8.3.1	Transformers..... 232
	General Information..... 232
	Autotransformers for Drive Controllers..... 233
8.3.2	Mains Filters NFD / NFE..... 237
	Type Code NFE / NFD..... 237
	Mechanical Data NFE / NFD..... 238
	Electrical Data NFE / NFD..... 240
8.3.3	Mains Chokes..... 242
	Type Code..... 242
	Type Plate..... 243
	HNL01.1E - Mains Chokes, Infeeding ..... 244
8.3.4	External Braking Resistors HLR..... 246
	Types..... 246
	Dimensions..... 247
	Installation..... 248
8.3.5	DC Bus Capacitor Units HLC..... 249

## Table of Contents

	Page
Type Code.....	249
Technical Data.....	249
Connection.....	250
Operation.....	251
<b>9 Environmental Protection and Disposal .....</b>	<b>253</b>
9.1 Environmental Protection.....	253
9.2 Disposal.....	253
<b>10 Service and Support.....</b>	<b>255</b>
<b>11 Appendix.....</b>	<b>257</b>
11.1 Determining the Leakage Capacitance.....	257
11.2 Leakage Capacitances.....	257
11.2.1 Leakage Capacitance of Motors.....	257
11.2.2 Leakage Capacitance of Power Cables .....	259
<b>Index.....</b>	<b>261</b>



# 1 System Presentation

## 1.1 Drive Range Rexroth IndraDrive Cs

### 1.1.1 Overview – Rexroth IndraDrive Cs

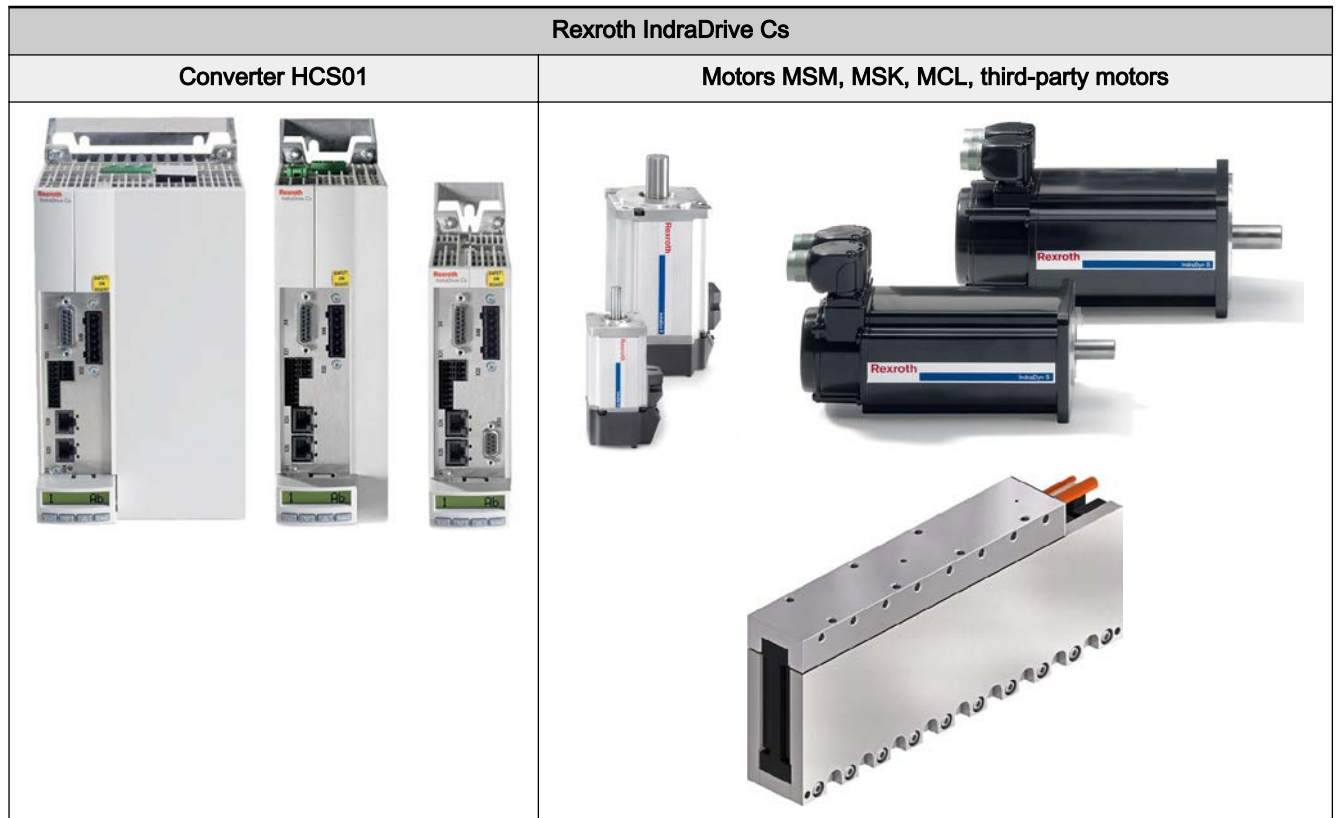


Fig. 1-1: Components of the Rexroth IndraDrive Cs Range

## System Presentation

## 1.1.2 Target Applications






	<b>General automation, handling, assembly</b> Automated assembly and handling systems, palletizing systems, pick-and-place systems, logistics ...
	<b>Machine tools</b> Compact machines (e.g., for wood machining), secondary and servo drives ...
	<b>Food and packaging industry</b> Filling and closing, palletizing, erecting cartons, closing cartons, labeling ...
	<b>Printing machines</b> Label printing, labeling, digital printing, positioning, servo drives ...
	<b>Semiconductor industry</b> Semiconductor/wafer production and handling, metalizing, cleaning, solar cell production ...

Fig.1-2: Target Applications

## 1.1.3 Features

### Functional Features

- Compact type of construction
- Degree of protection IP20
- Control panel with programming module function
- Scaleable signal processing and firmware
- Multi-encoder interface for all standard encoders (HIPERFACE®, En-Dat2.1, SSI, TTL, sin/cos, resolver, MSM encoder)
- DC bus connection (at HCS01.1E-W00xx-x-03 devices)
- Analog input (14 bit, ±10 V)
- 8 digital inputs
  - 2 probe inputs
  - 1 combined I/O which can be configured as digital input or as digital output
- Performance-dependent fan control
- Integrated brake current measurement and monitoring
- Winding short circuit at motor output for shutdown as reaction to fatal errors
- Compact MSM motors
- 2 options for buffering the data of MSM encoders
  - Battery box (SUP-E01-MSM-BATTERYBOX; mounting near the motor is possible; one battery box is required for each drive controller)
  - D-Sub connector (RGS0001/K01) for encoder cable (RKG0041) and connection of a battery or an uninterruptible power supply
- Hall sensor adapter box SHL03.1 to operate MCL linear motors with digital Hall sensors

#### HCS01 - ECONOMY vs. BASIC vs. ADVANCED

Functional equipment	HCS01.1E-W00**-A-0*-...		
	...E-S3 (ECONOMY)	...B-ET (BASIC)	...A-CC (ADVANCED)
Communication	sercos III	Multi-Ethernet (incl. sercos III)	sercos III master (cross communication)
		Alternative interface <sup>1)</sup> (PROFIBUS DP, CANopen) <sup>2)</sup>	Alternative interface <sup>1)</sup> (Multi-Ethernet, PROFIBUS DP, CANopen)
Encoder evaluation	Multi-encoder interface	Multi-encoder interface	Multi-encoder interface
		Optional multi-encoder interface <sup>1)</sup>	Optional multi-encoder interface <sup>1)</sup>
Encoder emulation	–	✓	✓

## System Presentation

Functional equipment	HCS01.1E-W00**-A-0*-...		
	...E-S3 (ECONOMY)	...B-ET (BASIC)	...A-CC (ADVANCED)
Integrated Safety Technology	L3 (Safe Torque Off) L4 (Safe Torque Off, Safe Brake Control)	L3 (Safe Torque Off) L4 (Safe Torque Off, Safe Brake Control)	L3 (Safe Torque Off) L4 (Safe Torque Off, Safe Brake Control)
		Safe Motion <sup>3)</sup>	Safe Motion <sup>3)</sup>
IndraMotion	–	MLD-S <sup>4)</sup>	MLD-S <sup>4)</sup> MLD-M <sup>4)</sup>
Freely configurable digital inputs/outputs (incl. probe)	✓	✓	✓
Analog input	✓	✓	✓
Operator terminal			
• With programming module function	✓	✓	✓
• With slot for microSD memory card	–	–	✓

1)

**One** additional interface per converter for communication **or** encoder evaluation

2)

If you use "PROFIBUS DP" or "CANopen" communication, the Multi-Ethernet function is no longer available. However, you can still use the connection points X24 and X25 as engineering interfaces.

3)

In preparation




4)

Firmware version MPx-17 or higher

Fig. 1-3:

*ECONOMY vs. BASIC vs. ADVANCED*

Performance Features

		 <b>Size 1</b> (Width: 50 mm; Height: 215 mm)						 <b>Size 2</b> (Width: 70 mm; Height: 268 mm)			 <b>Size 3</b> (Width: 130 mm; Height: 268 mm)	
HCS01.1E-W00... →		03	06	09	13	05	08	18-A-02	18-A-03	28	54	
Mains connection voltage	V	3 AC 110 ... 230 V*				3 AC 200 ... 500 V**		3 AC 110 ... 230 V*		3 AC 200 ... 500 V**		
Maximum current	A <sub>rms</sub>	3,3	6,0	9,0	13,0	5,0	8,0	18,0	18,0	28,0	54,0	

\* Single-phase operation allowed; for HCS01.1E-W0013 and HCS01.1E-W0018-A-02 with derating

\*\* Single-phase operation not allowed

Fig. 1-4: Converter HCS01 - Performance Features

## System Presentation

## Combination of HCS01 and MSM/MSK

	HCS01									
	3 AC 110 ... 230 V					3 AC 200 ... 500 V				
	W0003	W0006	W0009	W0013	W0018	W0005	W0008	W0018	W0028	W0054
<b>MSM</b> MSM019 ... MSM041			■				T		-	-
<b>MSK</b> MSK030 ... MSK070C-0150			□				■			□
<b>MSK</b> MSK070C-0300 ... MSK103			-				□			■

- Optimum combination
  - Some allowed combinations are possible
  - T Allowed combination (transformer required, as operation of MSM only allowed with a maximum of 3 AC 230 V)
  - Combination not allowed
- Fig. 1-5: Converter HCS01 and Motors MSM/MSK*

**Drive sizing with Rexroth IndraSize**

Rexroth IndraSize is a software for optimum sizing of a drive system consisting of the components Rexroth IndraDrive and IndraDyn.

Rexroth IndraSize is available as a download.

## Interfaces

- Overview**
- Compatible with IndraDrive platform
  - Ethernet-based communication with the following supported protocols:
    - sercos III
    - PROFINET IO
    - EtherNet/IP
    - EtherCAT
  - Alternative communication:
    - PROFIBUS DP
    - CANopen
  - Optional safety technology
  - Optional multi-encoder interface
  - Optional encoder emulation
  - Analog input
  - Freely configurable digital inputs/outputs

## Supported Encoder Systems

**Supported Encoder Systems** Encoder systems with a supply voltage of **5 and 12 volt**

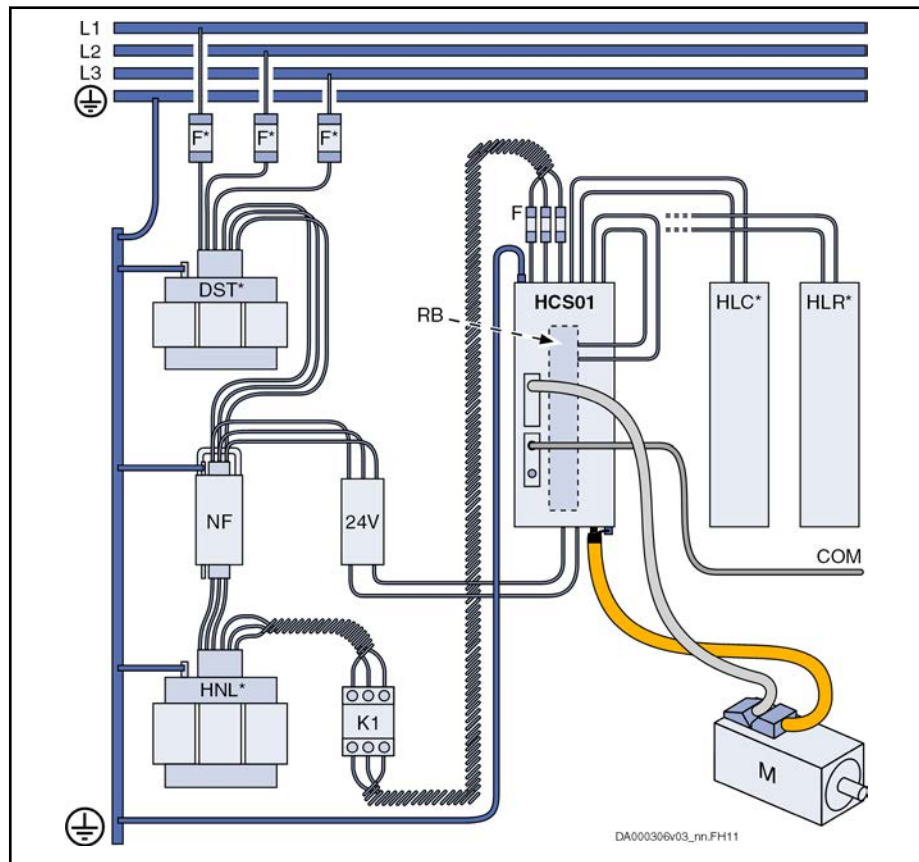
## System Presentation

- MSM motor encoder
- MSK motor encoder
- Sin-cos encoder  $1V_{pp}$ ; HIPERFACE®
- Sin-cos encoder  $1V_{pp}$ ; EnDat 2.1; (EnDat 2.2 in preparation)
- Sin-cos encoder  $1V_{pp}$ ; with reference track
- 5V-TTL square-wave encoder; with reference track
- SSI
- Combined encoder for SSI (combination of SSI and sin-cos encoder  $1V_{pp}$ )
- Resolver
- Hall sensor box SHL02.1
- Digital Hall sensor in conjunction with Hall sensor adapter box SHL03.1

## System Presentation

## 1.2 System Configuration

## 1.2.1 System Structure



*	Optional
24V	Control voltage supply
COM	Communication
DST	Autotransformer
F	Fuses
HCS01	Converter
HLC	DC bus capacitor unit (for devices with DC bus connection)
HLR	External braking resistor
HNL	Mains choke
NF	Mains filter
K1	External mains contactor
M	Motor
RB	Integrated braking resistor (at the back of the drive controller)

Fig. 1-6: Drive System Rexroth IndraDrive Cs



## 1.2.2 Components of the System

### Drive Controllers HCS01

#### Type Code

Abbrev. column	1	2	3	4	5	6	7	8	9	1	2	3	4	5	6	7	8	9	2	0	1	2	3	4	5	6	7	8	9	3	0	1	2	3	4	5	6	7	8	9	4	
Example:	H	C	S	0	1	.	1	E	-	W	0	0	1	3	-	A	-	0	2	-	E	-	S	3	-	E	C	-	N	N	-	N	N	-	N	N	-	N	N	-	F	W
<b>Product</b>	HCS ..... = HCS																																									
<b>Line</b>	1 ..... = 01																																									
<b>Design</b>	1 ..... = 1																																									
<b>Power supply unit</b>	Infeeding ..... = E																																									
<b>Cooling mode</b>	Air, internal. .... = W																																									
<b>Maximum current</b>																																										
<b>At mains connection voltage "02"</b>																																										
3 A .....										= 0003																																
6 A .....										= 0006																																
9 A .....										= 0009																																
13 A .....										= 0013																																
18 A .....										= 0018																																
<b>At mains connection voltage "03"</b>																																										
5 A .....										= 0005																																
8 A .....										= 0008																																
18 A .....										= 0018																																
28 A .....										= 0028																																
54 A .....										= 0054																																
<b>Degree of protection</b>																																										
IP 20 .....										= A																																
<b>Mains connection voltage</b>																																										
3 x AC 110...230 V ±10% .....										= 02																																
3 x AC 200...500 V ±10% .....										= 03																																
<b>Control section design   Communication</b>																																										
ADVANCED   SERCOS III master (cross communication). ....										= A-CC																																
BASIC   MultiEthernet. ....										= B-ET																																
ECONOMY   SERCOS III. ....										= E-S3																																
<b>Interface 1</b>																																										
Encoder IndraDyn / Hiperface® / 1Vpp / TTL / EnDat 2.1/2.2. ....										= EC																																
<b>Interface 2</b>																																										
CANopen .....										= CN ①																																
Encoder IndraDyn / Hiperface® / 1Vpp / TTL / EnDat 2.1/2.2. ....										= EC ①																																
Encoder emulation. ....										= EM ①																																
MultiEthernet .....										= ET ②																																
Not equipped .....										= NN																																
PROFIBUS .....										= PB ①																																
<b>Interface 3</b>																																										
STO (Safe Torque Off) .....										= L3 ③																																
STO (Safe Torque Off) and SBC (Safe Brake Control). ....										= L4 ③																																
Not equipped .....										= NN																																
<b>Other design</b>																																										
None .....										= NN																																
<b>Firmware</b>																																										
Denotes that firmware must be ordered as separate subposition .....										= FW																																
<b>Note</b>																																										
① Not available with Control section design   Communication "E-S3"																																										
② Not available with Control section design   Communication "A-CC"																																										
③ The "L3" and "L4" interfaces guarantee the function, as well as its certification																																										
<b>Standard reference</b>																																										
<b>Standard</b>	<b>Edition</b>	<b>Title</b>																																								
DIN EN 60529	2000-09	Degrees of protection provided by enclosures (IP code)																																								

Fig. 1-7: Type Code HCS01

System Presentation



The figure illustrates the basic structure of the type code. Our sales representative will help you with the current state of available versions.

Control Panel HAP01

View



Fig. 1-8: Control Panel HAP01

Type Code

Abbrev. column	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
Example:	H	A	P	0	1	.	1	N	-	0	1	8	-	N	N	-	F	W		

<b>Product</b>																					
HAP .....		=	HAP																		
<b>Line</b>																					
1 .....			01																		
<b>Design</b>																					
1 .....		=	1																		
<b>Additional option</b>																					
For ADVANCED devices	...	=	A																		
With memory card slot	.....	=	E																		
Without memory card slot	....	=	N																		
<b>Memory size</b>																					
e.g. 18 MB	.....	=	018																		
<b>Other design</b>																					
None	.....	=	NN																		
<b>Firmware</b>																					
Denotes that firmware must be ordered as separate subposition.	.....	=	FW																		

DT000079v01\_en.fh11

Fig. 1-9: Type Code of Control Panel



The figure illustrates the basic structure of the type code. Our sales representative will help you with the current state of available versions.

### Assignment HAP01 ↔ HCS01

Control panel	Drive controller
HAP01.1A	HCS01.1E-W****-***-A-CC (ADVANCED)
HAP01.1N	HCS01.1E-W****-***-B-ET (BASIC) HCS01.1E-W****-***-E-S3 (ECONOMY)
HAP01.1E	-

Fig. 1-10: Assignment HAP01 ↔ HCS01

See also index entry

- "Standard control panel"
- "ADVANCED control panel"

## Firmware

### Firmware Types *ECONOMY*

- FWA-INDRV\*-MPE-16VRS-D5-x-NNN-NN
- FWA-INDRV\*-MPE-17VRS-D5-x-NNN-NN


### *BASIC*

- FWA-INDRV\*-MPB-16VRS-D5-x-xxx-xx
- FWA-INDRV\*-MPB-17VRS-D5-x-xxx-xx

### *ADVANCED*

- FWA-INDRV\*-MPC-17VRS-D5-x-xxx-xx

See also index entry "Firmware → Types".

 For detailed information, see the Functional Description of the firmware used (index entry "Overview of functions/functional packages").

## System Presentation

## 1.2.3 About This Documentation

### Purpose

**⚠ WARNING**

**Personal injury and property damage caused by incorrect project planning for applications, machines and installations!**

Observe the contents of the documentations relevant to your drive system (see "Documentations").

---

This documentation contains

- Overview information of the Rexroth IndraDrive Cs drive system
- Description of the allowed combinations of Rexroth IndraDrive Cs system components
- Selection of the system components of the Rexroth IndraDrive Cs drive system
- Specification applying to all components (ambient and operating conditions)
- Application description of system characteristics

## Editions

Edition	Release date	Notes
01	2009/08	First edition
02	2012/07	<p>Changes in comparison to previous edition:</p> <p><i>New Contents</i></p> <ul style="list-style-type: none"> <li>• HCS01.1E-W0054-_-03</li> <li>• HCS01.1E-W0018-_-02</li> <li>• Safety technology (L3, L4)</li> <li>• Encoder emulation (EM)</li> <li>• Communication CANopen (CN)</li> <li>• Hall sensor adapter box SHL03.1-NNN-S-NNN</li> <li>• Encoder cable RKG0041</li> <li>• D-Sub connector RGS0001/K01 for encoder cable and battery connection</li> <li>• Braking resistors HLR01.2</li> <li>• DC bus capacitor units HLC01.2</li> <li>• Transformers</li> <li>• ADVANCED control panel</li> <li>• Third-party motors</li> <li>• Tightening torques of the connection points</li> <li>• EtherCAT display elements</li> </ul> <p><i>Revised contents</i></p> <ul style="list-style-type: none"> <li>• Type code</li> <li>• Technical data</li> <li>• Project planning for control voltage supply</li> <li>• DC bus coupling</li> <li>• Mains filter: Dimensioning and selection</li> <li>• Standard encoder evaluation</li> <li>• Connection diagram for HIPERFACE encoder</li> <li>• Mounting and connection accessories HAS09</li> <li>• Accessory SUP-E03-DKC*CS-BATTERY</li> <li>• Control cabinet cooling</li> <li>• Overview of documentations</li> </ul>

Fig. 1-11: Editions

## System Presentation

## Documentations

## Drive Systems, System Components

Title	Kind of documentation	Document typecode <sup>1)</sup>	Part number
Rexroth IndraDrive ...		DOK-INDRV*-...	R911...
Cs Drive Systems	Project Planning Manual	HCS01*****-PRxx-EN-P	322210

1) In the document typecodes, "xx" is a wild card for the current edition of the documentation (example: PR01 is the first edition of a Project Planning Manual)

Fig. 1-12: Documentations – Drive Systems, System Components

## Motors

Title	Kind of documentation	Document typecode <sup>1)</sup>	Part number
Rexroth IndraDyn ...		DOK-MOTOR*-...	R911...
A Asynchronous Motors MAD / MAF	Project Planning Manual	MAD/MAF****-PRxx-EN-P	295781
H Synchronous Kit Spindle Motors	Project Planning Manual	MBS-H*****-PRxx-EN-P	297895
L Synchronous Linear Motors	Project Planning Manual	MLF*****-PRxx-EN-P	293635
L Coreless Linear Motors MCL	Project Planning Manual	MCL*****-PRxx-EN-P	330592
S Synchronous Motors MKE	Project Planning Manual	MKE*GEN2***-PRxx-EN-P	297663
S Synchronous Motors MSK	Project Planning Manual	MSK*****-PRxx-EN-P	296289
S Synchronous Motors MSM	Data Sheet	MSM*****-DAxx-EN-P	329338
S Synchronous Motors QSK	Project Planning Manual	QSK*****-PRxx-EN-P	330321
T Synchronous Torque Motors	Project Planning Manual	MBT*****-PRxx-EN-P	298798

1) In the document typecodes, "xx" is a wild card for the current edition of the documentation (example: PR01 is the first edition of a Project Planning Manual)

Fig. 1-13: Documentations – Motors

## Cables

Title	Kind of documentation	Document typecode <sup>1)</sup>	Part number
Rexroth IndraDrive ...		DOK-CONNEC-...	R911...
Rexroth Connection Cables IndraDrive and IndraDyn	Selection Data	CABLE*INDRV-CAxx-EN-P	322949

1) In the document typecodes, "xx" is a wild card for the current edition of the documentation (example: CA03 is the third edition of the documentation "Catalog")

Fig. 1-14: Documentations – Cables

## Firmware

Title	Kind of documentation	Document typecode <sup>1)</sup>	Part number
Rexroth IndraDrive ...		DOK-INDRV*-...	R911...
MPx-17 Functions	Application Manual	MP*-17VRS**-APxx-EN-P	331236
MPx-17 Version Notes	Release Notes	MP*-17VRS**-RNxx-EN-P	331588

System Presentation

Title Rexroth IndraDrive ...	Kind of documentation	Document typecode <sup>1)</sup> DOK-INDRV*-...	Part number R911...
MPx-16 Functions	Application Manual	MP*-16VRS**-APxx-EN-P	326767
MPx-16 Version Notes	Release Notes	MP*-16VRS**-RNxx-EN-P	329272
MPx-16 and MPx-17 Parameters	Reference Book	GEN1-PARA**-RExx-EN-P	328651
MPx-16 and MPx-17 Diagnostic Messages	Reference Book	GEN1-DIAG**-RExx-EN-P	326738
Integrated Safety Technology as of MPx-1x	Application Manual	SI3-OP-MAN*-APxx-EN-P	332634
Rexroth IndraMotion MLD Libraries as of MPx17	Reference Book	MLD-SYSLIB2-RExx-EN-P	332627
Rexroth IndraMotion MLD as of MPx-17	Application Manual	MLD2-**VRS*-APxx-EN-P	334351

1) In the document typecodes, "xx" is a wild card for the current edition of the documentation (example: RE02 is the second edition of a Reference Book)

Fig. 1-15: Documentations – Firmware

## Your Feedback



Your experience is important for our improvement processes of products and documentations.

Inform us about mistakes you discovered in this documentation and changes you suggest; we would be grateful for your feedback.

Please send your remarks to:

### Address for Your Feedback

Bosch Rexroth AG  
 Dept. DC-IA/EDY1  
 Buergermeister-Dr.-Nebel-Str. 2  
 97816 Lohr, Germany  
 E-mail: [dokusupport@boschrexroth.de](mailto:dokusupport@boschrexroth.de)





## 2 Important Directions for Use

### 2.1 Appropriate Use

#### 2.1.1 Introduction

Rexroth products reflect the state-of-the-art in their development and their manufacture. They are tested prior to delivery to ensure operating safety and reliability.

#### **WARNING**

**Personal injury and property damage caused by incorrect use of the products!**

The products have been designed for use in industrial environments and may only be used in the appropriate way. If they are not used in the appropriate way, situations resulting in property damage and personal injury can occur.



Rexroth as manufacturer is not liable for any damages resulting from inappropriate use. In such cases, the guarantee and the right to payment of damages resulting from inappropriate use are forfeited. The user alone carries all responsibility of the risks.

Before using Rexroth products, the following pre-requisites must be met to ensure appropriate use of the products:

- Personnel that in any way, shape or form uses our products must first read and understand the relevant safety instructions and be familiar with their appropriate use.
- If the products take the form of hardware, then they must remain in their original state, in other words, no structural changes are permitted. It is not permitted to decompile software products or alter source codes.
- Damaged or faulty products may not be installed or put into operation.
- Make sure that the products have been installed in the manner described in the relevant documentation.

#### 2.1.2 Areas of Use and Application

Drive controllers made by Rexroth are designed to control electrical motors and monitor their operation.

Control and monitoring of the Drive controllers may require additional sensors and actors.



The drive controllers may only be used with the accessories and parts specified in this documentation. If a component has not been specifically named, then it may neither be mounted nor connected. The same applies to cables and lines.

Operation is only permitted in the specified configurations and combinations of components using the software and firmware as specified in the relevant Functional Descriptions.

Drive controllers have to be programmed before commissioning to ensure that the motor executes the specific functions of an application.

Drive controllers of the Rexroth IndraDrive Cs line have been developed for use in single- and multi-axis drive and control tasks.

## Important Directions for Use

To ensure application-specific use of Drive controllers, device types of different drive power and different interfaces are available.

Typical applications include, for example:

- Handling and mounting systems,
- Packaging and food machines,
- Printing and paper processing machines and
- Machine tools.

Drive controllers may only be operated under the assembly and installation conditions described in this documentation, in the specified position of normal use and under the ambient conditions as described (temperature, degree of protection, humidity, EMC, etc.).

## 2.2 Inappropriate Use

Using the Drive controllers outside of the operating conditions described in this documentation and outside of the technical data and specifications given is defined as "inappropriate use".

Drive controllers may not be used, if ...

- they are subject to operating conditions that do not meet the specified ambient conditions. This includes, for example, operation under water, under extreme temperature fluctuations or extremely high maximum temperatures.
- Furthermore, Drive controllers may not be used in applications which have not been expressly authorized by Rexroth. Please carefully follow the specifications outlined in the general Safety Instructions!



Components of the Rexroth IndraDrive Cs system are **products of category C3** (with limited availability) according to IEC 61800-3. To ensure that this category (limit values) is maintained, suitable line filters must be used in the drive system.

These components are not provided for use in a public low-voltage network supplying residential areas with power. If these components are used in such a public network, high-frequency interference is to be expected. This can require additional measures of radio interference suppression.

---

## 3 Safety Instructions for Electric Drives and Controls

### 3.1 Definitions of Terms

<b>Application Documentation</b>	Application documentation comprises the entire documentation used to inform the user of the product about the use and safety-relevant features for configuring, integrating, installing, mounting, commissioning, operating, maintaining, repairing and decommissioning the product. The following terms are also used for this kind of documentation: User Guide, Operation Manual, Commissioning Manual, Instruction Manual, Project Planning Manual, Application Manual, etc.
<b>Component</b>	A component is a combination of elements with a specified function, which are part of a piece of equipment, device or system. Components of the electric drive and control system are, for example, supply units, drive controllers, mains choke, mains filter, motors, cables, etc.
<b>Control System</b>	A control system comprises several interconnected control components placed on the market as a single functional unit.
<b>Device</b>	A device is a finished product with a defined function, intended for users and placed on the market as an individual piece of merchandise.
<b>Electrical Equipment</b>	Electrical equipment encompasses all devices used to generate, convert, transmit, distribute or apply electrical energy, such as electric motors, transformers, switching devices, cables, lines, power-consuming devices, circuit board assemblies, plug-in units, control cabinets, etc.
<b>Electric Drive System</b>	An electric drive system comprises all components from mains supply to motor shaft; this includes, for example, electric motor(s), motor encoder(s), supply units and drive controllers, as well as auxiliary and additional components, such as mains filter, mains choke and the corresponding lines and cables.
<b>Installation</b>	An installation consists of several devices or systems interconnected for a defined purpose and on a defined site which, however, are not intended to be placed on the market as a single functional unit.
<b>Machine</b>	A machine is the entirety of interconnected parts or units at least one of which is movable. Thus, a machine consists of the appropriate machine drive elements, as well as control and power circuits, which have been assembled for a specific application. A machine is, for example, intended for processing, treatment, movement or packaging of a material. The term "machine" also covers a combination of machines which are arranged and controlled in such a way that they function as a unified whole.
<b>Manufacturer</b>	The manufacturer is an individual or legal entity bearing responsibility for the design and manufacture of a product which is placed on the market in the individual's or legal entity's name. The manufacturer can use finished products, finished parts or finished elements, or contract out work to subcontractors. However, the manufacturer must always have overall control and possess the required authority to take responsibility for the product.
<b>Product</b>	Examples of a product: Device, component, part, system, software, firmware, among other things.
<b>Project Planning Manual</b>	A project planning manual is part of the application documentation used to support the sizing and planning of systems, machines or installations.
<b>Qualified Persons</b>	In terms of this application documentation, qualified persons are those persons who are familiar with the installation, mounting, commissioning and operation of the components of the electric drive and control system, as well as with the hazards this implies, and who possess the qualifications their work

## Safety Instructions for Electric Drives and Controls

requires. To comply with these qualifications, it is necessary, among other things,

- 1) to be trained, instructed or authorized to switch electric circuits and devices safely on and off, to ground them and to mark them
- 2) to be trained or instructed to maintain and use adequate safety equipment
- 3) to attend a course of instruction in first aid

**User** A user is a person installing, commissioning or using a product which has been placed on the market.

## 3.2 General Information

### 3.2.1 Using the Safety Instructions and Passing Them on to Others

Do not attempt to install and operate the components of the electric drive and control system without first reading all documentation provided with the product. Read and understand these safety instructions and all user documentation prior to working with these components. If you do not have the user documentation for the components, contact your responsible Rexroth sales partner. Ask for these documents to be sent immediately to the person or persons responsible for the safe operation of the components.

If the component is resold, rented and/or passed on to others in any other form, these safety instructions must be delivered with the component in the official language of the user's country.

**Improper use of these components, failure to follow the safety instructions in this document or tampering with the product, including disabling of safety devices, could result in property damage, injury, electric shock or even death.**

### 3.2.2 Requirements for Safe Use

Read the following instructions before initial commissioning of the components of the electric drive and control system in order to eliminate the risk of injury and/or property damage. You must follow these safety instructions.

- Rexroth is not liable for damages resulting from failure to observe the safety instructions.
- Read the operating, maintenance and safety instructions in your language before commissioning. If you find that you cannot completely understand the application documentation in the available language, please ask your supplier to clarify.
- Proper and correct transport, storage, mounting and installation, as well as care in operation and maintenance, are prerequisites for optimal and safe operation of the component.
- Only qualified persons may work with components of the electric drive and control system or within its proximity.
- Only use accessories and spare parts approved by Rexroth.
- Follow the safety regulations and requirements of the country in which the components of the electric drive and control system are operated.
- Only use the components of the electric drive and control system in the manner that is defined as appropriate. See chapter "Appropriate Use".
- The ambient and operating conditions given in the available application documentation must be observed.
- Applications for functional safety are only allowed if clearly and explicitly specified in the application documentation "Integrated Safety Technolo-

## Safety Instructions for Electric Drives and Controls

gy". If this is not the case, they are excluded. Functional safety is a safety concept in which measures of risk reduction for personal safety depend on electrical, electronic or programmable control systems.

- The information given in the application documentation with regard to the use of the delivered components contains only examples of applications and suggestions.

The machine and installation manufacturers must

- make sure that the delivered components are suited for their individual application and check the information given in this application documentation with regard to the use of the components,
- make sure that their individual application complies with the applicable safety regulations and standards and carry out the required measures, modifications and complements.
- Commissioning of the delivered components is only allowed once it is sure that the machine or installation in which the components are installed complies with the national regulations, safety specifications and standards of the application.
- Operation is only allowed if the national EMC regulations for the application are met.
- The instructions for installation in accordance with EMC requirements can be found in the section on EMC in the respective application documentation.

The machine or installation manufacturer is responsible for compliance with the limit values as prescribed in the national regulations.

- The technical data, connection and installation conditions of the components are specified in the respective application documentations and must be followed at all times.

### *National regulations which the user must take into account*

- European countries: In accordance with European EN standards
- United States of America (USA):
  - National Electrical Code (NEC)
  - National Electrical Manufacturers Association (NEMA), as well as local engineering regulations
  - Regulations of the National Fire Protection Association (NFPA)
- Canada: Canadian Standards Association (CSA)
- Other countries:
  - International Organization for Standardization (ISO)
  - International Electrotechnical Commission (IEC)

## 3.2.3 Hazards by Improper Use

- High electrical voltage and high working current! Danger to life or serious injury by electric shock!
- High electrical voltage by incorrect connection! Danger to life or injury by electric shock!
- Dangerous movements! Danger to life, serious injury or property damage by unintended motor movements!
- Health hazard for persons with heart pacemakers, metal implants and hearing aids in proximity to electric drive systems!

## Safety Instructions for Electric Drives and Controls

- Risk of burns by hot housing surfaces!
- Risk of injury by improper handling! Injury by crushing, shearing, cutting, hitting!
- Risk of injury by improper handling of batteries!
- Risk of injury by improper handling of pressurized lines!

### 3.3 Instructions with Regard to Specific Dangers

#### 3.3.1 Protection Against Contact With Electrical Parts and Housings



---

This section concerns components of the electric drive and control system with voltages of **more than 50 volts**.

---

Contact with parts conducting voltages above 50 volts can cause personal danger and electric shock. When operating components of the electric drive and control system, it is unavoidable that some parts of these components conduct dangerous voltage.

**High electrical voltage! Danger to life, risk of injury by electric shock or serious injury!**

- Only qualified persons are allowed to operate, maintain and/or repair the components of the electric drive and control system.
- Follow the general installation and safety regulations when working on power installations.
- Before switching on, the equipment grounding conductor must have been permanently connected to all electric components in accordance with the connection diagram.
- Even for brief measurements or tests, operation is only allowed if the equipment grounding conductor has been permanently connected to the points of the components provided for this purpose.
- Before accessing electrical parts with voltage potentials higher than 50 V, you must disconnect electric components from the mains or from the power supply unit. Secure the electric component from reconnection.
- With electric components, observe the following aspects:
  - Always wait **30 minutes** after switching off power to allow live capacitors to discharge before accessing an electric component. Measure the electrical voltage of live parts before beginning to work to make sure that the equipment is safe to touch.
- Install the covers and guards provided for this purpose before switching on.
- Never touch electrical connection points of the components while power is turned on.
- Do not remove or plug in connectors when the component has been powered.
- Under specific conditions, electric drive systems can be operated at mains protected by residual-current-operated circuit-breakers sensitive to universal current (RCDs/RCMs).

Safety Instructions for Electric Drives and Controls

- Secure built-in devices from penetrating foreign objects and water, as well as from direct contact, by providing an external housing, for example a control cabinet.

**High housing voltage and high leakage current! Danger to life, risk of injury by electric shock!**

- Before switching on and before commissioning, ground or connect the components of the electric drive and control system to the equipment grounding conductor at the grounding points.
- Connect the equipment grounding conductor of the components of the electric drive and control system permanently to the main power supply at all times. The leakage current is greater than 3.5 mA.
- Establish an equipment grounding connection with a minimum cross section according to the table below. With an outer conductor cross section smaller than 10 mm<sup>2</sup> (8 AWG), the alternative connection of two equipment grounding conductors is allowed, each having the same cross section as the outer conductors.

Cross section outer conductor	Minimum cross section equipment grounding conductor Leakage current ≥ 3.5 mA	
	1 equipment grounding conductor	2 equipment grounding conductors
1,5 mm <sup>2</sup> (AWG 16)	10 mm <sup>2</sup> (AWG 8)	2 × 1,5 mm <sup>2</sup> (AWG 16)
2,5 mm <sup>2</sup> (AWG 14)		2 × 2,5 mm <sup>2</sup> (AWG 14)
4 mm <sup>2</sup> (AWG 12)		2 × 4 mm <sup>2</sup> (AWG 12)
6 mm <sup>2</sup> (AWG 10)		2 × 6 mm <sup>2</sup> (AWG 10)
10 mm <sup>2</sup> (AWG 8)		-
16 mm <sup>2</sup> (AWG 6)	16 mm <sup>2</sup> (AWG 6)	-
25 mm <sup>2</sup> (AWG 4)		-
35 mm <sup>2</sup> (AWG 2)		-
50 mm <sup>2</sup> (AWG 1/0)	25 mm <sup>2</sup> (AWG 4)	-
70 mm <sup>2</sup> (AWG 2/0)	35 mm <sup>2</sup> (AWG 2)	-
...	...	...

Fig.3-1: Minimum Cross Section of the Equipment Grounding Connection

### 3.3.2 Protective Extra-Low Voltage as Protection Against Electric Shock

Protective extra-low voltage is used to allow connecting devices with basic insulation to extra-low voltage circuits.

On components of an electric drive and control system provided by Rexroth, all connections and terminals with voltages between 5 and 50 volts are PELV ("Protective Extra-Low Voltage") systems. It is allowed to connect devices equipped with basic insulation (such as programming devices, PCs, notebooks, display units) to these connections.

## Safety Instructions for Electric Drives and Controls

**Danger to life, risk of injury by electric shock! High electrical voltage by incorrect connection!**

If extra-low voltage circuits of devices containing voltages and circuits of more than 50 volts (e.g., the mains connection) are connected to Rexroth products, the connected extra-low voltage circuits must comply with the requirements for PELV ("Protective Extra-Low Voltage").

### 3.3.3 Protection Against Dangerous Movements

Dangerous movements can be caused by faulty control of connected motors. Some common examples are:

- Improper or wrong wiring or cable connection
- Operator errors
- Wrong input of parameters before commissioning
- Malfunction of sensors and encoders
- Defective components
- Software or firmware errors

These errors can occur immediately after equipment is switched on or even after an unspecified time of trouble-free operation.

The monitoring functions in the components of the electric drive and control system will normally be sufficient to avoid malfunction in the connected drives. Regarding personal safety, especially the danger of injury and/or property damage, this alone cannot be relied upon to ensure complete safety. Until the integrated monitoring functions become effective, it must be assumed in any case that faulty drive movements will occur. The extent of faulty drive movements depends upon the type of control and the state of operation.

**Dangerous movements! Danger to life, risk of injury, serious injury or property damage!**

A **risk assessment** must be prepared for the installation or machine, with its specific conditions, in which the components of the electric drive and control system are installed.

As a result of the risk assessment, the user must provide for monitoring functions and higher-level measures on the installation side for personal safety. The safety regulations applicable to the installation or machine must be taken into consideration. Unintended machine movements or other malfunctions are possible if safety devices are disabled, bypassed or not activated.

**To avoid accidents, injury and/or property damage:**

- Keep free and clear of the machine's range of motion and moving machine parts. Prevent personnel from accidentally entering the machine's range of motion by using, for example:
  - Safety fences
  - Safety guards
  - Protective coverings
  - Light barriers
- Make sure the safety fences and protective coverings are strong enough to resist maximum possible kinetic energy.
- Mount emergency stopping switches in the immediate reach of the operator. Before commissioning, verify that the emergency stopping equip-



## Safety Instructions for Electric Drives and Controls

ment works. Do not operate the machine if the emergency stopping switch is not working.

- Prevent unintended start-up. Isolate the drive power connection by means of OFF switches/OFF buttons or use a safe starting lockout.
- Make sure that the drives are brought to safe standstill before accessing or entering the danger zone.
- Additionally secure vertical axes against falling or dropping after switching off the motor power by, for example,
  - mechanically securing the vertical axes,
  - adding an external braking/arrester/clamping mechanism or
  - ensuring sufficient counterbalancing of the vertical axes.
- The standard equipment **motor holding brake** or an external holding brake controlled by the drive controller is **not sufficient to guarantee personal safety!**
- Disconnect electrical power to the components of the electric drive and control system using the master switch and secure them from reconnection ("lock out") for:
  - Maintenance and repair work
  - Cleaning of equipment
  - Long periods of discontinued equipment use
- Prevent the operation of high-frequency, remote control and radio equipment near components of the electric drive and control system and their supply leads. If the use of these devices cannot be avoided, check the machine or installation, at initial commissioning of the electric drive and control system, for possible malfunctions when operating such high-frequency, remote control and radio equipment in its possible positions of normal use. It might possibly be necessary to perform a special electromagnetic compatibility (EMC) test.

### 3.3.4 Protection Against Magnetic and Electromagnetic Fields During Operation and Mounting

Magnetic and electromagnetic fields generated by current-carrying conductors or permanent magnets of electric motors represent a serious danger to persons with heart pacemakers, metal implants and hearing aids.

**Health hazard for persons with heart pacemakers, metal implants and hearing aids in proximity to electric components!**

- Persons with heart pacemakers and metal implants are not allowed to enter the following areas:
  - Areas in which components of the electric drive and control systems are mounted, commissioned and operated.
  - Areas in which parts of motors with permanent magnets are stored, repaired or mounted.
- If it is necessary for somebody with a heart pacemaker to enter such an area, a doctor must be consulted prior to doing so. The noise immunity of implanted heart pacemakers differs so greatly that no general rules can be given.
- Those with metal implants or metal pieces, as well as with hearing aids, must consult a doctor before they enter the areas described above.

## Safety Instructions for Electric Drives and Controls

### 3.3.5 Protection Against Contact With Hot Parts

**Hot surfaces of components of the electric drive and control system. Risk of burns!**

- Do not touch hot surfaces of, for example, braking resistors, heat sinks, supply units and drive controllers, motors, windings and laminated cores!
- According to the operating conditions, temperatures of the surfaces can be **higher than 60 °C (140 °F)** during or after operation.
- Before touching motors after having switched them off, let them cool down for a sufficient period of time. Cooling down can require **up to 140 minutes!** The time required for cooling down is approximately five times the thermal time constant specified in the technical data.
- After switching chokes, supply units and drive controllers off, wait **15 minutes** to allow them to cool down before touching them.
- Wear safety gloves or do not work at hot surfaces.
- For certain applications, and in accordance with the respective safety regulations, the manufacturer of the machine or installation must take measures to avoid injuries caused by burns in the final application. These measures can be, for example: Warnings at the machine or installation, guards (shieldings or barriers) or safety instructions in the application documentation.

### 3.3.6 Protection During Handling and Mounting

**Risk of injury by improper handling! Injury by crushing, shearing, cutting, hitting!**

- Observe the relevant statutory regulations of accident prevention.
- Use suitable equipment for mounting and transport.
- Avoid jamming and crushing by appropriate measures.
- Always use suitable tools. Use special tools if specified.
- Use lifting equipment and tools in the correct manner.
- Use suitable protective equipment (hard hat, safety goggles, safety shoes, safety gloves, for example).
- Do not stand under hanging loads.
- Immediately clean up any spilled liquids from the floor due to the risk of falling!

### 3.3.7 Battery Safety

Batteries consist of active chemicals in a solid housing. Therefore, improper handling can cause injury or property damage.

**Risk of injury by improper handling!**

- Do not attempt to reactivate low batteries by heating or other methods (risk of explosion and cauterization).
- Do not attempt to recharge the batteries as this may cause leakage or explosion.
- Do not throw batteries into open flames.
- Do not dismantle batteries.

## Safety Instructions for Electric Drives and Controls

- When replacing the battery/batteries, do not damage the electrical parts installed in the devices.
- Only use the battery types specified for the product.



Environmental protection and disposal! The batteries contained in the product are considered dangerous goods during land, air, and sea transport (risk of explosion) in the sense of the legal regulations. Dispose of used batteries separately from other waste. Observe the national regulations of your country.

### 3.3.8 Protection Against Pressurized Systems

According to the information given in the Project Planning Manuals, motors and components cooled with liquids and compressed air can be partially supplied with externally fed, pressurized media, such as compressed air, hydraulics oil, cooling liquids and cooling lubricants. Improper handling of the connected supply systems, supply lines or connections can cause injuries or property damage.

#### **Risk of injury by improper handling of pressurized lines!**

- Do not attempt to disconnect, open or cut pressurized lines (risk of explosion).
- Observe the respective manufacturer's operating instructions.
- Before dismantling lines, relieve pressure and empty medium.
- Use suitable protective equipment (safety goggles, safety shoes, safety gloves, for example).
- Immediately clean up any spilled liquids from the floor due to the risk of falling!



Environmental protection and disposal! The agents (e.g., fluids) used to operate the product might not be environmentally friendly. Dispose of agents harmful to the environment separately from other waste. Observe the national regulations of your country.

## 3.4 Explanation of Signal Words and the Safety Alert Symbol

The Safety Instructions in the available application documentation contain specific signal words (DANGER, WARNING, CAUTION or NOTICE) and, where required, a safety alert symbol (in accordance with ANSI Z535.6-2011).

The signal word is meant to draw the reader's attention to the safety instruction and identifies the hazard severity.

The safety alert symbol (a triangle with an exclamation point), which precedes the signal words DANGER, WARNING and CAUTION, is used to alert the reader to personal injury hazards.

 **DANGER**

In case of non-compliance with this safety instruction, death or serious injury will occur.

## Safety Instructions for Electric Drives and Controls

---

**⚠ WARNING**

In case of non-compliance with this safety instruction, death or serious injury **could** occur.

---

---

**⚠ CAUTION**

In case of non-compliance with this safety instruction, minor or moderate injury could occur.

---

---

***NOTICE***

In case of non-compliance with this safety instruction, property damage could occur.

---

## 4 Combining the Individual Components

### 4.1 Documentations

See index entry "Documentation".

### 4.2 Brief Description of the Individual Components

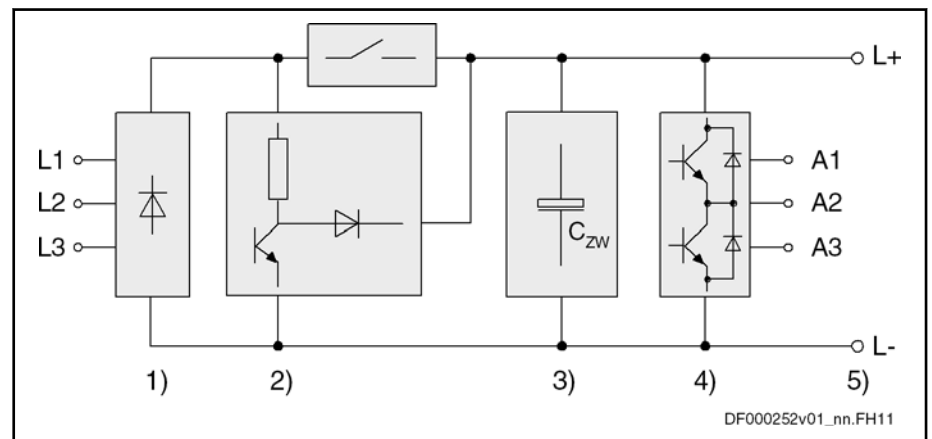
#### 4.2.1 HCS01 - Brief Description and Design

**Brief Description** The compact converters HCS01 are part of the Rexroth IndraDrive Cs product range and are used to operate Rexroth IndraDyn motors or third-party motors.

HCS01 types:

- **02:** Mains connection voltage 3 AC 110 ... 230 V
- **03:** Mains connection voltage 3 AC 200 ... 500 V

Design, Block Diagram



- 1) Mains input with rectifier
- 2) Braking resistor circuit; charging current limitation
- 3) DC bus capacitors
- 4) Inverter stage with output to motor
- 5) DC bus connection

Fig.4-1: Block Diagram HCS01

### 4.3 Configuring the Drive System

#### 4.3.1 Converter

The selection of the appropriate converter depends on

- Mains type
- Mains voltage
- Mains supply (1-phase or 3-phase)

Combining the Individual Components

**Mains Type and Mains Voltage**

IT mains Mains grounded via outer conductor		TN-S mains TN-C mains TT mains
Mains voltage ≤ 3 AC 230V	Mains voltage 3 AC 230 ... 500 V	To be noticed with 1-phase mains voltage: See table "Mains Supply"
No transformer required	Isolating transformer with grounded neutral point required	
HCS01.1E-W0003-A-02 HCS01.1E-W0006-A-02 HCS01.1E-W0009-A-02 HCS01.1E-W0013-A-02 HCS01.1E-W0018-A-02 HCS01.1E-W0005-A-03 HCS01.1E-W0008-A-03 HCS01.1E-W0018-A-03 HCS01.1E-W0028-A-03 HCS01.1E-W0054-A-03	HCS01.1E-W0005-A-03 HCS01.1E-W0008-A-03 HCS01.1E-W0018-A-03 HCS01.1E-W0028-A-03 HCS01.1E-W0054-A-03	HCS01.1E-W0003-A-02 HCS01.1E-W0006-A-02 HCS01.1E-W0009-A-02 HCS01.1E-W0013-A-02 HCS01.1E-W0018-A-02 HCS01.1E-W0005-A-03 HCS01.1E-W0008-A-03 HCS01.1E-W0018-A-03 HCS01.1E-W0028-A-03 HCS01.1E-W0054-A-03

Fig.4-2: Mains Type and Mains Voltage

**Mains Supply**

1-phase <sup>1)</sup>	3-phase	
1 AC 110 ... 230 V	3 AC 200 ... 500 V	
	Autotransformer	-
	3 AC 110 ... 230 V	-
HCS01.1E-W0003-A-02 HCS01.1E-W0006-A-02 HCS01.1E-W0009-A-02 HCS01.1E-W0013-A-02 HCS01.1E-W0018-A-02	HCS01.1E-W0005-A-03 HCS01.1E-W0008-A-03 HCS01.1E-W0018-A-03 HCS01.1E-W0028-A-03 HCS01.1E-W0054-A-03	
Mains supply		
Individual supply	Individual supply	
	Group supply	
	Central supply	

1) With 1-phase mains supply, you can connect the mains supply line to connector X3 at L1, L2 or L3

Fig.4-3: Mains Supply

**DC Bus Coupling**

If energy compensation is to be available between the individual devices, the DC buses of these devices must be coupled. DC bus coupling restricts the selection of HCS01 converters. For detailed information on DC bus coupling, see this documentation under the index entry "DC bus → Coupling".

### 4.3.2 Functional Equipment

#### HCS01 - ECONOMY vs. BASIC vs. ADVANCED

Functional equipment	HCS01.1E-W00**-A-0*...		
	...E-S3 (ECONOMY)	...B-ET (BASIC)	...A-CC (ADVANCED)
Communication	sercos III	Multi-Ethernet (incl. sercos III)	sercos III master (cross communication)
		Alternative interface <sup>1)</sup> (PROFIBUS DP, CANopen) <sup>2)</sup>	Alternative interface <sup>1)</sup> (Multi-Ethernet, PROFIBUS DP, CANopen)
Encoder evaluation	Multi-encoder interface	Multi-encoder interface	Multi-encoder interface
		Optional multi-encoder interface <sup>1)</sup>	Optional multi-encoder interface <sup>1)</sup>
Encoder emulation	–	✓	✓
Integrated Safety Technology	L3 (Safe Torque Off) L4 (Safe Torque Off, Safe Brake Control)	L3 (Safe Torque Off) L4 (Safe Torque Off, Safe Brake Control)	L3 (Safe Torque Off) L4 (Safe Torque Off, Safe Brake Control)
		Safe Motion <sup>3)</sup>	Safe Motion <sup>3)</sup>
IndraMotion	–	MLD-S <sup>4)</sup>	MLD-S <sup>4)</sup> MLD-M <sup>4)</sup>
Freely configurable digital inputs/outputs (incl. probe)	✓	✓	✓
Analog input	✓	✓	✓
Operator terminal			
• With programming module function	✓	✓	✓
• With slot for microSD memory card	–	–	✓

- 1) **One** additional interface per converter for communication or encoder evaluation
  - 2) If you use "PROFIBUS DP" or "CANopen" communication, the Multi-Ethernet function is no longer available. However, you can still use the connection points X24 and X25 as engineering interfaces.
  - 3) In preparation
  - 4) Firmware version MPx-17 or higher
- Fig.4-4: *ECONOMY vs. BASIC vs. ADVANCED*

Combining the Individual Components

### 4.3.3 Firmware

#### Firmware and Device Types

Firmware	Assigned device type
FWA-INDRV*-MPE-16VRS-D5-x-NNN-NN FWA-INDRV*-MPE-17VRS-D5-x-NNN-NN	HCS01.1E-W00**-A-0*-E-S3 (ECONOMY)
FWA-INDRV*-MPB-16VRS-D5-x-xxx-xx FWA-INDRV*-MPB-17VRS-D5-x-xxx-xx	HCS01.1E-W00**-A-0*-B-ET (BASIC)
FWA-INDRV*-MPC-17VRS-D5-x-xxx-xx	HCS01.1E-W00**-A-0*-A-CC (ADVANCED)

Fig.4-5: Device Types and Firmware

#### Firmware-Types

##### Structure of the Firmware Type Designation

The type designation of the firmware consists of the following type code elements:

Firmware	Base package of variant ...	Version	Release	Language	Characteristic Open-loop / Closed-loop	Alternative expansion packages	Additive expansion packages
FWA-INDRV*-	MPE-	16	VRS-	D5-	x-	NNN-	NN
		17					
FWA-INDRV*-	MPB-	16	VRS-	D5-	x-	xxx-	xx
		17					
FWA-INDRV*-	MPC-	17	VRS-	D5-	x-	xxx-	xx

Fig.4-6: Basic Structure of the Firmware Type Designation

##### Function-Specific Abbreviations in Type Designation of Firmware

##### **Base package** (application and performance)

- **MPE** → Firmware with ECONOMY performance and ECONOMY functionality
- **MPB** → Firmware with BASIC performance and BASIC functionality
- **MPC** → Firmware with ADVANCED performance and ADVANCED functionality

##### **Characteristic** (open-loop/closed-loop)

- **0** → Open-loop
- **1** → Closed-loop

##### **Alternative expansion packages**

- **NNN** → Without alternative expansion package
- **SRV** → Functional package "Servo function"
- **SNC** → Functional package "Synchronization"
- **MSP** → Functional package "Main spindle"
- **ALL** → All alternative expansion packages



Combining the Individual Components

**Additive expansion packages**

- **NN** → Without additive expansion package
- **MA** → IndraMotion MLD Advanced (for MPB-, MPC firmware)
- **ML** → IndraMotion MLD for free programming; incl. use of technology functions (for MPB-, MPC firmware)



The Rexroth sales representative in charge will help you with the current state of available firmware types.



For detailed information, see the Functional Description of the firmware used (index entry "Overview of functions/functional packages").

**Firmware Variants**

**MPx-17VRS**

Firmware variant →		MPE <sup>1)</sup>		MPB		MPC	
Firmware characteristic →		OL	CL	OL	CL	OL	CL
Base package	Basic functions	■	■	■	■	■	■
	Base package "open-loop"	■	■	■	■	■	■
	Base package "closed-loop"	–	■	–	■	–	■
Alternative functional packages	Servo function	–	–	–	■	–	■
	Synchronization	–	–	■	■	■	■
	Main spindle	–	2)	■	■	■	■
Additive functional package	IndraMotion MLD	–	–	■	■	■	■

MPE Single-axis firmware with Economy performance

MPB Single-axis firmware with Basic performance

MPC Single-axis firmware with Advanced performance

OL Open-loop characteristic

CL Closed-loop characteristic

1) For Economy firmware MPE, there is only one expanded base package available

2) The function "parameter set switching" is contained in the expanded base package

*Fig. 4-7: Functional Packages Depending on Hardware and Firmware Variant*

**4.3.4 Motors**

**IndraDyn**

The table below contains an overview of the combinations of MSM motors with HCS01 converters.

## Combining the Individual Components

Motor	HCS01									
	Size 1					Size 2		Size 3		
	3 AC 110 ... 230 V					3 AC 200 ... 500 V				
	W0003	W0006	W0009	W0013	W0018	W0005	W0008	W0018	W0028	W0054
MSM019A	■	□	□	□	-	T	T	-	-	-
MSM019B	■	□	□	□	-	T	T	-	-	-
MSM031B	×	■	□	□	-	T	T	-	-	-
MSM031C	-	×	■	□	-	T	T	-	-	-
MSM041B	-	-	×	■	□	-	T	T	-	-

- Optimum combination
- Allowed combination (converter overdimensioned)
- × Allowed combination (motor overdimensioned)
- T Allowed combination (transformer required, as operation of MSM motors only allowed with a maximum of 3 AC 230 V)
- Combination not allowed

Fig. 4-8: Combination of HCS01 Converters and MSM Motors

## Third-Party Motors

## General Information on Third-Party Motors

## Why Use Third-Party Motors at Rexroth IndraDrive Cs Controllers?

Today, machine axes are mainly moved with electric drives. Motors of standard design are used in most cases, as this is the most cost-efficient solution.

## Special Requirements

Due to special requirements at machine axes, constructional or safety-related aspects, it may be necessary for the machine manufacturer to use a motor construction diverging from the standard.

## Motor Design not Included in Product Range

For these cases, there is the demand on drive suppliers to realize drives with motors that are not included in their own product ranges due to the special design.

## Check Before Using Third-Party Motors

At drive controllers of the Rexroth IndraDrive Cs range, it is possible to use third-party motors. For this purpose, check whether the third-party motor complies with the requirements of use.

The Functional Description of the firmware contains forms for motor data. Procure the completed forms for the performance test of a third-party motor.

## Which are the Important Directives?

In accordance with the legal regulations (EU Directive EMC 89/336/EEC and the German EMC laws), installations and machines must be designed and built in accordance with the present state-of-the-art of standardization.

In order to comply with the machine directives regarding "electromagnetic compatibility (EMC)", a conformity test of the drive system (motor with controller and connection design) must be carried out. The machine manufacturer must guarantee the test of the drive system and compliance with the directives.

## Third-Party Motors to be Controlled

## Motor Types

The following motor types can be controlled:

- Asynchronous motors, rotary
- Asynchronous motors, linear
- Synchronous motors, rotary

## Combining the Individual Components

- Synchronous motors, linear

These motors can be operated within the scope of the technical data of the selected Rexroth IndraDrive Cs controller. If motors have been provided with a holding brake, it should be controlled via the drive controller. Make sure that the relevant technical data of the motor holding brake are complying with those of the holding brake output!



For third-party motors Rexroth, as a matter of principle, does not assume the guarantee for the power data at the motor shaft!

### Synchronous Motors

For synchronous motors with motor encoder, the commutation offset must be set during commissioning. The drive firmware provides several methods for determining this offset so that it is possible to determine the value for different motor characteristics.



Observe the restrictions in conjunction with the commutation offset determination when using synchronous motors! See firmware documentation, chapter "Drive Control", "Commutation Setting".

Possibly available reluctance property cannot be used for synchronous third-party motors! For third-party motors, it is impossible to determine fail-safe motor parameter values for using the reluctance property. The respective bit of "P-0-4014, Type of construction of motor" therefore mustn't be set!

## Requirements on Third-Party Motors

### General Information

For successful and fail-safe use of a third-party motor, check

- whether the third-party motor to be controlled satisfies the voltage loads
- which drive controller is suitable due to the motor torques to be delivered
- whether the third-party motor has the required minimum inductance
- whether the motor can be protected against inadmissible temperature rise in the case of overload (temperature evaluation)
- whether the mounted position measuring system can be evaluated by the drive controller or which position measuring system can be selected for kit motors

### Voltage Load of the Third-Party Motor

The voltage load of the insulation system of a motor occurring in practical application is mainly influenced by the following characteristics:

- The output variables of the drive controller which is used (feed the transmission distance)
- Cable parameters depending on cable design and length (determine the properties of the transmission distance, such as the attenuation)
- The motor design regarding capacitive and inductive properties (form the end of the transmission distance)

As a result of the variables, the insulation system of the third-party motor, as regards voltage, is loaded by the following values:

- Periodic peak voltage  $U_{pp}$  and
- Voltage change  $dv/dt$

## Combining the Individual Components

The occurring periodic peak voltages at the motor terminals are caused by reflections at the motor cable end. The insulation of the motor is thereby loaded with a higher peak voltage than the one occurring at the output of the power section.



Determine the occurring voltage load at the **terminals** of the third-party motor in the application with all involved components.

## Using the HMF Motor Filter

Use voltage-reducing components (e.g. motor filter HMF), if one of the following criteria applies:

- Allowed voltage change (dv/dt) of third-party motor: **< 5 kV/μs**
- **With mains voltage 3 AC 230 V ... 500 V:**  
Allowed periodic peak voltage (crest value) of third-party motor between phase-phase and phase-housing: **< 1,500 V**
- **With mains voltage up to 3 AC 230 V:**  
Allowed periodic peak voltage (crest value) of third-party motor between phase-phase and phase-housing: **< 850 V**  
(To operate motors which do not require any voltage-reducing components at this mains voltage, the switch-on threshold of the braking resistor must be reduced to DC 430 V for devices with the mains connection voltage identifier "03"!)
- The voltage change (dv/dt) and periodic peak voltage ( $U_{pp}$ ) at the motor terminals are influenced by the length and the electrical properties of the motor cable:
  - The longer the motor cable, the higher the degree of voltage overshoot (periodic peak voltage) at the motor-side cable end. With a cable length of approx. 25 m and more, the maximum periodic peak voltage occurs. Further voltage increase is not to be expected even with longer cables.
  - With cable lengths of less than 15 m, the periodic peak voltage is reduced, depending on the length and as compared to the specified maximum value, down to the DC bus voltage value.



Apart from the nominal current  $I_N$ , especially take the maximum allowed switching frequency of the power output stage ( $f_s$ ) into account with which the motor filter HMF may be operated.

Verify the success of the voltage-reducing measures by measuring the voltage at the motor terminals. Use an isolated measuring device!

### Minimum Inductance of Third-Party Motor

Depending on the drive controller used, the motor has to have a minimum value for inductance. The actually available inductance of a motor can be measured directly between two motor terminals by means of an inductance measuring bridge. The measurement has to be made for a complete motor wired for normal operation but not yet connected. During the measurement, one motor terminal remains open! For asynchronous motors, the measured value can only be used if the rotor doesn't have closed slots!

Combining the Individual Components

Drive controller	Minimum required motor inductance
HCS01 with 3 × AC 230 V	$L_{U-V} = 60 \times 4 / (\sqrt{2} \times I_{Typ} \times f_s)$ (in mH)
HCS01 with 3 × AC 400 V	$L_{U-V} = 80 \times 4 / (\sqrt{2} \times I_{Typ} \times f_s)$ (in mH)
HCS01 with 3 × AC 480 V	$L_{U-V} = 116 \times 4 / (\sqrt{2} \times I_{Typ} \times f_s)$ (in mH)

$I_{Typ}$  Maximum current of drive controller according to type code (rms value)  
 $f_s$  Desired switching frequency in kHz  
*Fig.4-9: Minimum Inductances Depending on Drive Controller Data, Supply Units and Supply Voltage*

Install a three-phase choke in the motor feed wire, if the inductance of the third-party motor is smaller than indicated in the table above. This choke has to increase the inductance that can be measured between two motor terminals to the minimum value.



When the inductance is measured, different inductance values can be determined at different rotor positions within one pole pair distance of the motor. The average value is relevant for the check of the minimum value.  
 Correct values can only be determined when the motor is in standstill!

Available third-party motor	Planned third-party motor
<p style="text-align: right; font-size: small;">DA000111v01_nn.fh11</p>	<p>Calculate the leakage inductance (asynchronous motor) or inductance (synchronous motor) of the third-party motor by means of the single-phase equivalent circuit diagram (manufacturer's specification!).                  Determine choke by means of calculation, if necessary.                  It is recommended that you contact Rexroth!</p>
<p><math>L_{Dr} = 0.5 \times (L_{U-Vmin} - L_{U-V})</math> (inductance measurement with 1 kHz)  <i>Fig.4-10: Mounting of 3 × L<sub>Dr</sub> (Three-Phase Choke)</i></p>	
<p>Requirements on the choke:</p> <ul style="list-style-type: none"> <li><math>I_{n,Dr} \geq I_{n,Mot}</math> The rated current of the choke has to be greater than or equal to the rated motor current.</li> <li>Depending on the maximum speed, the choke is loaded with the respective output frequency and the PWM frequency of the drive controller.</li> <li>The insulation class has to correspond at least to that of the motor or has to be sized for higher temperatures.</li> <li>The voltage load of the choke depends on the drive controller used.</li> </ul>	

Fig.4-11: Data for Possibly Required Choke

**Temperature Evaluation of Third-Party Motor**

Only operate such motors with incorporated temperature sensor at Rexroth IndraDrive Cs controllers so that the motor can be thermally monitored by the

## Combining the Individual Components

drive controller and protected against destruction by too high temperature rise (see "P-0-0512, Temperature sensor").

When, in exceptional cases, you would like to operate third-party motors without temperature sensor at Rexroth IndraDrive Cs controllers, you must determine the thermal time constants of motor housing (P-0-4035) and motor winding (P-0-4034, P-0-4037). By means of its temperature model, the firmware can correctly reflect the cooling situation of the motor.



In case the motor housing or fan is dirty, this worsens the cooling situation of the motor and protection against thermal overload is therefore insufficient!

## Requirements on the Encoder of the Third-Party Motor

### Motor Encoder of Asynchronous Third-Party Motor

Asynchronous motors can also be controlled by Rexroth IndraDrive Cs controllers in "open-loop" operation (without motor encoder). In "closed-loop" operation (with motor encoder), a relative measuring system is sufficient for asynchronous motors.

### Motor Encoder of Synchronous Third-Party Motor

For fail-safe drives with synchronous third-party motors at Rexroth IndraDrive Cs controllers, the following possible combinations or restrictions have to be taken into account when selecting the measuring system:

Drive range	Motor measuring system	Synchronous third-party motor
Rexroth IndraDrive Cs	Absolute	■
	Relative	□

- Advantageous combination
- Combination is possible (restrictions specific to application), commissioning may be more complicated!

Fig.4-12: Possible Combinations of Synchronous Third-Party Motor and Motor Measuring System



The drive controller can evaluate measuring systems as motor encoder when they are contained in "P-0-0074, Encoder type 1 (motor encoder)".

For information on absolute and relative measuring systems, see section "Measuring Systems" of firmware documentation!

## Motor Encoder Resolver - Notes on Selection

Resolvers must first be checked as to whether they are suited as motor encoders. To check whether they can be evaluated by the drive controllers, the following resolver data are required:

- Data of resolver system to be compared must be available at 8 kHz
- Ratio
- Current consumption
- DC resistance of stator
- Number of poles
- Phase shift

## Combining the Individual Components

By means of the resolver data, check whether the supply voltage of the encoder interface and the signal levels of the encoder tracks are sufficient.

### Notes on Selection and Commissioning

#### Selecting the Controller as Regards Continuous Current

The drive controller required for the respective motor is determined by comparing the motor data to the device data.



The continuous current of the drive controller should be greater than the continuous current of the motor.

The continuous power of the drive controller must be greater than the required average power!

---

#### Selecting the Connection Technique

For the available power cables and encoder cables, see documentation "Rexroth Connection Cables IndraDrive and IndraDyn".

### Notes on Commissioning



For further information, notes on commissioning and supporting documents (e.g., forms for entering the required data) see firmware documentation.

---

## 4.3.5 Cables

### Motor Power Cables

#### Selection

How to select a suitable motor power cable:

See documentation "Rexroth Connection Cables IndraDrive and IndraDyn" (R911322949).

Combining the Individual Components

**Allowed Cable Lengths**

Allowed Cable Lengths at Ambient Temperature  $T_{a\_work} \leq 40 \text{ }^\circ\text{C}$  according to EN 60 204:

HCS01.1E-...-A-02	PWM frequency [kHz]			
	4	8	12	16
W0003	40 m	20 m	15 m	10 m
W0006				
W0009				
W0013				
W0018				
<b>HCS01.1E-...-A-03</b>				
W0005				
W0008				
W0018				
W0028				
W0054	75 m	38 m	25 m	-

Fig.4-13: Allowed Motor Cable Lengths

**Encoder Cables**

**MSM Motors**

	HCS01										
	Size 1					Size 2		Size 3			
	3 AC 110 ... 230 V					3 AC 200 ... 500 V					
	Motor	W0003	W0006	W0009	W0013	W0018	W0005	W0008	W0018	W0028	W0054
MSM019A	RKG0033; RKG0041; RKG0034 (extension, optional)						-	-	-	-	-
MSM019B							-	-	-	-	
MSM031B							-	-	-	-	
MSM031C							-	-	-	-	
MSM041B							RKG0033; RKG0041; RKG0034 (extension, optional)				

- Combination not allowed

Fig.4-14: Encoder Cables for HCS01 Converters and MSM Motors

**Encoder Cable Length** See index entry "Encoder → Cable length"

**MSK Motors**

See documentation "Rexroth Connection Cables IndraDrive and IndraDyn" → "Selection for Encoder Cables".



## 4.4 Installation Conditions

### 4.4.1 Ambient and Operating Conditions

#### **⚠ WARNING**

**Lethal electric shock by live parts with more than 50 V!**

Exclusively operate the device

- with plugged on connectors (even if there haven't been any lines connected to the connectors) and
- with connected equipment grounding conductor!

#### **Control Cabinet**

The devices of the Rexroth IndraDrive Cs product range, as well as their additional components (except for some braking resistors), must be mounted in **control cabinets**.

Check that the ambient and operating conditions, in particular the control cabinet temperature, are complied with by calculating the heat levels in the control cabinet. Afterwards, make the corresponding measurements to find out that the ambient and operating conditions have actually been complied with. In the technical data of the individual components, the power dissipation is indicated as an important input value for calculating the heat levels.

#### **Ambient and Operating Conditions**

Description	Symbol	Unit	Value
Conductive dirt contamination			Not allowed (You can protect the devices against conductive dirt contamination, for example by mounting them in control cabinets of the degree of protection IP54 in accordance with IEC529.)
Degree of protection (IEC529)			IP20
Use in the scope of CSA / UL			For use in NFPA 79 Applications only.
Temperature during storage			See chapter "Storage of the Components"
Temperature during transport			See chapter "Transport of the Components"
Allowed mounting position Definition of mounting positions: See index entry "Mounting positions"			G1
Installation altitude	$h_{\text{enn}}$	m	1000
Ambient temperature range	$T_{\text{a\_work}}$	°C	0 ... 40

Combining the Individual Components

Description	Symbol	Unit	Value
<p><b>Derating vs. ambient temperature:</b></p> <p>In the ambient temperature range <math>T_{a\_work\_red}</math>, the performance data are reduced by the factor <math>F_{T_a}</math>:</p> $F_{T_a} = 1 - [(T_a - 40) \times f_{T_a}]$ <p>Example: With an ambient temperature <math>T_a = 50\text{ °C}</math> and a capacity utilization factor <math>f_{T_a} = 2\%</math>, the rated power is reduced to</p> $P_{DC\_cont\_red} = P_{DC\_cont} \times F_{T_a} =$ $P_{DC\_cont} \times (1 - [(50 - 40) \times 0.02]) =$ $P_{DC\_cont} \times 0.8$ <p>Operation at ambient temperatures outside of <math>T_{a\_work}</math> and <math>T_{a\_work\_red}</math> is not allowed!</p>			
	$T_{a\_work\_red}$	°C	40 ... 55
	$f_{T_a}$	%/K	Capacity utilization factor: See technical data of the respective component (Data for Cooling and Power Dissipation → Derating of $P_{DC\_cont}$ , $P_{BD}$ , $I_{out\_cont}$ at $T_{a\_work} < T_a < T_{a\_work\_red}$ )
<p><b>Derating vs. installation altitude:</b></p> <p>With installation altitudes <math>h &gt; h_{nenn}</math>, the available performance data are reduced by the factor <math>f^{(3) 4)}</math>.</p> <p>With installation altitudes in the range of <math>h_{max\_ohne}</math> to <math>h_{max}</math>, an <b>overvoltage limiter</b> against transient overvoltage must be installed in the installation.</p> <p>Use above <math>h_{max}</math> is not allowed!</p>			
	$h_{max\_ohne}$	m	2000
	$h_{max}$	m	4000
<b>Simultaneous derating</b> for ambient temperature <b>and</b> installation altitude	Allowed; reduce with factors $f$ and $f_{T_a}$		
Relative humidity		%	5 ... 95
Absolute humidity		g/m <sup>3</sup>	1 ... 29
Moisture condensation			Not allowed
Climatic category (IEC721)			3K3
Allowed pollution degree (IEC 60664-1)			2
Allowed dust, steam			EN 50178 tab. A.2
Vibration sine: Amplitude (peak-peak) at 5 ... 32 Hz <sup>2)</sup>		mm	0,6 ±15 %
Vibration sine: Acceleration at 32 ... 200 Hz <sup>2)</sup>		g	1,3 ±15 %
Vibration noise (random) frequency <sup>1)</sup>		Hz	20 ... 500
Vibration noise (random) spectral acceleration density, amplitude <sup>1)</sup>		g <sup>2</sup> /Hz	0,05
Vibration noise (random) rms value of total acceleration <sup>1)</sup>		g	1,5

Combining the Individual Components

Description	Symbol	Unit	Value
Vibration sine: Axial Acceleration at 10 ... 2,000 Hz <sup>2)</sup>		g	-
Vibration sine: Radial Acceleration at 10 ... 2,000 Hz <sup>2)</sup>		g	-
Overtoltage category			III (according to IEC60664-1)

- 1) According to EN 60068-2-64
- 2) According to EN 60068-2-6
- 3) Reduced performance data for drive controllers: Allowed DC bus continuous power, allowed mains voltage, braking resistor continuous power, continuous current
- 4) Reduced performance data for motors: Performance, torque S1 and S3


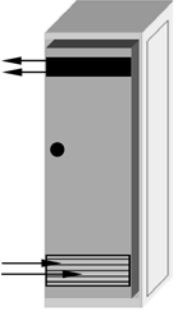
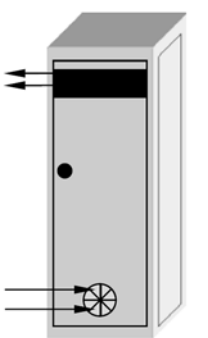
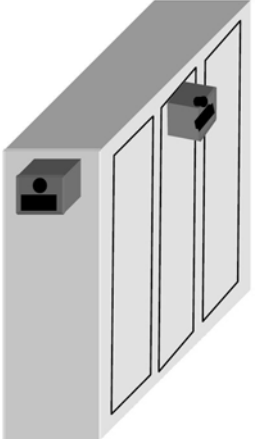
Fig.4-15: Ambient and Operating Conditions

### 4.4.2 Control Cabinet Design and Cooling



The only mounting position allowed for supply units and drive controllers to be installed in control cabinets is G1.

#### Possibilities of Heat Dissipation

Closed control cabinet with air circulation	Closed control cabinet with heat exchanger	Control cabinet with fan	Closed control cabinet with air conditioning unit
 DF000644v01_nn.tif	 DF000645v01_nn.tif	 DF000646v01_nn.tif	 DF000647v01_nn.tif
$P_Q \sim 400 \text{ W}$	$P_Q \sim 1700 \text{ W}$	$P_Q \sim 2700 \text{ W}$	$P_Q \sim 4000 \text{ W}$

$P_Q$  Dissipated heat output

Fig.4-16: Possibilities of Heat Dissipation

The section below describes the "control cabinet with fan".

#### Requirements for Control Cabinets with Fan

#### NOTICE

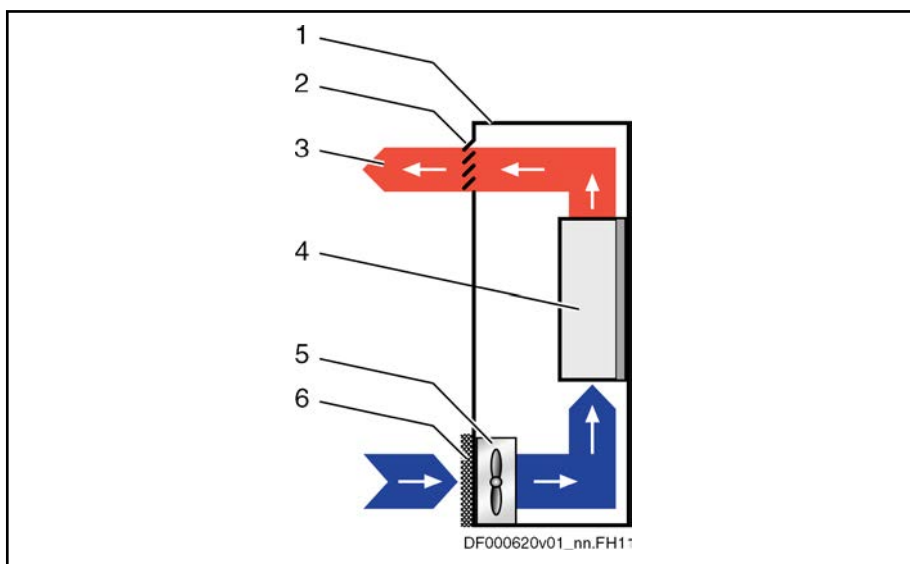
Risk of damage by unclean air in the control cabinet!

Operating a control cabinet with a fan, but without the corresponding filters, can damage the devices or cause malfunction.

## Combining the Individual Components

- Install filters at the air intake opening of the control cabinet so that impure air cannot get into the control cabinet.
- Service the filters at regular intervals according to the dust loading in the environment.
- Only replace the filters when the fan has been switched off, because otherwise the fan sucks in the dirt coming off the filter and the dirt gets into the control cabinet.

### Control Cabinet Ventilation (Schematic Diagram)



- |   |                              |
|---|------------------------------|
| 1 | Control cabinet              |
| 2 | Air outlet opening           |
| 3 | Heat discharge               |
| 4 | Device in control cabinet    |
| 5 | Control cabinet fan          |
| 6 | Filter at air intake opening |

Fig. 4-17: Control Cabinet Ventilation (Schematic Diagram)

Only clean air gets into the control cabinet through the filter at the air intake opening. The control cabinet fan behind the air intake opening delivers the air into the control cabinet and generates overpressure in the control cabinet. This overpressure prevents unclean air from entering into the control cabinet through potentially leaky points (leaky cable passages, damaged seals, etc.).

## 4.4.3 UL Ratings

This chapter contains:

- Limit values for use in the scope of CSA / UL
- Applied standards (CE conformity, UL listing)

Combining the Individual Components

**Ambient and Operating Conditions - UL Ratings**

Description	Symbol	Unit	HCS01.1E -W0003- _02	HCS01.1E -W0006- _02	HCS01.1E -W0009- _02	HCS01.1E -W0013- _02	HCS01.1E -W0018- _02	
Short circuit current rating (UL)	SCCR	A rms	42000					
Rated input voltage, power (UL) <sup>1)</sup>	U <sub>LN_nenn</sub>	V	1 or 3 x AC 110...230					
Rated input current (UL)	I <sub>LN</sub>	A	1.8 or 0.6	2.8 or 1.2	5.0 or 2.3	8.3 or 4.5	12.8 or 9.6	
Output voltage (UL)	U <sub>out</sub>	V	3 x AC 0...230					
Output current (UL)	I <sub>out</sub>	A	1,1	2,0	3,0	4,5	7,6	
Last modification: 2012-01-23								

1) DC bus L+, L-; mains input L1, L2, L3  
 Fig.4-18: HCS - Ambient and Operating Conditions - UL Ratings

**Ambient and Operating Conditions - UL Ratings**

Description	Symbol	Unit	HCS01.1E -W0005- _03	HCS01.1E -W0008- _03	HCS01.1E -W0018- _03	HCS01.1E -W0028- _03	HCS01.1E -W0054- _03	
Short circuit current rating (UL)	SCCR	A rms	42000					
Rated input voltage, power (UL) <sup>1)</sup>	U <sub>LN_nenn</sub>	V	3 x AC 200...500					
Rated input current (UL)	I <sub>LN</sub>	A	1,5	2,5	5,0	10,0	28,0	
Output voltage (UL)	U <sub>out</sub>	V	3 x AC 0...500					
Output current (UL)	I <sub>out</sub>	A	1,7	2,7	6,0	11,5	21,0	
Last modification: 2012-05-16								

1) DC bus L+, L-; mains input L1, L2, L3  
 Fig.4-19: HCS - Ambient and Operating Conditions - UL Ratings

#### 4.4.4 Compatibility With Foreign Matters

All Rexroth controls and drives are developed and tested according to the state-of-the-art technology.

As it is impossible to follow the continuing development of all materials (e.g. lubricants in machine tools) which may interact with the controls and drives, it cannot be completely ruled out that any reactions with the materials we use might occur.

For this reason, before using the respective material a compatibility test has to be carried out for new lubricants, cleaning agents etc. and our housings/ materials.

### 4.5 Mechanical Project Planning

#### 4.5.1 Drive Controller

##### Dimensional Drawings

Options for Mounting

- **Standard mounting:**

The back of the device is directly mounted to the mounting surface in the control cabinet

## Combining the Individual Components


- **Left-hand or right-hand mounting:**

The left or right side of the device is directly mounted to the mounting surface in the control cabinet

See also [chapter 6.1 "Mounting HCS01 Devices in the Control Cabinet"](#) on page 109.

HCS01.1E-W0003/5/6/8/9/13

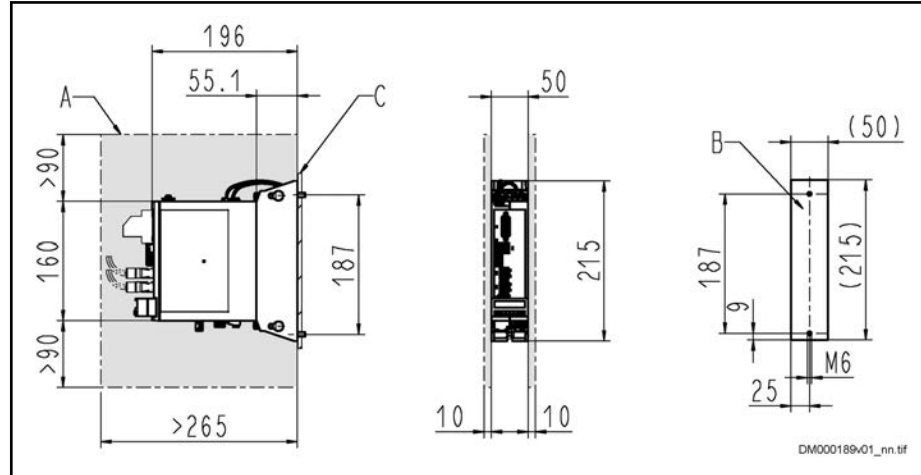
Standard mounting:



- A Minimum mounting clearance  
B Boring dimensions  
C Mounting surface

Fig. 4-20: Dimensional Drawing HCS01.1E-W0003/5/6/8/9/13 (Standard Mounting)

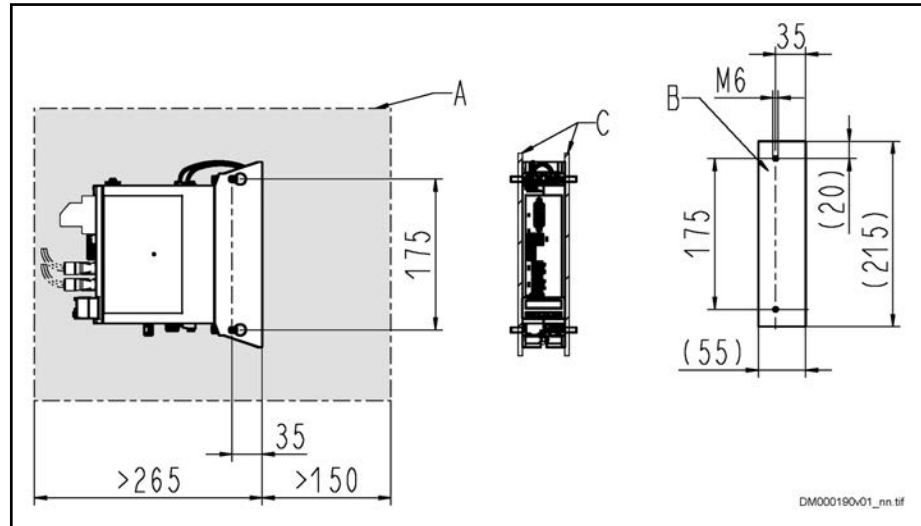Left-hand or right-hand mounting:




- A Minimum mounting clearance  
B Boring dimensions  
C Mounting surface

Fig. 4-21: Dimensional Drawing HCS01.1E-W0003/5/6/8/9/13 (Left-Hand or Right-Hand Mounting)

Combining the Individual Components

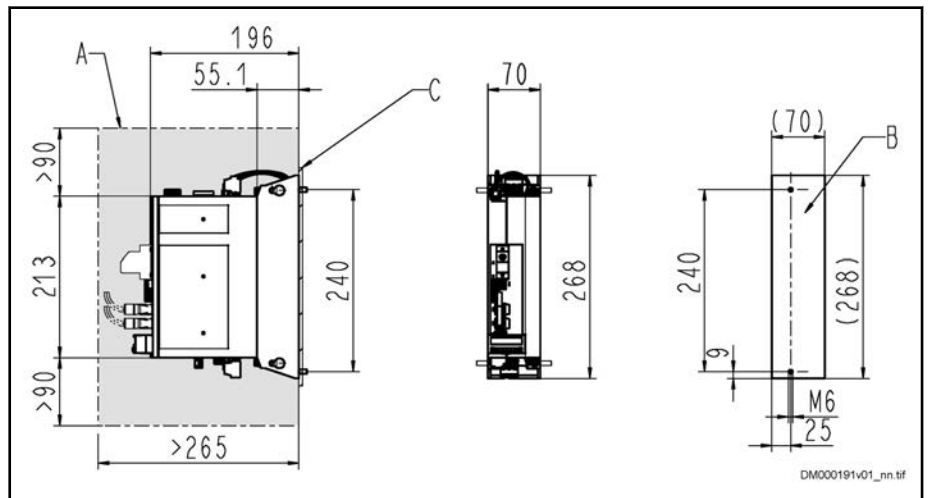
HCS01.1E-W0018/28 Standard mounting:



- A Minimum mounting clearance
- B Boring dimensions
- C Mounting surface

Fig.4-22: Dimensional Drawing HCS01.1E-W0018/28 (Standard Mounting)

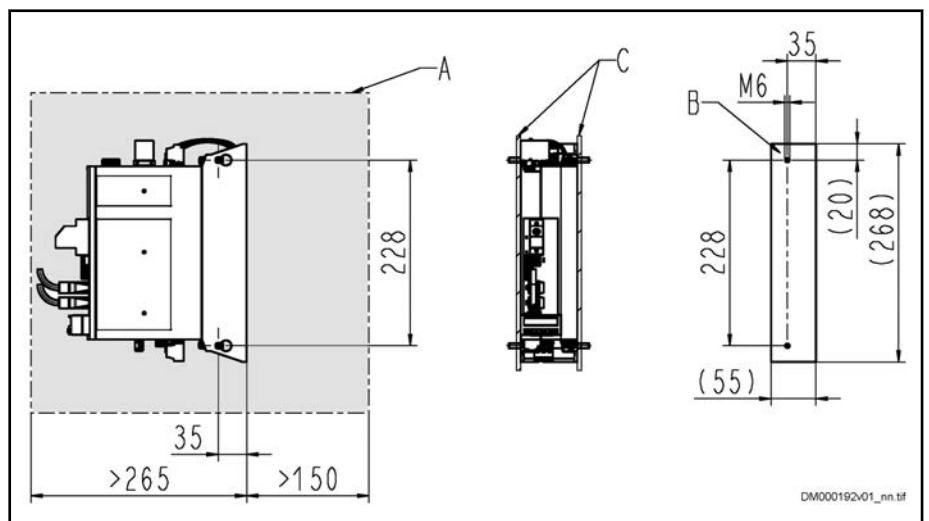Left-hand or right-hand mounting:




- A Minimum mounting clearance
- B Boring dimensions
- C Mounting surface

Fig.4-23: Dimensional Drawing HCS01.1E-W0018/28 (Left-Hand or Right-Hand Mounting)

## Combining the Individual Components

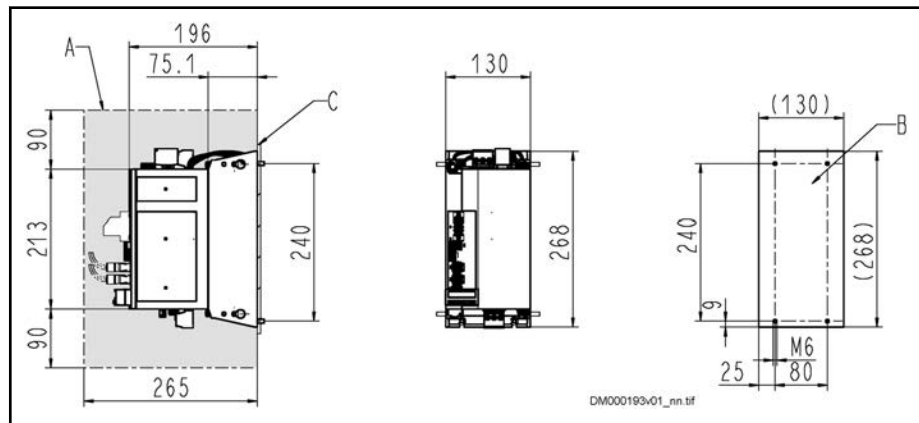
## HCS01.1E-W0054 Standard mounting:



- A Minimum mounting clearance  
 \* With left-hand or right-hand mounting of the device  
 B Boring dimensions  
 C Mounting surface

Fig.4-24: Dimensional Drawing HCS01.1E-W0054 (Standard Mounting)

## Left-hand or right-hand mounting:

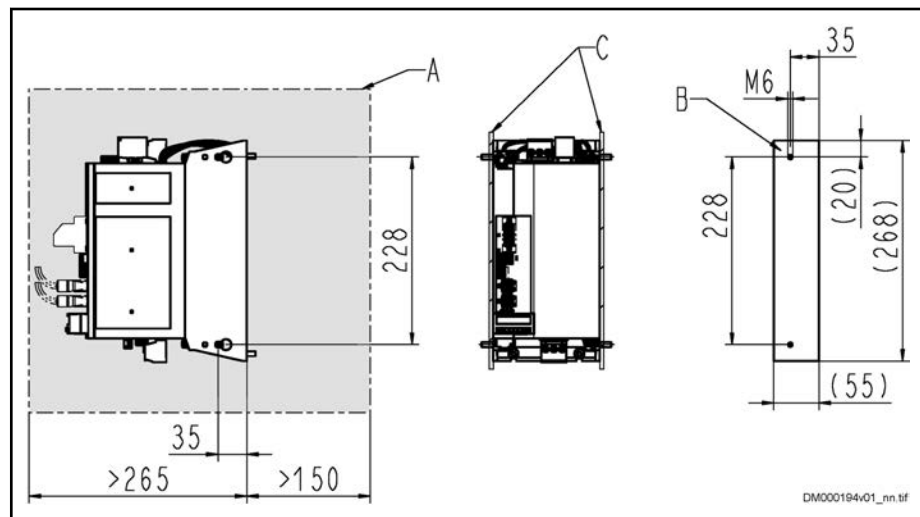

- A Minimum mounting clearance  
 \* With left-hand or right-hand mounting of the device  
 B Boring dimensions  
 C Mounting surface

Fig.4-25: Dimensional Drawing HCS01.1E-W0054 (Left-Hand or Right-Hand Mounting)



Combining the Individual Components

**Dimensions, Mass, Insulation, Sound Pressure Level**

**Data for Mass, Dimensions, Sound Pressure Level, Insulation**

Description	Symbol	Unit	HCS01.1E -W0003- _02	HCS01.1E -W0006- _02	HCS01.1E -W0009- _02	HCS01.1E -W0013- _02	HCS01.1E -W0018- _02	
Mass	m	kg	0,72				1,70	
Device height (UL) <sup>1)</sup>	H	mm	215				268	
Device depth (UL) <sup>2)</sup>	T	mm	196					
Device width (UL) <sup>3)</sup>	B	mm	50				70	
Insulation resistance at DC 500 V	R <sub>is</sub>	Mohm	10,00					
Capacitance against housing	C <sub>Y</sub>	nF	2 x 68				2 x 100	
Average sound pressure level (accuracy class 2) at P <sub>DC_cont</sub> <sup>4)</sup>	L <sub>P</sub>	dB (A)	tbd					
Last modification: 2012-01-23								

1) 2) 3) Housing dimension; see also related dimensional drawing  
 4) According to DIN EN ISO 11205; comparative value at distance 1 m, out of cabinet; HCS types with order code -L\*\*\*: load-dependent

Fig.4-26: HCS - Data for Mass, Dimensions, Sound Pressure Level, Insulation

**Data for Mass, Dimensions, Sound Pressure Level, Insulation**

Description	Symbol	Unit	HCS01.1E -W0005- _03	HCS01.1E -W0008- _03	HCS01.1E -W0018- _03	HCS01.1E -W0028- _03	HCS01.1E -W0054- _03	
Mass	m	kg	0,72		1,70		4,22	
Device height (UL) <sup>1)</sup>	H	mm	215	268				
Device depth (UL) <sup>2)</sup>	T	mm	196					
Device width (UL) <sup>3)</sup>	B	mm	50		70	130		
Insulation resistance at DC 500 V	R <sub>is</sub>	Mohm	10,00					
Capacitance against housing	C <sub>Y</sub>	nF	2 x 68		2 x 100			
Average sound pressure level (accuracy class 2) at P <sub>DC_cont</sub> <sup>4)</sup>	L <sub>P</sub>	dB (A)	tbd					
Last modification: 2012-01-23								

1) 2) 3) Housing dimension; see also related dimensional drawing  
 4) According to DIN EN ISO 11205; comparative value at distance 1 m, out of cabinet; HCS types with order code -L\*\*\*: load-dependent

Fig.4-27: HCS - Data for Mass, Dimensions, Sound Pressure Level, Insulation

## Combining the Individual Components

## Temperatures, Cooling, Power Dissipation, Distances

## Data for Cooling and Power Dissipation

Description	Symbol	Unit	HCS01.1E -W0003- _02	HCS01.1E -W0006- _02	HCS01.1E -W0009- _02	HCS01.1E -W0013- _02	HCS01.1E -W0018- _02
Ambient temperature range for operation with nominal data	$T_{a\_work}$	°C	0...40				
Ambient temperature range for operation with reduced nominal data	$T_{a\_work\_red}$	°C	0...55				
Derating of $P_{DC\_cont}$ ; $P_{BD}$ ; $I_{out\_cont}$ at $T_{a\_work} < T_a < T_{a\_work\_red}$	$f_{Ta}$	%/K	2,0				
Allowed mounting position			G1				
Cooling type			Not ventilated			Forced ventilation	
Volumetric capacity of forced cooling	V	m <sup>3</sup> /h	-			11,00	56,00
Allowed switching frequencies <sup>1)</sup>	$f_s$	kHz	4, 8, 12, 16				
Power dissipation at $I_{out\_cont} = 0$ A; $f_s = f_s$ (min.) <sup>2)</sup>	$P_{Diss\_0A\_fs\_min}$	W	4		6		8
Power dissipation at $I_{out\_cont} = 0$ A; $f_s = f_s$ (max.) <sup>3)</sup>	$P_{Diss\_0A\_fs\_max}$	W	15		17		21
Power dissipation at continuous current and continuous DC bus power respectively (UL) <sup>4)</sup>	$P_{Diss\_cont}$	W	8,00	10,00	12,00	20,00	70,00
Minimum distance on the top of the device <sup>5)</sup>	$d_{top}$	mm	90				
Minimum distance on the bottom of the device <sup>6)</sup>	$d_{bot}$	mm	90				
Horizontal spacing on the device <sup>7)</sup>	$d_{hor}$	mm	10				0
Temperature rise with minimum distances $d_{bot}$ ; $d_{top}$ ; $P_{BD}$	$\Delta T$	K	tbd				

Last modification: 2012-05-16

- 1) Also depending on firmware and control section; see parameter description "P-0-0001, Switching frequency of the power output stage"; see "P-0-4058, Amplifier type data"
- 2) 3) Plus dissipation of braking resistor and control section; find interim values by interpolation to  $P_{Diss\_cont}$
- 4) Plus dissipation of braking resistor and control section
- 5) 6) 7) See fig. "Air Intake and Air Outlet at Device"
- Fig.4-28: HCS - Data for Cooling and Power Dissipation

Combining the Individual Components

Data for Cooling and Power Dissipation

Description	Symbol	Unit	HCS01.1E -W0005- -03	HCS01.1E -W0008- -03	HCS01.1E -W0018- -03	HCS01.1E -W0028- -03	HCS01.1E -W0054- -03
Ambient temperature range for operation with nominal data	$T_{a\_work}$	°C	0...40				
Ambient temperature range for operation with reduced nominal data	$T_{a\_work\_red}$	°C	0...55				
Derating of $P_{DC\_cont}$ ; $P_{BD}$ ; $I_{out\_cont}$ at $T_{a\_work} < T_a < T_{a\_work\_red}$	$f_{Ta}$	%/K	2,0				
Allowed mounting position			G1				
Cooling type			Forced ventilation				
Volumetric capacity of forced cooling	V	m <sup>3</sup> /h	11,00		56,00		113,00
Allowed switching frequencies <sup>1)</sup>	$f_s$	kHz	4, 8, 12, 16				4, 8, 12
Power dissipation at $I_{out\_cont} = 0$ A; $f_s = f_s$ (min.) <sup>2)</sup>	$P_{Diss\_0A\_fs\_min}$	W	23		30	36	55
Power dissipation at $I_{out\_cont} = 0$ A; $f_s = f_s$ (max.) <sup>3)</sup>	$P_{Diss\_0A\_fs\_max}$	W	65		85	91	135
Power dissipation at continuous current and continuous DC bus power respectively (UL) <sup>4)</sup>	$P_{Diss\_cont}$	W	37,00	46,00	80,00	120,00	400,00
Minimum distance on the top of the device <sup>5)</sup>	$d_{top}$	mm	90				
Minimum distance on the bottom of the device <sup>6)</sup>	$d_{bot}$	mm	90				
Horizontal spacing on the device <sup>7)</sup>	$d_{hor}$	mm	10		0		
Temperature rise with minimum distances $d_{bot}$ ; $d_{top}$ ; $P_{BD}$	$\Delta T$	K	tbd	tbd			
Last modification: 2012-05-16							

- 1) Also depending on firmware and control section; see parameter description "P-0-0001, Switching frequency of the power output stage"; see "P-0-4058, Amplifier type data"
- 2) 3) Plus dissipation of braking resistor and control section; find interim values by interpolation to  $P_{Diss\_cont}$
- 4) Plus dissipation of braking resistor and control section
- 5) 6) 7) See fig. "Air Intake and Air Outlet at Device"  
 Fig.4-29: HCS - Data for Cooling and Power Dissipation

## Combining the Individual Components

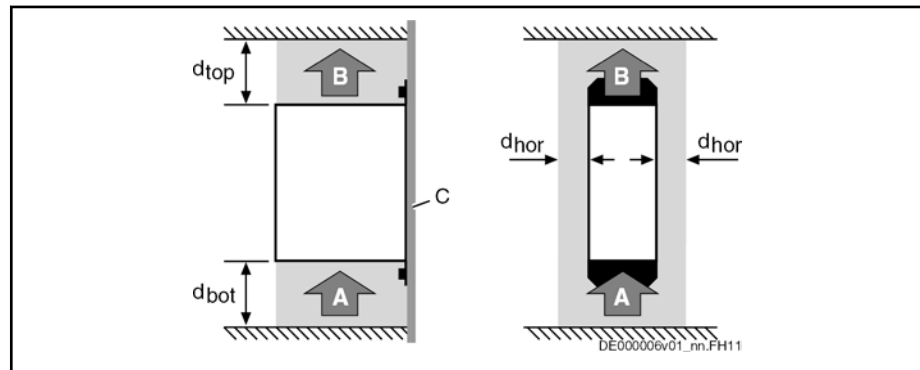
**NOTICE**

Property damage due to temperatures higher than 105 °C!

Observe the indicated minimum distances!

Above the devices there may only be such materials which

- are not combustible
- are insensitive to the occurring high temperatures



A	Air intake
B	Air outlet
C	Mounting surface in control cabinet
$d_{top}$	Distance top
$d_{bot}$	Distance bottom
$d_{hor}$	Distance horizontal

Fig.4-30: Air Intake and Air Outlet at Device

## Mounting Positions of Components

**NOTICE**

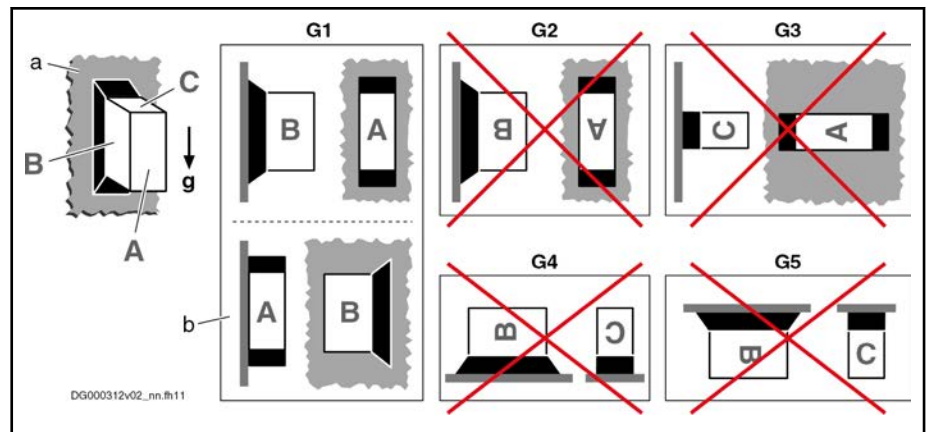
Risk of damage to the components!

Only operate the components in their allowed mounting positions.

## Allowed Mounting Position of the Components

Only the mounting position **G1** is allowed for HCS01 components.

Combining the Individual Components




- A, B, C Sides of a component: A = front side, B = left or right side, C = top side
  - a Mounting surface in control cabinet
  - b Mounting position G1, when side B of component directly mounted to mounting surface
  - g Direction of gravitational force
  - G1 **Normal mounting position:** The natural convection supports the forced cooling air current. This avoids the generation of pockets of heat in the component.
  - G2 180° to normal mounting position
  - G3 90° to normal mounting position
  - G4 Bottom mounting; mounting surface on bottom of control cabinet
  - G5 Top mounting; mounting surface at top of control cabinet
- Fig.4-31: Allowed Mounting Position of the Components*

Combining the Individual Components

## 4.6 Electrical Project Planning
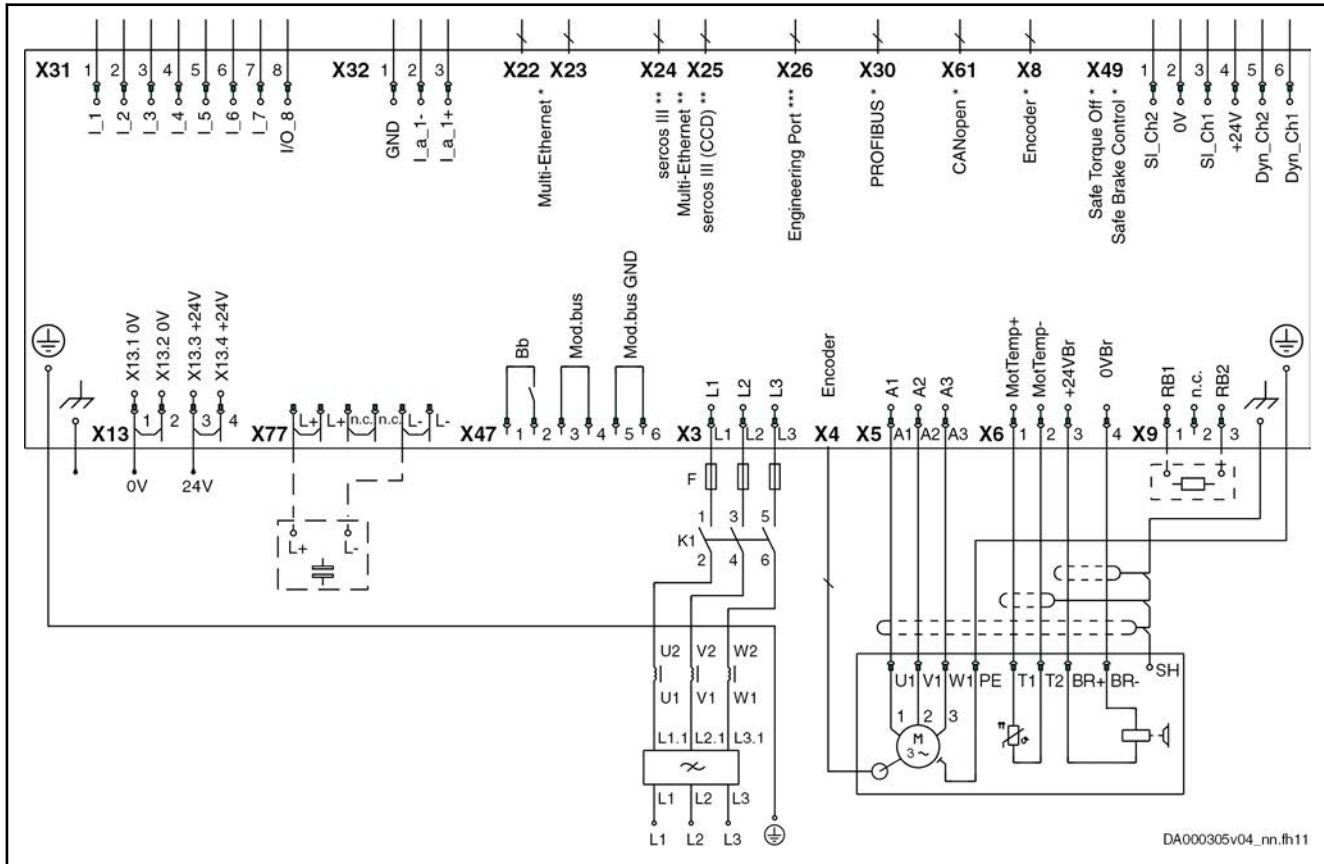
### 4.6.1 Overall Connection Diagram



- \* Optional
- \*\* **ECONOMY** = sercos III; **BASIC** = Multi-Ethernet; **ADVANCED** = sercos III cross communication (CCD)
- \*\*\* Only available at HCS01.1E-W00\*-A-0\*-A-CC (ADVANCED) devices
- X6.1, X6.2 T1 and T2 are not available at MSM motors
- X31 No standard assignment preset; make the assignment by means of firmware documentation (see Functional Description, index entry "Digital inputs/outputs")
- X47.1, X47.2 For the "ready for operation" message of the device, the Bb relay contact (X47.1, X47.2) must be wired
- X47.3...6 Module bus only available at HCS01.1E-W00xx-x-03 devices
- X77 DC bus connection (L+, L-) only available at HCS01.1E-W00xx-x-03 devices

Fig.4-32: Connection Diagram

### 4.6.2 Project Planning of Control Voltage

#### Control Voltage for Drive Systems

Some components of a drive system must be supplied with control voltage. When doing the project planning for control voltage supply, take the requirements of the drive system components into account:

- **Allowed tolerances of the supply voltage** depending on the length of the motor cable and the use of motor holding brakes
- Power consumption of the **drive controllers**
- Power consumption of **other loads** (e.g. motor holding brake, digital outputs)

Combining the Individual Components

- **Current carrying capacity of the connection point** for control voltage supply at the component for the purpose of looping through the control voltage to other components

**Sizing the Control Voltage Supply**

**Determining the Power Requirement**

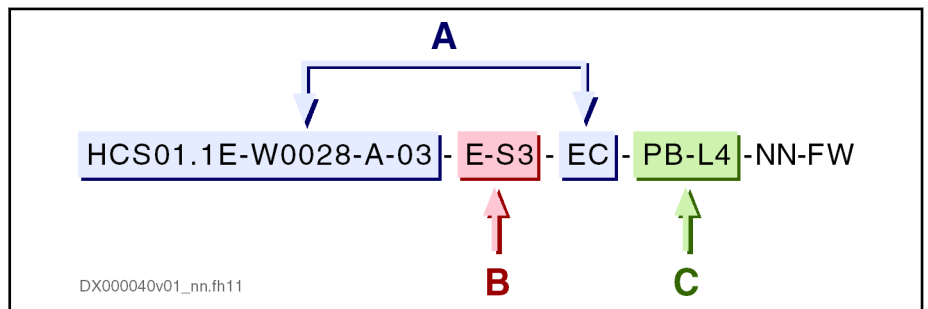
**Power Requirement of the Drive Controller**

The **total power requirement** of the control voltage supply of a drive controller results from the sum of the following power values:

- Basic device (drive controller without connected encoders)
- Optional connection interfaces (e.g. communication, additional encoder evaluation)
- Connected encoder systems
- External loads

For the configuration of your drive controller, see the type plate and the type code.

**Example of a type code:**



- A Basic device (maximum current [W0028 = 28 A], line [03], on-board connection point [EC])
- B Control section design (E = Economy; S3 = sercos III)
- C Optional connection points (PB = ProfiBus; L4 = safety technology [STO, SBC])

Fig.4-33: Type Code HCS01

The tables below contain the individual power values required by the drive controller. The power requirement of the supplying 24V power supply unit results from the sum of these individual power values.

**Power Requirement of the Basic Device**

The power requirement of the basic device results from

- Maximum current of drive controller
- Design of control section

## Combining the Individual Components

Table 1: Power Requirement of the Basic Device

Maximum current, line <sup>1)</sup>  HCS01.1E-...	Control section design		
	E-S3 (ECONOMY)	B-ET (BASIC)	A-CC (ADVANCED)
W0003-A-02-x-xx-EC	8.1 W	12.7 W	13.4 W
W0006-A-02-x-xx-EC			
W0009-A-02-x-xx-EC			
W0013-A-02-x-xx-EC	9.4 W	14.3 W	15 W
W0018-A-02-x-xx-EC	12.7 W	17.3 W	18 W
W0005-A-03-x-xx-EC	9.4 W	14.3 W	15 W
W0008-A-03-x-xx-EC			
W0018-A-03-x-xx-EC	12.7 W	17.3 W	18 W
W0028-A-03-x-xx-EC			
W0054-A-03-x-xx-EC	25.7 W	30.3 W	31 W

<sup>1)</sup> The wild card **x-xx** in this column represents the control section design. Example: The basic device HCS01.1E-W0028-A-03-E-S3-EC has a power requirement of 12.7 W.

Fig. 4-34: Power Requirement of the Basic Device

## Power Requirement of the Optional Connection Points

If the drive controller has optional connection points, the power requirement of the basic device is increased.

Table 2: Power Requirement of the Optional Connection Point

Optional connection point (Identifier in type code)	Power requirement	Explanation
EC <sup>1)</sup>	1.1 W	<i>Encoder Systems</i> <ul style="list-style-type: none"> <li>• MSM motor encoder</li> <li>• MSK motor encoder</li> <li>• Sin-cos encoder 1 V<sub>pp</sub>; HIPERFACE®</li> <li>• Sin-cos encoder 1 V<sub>pp</sub>; EnDat 2.1</li> <li>• Sin-cos encoder 1 V<sub>pp</sub>; with reference track</li> <li>• 5V-TTL square-wave encoder; with reference track</li> </ul>
L3	1.0 W	STO (Safe Torque Off )
L4	1.0 W	STO (Safe Torque Off ) SBC (Safe Brake Control)
PB	1.1 W	Profibus (communication)
ET <sup>2)</sup>	2.7 W	Multi-Ethernet interface (communication)



Combining the Individual Components

Optional connection point (Identifier in type code)	Power requirement	Explanation
CN	1.5 W	CANopen
EM	1.2 W	Encoder emulation

- 1) The power requirement of the on-board connection point EC (HCS01-1E-W00xx-A-0x-x-xx-**EC**) is already taken into account with the power requirement of the basic device (see table 1, column "Maximum current, line")
- 2) The power requirement of the on-board connection point ET (HCS01-1E-W00xx-A-0x-x-**ET**) is already taken into account with the power requirement of the basic device (see table 1, column "Maximum current, line")

Fig.4-35: Power Requirement of the Optional Connection Points

**Power Requirement of the External Loads**

External loads are, for example,

- Encoder system of the motor
- Motor holding brake
- Load at a digital output

The drive controller must supply the external loads with power.

**Table 3: Power Requirement of the External Loads**

External load	Power requirement
5 V encoder system	$P = I_{Encoder} \times 5 \text{ V} \times 1.75$ <sup>1), 5)</sup>
12 V encoder system	$P = I_{Encoder} \times 12 \text{ V} \times 1.25$ <sup>1), 5)</sup>
Load at digital output	$P = I_{Load} \times U_{N3}$ <sup>2), 4)</sup>
Motor holding brake	$P = I_{Brake} \times U_{N3}$ <sup>3), 4)</sup>

- 1)  $I_{Encoder}$  : Current consumption of encoder system
- 2)  $I_{Load}$  : Current consumption of external load
- 3)  $I_{Brake}$  : Current consumption of motor holding brake
- 4)  $U_{N3}$  : Control voltage supply of drive controller
- 5) The sum of the power consumptions of all connected encoder systems incl. encoder emulation mustn't exceed **6 W**.

Fig.4-36: Power Requirement of the External Loads

**Calculation Formula**

The total power consumption ( $P_{N3}$ ) from the 24V control voltage of a drive controller is calculated with:

$$P_{N3} = P_{Basic\ device} + \sum P_{Optional\ connection\ points} + \sum P_{External\ loads}$$

**Example of Calculation**

Component		Power requirement
HCS01.1E-W0028-A-03-B-ET-EC-PB-L4-NN-FW		
Basic device	HCS01.1E-W0028-A-03-B-ET-EC	17.3 W
Optional connection point	PROFIBUS "PB"	1.1 W

## Combining the Individual Components

Component		Power requirement
HCS01.1E-W0028-A-03-B-ET-EC-PB-L4-NN-FW		
Optional connection point	STO/SBC "L4"	1.0 W
12 V encoder system of motor	12 V / 200 mA	$P = I_{\text{Encoder}} \times 12 \text{ V} \times 1.25 = 0.2 \text{ A} \times 15 \text{ V} = 3.0 \text{ W}$
Motor holding brake	300 mA	$P = I_{\text{Brake}} \times U_{\text{N3}} = 0.3 \text{ A} \times 24 \text{ V} = 7.2 \text{ W}$
Load at digital output	250 mA	$P = I_{\text{Load}} \times U_{\text{N3}} = 0.25 \text{ A} \times 24 \text{ V} = 6.0 \text{ W}$
<b>Total power consumption <math>P_{\text{N3}} = P_{\text{Basic device}} + \Sigma P_{\text{Optional connection points}} + \Sigma P_{\text{External loads}}</math></b> $P_{\text{N3}} = 17.3 \text{ W} + 1.1 \text{ W} + 1.0 \text{ W} + 3.0 \text{ W} + 7.2 \text{ W} + 6.0 \text{ W} = 35.6 \text{ W}$		

Fig.4-37: Example of Calculation

**Requirements to the 24V Power Supply Unit**

The following **parameters** contain the essential electrical requirements on the 24V power supply unit:

- **Output voltage** or range of output voltage
- **Continuous power** which the 24V power supply unit must supply during operation
- **Peak current** which the 24V power supply unit must supply when switching on

**Required Continuous Power**

The continuous power of the 24V power supply unit must be greater than the sum of power consumptions  $P_{\text{N3}}$  of the components to be supplied.

To select the 24V power supply unit, determine the continuous current  $I_{\text{N3}}$  of all components:

$$I_{\text{N3}} = P_{\text{N3}} / U_{\text{N3}}$$

( $P_{\text{N3}}$  : Power consumption of all components)

The calculated current  $I_{\text{N3}}$  corresponds to the continuous current of the 24V power supply unit.

The power consumption is indicated as maximum value of the respective component and can occur at **individual components**.

In drive systems with **several components**, the occurring power consumption under statistical assumptions will be lower than the calculated one.

**Required Peak Current**

When the 24V control voltage unit is switched on, the 24V power supply unit is loaded with the charging current of the capacitors of the connected components. This charging current is electronically limited in the components.

The required peak current of the power supply unit is calculated with:

$$I_{\text{PeakCurrent\_PowerSupplyUnit}} = 1.2 \times P_{\text{N3}} / U_{\text{N3}}$$

( $P_{\text{N3}}$  : Power consumption of all components)

The power supply unit must make available the calculated peak current  $I_{\text{PeakCurrent\_PowerSupplyUnit}}$  for at least 1 second.

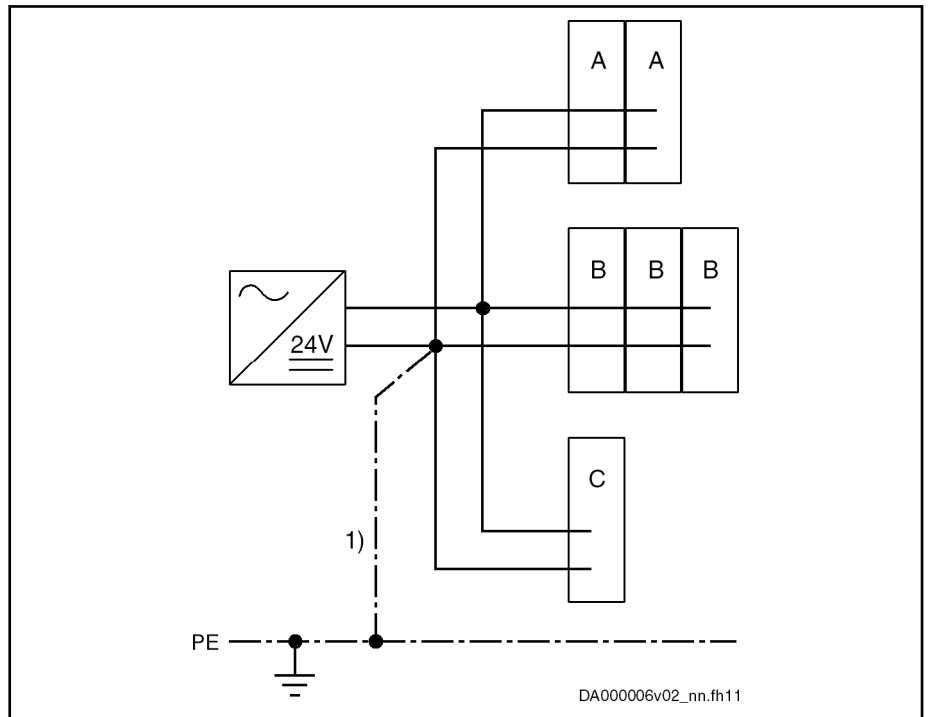
**Installing the 24V Supply****Notes on Installation**

- As a matter of principle, the 24V supply of the components of the drive system Rexroth IndraDrive Cs should be installed in **star-shaped form**. For each group of drive controllers or third-party components it is there-

Combining the Individual Components

fore necessary that you run separate supply lines. This, too, applies to multiple-line arrangement in the case of supply from a supply unit, for example.

- Route lines with sufficiently dimensioned line cross sections to reduce load-dependent voltage drops.
- For looping through the control voltage, observe the maximum current carrying capacity of the connection points. The maximum current carrying capacity limits the number of devices to which the control voltage can be looped through.



- A Number of devices is limited to 2 components with a current consumption of  $\leq 5$  A / component
- B Number of devices is limited to 3 components with a current consumption of  $\leq 3.3$  A / component
- C Third-party component (e.g. PLC, valve etc.)
- 1) Connection to central ground point (e.g. earth-circuit connector PE)

Fig.4-38: Installing the 24V Supply



If you use several 24V power supply units:

- Output voltages of the 24V power supply units must be within the allowed voltage range
- Interconnect reference conductors 0 V of the individual 24V power supply units with low impedance
- Always switch 24V power supply units on and off synchronously

**Chronological Order of 24V Supply and Mains Voltage**

Before mains voltage or DC bus voltage is applied to the components, they have to be supplied by the 24V supply.

## Combining the Individual Components

## Looping Through the Control Voltage

**NOTICE**

Property damage in case of error caused by too small line cross section!

Observe the current carrying capacity of the connection points for control voltage supply at the components used.

You may only loop through the control voltage between the components, when the **sum** of current consumptions  $\Sigma I_{N3}$  of the individual components is smaller than **10 A** (current carrying capacity of the connection point X13).

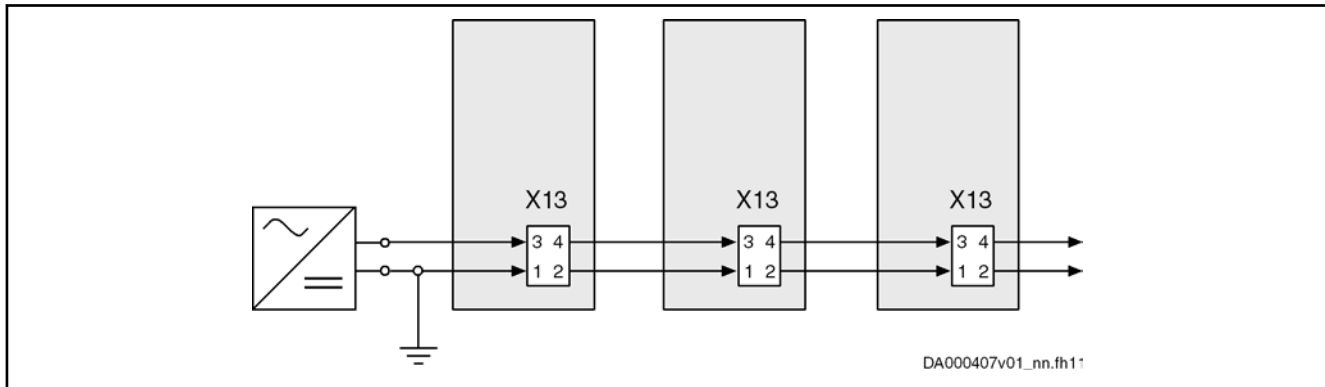


Fig.4-39: Looping Through the Control Voltage

Exemplary calculation for 3 drive controllers:

$$I_D = 3 \times \frac{P_{N3}}{U_{N3}}$$

Fig.4-40: Continuous Current

The result  $I_D$  must be smaller than the specified current carrying capacity of the connection point.

### 4.6.3 Mains Connection

#### Residual-Current-Operated Circuit Breakers (RCD, RCCB) as Additional Fusing

##### General Information

The following designations are used for residual-current-operated circuit breakers:

- RCCB (Residual-Current-Operated Circuit Breaker)
- RCD (Residual-Current-Operated Device)
- RCM (Residual-Current Monitoring Device)
- Earth-leakage circuit breaker (voltage-independent)
- Residual-current circuit breaker (voltage-dependent)



It is only to a limited extent that residual-current-operated circuit breakers can be used with Rexroth IndraDrive Cs systems.

If these circuit breakers are to be used, the company erecting the installation has to check the mutual compatibility of the residual-current-operated circuit breakers and installation or machine with the drive system, in order to avoid accidental triggering of the residual-current-operated circuit breaker. This has to be taken into account

## Combining the Individual Components

- for switch-on processes, due to high asymmetric inrush currents and
- during operation of the installation, due to leakage currents produced in normal operation.

### Cause of Leakage Currents

For the purpose of stepless speed variation with a high degree of positioning accuracy and dynamic response, certain modulation procedures are necessary for drive systems. For physical reasons, these modulation procedures give rise to inevitable leakage current produced during normal operation. Especially with unbalanced loads of the mains phases or a large number of drives it can easily reach some amperes (rms value).

The leakage current is not sinusoidal but pulse-shaped. For this reason, measuring instruments normally sized for alternating currents in the range of 50 Hz are not suited. Use measuring instruments with rms value measuring ranges up to at least 150 kHz.

The degree of leakage current depends on the following features of the installation:

- Kind of inrush current limitation
- Number, kind and size drives used
- Length and cross section of connected motor power cables
- Grounding conditions of the mains at the site of installation
- Unbalance of the three-phase system
- Kind of filters and chokes connected in the incoming circuit
- EMC measures that are taken

If measures are taken to improve the electromagnetic compatibility (EMC) of the installation (mains filters, shielded lines), the leakage current in the ground wire is inevitably increased, especially when switching on or in the case of mains unbalance. Given these operating conditions, residual-current-operated circuit breakers can trigger without an error having occurred.

The EMC measures are mainly based on capacitive short-circuiting of the interference currents within the drive system. Inductive filter measures can reduce the leakage currents, but affect the dynamic response of the drive and bring about

- higher construction volume
- higher weight
- expensive core material

### Possibilities of Use

#### Motor Cable Length

Keep the motor cables as short as possible. Only short motor cables do allow low leakage currents and thereby enable residual-current-operated circuit breakers to work.

#### Kinds of Residual-Current-Operated Circuit Breakers

There are two kinds of residual-current-operated circuit breakers:

1. **Residual-current-operated circuit breakers sensitive to power pulse current** (type A acc. to IEC 60755)

These are normally used. However, it is only pulsating direct fault currents of a maximum of 5 mA and sinusoidal alternating fault currents that they switch off safely. This is why they are not allowed for devices that can generate smoothed direct fault currents. In the case of smoothed direct fault currents that can be produced in power supply units, mains rectifiers and drive controllers with power converters in B6 circuit,

## Combining the Individual Components

the residual-current-operated circuit breaker is not triggered. This blocks the triggering of a residual-current-operated circuit breaker sensitive to power pulse current in the case of ground contact, i.e. in the case of error.

**Residual-current-operated circuit breakers sensitive to power pulse current do not provide any protection against inadmissible contact voltage.**

### 2. Residual-current-operated circuit breakers sensitive to universal current (type B acc. to IEC 60755)

These circuit breakers are suited for smoothed direct fault currents, too, and safely switch off devices with B6 input rectifiers.

When a current with 30 mA triggers the residual-current-operated circuit breaker, it is possible to use a residual-current-operated circuit breaker with higher tripping current for machine protection.

If this residual-current-operated circuit breaker triggers accidentally, too, check in how far the above conditions and dependencies can be improved (for example, by connecting current-compensated mains chokes in the incoming circuit, increasing the inrush current limitation).

### Using Isolating Transformer to Reduce Leakage Current in Mains

If there is no improvement achieved and the residual-current-operated circuit breaker, due to specific mains conditions on site, has to be used nevertheless on the mains input side, connect an isolating transformer between mains connection and power connection of the drive system. This reduces the leakage current in the ground wire of the mains that is produced during normal operation which allows using the residual-current-operated circuit breaker. Connect the neutral point of the secondary winding of the isolating transformer to the equipment grounding conductor of the drive system.

Adjust the ground-fault loop impedance to the overcurrent protective device so that the unit can be switched off in the case of failure.

Before operating enable, check the correct function of the overcurrent protection device including activation in the case of failure.

### Exclusive fusing by residual-current-operated circuit breaker

For drive systems with electronic drive controllers, exclusive protection by means of a residual-current-operated circuit breaker normally is not possible and not allowed.

Electronic equipment that has a nominal power higher than 4 kVA or is destined for permanent connection does not need residual-current-operated circuit breakers.

According to IEC 364 and EN 50178, the supply-side protection against contact for indirect contact, i.e. in the case of insulation failure, has to be provided in a different way, for example by means of overcurrent protective device, protective grounding, protective-conductor system, protective separation or total insulation.

### Using Residual-Current-Operated Circuit Breakers at HCS Drive Controllers

#### HCS Drive Controllers at Residual-Current-Operated Circuit Breaker

Residual-current-operated circuit breakers can be used under the following conditions:

- Residual-current-operated circuit breaker is of type B (IEC60755)
- Trip limit of the residual-current circuit breaker is  $\geq 300$  mA
- Supplying TN-S mains
- Maximum length of motor cable 20 m in shielded design
- Use of an NFD03 mains filter

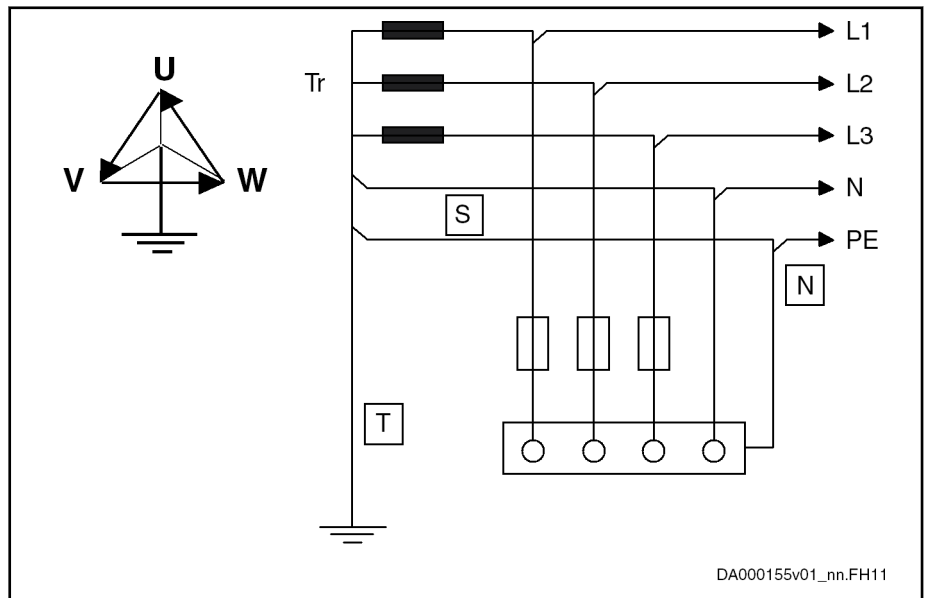
### Combining the Individual Components

- Each residual-current-operated circuit breaker only supplies one drive controller
- Only Rexroth components and accessories including cables and filters are used

## Mains Types

### TN-S Mains Type

The TN-S mains type is the usual mains type in Europe.




- T = Direct grounding of a point (station ground)  
N = Exposed conductive parts directly connected to station ground  
S = Separate neutral conductor and equipment grounding conductor in entire mains

Fig.4-41: TN-S Mains Type

## Combining the Individual Components

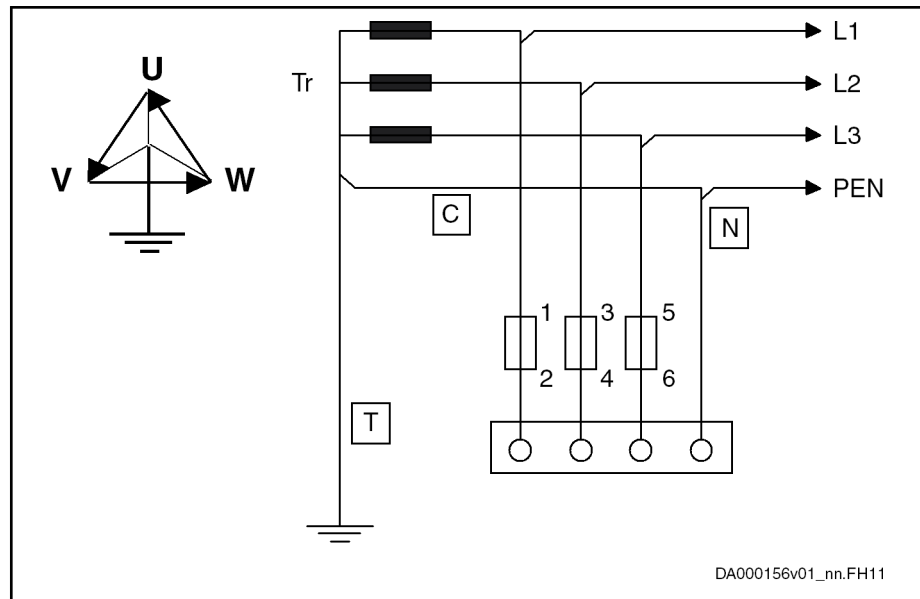
## TN-C Mains Type



- T = Direct grounding of a point (station ground)  
 N = Exposed conductive parts directly connected to station ground  
 C = Neutral conductor and equipment grounding conductor functions in entire mains combined in a single conductor, the PEN conductor.

Fig.4-42: TN-C Mains Type

## IT Mains Type

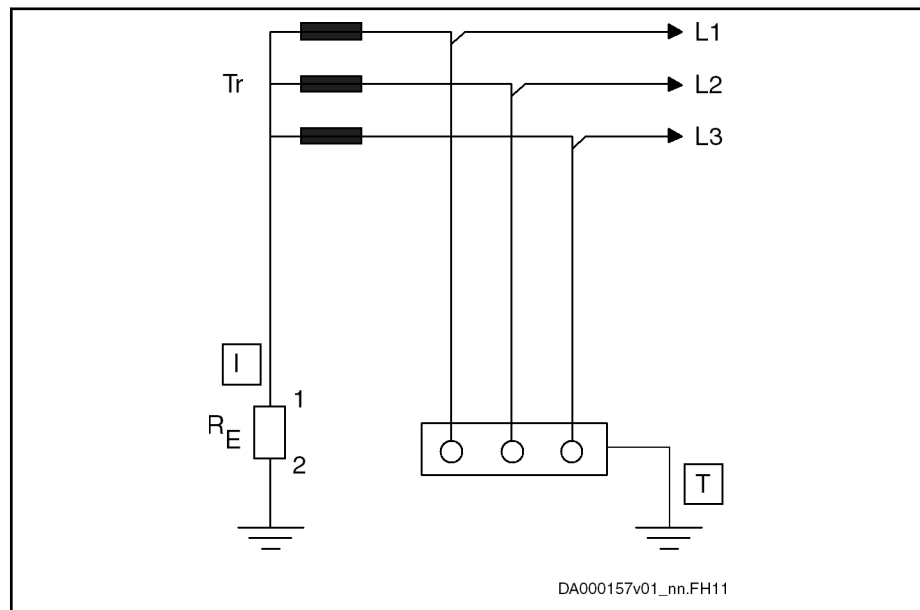

- I Isolation of all active parts from ground or connection of one point to ground via an impedance RE  
 T Exposed conductive parts directly grounded, independent of grounding of current source (station ground)

Fig.4-43: IT Mains Type



Notes on Project Planning



**Damage to the devices by voltage arcing!**

For applications with in which static charging can occur (e.g. printing, packaging), an isolating transformer with  $U_x \leq 2.5\%$  must be installed for operation at an IT mains.



**Voltage increase in the case of ground fault!**

In case of the error "ground fault" in the IT mains type, higher voltages against ground (device housing) than in error-free operation affect the device.

For operation at the IT mains type, the drive system including mains filter and mains choke should be galvanically decoupled from the mains via an **isolating transformer**.

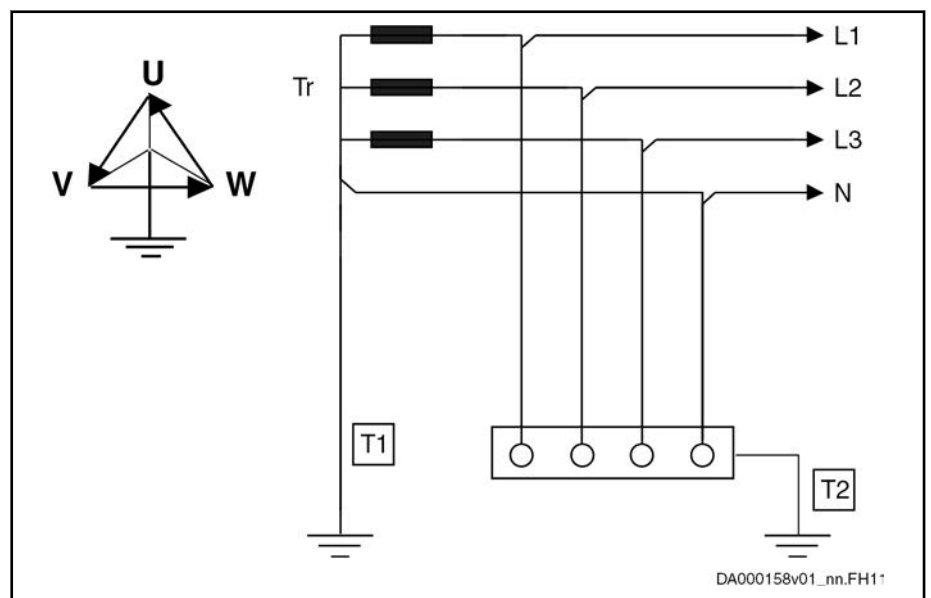
In this way, the ground fault detection or monitoring can remain effective in the installation.

When operating drive systems with HCS converters in other applications **without isolating transformer** at the IT mains type:

- Observe the allowed mains voltage  $U_{LN}$  at the IT mains type of the corresponding devices
- Observe the allowed switching frequency  $f_s$ ; see note below
- Check whether the ground fault detection of the mains does not trigger accidentally
- Check whether the interference suppression (that is only activated via the parasitic mains capacitances of the ungrounded mains) is still sufficient to comply with the required limit values

The EMC requirements are only complied with by further measures (special mains filters, among other things)!

**TT System**



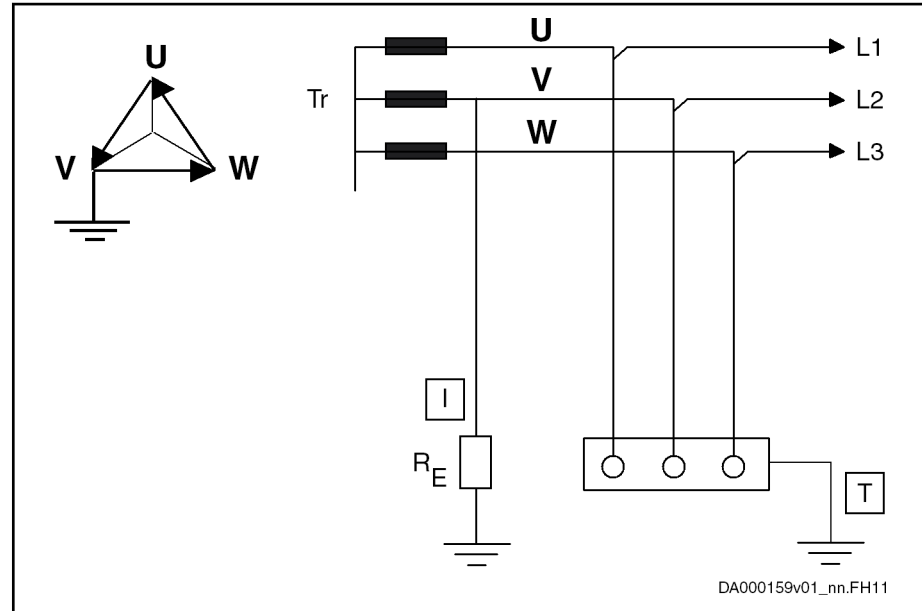
- T1 = Direct grounding of a point (station ground)  
 T2 = Exposed conductive parts directly grounded, independent of grounding of current source (station ground)

Fig.4-44: TT Mains System

## Combining the Individual Components

For applications with in which static charging can occur (e.g. printing, packaging), you must make sure that the "ground loop resistance" between the two grounding points T1 and T2 is smaller than 2 ohm for operation at a TT mains.

The EMC requirements are only complied with by specific measures (special mains filters, among other things).

**Mains Grounded via Outer Conductor (Corner-Grounded Delta Mains)**

I = Isolation of all active parts from ground, connection of one phase - generally phase V - to ground or via an impedance

T = Exposed conductive parts directly grounded, independent of grounding of current source (station ground)

Fig. 4-45: Mains grounded via outer conductor

**Notes on Project Planning**

The EMC requirements are only complied with by specific measures (special mains filters, among other things).



**Mains filters HNF01, NFD at mains grounded via outer conductor**  
HNF01.1 or NFD03.1 mains filters are not suited for operation on mains grounded via outer conductor. Use isolating transformers.

Allowed mains connection voltage: See technical data of the respective device

**Type of Mains Connection****Mains Supply**

1-phase <sup>1)</sup>	3-phase	
1 AC 110 ... 230 V	3 AC 200 ... 500 V	
	Autotransformer	-
	3 AC 110 ... 230 V	-

Combining the Individual Components

HCS01.1E-W0003-A-02	HCS01.1E-W0005-A-03
HCS01.1E-W0006-A-02	HCS01.1E-W0008-A-03
HCS01.1E-W0009-A-02	HCS01.1E-W0018-A-03
HCS01.1E-W0013-A-02	HCS01.1E-W0028-A-03
HCS01.1E-W0018-A-02	HCS01.1E-W0054-A-03
<b>Mains supply</b>	
Individual supply	Individual supply
	Group supply
	Central supply


1) With 1-phase mains supply, you can connect the mains supply line to connector X3 at L1, L2 or L3

Fig.4-46: Mains Supply

Wire the **Bb relay contacts** of the drive controllers supplied with mains voltage in the control circuit of the mains contactor.

**Individual Supply**

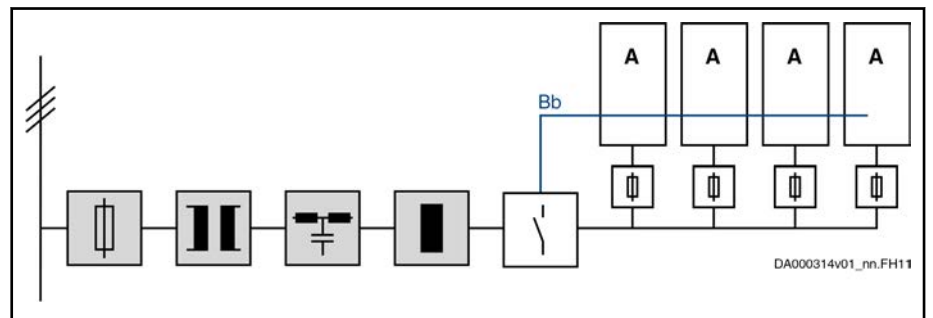Each component is **individually** connected to the supply mains. There is **no** DC bus connection between the devices.



Components marked with gray background color: Optional, depending on the application

A Component HCS01  
 Bb Bb relay contact wiring

Fig.4-47: Individual Supply

**NOTICE**

**Risk of fire caused by missing fuses!**

Install a fuse **before each drive controller**. In case a short circuit occurs in the drive controller, a fuse provides optimum safety against overheating or fire (see also IEC 61800-5-1 and UL 508C).

Observe the data for dimensioning line cross sections and fuses (see also IEC 60204-1, UL 508A and NFPA 79).

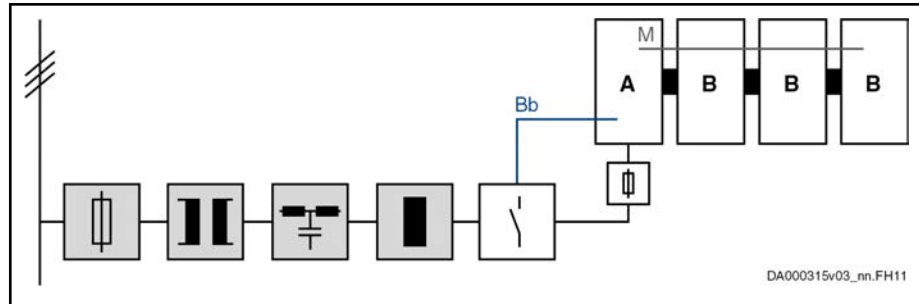
**Central Supply**



- Only HCS01.1E-W0028 and -W0054 components are suited for central supply.
- Central supply via HCS02.1, HCS03.1, HMV01.1 or HMV02.1 components is not allowed.
- Use the corresponding mains chokes to increase the DC bus continuous power.
- Wire the Bb relay contacts.

## Combining the Individual Components

**One powerful component** supplies other components via the common DC bus connection.



Components marked with gray background color: Optional, depending on the application


- A Component HCS01 (more powerful than component B); connected to other components via DC bus
- B Component HCS01 (less powerful than component A); connected to other components via DC bus
- Bb Bb relay contact wiring
- M Module bus

Fig.4-48: Central Supply

## Group Supply

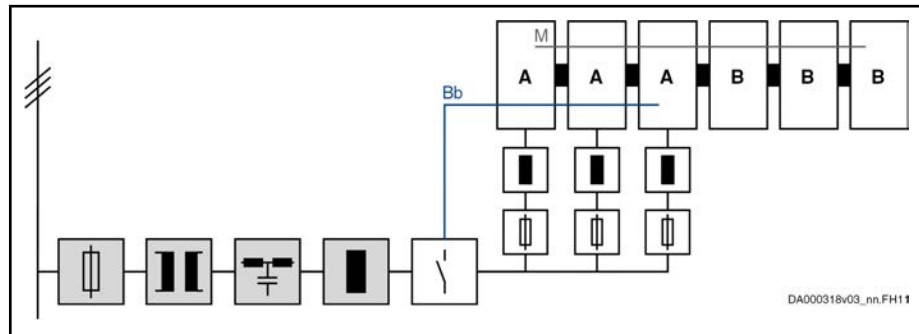- Option 1:

**Several powerful components** HCS01 (of the same size!) are connected to the mains and supply other components via the common DC bus connection. This requires balancing chokes between supply mains and components.



Components marked with gray background color: Optional, depending on the application; the choke is used to reduce current harmonics


- A Component HCS01 (more powerful than component B; all components A identical); connected to supply mains via balancing chokes; connected to other components via DC bus
- B Component HCS01 (less powerful than component A); connected to other components via DC bus
- Bb Bb relay contact wiring
- M Module bus

Fig.4-49: Group Supply; Several HCS01 Components Connected to Supply Mains

- Option 2:

**All components** HCS01 (of the same size!) are connected to the mains and interconnected via the common DC bus connection. This requires balancing chokes between supply mains and components.

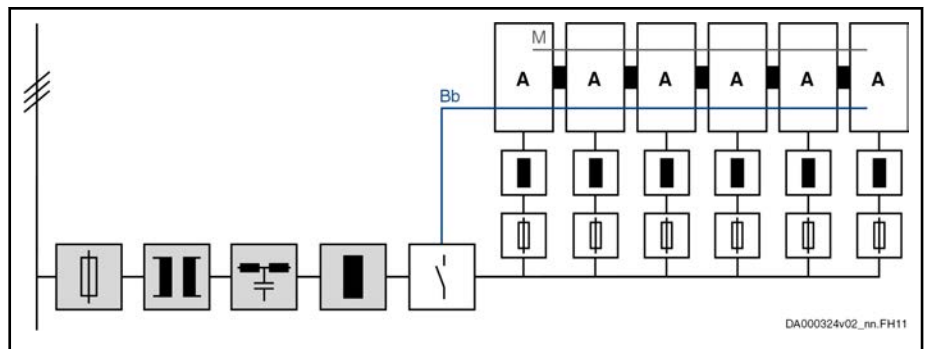Combining the Individual Components



Components marked with gray background color: Optional, depending on the application; the choke is used to reduce current harmonics

- A Component HCS01 (all components A identical); connected to supply mains via balancing chokes; interconnected via DC bus
- Bb Bb relay contact wiring
- M Module bus (not obligatory)


Fig.4-50: Group Supply; all HCS01 Components Connected to Supply Mains

**Parallel Operation** Group supply or central supply allows parallel operation of the HCS01 components to increase the DC bus continuous power.



Parallel operation of HCS01 components is only allowed under the following conditions:

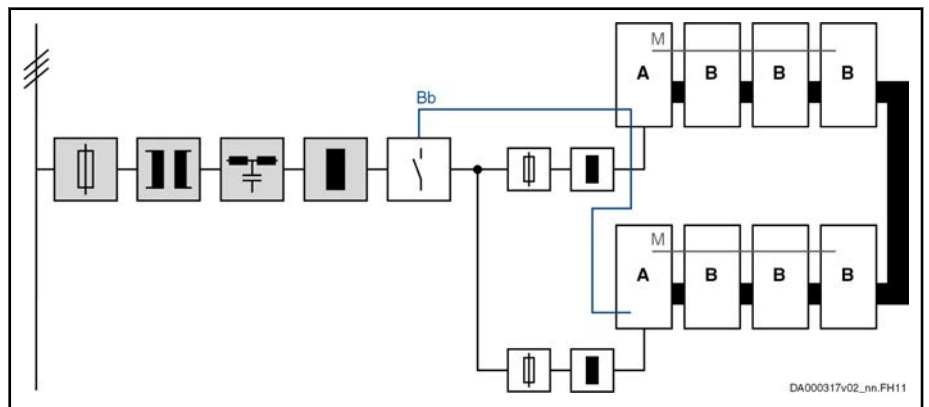- The components are of the same range HCS01
- The infeeding HCS01 components are of the same type
- Additional chokes balance the mains current



Components marked with gray background color: Optional, depending on the application; the choke is used to reduce current harmonics

- A Component HCS01 (more powerful than component B); connected to other components via DC bus
- B Component HCS01 (less powerful than component A); connected to other components via DC bus
- Bb Bb relay contact wiring
- M Module bus

Fig.4-51: Parallel operation



Connect the Bb relay contacts of all supplying components in series. You thereby ensure that the mains contactor is switched off in case there is an error in a component.

## Combining the Individual Components

## Mains Connected Load and Mains Current

## Technical Data of the Components

See index entry

- HCS01 → Mains voltage, data
- HCS01 → DC bus, data

## Calculating the Mains-Side Phase Current

The mains-side phase current is required for the following cases:

- Selecting mains contactor
- Determining fuses in the mains connection
- Determining line cross section
- Selecting other components in the mains connection (mains filter, mains choke)

## Operation Under Rated Conditions

For data on mains contactor, fuses and cross section in operation under rated conditions, see technical data of the respective device.

## Operation at Partial Load

Operation at partial load can lead to smaller mains contactors, fuses and line cross sections.

If defined data for operation at partial load are available, the mains-side phase current can be determined as follows:

1. Determine **motor power**

Take power of drive controller-motor combination from Rexroth Indra-Size or calculate it.

$$P_{mHa} = \frac{M_n \times n_n}{9550}$$

$P_{mHa}$  Mechanical nominal power for main drives (shaft output) [kW]

$M_n$  Nominal motor torque [Nm]

$n_n$  Nominal motor speed [ $\text{min}^{-1}$ ]

2. Determine **DC bus power** from motor power and efficiency

$$P_{DC} = \frac{M_{eff} \times n_m \times 2\pi}{60} \times k$$

$P_{DC}$  Required DC bus continuous power [W]

$M_{eff}$  Effective torque in Nm

$n_m$  Average speed in  $\text{min}^{-1}$

$k$  Factor for motor and controller efficiency = 1.25

3. Add **powers of all axes** at common DC bus and put them into relation to rated power of supply unit⇒ Partial load of  $P_{DC\_cont}$  is available4. Determine **power factor TPF** for partial load (TPF = Total Power Factor)For the value **TPF** at rated power and **TPF<sub>10</sub>** (at 10% of rated power), see technical data (mains voltage) of the component.

Combining the Individual Components

5. Calculate **mains connected load**

$$S_{LN} = \frac{P_{DC}}{TPF}$$

$S_{LN}$	Mains connected load [VA]
$P_{DC}$	DC bus continuous power [W]
TPF	Total Power Factor $\lambda$

6. Calculate **mains-side phase current**

3-phase: 
$$I_{LN} = \frac{S_{LN}}{U_{LN} \sqrt{3}}$$

1-phase: 
$$I_{LN} = \frac{S_{LN}}{U_{LN}}$$

$I_{LN}$	Mains-side phase current in [A]
$S_{LN}$	Mains connected load [VA]
$U_{LN}$	Voltage between phases of mains [V]

7. Select **mains contactor**  
8. Determine **mains circuit breaker and line cross section**  
See index entry "Line → Cross sections, dimensioning".

## Dimensioning the Line Cross Sections and Fuses

### Dimensioning the line cross sections and fuses in the supply feeder and branches to the drive system:

1. Determine current in supply feeder of drive system and correct it with correction factors for [ambient temperature](#) and [bundling](#).  
(In the technical data of the components in section "Data for Mains Voltage Supply", you can find standardized data for connection cross section and mains circuit breaker at operation under rated conditions.)
2. Determine country of use ("international except for USA/Canada" or "USA/Canada")
3. Determine installation type (e.g. B1 or B2)
4. In table row "Current I", select value immediately above the value determined in the first step
5. In table row "Nominal current fuse", read corresponding fuse
6. In table row "Cross section A ...", read corresponding required cross section

## Combining the Individual Components

Country of use: International except for USA/Canada		
Current I	Nominal current fuse	Cross section A for installation type B1
A	A	mm <sup>2</sup>
1,6	2	1,5
3,3	4	Minimum cross section acc. to EN 60204-1:2006, table 5 (Main circuits; outside of hous- ings; permanently installed; sin- gle-core lines; stranded wire de- sign class 2)
5,0	6	
8,6	10	
10,3	16	
13,5	16	
18,3	20	2,5
22	25	4
28	32	6
31	40	6
35	40	10
44	50	10
59	63	16
77	80	25
96	100	35
117	125	50
149	160	70
180	200	95
208	250	120
227	250	150
257	315	185
301	355	240
342	400	300

Fig.4-52: Line Cross Sections and Fuses, B1 According to EN 60204-1:2006, Table 6, as of 150mm<sup>2</sup> DIN IEC 60364-5-52:2004, Table B.52-4



Combining the Individual Components

Country of use: International except for USA/Canada		
Current I	Nominal current fuse	Cross section A for installation type B2
A	A	mm <sup>2</sup>
1,6	2	0,75
3,3	4	Minimum cross section acc. to EN 60204-1:2006, table 5 (Main circuits; outside of hous- ings; permanently installed; mul- ti-core lines)
5,0	6	
8,5	10	
10,1	16	1,0
13,1	16	1,5
17,4	20	2,5
23	25	4
28	32	6
30	40	6
35	40	10
40	50	10
54	63	16
70	80	25
86	100	35
103	125	50
130	160	70
156	200	95
179	200	120
195	224	150
221	250	185
258	315	240
294	355	300

Fig.4-53: Line Cross Sections and Fuses, B2 According to EN 60204-1:2006, Table 6, as of 150mm<sup>2</sup> DIN IEC 60364-5-52:2004, Table B.52-4

## Combining the Individual Components

Country of use: International except for USA/Canada		
Current I	Nominal current fuse	Cross section A for installation type E
A	A	mm <sup>2</sup>
1,6	2	0,75
3,3	4	Minimum cross section acc. to EN 60204-1:2006, table 5 (Main circuits; outside of hous- ings; permanently installed; mul- ti-core lines)
5,0	6	
8,3	10	
10,4	16	
12,4	16	1
16,1	20	1,5
22	25	2,5
28	32	4
30	40	4
37	40	6
44	50	10
52	63	10
70	80	16
88	100	25
110	125	35
133	160	50
171	200	70
207	250	95
240	315	120
277	355	150
316	400	185
374	425	240
432	500	300

Fig.4-54: Line Cross Sections and Fuses, E According to EN 60204-1:2006, Table 6, as of 150mm<sup>2</sup> DIN IEC 60364-5-52:2004, Table B.52-10

Combining the Individual Components

Country of use: USA/Canada		
Current I	Nominal current fuse	Cross section A
A	A	AWG
1,6	2	14 Minimum cross section acc. to UL 508 A:2007, chapter 29.6
3,3	4	14
5,0	6	14
8,3	10	14
13	15	14
15	20	14
20	25	12
30	40	10
50	70	8
65	80	6
85	100	4
100	110	3
115	125	2
130	150	1
150	175	1/0
175	200	2/0
200	225	3/0
230	250	4/0
255	300	250 kcmil
285	300	300 kcmil
310	350	350 kcmil
335	350	400 kcmil
380	400	500 kcmil
420	450	600 kcmil

Fig.4-55: Line Cross Sections and Fuses According to UL508A:2007, Table 28.1

*Dimensioning variables of the table values*

1. Ambient temperature  $T_A$  of routed lines  $\leq 40$  °C
2. Temperature  $T_L$  at conductor at nominal current: 90 °C for UL-listed lines (USA/Canada) or 70 °C for PVC lines
3. The nominal current of the fuse is approx. 10-20% above the nominal current  $I_{LN}$  of the converter/supply unit or the determined current of the drive system.
4. Installation types:

## Combining the Individual Components

- B1 according to IEC 60364-5-52, e.g. stranded wires routed in cable duct
- B2 according to IEC 60364-5-52, e.g. multi-core line routed in cable duct
- E according to EN 60204-1, e.g. multi-core line routed on open cable tray
- According to NFPA 79 (external wiring), UL508A (internal wiring), NEC, NFPA 70:
  - 1 cable with 3 conductors, 1 neutral conductor and 1 equipment grounding conductor
  - Routed in pipe on the wall

Internal wiring: Routing inside of control cabinet or inside of devices

External wiring: Routing outside of control cabinet

Field wiring: Data of cross sections of terminal connectors wired by the user (in the field)

## 5. Recommendation for design of the fuses:

- **International except for USA/Canada:** Class gG; 500V, 690V; design NH, D (DIAZED) or D0 (NEOZED)

**Characteristic**

In the case of error (e.g. ground fault at connections L+, L-), fuses of characteristic **gG** (general-purpose fuse link for general installations), as well as circuit breakers, protect the **lines** in the supply feeder to the drive system.

To **protect the semiconductors** in the input of supply units and converters, you can use fuses of characteristic **gR**.

- **USA / Canada:** Class J; 600V

**Circuit breaker**

As an alternative to fuses, you can use circuit breakers with lower peak let-through current and lower let-through energy than the corresponding fuse.

**Correction factors**

For deviating dimensioning variables, the corresponding standards specify correction factors.

Below you can find the correction factors for ambient temperature and numbers of routed lines and circuits. If necessary, multiply the determined current in the supply feeder with these factors.

---

Combining the Individual Components

**Correction Factor Ambient Temperature**

Ambient temperature $T_A$ / °C	30	35	40	45	50	55	60
Correction factor according to EN 60204-1:2006, table D.1	0,87	0,93	1,00	1,1	1,22	1,41	1,73
Correction factor according to NFPA 79:2007, table 12.5.5(a)	0,88	0,94	1,00	1,1	1,18	1,32	1,52


Fig. 4-56: Correction Factor Ambient Temperature According to EN 60204-1:2006 and NFPA 79:2007

**Correction Factor for Bundling of Lines (Installation Methods B2 and E) and Circuits (Installation Method B1<sup>1)</sup>)**

Number of lines	1	2	3	4	5
Correction factor according to EN 60204-1:2006, table D.2	1	1,25	1,43	1,54	1,67
Correction factor according to NFPA 79:2007, table 12.5.5(b)	1	1,25			

1) Three single cores (L1, L2, L3) for mains supply of a device are to be considered as one circuit.

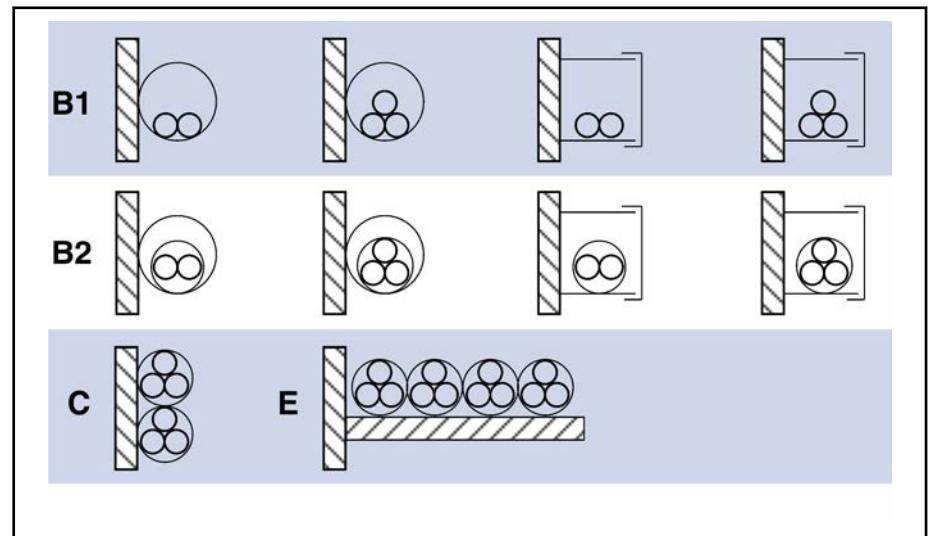Fig. 4-57: Correction Factor for Bundling of Lines and Circuits According to EN 60204-1:2006 and NFPA 79:2007



- B1 Conductors in installation pipes and in installation channels that can be opened
- B2 Cables or lines in installation pipes and in installation channels that can be opened
- C Cables or lines on walls
- E Cables or lines on open cable trays

Fig. 4-58: Installation Types (cf. IEC 60364-5-52; DIN VDE 0298-4; EN 60204-1)

**Dimensioning and Selecting the Mains Transformer**

Mains transformers are always needed when the mains voltage is outside of the allowed nominal voltage of the component.

**Grounded Mains** As a matter of principle, the mains voltage for grounded mains is adjusted by means of **autotransformers**.

## Combining the Individual Components

**Ungrounded Mains** As a matter of principle, the mains voltage for ungrounded mains is adjusted by means of **isolating transformers** to avoid prevent overvoltages between outer conductor and ground. Short-circuit voltage of the isolating transformer:  $\leq 4\%$

**Applications for Autotransformers** With HCS01 components, there are two applications for which autotransformers are necessary:

1. HCS01.1E-W00xx-A-02 components are used:

With a mains voltage of 3 AC 400 V, the voltage must be adjusted via an autotransformer to use HCS01.1E-W00xx-A-02 components with an input voltage range of 3 AC 110...230 V.

2. An MSM motor is used in conjunction with an HCS01.1E-W00xx-A-03 component:

MSM motors have been dimensioned for a voltage of 230 V. To operate MSM motors at a mains voltage of 3 AC 400 V at an HCS01.1E-W00xx-A-03 component, the mains voltage must be adjusted to 3 AC 230 V via an autotransformer.

## Dimensioning the Mains Filter

**Criteria for Selecting the Mains Filter** Take the following criteria into account for selecting the appropriate mains filter:

- EMC limit value class on site
- Ambient conditions on site
- Harmonics on mains voltage on site
- Loading by mains voltage and mains frequency on site
- Loading by harmonics on site
- Loading by mains-side phase current
- Total length of connected power cables
- Sum of leakage capacitances
- Clock frequency of drive controller

**How to Proceed for Selecting the Mains Filter** The selection of the mains filter is significantly determined by the operating conditions.

*How to proceed for selecting the mains filter:*

1. Determine the required EMC limit value class for the application.
2. Determine the maximum applied mains voltage.  
Observe that not all Rexroth IndraDrive Cs mains filters are suited for a mains voltage of 3 AC 500 V.  
Check whether the mains voltage of the mains filter is loaded with harmonics and still allowed for the mains filter.  
If necessary, reduce the harmonics on site.
3. Determine the kind of mains connection, such as central supply, group supply etc. (to do this, it is useful to outline the involved components and their interaction).
4. Calculate the **mains-side phase current** of the mains filter. You can find the procedure for calculating the mains-side phase current in a separate chapter (see index entry "Phase current → Calculating"). For selecting the components, calculate the effective rms value.

Combining the Individual Components

Check or determine the maximum occurring ambient temperature. Select a mains filter with higher nominal current, when the ambient temperature is above 45 °C.

5. Select a mains contactor the nominal current of which does not exceed nominal current of the mains filter.
6. Determine the number of drive axes.
7. Determine the total length of the connected power cables.
8. Determine the sum of the leakage capacitances on the load side of the mains filter.

The sum of the leakage capacitances results from the number of operated axes and the length of the connected power cables. You can find the procedure for determining the leakage capacitance in a separate chapter (see index entry "Leakage capacitance → Determining").

9. Take the clock frequency of the drive controller into account.

The higher the clock frequency of the drive controller, the higher the leakage currents and the interference emissions they involve.

The following leakage capacitances (motor cable + motor) mustn't be exceeded per drive controller.

**HCS01.1E-W0003, -W0006, -W0009, -W0013**

Clock frequency [kHz]	Maximum leakage capacitance (Motor + cable) per device [nF]	Motor cable length [m]
4	33	40
8	17	20
12	13	15
16	5	5

Fig.4-59: Clock Frequency, Leakage Capacitance, Motor Cable Length

**HCS01.1E-W0005, -W0008**

Clock frequency [kHz]	Maximum leakage capacitance (Motor + cable) per device [nF]	Motor cable length [m]
4	34	40
8	18	20
12	14	15
16	6	5

Fig.4-60: Clock Frequency, Leakage Capacitance, Motor Cable Length

**HCS01.1E-W0018, -W0028**

Clock frequency [kHz]	Maximum leakage capacitance (Motor + cable) per device [nF]	Motor cable length [m]
4	40	40
8	24	20

## Combining the Individual Components

Clock frequency [kHz]	Maximum leakage capacitance (Motor + cable) per device [nF]	Motor cable length [m]
12	20	15
16	12	5

Fig.4-61: Clock Frequency, Leakage Capacitance, Motor Cable Length

## HCS01.1E-W0054

Clock frequency [kHz]	Maximum leakage capacitance (Motor + cable) per device [nF]	Motor cable length [m]
4	85	75
8	43	38
12	30	25

Fig.4-62: Clock Frequency, Leakage Capacitance, Motor Cable Length

Select the appropriate mains connection (supply unit/converter, mains choke, mains filter) from the tables in the corresponding chapter (see index entry "Mains connection → Transformer, mains filter, mains choke").

## Notes on Installation



When using NFE02 or NFD03 mains filters at **mains grounded via outer conductor**, install an isolating transformer between mains and mains filter.

## Selecting the Mains Filter



The specified mains filter types are exclusively suited for TN and TT mains.

The EMC limit values relate to line-based noise emission in the frequency range of 0.15... 30 MHz on the mains connection lines.

HCS01.1E-W0005, -W0008, -W0018-A-03, -W00028, -W00054			
Nominal voltage of mains filter: 3 × 400 V			
Clock frequency [kHz]	Leakage capacitance (motor + cable) [nF]	Mains filter	EMC limit value class to be achieved (IEC / EN 61800-3)
4; 8	< 100	NFD03.1	C2
4; 8	100 < ... < 150		C3
12; 16	< 30		C2
12; 16	30 < ... < 70		C3

Fig.4-63: Mains filter; 3 × 400 V



Combining the Individual Components

HCS01.1E-W0005, -W0008, -W0018-A-03, -W00028, -W00054			
Nominal voltage of mains filter: 3 × 400 ... 500 V			
Clock frequency [kHz]	Leakage capacitance (motor + cable) [nF]	Mains filter	EMC limit value class to be achieved (IEC / EN 61800-3)
4; 8	< 70	FN3258H (Schaffner)	C2
4; 8	70 < ... < 100		C3
12; 16	< 20		C2
12; 16	20 < ... < 50		C3

Fig.4-64: Mains filter; 3 × 400 ... 500 V

HCS01.1E-W0003, -W0006, -W0009, -W0013, -W0018-A-02			
Nominal voltage of mains filter: 1 × 230 V			
Clock frequency [kHz]	Leakage capacitance (motor + cable) [nF]	Mains filter	EMC limit value class to be achieved (IEC / EN 61800-3)
4; 8	< 90	NFE02.1 <sup>1)</sup> FN350 (Schaffner)	C2
4; 8	90 < ... < 120		C3
12	< 20		C2
12	20 < ... < 40		C3

1) Only allow up to a nominal current of 8 A  
 Fig.4-65: Mains Filter; 1 × 230 V

HCS01.1E-W0005, -W0008, -W0018-A-03, -W00028, -W00054, (mains voltage: 3 × 400 V, L1-L2-L3) can be combined with <sup>1)</sup> HCS01.1E-W0003, -W0006, -W0009, -W0013, -W0018-A-02, (mains voltage: 1 × 230 V, L-N) Nominal voltage of mains filter: 3 × 400 V + N			
Clock frequency [kHz]	Leakage capacitance (motor + cable) [nF]	Mains filter	EMC limit value class to be achieved (IEC / EN 61800-3)
4	< 70	FN3280H (Schaffner)	C2
4	70 < ... < 120		C3
4	< 70	FN3256H (Schaffner)	C3
8	< 40	FN3280H (Schaffner)	C2
8	40 < ... < 70		C3
8	< 40	FN3256H (Schaffner)	C3
12	< 20	FN3280H (Schaffner)	C2

1) This combination allows interconnecting 3-phase and 1-phase HCS01 devices at one common 4-phase mains filter. Thereby, the nominal current of the mains filter and the maximum allowed leakage capacitance are taken into account.  
 Fig.4-66: Mains Filter; 3 × 400 V + N


## Combining the Individual Components

## Limit Value Classes

IEC / EN 61800-3	CISPR 11 (EN55011)	Explanation	Curves of limit value characteristic
Category C4, 2nd environment	None	One of the following 3 requirements must have been fulfilled: Mains connection current >400 A, IT mains or required dynamic drive behavior not reached by means of EMC filter. Adjust limit values to use and operation on site. User has to carry out and provide evidence of EMC planning.	-
Category C3, 2nd environment	Class A; Group 2 I > 100 A	Limit value in industrial areas to be complied with for applications operated at supply mains with nominal currents > 100 A.	1.1 1.2
Category C3, 2nd environment	Class A; Group 2 I < 100 A	Limit value in industrial areas to be complied with for applications operated at supply mains with nominal currents < 100 A.	2.1 2.2
Category C2, 1st environment; Restricted distribution	Class A; Group 1	Limit value in residential area or at facilities at low-voltage mains supplying buildings in residential areas. To be complied with for applications with restricted distribution.	3.1 3.2
Category C1, 1st environment; Unrestricted distribution	Class B; Group 1	Limit value in residential areas to be complied with for applications with unrestricted distribution.	4.1 4.2

Fig.4-67: Limit Value Classes

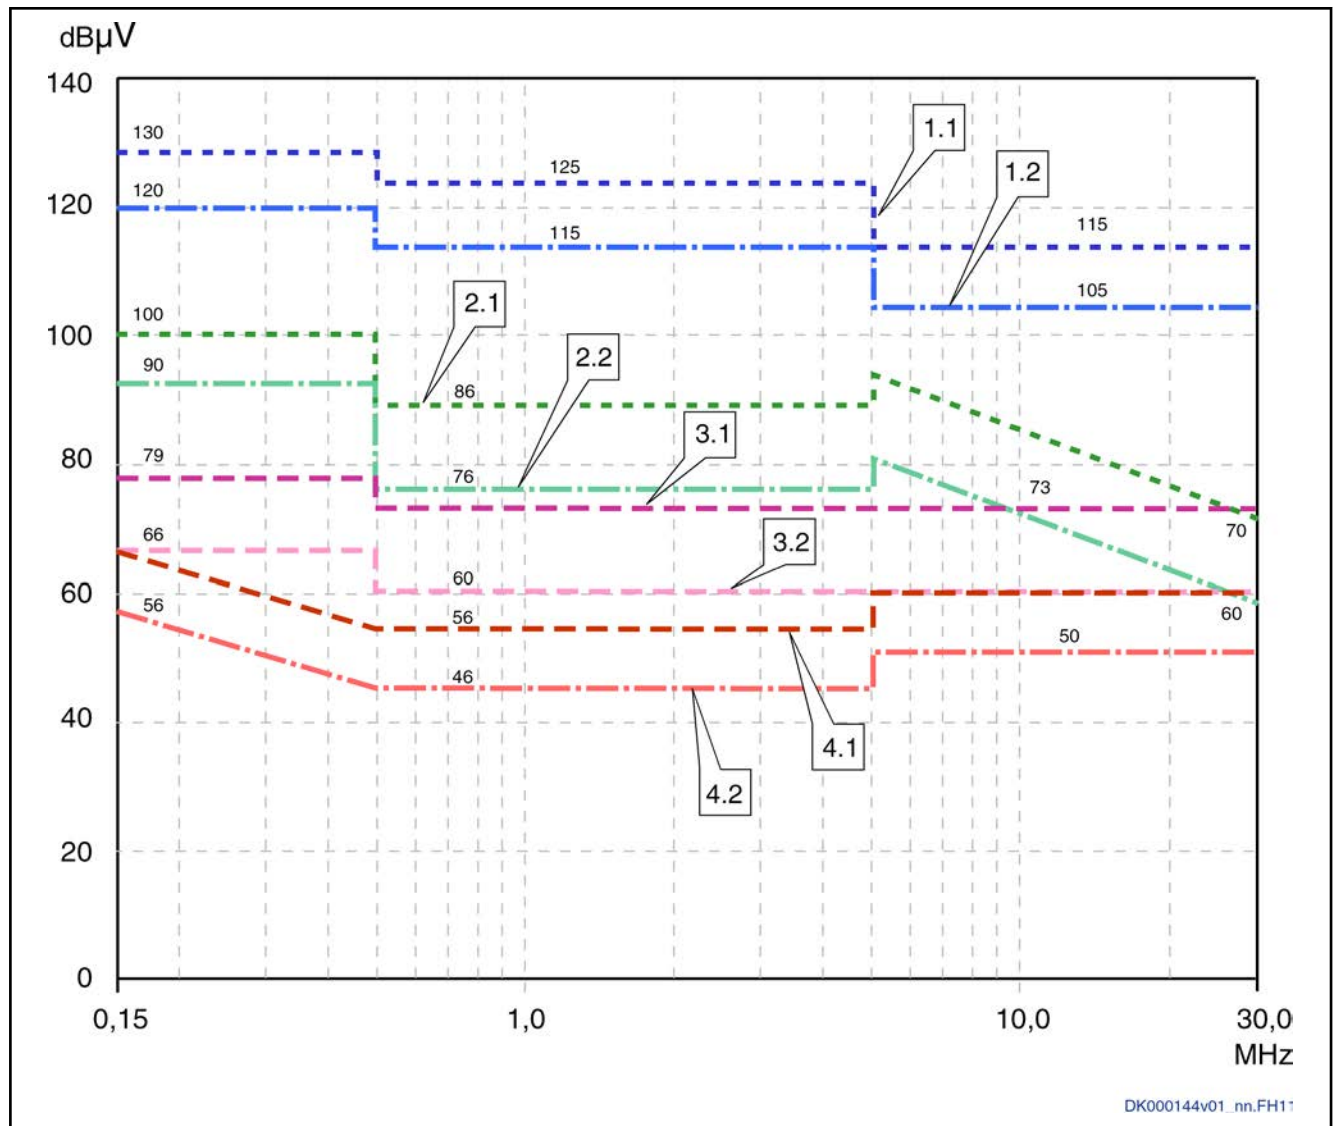Combining the Individual Components



- 1.1 Category C3: Second environment, QSP, I > 100 A (class A, group 2, I > 100 A)
  - 1.2 Category C3: Second environment, AV, I > 100 A (class A, group 2, I > 100 A)
  - 2.1 Category C3: Second environment, QSP, I < 100 A (class A, group 2, I < 100 A)
  - 2.2 Category C3: Second environment, AV, I < 100 A (class A, group 2, I < 100 A)
  - 3.1 Category C2: First environment, restricted distribution, QSP (first environment, even if source of interference in second environment) (class A, group 1)
  - 3.2 Category C2: First environment, restricted distribution, AV (first environment, even if source of interference in second environment) (class A, group 1)
  - 4.1 Category C1: First environment, unrestricted distribution, QSP (first environment, even if source of interference in second environment) (class B, group 1)
  - 4.2 Category C1: First environment, unrestricted distribution, AV (first environment, even if source of interference in second environment) (class B, group 1)
- Notes (1) Limit value for first environment is also relevant, if source of interference of second environment affects first environment  
 (2) Designations "class" and "group" according to IEC CISPR 11

## Combining the Individual Components

QSP: Measuring method quasi peak measurement; AV: Measuring method arithmetic averaging

*Fig. 4-68: Limit Values for Line-Based Disturbances (IEC 61800-3); Limit Value Characteristic through Frequency Range*

## Determining the Mains Choke

When using mains chokes, take their effect on the connected drive controllers into account. Due to their inductance, mains chokes have a smoothing effect on the current and thereby reduce harmonics.

Take the nominal current of the mains choke into account to have the inductance of the mains choke available.

Some mains chokes are assigned to certain drive controllers (see Data for mains voltage supply → Assigned type of mains choke).

## Dimensioning the Mains Contactor

Required data:

- Nominal current  $I_{LN}$  of the drive controller
- Number of drive controllers connected to the mains contactor

For the Nominal current  $I_{LN}$ , see the technical data of the drive controller (Data for Mains Voltage Supply; see index entry "HCS01 → Mains voltage, data").

If you use mains contactors of utilization category AC-1, observe the conventional thermal continuous current  $I_{th}$  (see data sheet of mains contactor) when dimensioning the mains contactor.

The minimum required conventional thermal continuous current  $I_{th}$  results from the sum of nominal currents  $\Sigma I_{LN}$  of all connected drive controllers.

Combining the Individual Components


Combining Transformer, Mains Filter and Mains Choke

HCS01.1E	Transformer		Mains filter			Mains choke
	DST <sup>3)</sup>	DLT <sup>4)</sup>	NFE 02.1	NFD 03.1	HNF01.1*-****-E****	HNL01.1E
W0003 W0006 W0009 W0013 W0018-A-02	■	■	■	■	1)	-
W0005 W0008 W0018-A-03 W0028 W0054	■	■	-	■	1)	■ <sup>2)</sup>

- Allowed
  - Not allowed
  - 1) We are currently checking whether it is possible to combine HNF mains filters and several HCS01 components.
  - 2) Only possible with -W0028 and -W0054 components
  - 3) DST = Autotransformer
  - 4) DLT = Isolating transformer
- Fig.4-69: Additional Components in the Mains Connection of HCS01 Components*

## Combining the Individual Components
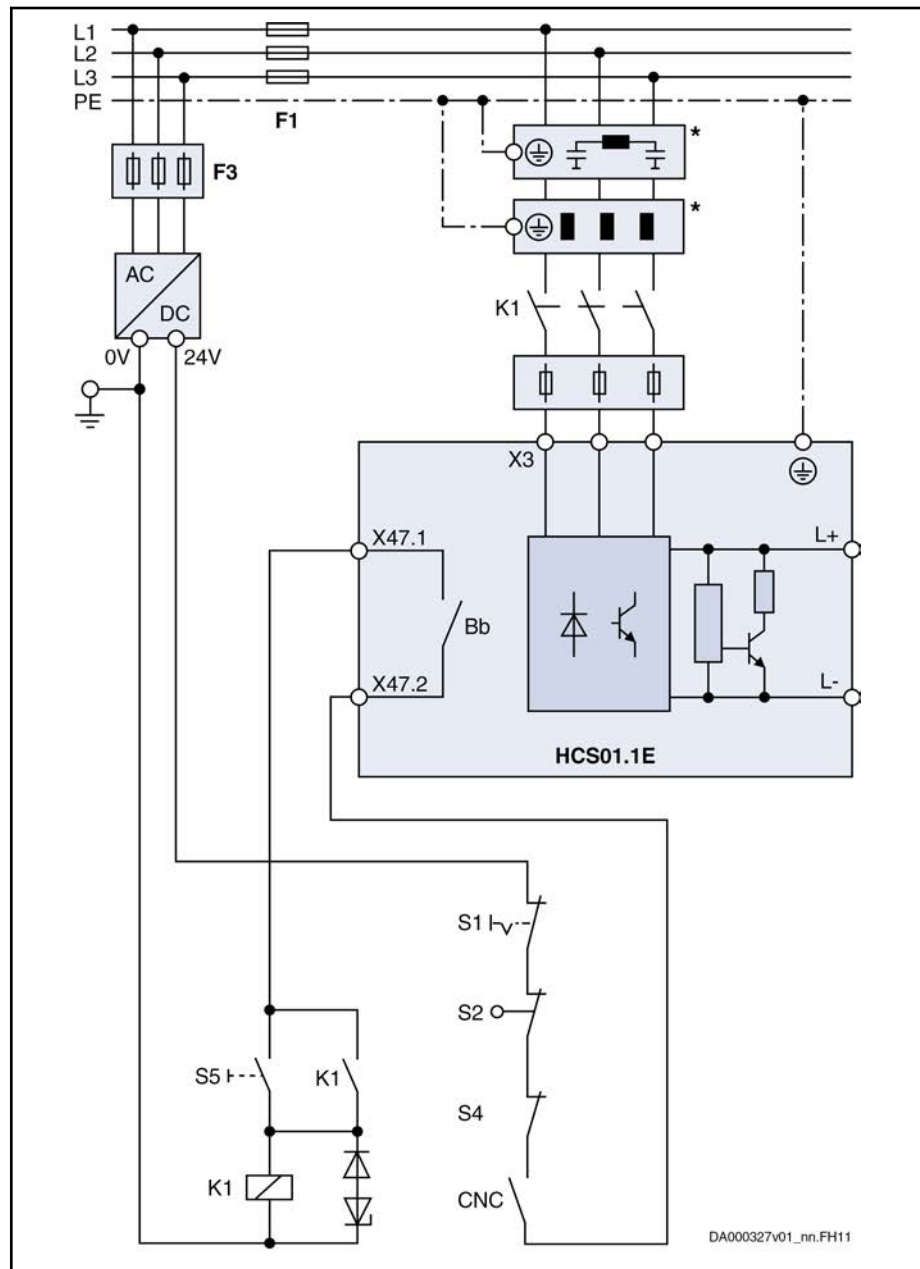
## Control Circuit for the Mains Connection




- \* Optional
- Bb Bb relay contact (see Connection point X47)
- CNC Lag error message of control unit
- F1 Fuse of power supply
- F3 Fuse of 24V power supply unit
- K1 External mains contactor
- S1 Emergency stop
- S2 Axis end position
- S4 Power Off
- S5 Power On

Fig.4-70: Control Circuit for the Mains Connection

## 4.6.4 DC Bus Coupling

### Requirements for DC Bus Coupling

<b>Device Types</b>	Only devices of the "HCS01.1E-W00**-* <b>-03</b> " type are suited for DC bus coupling. DC bus coupling takes place via the optionally available DC bus connector at the connection point X77.
	<hr/>  <b>Parameterization:</b> For all devices which are only supplied via the DC bus, "DC bus → inverter mode" must be set as the source of power supply in parameter "P-0-0860, Converter configuration" (see also Parameter Description of the firmware used). <hr/>
<b>Number</b>	A <b>maximum of 8</b> devices can be coupled at a common DC bus.
<b>Mains Connection</b>	DC bus coupling is possible for the following types of mains connection: <ul style="list-style-type: none"><li>• <b>Central Supply</b></li><li>• <b>Group Supply</b></li></ul> DC bus coupling requires: <ul style="list-style-type: none"><li>• That the Bb contacts of all devices connected to the mains be wired</li><li>• That the module bus be wired via all devices at the common DC bus</li></ul>

### Central Supply and DC Bus Coupling

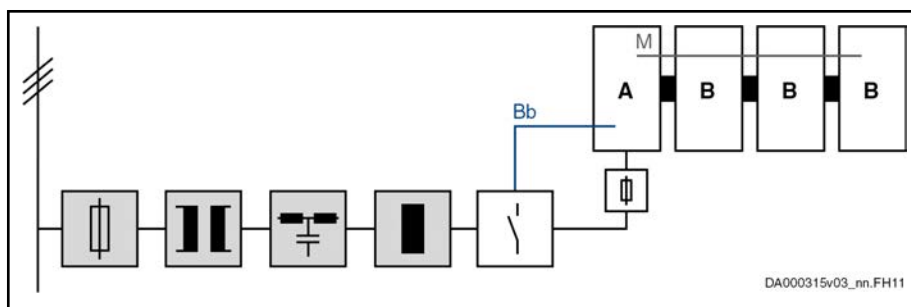
Use this type of DC bus coupling, when the DC bus continuous power of the infeeding device makes available sufficient power reserves to supply other HCS01 devices. The devices in the group can be of different types. For the project planning of the application, observe that the supplying devices can only make available the DC bus power for other devices which they do not consume themselves.

With central supply, **one** HCS01 **device** charges the DC bus and the other devices are supplied via DC bus coupling.

#### *Features*

- The supplying device must be of the **HCS01.1E-W0028 or -W0054** type
- Energy compensation between the devices is possible (the DC bus capacitors of the devices are connected in parallel)
- Balancing of the integrated braking resistors exists (equal load of all braking resistors integrated in the devices)
- No balancing measures required in the supply feeder
- To increase the DC bus power, a mains choke can be optionally used
- It is possible to connect DC bus capacitor units; DC bus capacitor units should always be placed directly next to the most powerful device  
A DC bus capacitor unit HLC requires a mains choke to be installed
- Small wiring effort for the mains connection
- DC bus short circuit functionality must be realized externally, if required

## Combining the Individual Components



Components marked with gray background color: Optional, depending on the application

- A Component HCS01 (more powerful than component B); connected to other components via DC bus
- B Component HCS01 (less powerful than component A); connected to other components via DC bus
- Bb Bb relay contact wiring
- M Module bus

Fig.4-71: Central Supply

## Group Supply and DC Bus Coupling

## Possibilities of DC Bus Coupling

For group supply with DC bus coupling, there are **two options**:

1. **At least two devices** supply the DC bus and other devices are supplied via the common DC bus connection
2. **All devices** with common DC bus connection supply the DC bus



When sizing the devices for group supply, observe the **balancing factor**:

- 0.8 (when balancing is used)
- 0.5 (when balancing is not used)

With group supply, the **Bb relay contacts of all supplying devices** must be connected **in series**. This guarantees that the mains contactor is switched off in the case of error in a device.

The **lines** of DC bus coupling mustn't be run outside of the control cabinet. The maximum line length of a DC bus coupling is 2 m. See also description of the connection point X77 for more information ([see page 131](#)).

**Balancing:** To distribute the charging process of the DC bus equally over all supplying devices, balancing chokes or balancing resistors must be installed in the supply feeder.

*Balancing Choke*

- HCS01.1E-W0028: Mains choke HNL01.1E-1000-N0012-A-500-NNNN
- HCS01.1E-W0054: Mains choke HNL01.1E-0600-N0032-A-500-NNNN

The firmware provides for the balancing of the power over all braking resistors. See also the documentation of the firmware used (parameter "P-0-0860, Converter configuration").



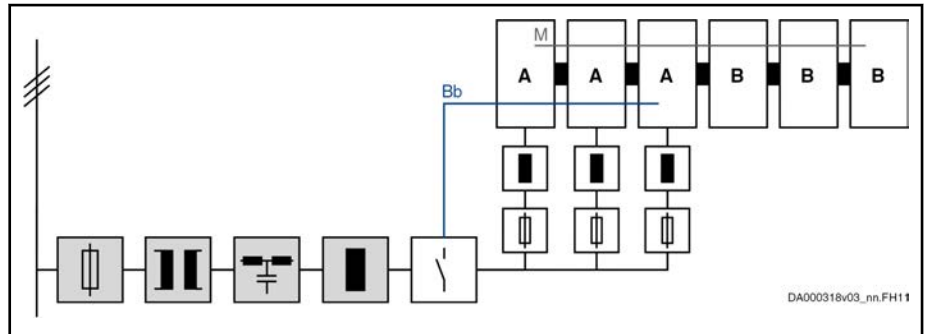
Combining the Individual Components



The parallel connection of the braking resistors causes **derating/ reduction of power** of the continuous braking resistor power to the factor 0.8.

Supply via at Least Two Devices

Use this type of DC bus coupling if you use **different HCS01 device types** in your application.



- Components marked with gray background color: Optional, depending on the application; the choke is used to reduce current harmonics
- A Component HCS01 (more powerful than component B; all components A identical); connected to supply mains via balancing chokes; connected to other components via DC bus
  - B Component HCS01 (less powerful than component A); connected to other components via DC bus
  - Bb Bb relay contact wiring
  - M Module bus
- Fig.4-72: *Group Supply; Several HCS01 Components Connected to Supply Mains*

Features


- The supplying devices<sup>1) 2)</sup> must be of the same type. The following devices are suited as supplying devices:
  - HCS01.1E-W0028
  - HCS01.1E-W0054
- DC bus continuous power of the supplying devices reduced by parallel operation
- Energy compensation between the devices is possible (the DC bus capacitors of the devices are connected in parallel)
- Balancing of the integrated braking resistors exists (equal load of all braking resistors integrated in the devices)
- Balancing chokes or balancing resistors required in supply feeder
- It is possible to connect DC bus capacitor units
- Wiring effort for the mains connection relatively small
- It is possible to use a common mains contactor, as well as a common mains filter
- DC bus short circuit functionality must be realized externally, if required

<sup>1)</sup> **Supplying** devices are devices connected to the mains which supply power to other devices via a DC bus connection

<sup>2)</sup> **Supplied** devices are devices not connected to the mains which are supplied with power by the supplying devices via a DC bus connection

## Combining the Individual Components

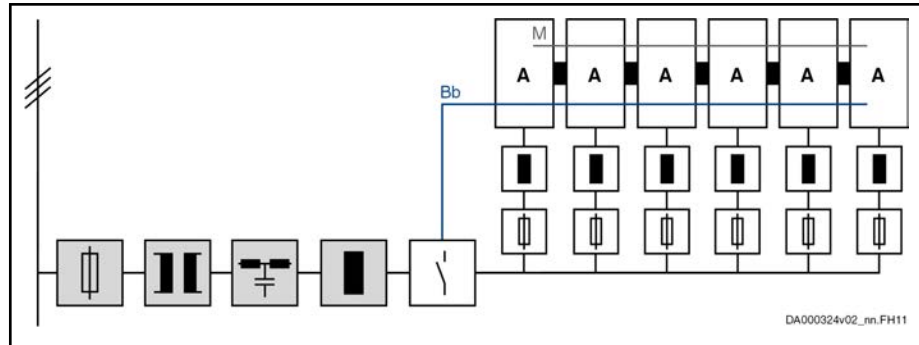**Supply via all Devices** Use this type of DC bus coupling if you exclusively use **one HCS01 device type** in your application.



Components marked with gray background color: Optional, depending on the application; the choke is used to reduce current harmonics  
A Component HCS01 (all components A identical); connected to supply mains via balancing chokes; interconnected via DC bus

Bb Bb relay contact wiring

M Module bus (not obligatory)

Fig.4-73: Group Supply; all HCS01 Components Connected to Supply Mains

## Features

- All devices must be of the **same type**
- DC bus continuous power of the supplying devices reduced by parallel operation
- Energy compensation between the devices is possible (the DC bus capacitors of the devices are connected in parallel)
- Balancing of the integrated braking resistors exists (equal load of all braking resistors integrated in the devices)
- Balancing chokes or balancing resistors required in supply feeder
- It is possible to connect DC bus capacitor units
- Wiring effort for the mains connection of all devices relatively big
- DC bus short circuit functionality must be realized externally, if required

## Implementation of DC Bus Coupling

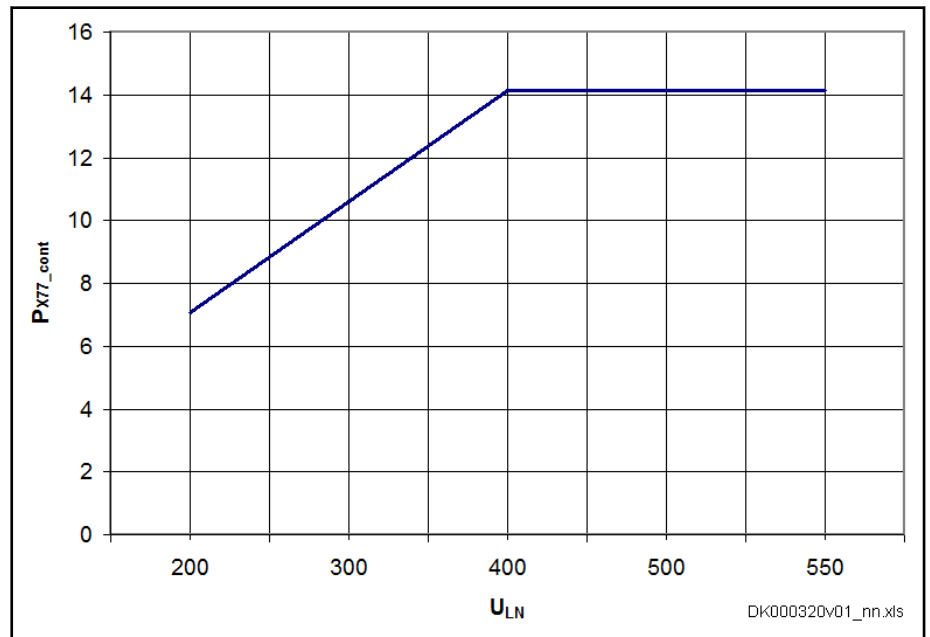
**Maximum Number of Devices** A **maximum of 8** devices can be coupled at a common DC bus.

The maximum number of devices which can be interconnected via DC bus coupling depends on

- the power reserves of the supplying devices  
(The power reserve ( $P_{\text{reserve}}$ ) results from the difference between the possible DC bus continuous power of the device and the power consumed by the motor connected to the device.)
- the type of DC bus connection:
  - Connection looped through via DC bus connector X77
  - DC bus connecting bar with spur lines to the individual devices
- the sum of DC bus continuous powers of all supplied devices
- the mains voltage value
- the maximum continuous power which can be looped through via the DC bus connector X77  
(The continuous power results from the current carrying capacity of the DC bus connector X77 and the mains voltage value.)

Combining the Individual Components

Load of DC Bus Connector at I = 25 A:



U<sub>LN</sub> Mains voltage  
 P<sub>X77\_cont</sub> Continuous power at DC bus connector X77  
 Fig. 4-74: Load of DC Bus Connector

U <sub>LN</sub>	P <sub>X77_cont</sub>
200 V AC	7 kW
400 V AC	14 kW
500 V AC	14 kW

Fig. 4-75: Selected Values of Continuous Power via DC Bus Connector X77 (P<sub>X77\_cont</sub>) Depending on Mains Voltage

**Number of supplied devices:**

If the sum of power reserves (P<sub>reserve</sub>) of the supplying devices is **greater** then the continuous power of X77 (P<sub>X77\_cont</sub>), the maximum number of supplied devices results from P<sub>X77\_cont</sub> minus the respective DC bus continuous power of the individual devices at average speed.

If the sum of power reserves (P<sub>reserve</sub>) of the supplying devices is **smaller** than the continuous power of X77 (P<sub>X77\_cont</sub>), the maximum number of supplied devices results from P<sub>reserve</sub> minus the respective DC bus continuous power of the individual devices at average speed.

## Combining the Individual Components

## Looping Through the DC Bus Connection via DC Bus Connector X77

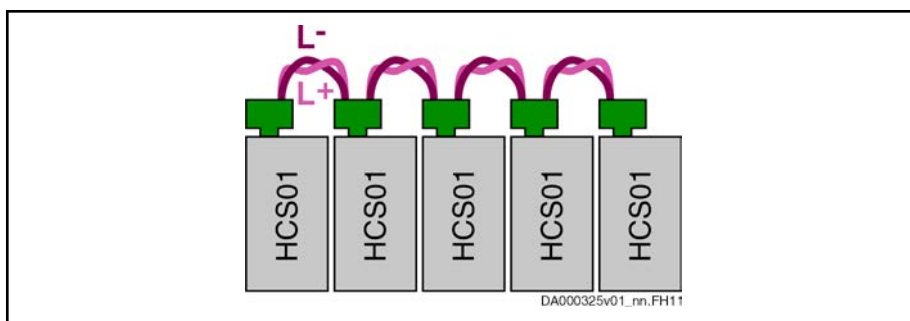


Fig.4-76: Looping Through via DC Bus Connector


The DC buses of the individual devices are connected via the DC bus connectors X77.

When the devices are supplied via group supply, the DC bus connector X77 of the last infeeding device is the limiting factor in the DC bus group.



**Arrangement of the devices:** The higher the power consumption of a device, the nearer to the supplying devices it must be arranged.

## Example:

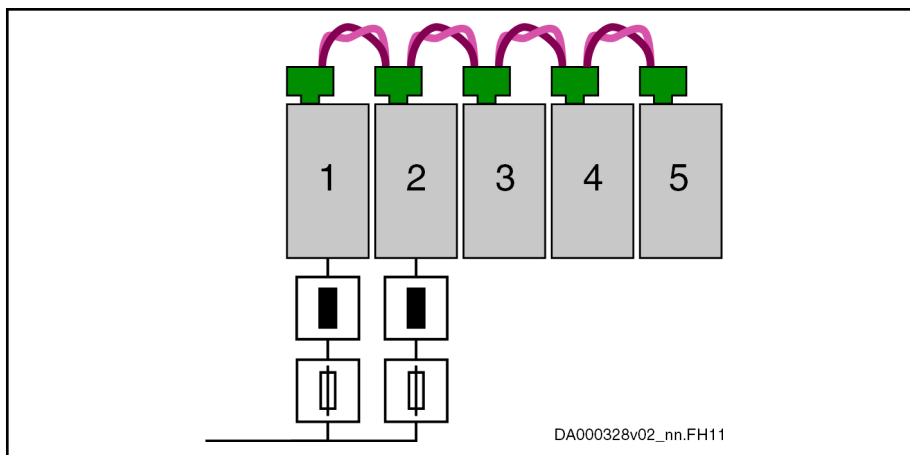

1, 2 HCS01.1E-W0028 (supplying devices)

3, 4, 5 HCS01.1E-W0018 (supplied devices)

Fig.4-77: Looping Through

On the left, the two supplying HCS01.1E-W0028 devices have been arranged; to their right the three supplied HCS01.1E-W0018 devices.

The DC bus connector of the second device from the left (2) limits the possible number of devices at the common DC bus.

Combining the Individual Components

DC Bus Connecting Bar

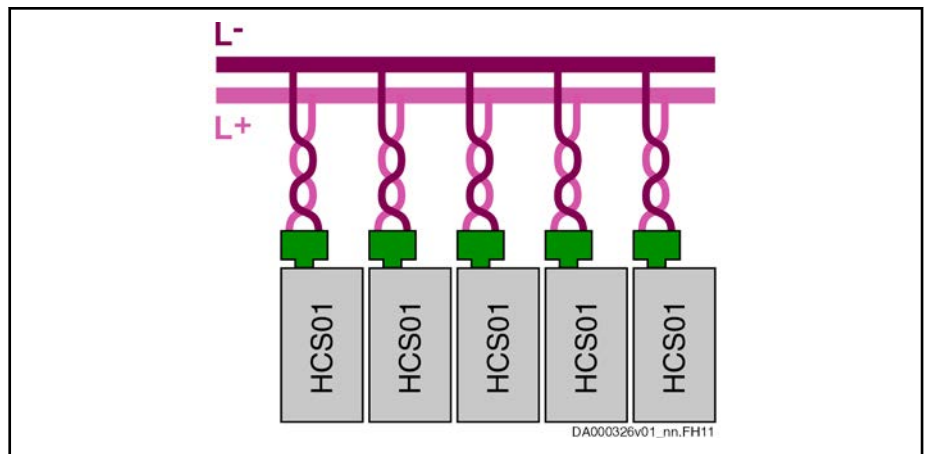


Fig.4-78: DC Bus Connection via Connecting Bar

Via a "spur line", the DC buses of the individual devices are connected to the DC bus connecting bar.

The power reserve of the supplying devices limits the number of devices at the common DC bus.

DC Bus Capacitor Unit

**Function** DC bus capacitor units are optional additional components and increase

- the DC bus continuous power
- the available DC bus energy

**Mains Choke** Always operate the DC bus capacitor units together with the mains choke assigned to the drive controller (see Data for mains voltage supply → Assigned type of mains choke).

Special case "HCS01.1E-W0018-\_-03" (in the technical data, no mains choke has been assigned to this drive controller):

Use the mains choke "HNL01.1E-1000-N0012-A-500-NNNN".

**Connection** The maximum allowed capacitance of a DC bus capacitor unit depends on the device which assumes the DC bus supply.



Even if several devices supply the DC bus, the specific external DC bus capacitance of the biggest supplying device may only be connected **once** for the entire DC bus group!

For the maximum allowed external DC bus capacitance at  $U_{LN\_nenn}$ , see the Technical Data (see index entry "DC bus → Data, HCS01").

Maximum Allowed External DC Bus Capacitance [mF] vs. Mains Voltage

HCS01.1E-	Mains Voltage			
	400 V	440 V	480 V	500 V
W0018-A-03	3	2	1	-
W0028-A-03	4	3	1	-
W0054-A-03	13	9	6	5

Fig.4-79: Maximum Allowed External DC Bus Capacitance (in mF)

## Combining the Individual Components

If possible, place the DC bus capacitor unit directly next to the drive controller to be supplied or the most powerful drive controller. Connect the DC bus capacitor unit to the drive controller via the DC bus connection X77.

See also index entry "HLC → DC bus capacitor unit".

## Module Bus and Parameterization

**Module Bus** The module bus is an internal system connection. To ensure the coordinated behavior of all devices of a drive system, the devices must exchange information via the module bus.

With the parameter "P-0-0118, Power supply, configuration", you can parameterize both a common error reaction for all axes and power off in the case of error.



When several devices are coupled via the DC bus, it is obligatory to loop through the module bus.

Use **shielded lines** to loop through the module bus, when the length of all module bus connections is **greater than 3 m**.

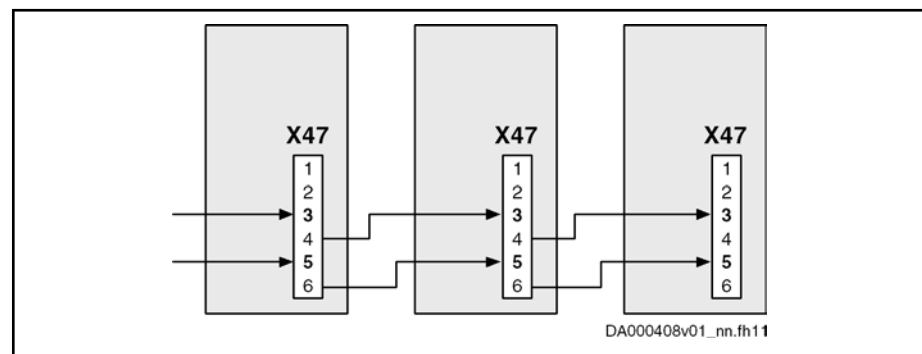


Fig.4-80: Looping through the Module Bus

**Parameterization** For all devices which are only supplied via the DC bus, "DC bus → inverter mode" must be set as the source of power supply in parameter "P-0-0860, Converter configuration".

For detailed information, see the documentation of the firmware used:

- Parameter Description:
  - P-0-0860, Converter configuration
  - P-0-0118, Power supply, configuration
- Functional Description: "Power Supply"

## Bb Relay Contact

Generally, the following applies: Include the Bb contact in the mains contactor circuit at all devices connected to the mains. (See also index entry "Mains connection → Control circuit".)

When several devices assume the DC bus supply (group supply), connect the Bb relay contacts (X47) of all **supplying** devices in series. This guarantees that the mains contactor is switched off in the case of error in a device.

For devices which are only supplied via the DC bus, it is sufficient that you establish the module bus connection. You do not need to connect the Bb relay contacts of these devices in series.

Combining the Individual Components

**NOTICE** Risk of fire in the case of error caused by missing mains contactor control!

Include the Bb relay contact in the switch-off chain of the mains contactor so that the power supply is interrupted in the case of error.

## 4.7 Acceptance Tests and Approvals

**Declaration of Conformity** Declarations of conformity confirm that the components comply with the valid EN standards and EC directives. If required, our sales representative can provide you with the declarations of conformity for components.


 <small>DX00011v01_m.FH1*</small>	<b>Drive controllers, Supply units</b>	<b>Motors</b>
	CE conformity regarding Low-Voltage Directive  EN 61800-5-1 (IEC 61800-5-1:2007)	EN 60034-1 (IEC 60034-1:2010)  EN 60034-5 (IEC 60034-5:2000 + Corrigendum 2001+A1:2006)
CE conformity regarding EMC product standard	EN 61800-3 (IEC 61800-3:2004)	

Fig. 4-81: CE - Applied Standards

**C-UL-US Listing** The components are listed by **UL** (Underwriters Laboratories Inc.®). You can find the evidence of certification on the Internet under <http://www.ul.com> under "Certifications" by entering the file number or the "Company Name: Rexroth".


 <b>Listed POW. CONV. EQ. 97Y4</b> <small>DX00000v01_m.FH</small>	<ul style="list-style-type: none"> <li>UL standard: UL 508 C</li> <li>CSA standard: Canadian National Standard C22.2 No. 14-10</li> </ul>
	<b>Company Name</b> BOSCH REXROTH ELECTRIC DRIVES & CONTROLS GMBH  <b>Category Name:</b> Power Conversion Equipment
	<b>File numbers</b> Rexroth IndraDrive Cs components: <ul style="list-style-type: none"> <li>E134201</li> <li>E227957</li> </ul>

Fig. 4-82: C-UL Listing

## Combining the Individual Components

**UL ratings**

For using the component in the scope of CSA / UL, take the UL ratings of the individual components into account.

Make sure that the indicated **short circuit current rating SCCR** is not exceeded, e.g. by appropriate fuses in the mains supply of the supply unit.

**Wiring material UL**

In the scope of CSA / UL, use copper 60/75 °C only; class 1 or equivalent only.

**Allowed pollution degree**

Comply with the allowed pollution degree of the components (see "Ambient and Operating Conditions").

**C-UR-US Listing**

The motors are listed by **UL** ("Underwriters Laboratories Inc.®"). You can find the evidence of certification on the Internet under <http://www.ul.com> under "Certifications" by entering the file number or the "Company Name: Rexroth".


	<ul style="list-style-type: none"> <li>• UL standard: UL 1004-1</li> <li>• CSA standard: Canadian National Standard C22.2 No. 100</li> </ul>
	<b>Company Name</b> BOSCH REXROTH ELECTRIC DRIVES & CONTROLS GMBH Category Name: Servo and Stepper Motors - Component
	<b>File numbers</b> MSK, MSM motors: E335445

Fig.4-83: C-UR Listing

**Wiring material UL (ready-made cables by Rexroth)**

In the scope of CSA / UL, use copper 60/75 °C only; class 6 or equivalent only.

**Allowed pollution degree**

Comply with the allowed pollution degree of the components (see "Ambient and Operating Conditions").

**CCC (China Compulsory Certification)**

The CCC test symbol comprises a compulsory certification of safety and quality for certain products mentioned in the product catalog "First Catalogue of Products Subject to Compulsory Certification" and in the CNCA document "Application Scope for Compulsory Certification of Products acc. first Catalogue" and put in circulation in China. This compulsory certification has been existing since 2003.

CNCA is the Chinese authority responsible for certification directives. When a product is imported in China, the certification will be checked at the customs



## Combining the Individual Components

by means of entries in a database. For the requirement of certification three criteria are normally relevant:

1. Customs tariff number (HS code) according to CNCA document "Application Scope for Compulsory Certification of Products acc. first Catalogue".
2. Scope of application according to CNCA document "Application Scope for Compulsory Certification of Products acc. first Catalogue".
3. For the IEC product standard used, the corresponding Chinese GB standard must exist.

For the drive components by Rexroth described in this documentation, **certification is not required at present**, thus they are not CCC certified. Negative certifications will not be issued.



Condition as Supplied, Identification, Transport and Storage

## 5 Condition as Supplied, Identification, Transport and Storage

### 5.1 Condition as Supplied

#### 5.1.1 Factory-Side Test

##### Voltage Test and Insulation Resistance Test

According to standard, the **components** of the Rexroth IndraDrive Cs range are tested with voltage.

Test	Test rate
Voltage test	100% (EN 61800-5-1)
Insulation resistance test	100% (EN 60204-1)

Fig. 5-1: Applied Standards

#### 5.1.2 Customer-Side Test

##### **NOTICE**

**Risk of damage to the installed Rexroth components by customer-side test of the machine or installation!**

Before making a voltage test or an insulation resistance test for an **installation or machine** in which these components are used:

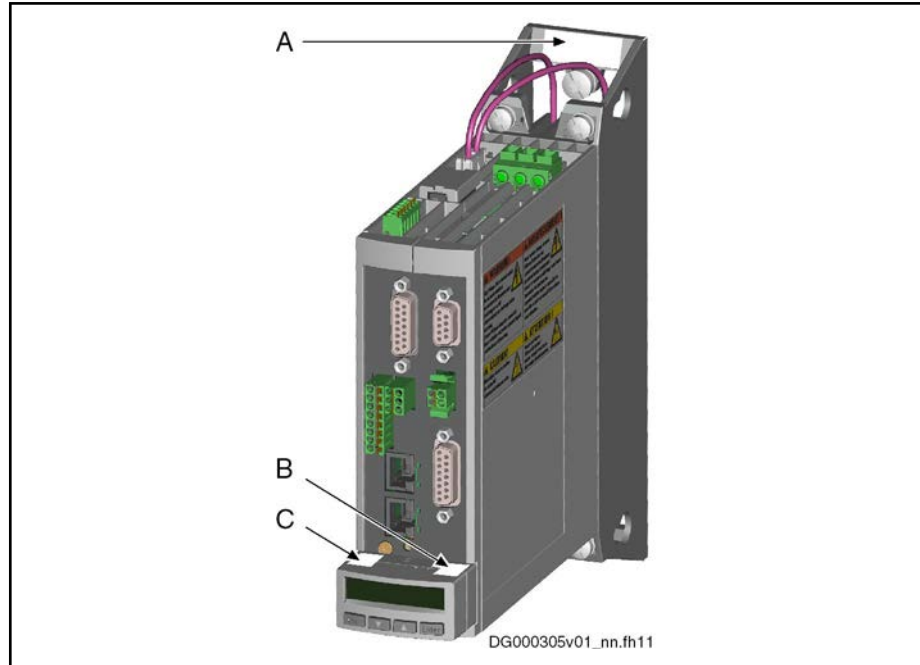
Disconnect all connections to the Rexroth components or disconnect the plug-in connections to protect the electronic components.

Condition as Supplied, Identification, Transport and Storage

## 5.2 Identification

### 5.2.1 Type Plates


#### Arrangement



- A Type plate device  
 B Type plate firmware  
 C Type plate control panel
- Fig. 5-2: Type Plate Arrangement*

#### Structure

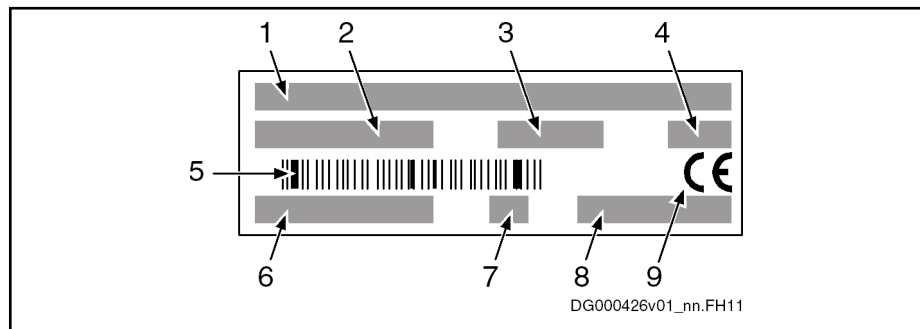
##### Type Plate (Device)



- 1 Device type  
 2 Part number  
 3 Production week; 11W36, for example, means year 2011, week 36  
 4 Factory identifier  
 5 Bar code  
 6 Serial number  
 7 Hardware index  
 8 Country of manufacture  
 9 Identification
- Fig. 5-3: Type Plate (Device)*

Condition as Supplied, Identification, Transport and Storage

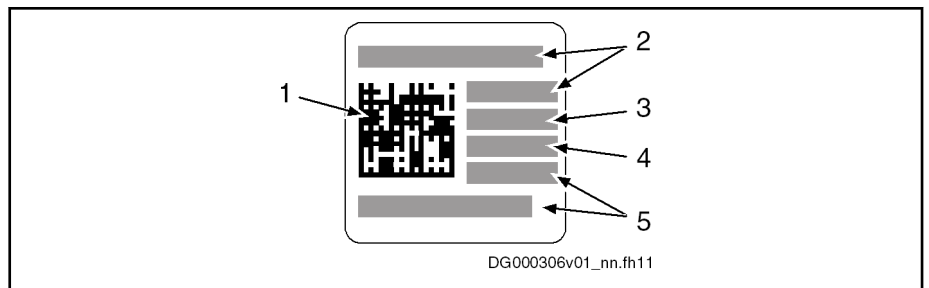
Type Plate (Firmware)



- 1 Bar code
- 2 Type
- 3 Factory identifier
- 4 Production week (example: 11W36 means: year 2011, week 36)
- 5 Part number

Fig. 5-4: Type Plate (Firmware)

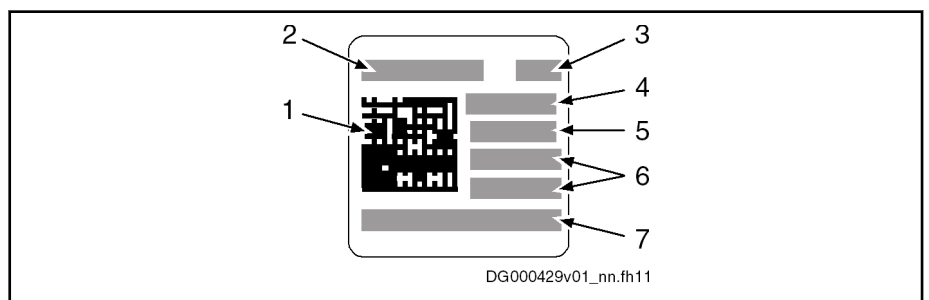Type Plate (Control Panel)



- 1 Bar code
- 2 Type
- 3 Hardware index
- 4 Factory identifier
- 5 Production week (example: 11W36 means: year 2011, week 36)
- 6 Part number
- 7 Serial number

Fig. 5-5: Type Plate (Control Panel)

## 5.2.2 Scope of Supply

Standard	To be ordered separately
Drive controller HCS01	DC bus connector X77 (DC bus connection; for HCS01.1E-W00xx-x-03 devices) Order code: RLS0778/K06
Mounting and connection accessories HAS09	microSD memory card: <ul style="list-style-type: none"> <li>• Only for HCS01.1E-W00**-A-0*-A-CC (ADVANCED) devices</li> <li>• Order code: PFM04.1-512-FW (with firmware) PFM04.1-512-NW (without firmware)</li> </ul>
Connectors X3, X5, X6, X13, X31, X32, X47	Other accessories, such as SUP-E01-MSM-BATTERYBOX
Touch guard X77 (DC bus connection; for HCS01.1E-W00xx-x-03 devices)	
Documentation	

Fig. 5-6: Scope of Supply HCS01

Condition as Supplied, Identification, Transport and Storage

## 5.3 Transport of the Components

### Ambient and Operating Conditions - Transport

Description	Symbol	Unit	Value	
Temperature range	$T_{a\_tran}$	°C	Supply units and drive controllers: -25 ... +70	Motors: -20 ... +80
Relative humidity		%	5 ... 95	
Absolute humidity		g/m <sup>3</sup>	1 ... 60	
Climatic category (IEC 721)			2K3	
Moisture condensation			Not allowed	
Icing			Not allowed	

Fig.5-7: Ambient and operating conditions - transport

## 5.4 Storage of the Components

### NOTICE

Damage to the component caused by long storage periods!

Some components contain electrolytic capacitors which may deteriorate during storage.

When storing the following components for a longer period of time, operate them **once a year for at least 1 hour**:

- Converters and supply units: operation with mains voltage  $U_{LN}$
- Inverters and DC bus capacitor units: operation with DC bus voltage  $U_{DC}$


### Ambient and operating conditions - storage

Description	Symbol	Unit	Value	
Temperature range	$T_{a\_store}$	°C	Supply units and drive controllers: -25 ... 55	Motors: -20 ... +60
Relative humidity		%	5 ... 95	
Absolute humidity		g/m <sup>3</sup>	1 ... 29	
Climatic category (IEC 721)			1K3	
Moisture condensation			Not allowed	
Icing			Not allowed	

Fig.5-8: Ambient and operating conditions - storage

## 6 Mounting and Installation
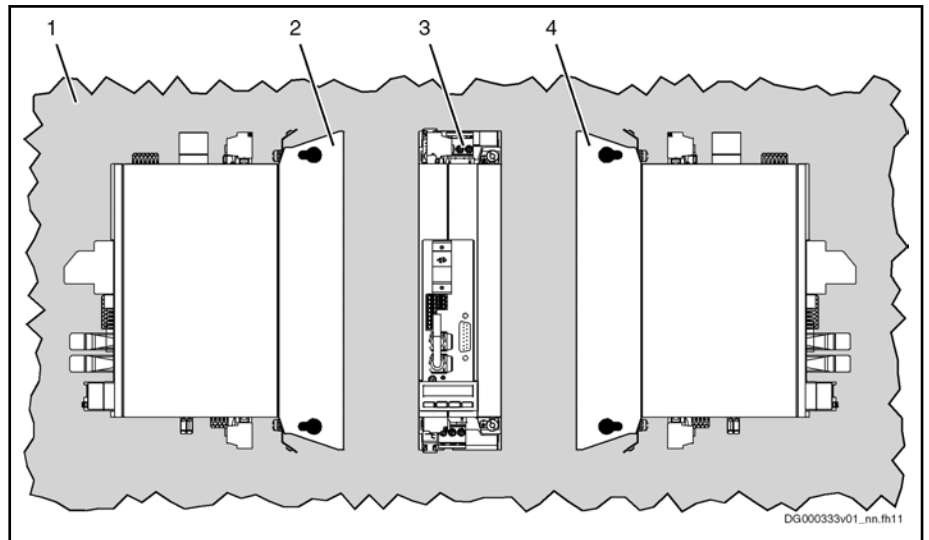
### 6.1 Mounting HCS01 Devices in the Control Cabinet



- 1 Mounting surface in control cabinet
- 2 Left-hand mounting
- 3 Back-side mounting (standard mounting)
- 4 Right-hand mounting

Fig. 6-1: Options for Mounting

#### Notes on Mounting

- Observe the **minimum distances** to be complied with for mounting (see technical data or dimensional drawings).

The specified horizontal minimum distance refers to the distance to neighboring devices or equipment installed in the control cabinet (such as cable ducts) and not to the distance to the control cabinet wall.

- The **back-side mounting** (back of device directly mounted to mounting surface in control cabinet) is the standard and should be used, if possible.
- The **left-hand or right-hand mounting** (left or right side of device directly mounted to mounting surface in control cabinet) can be used, if the mounting clearance between control cabinet wall and control cabinet front is not sufficient for back-side mounting.

**NOTICE!** Risk of damage by high temperatures! At the **back of the HCS01 devices**, there are **braking resistors** which can become very hot during operation. When arranging the devices in the control cabinet, make sure there aren't any heat-sensitive materials close to the braking resistors.

In the case of left-hand or right-hand mounting, you **must not pile the devices**. Each device must have immediate contact to the control cabinet wall.

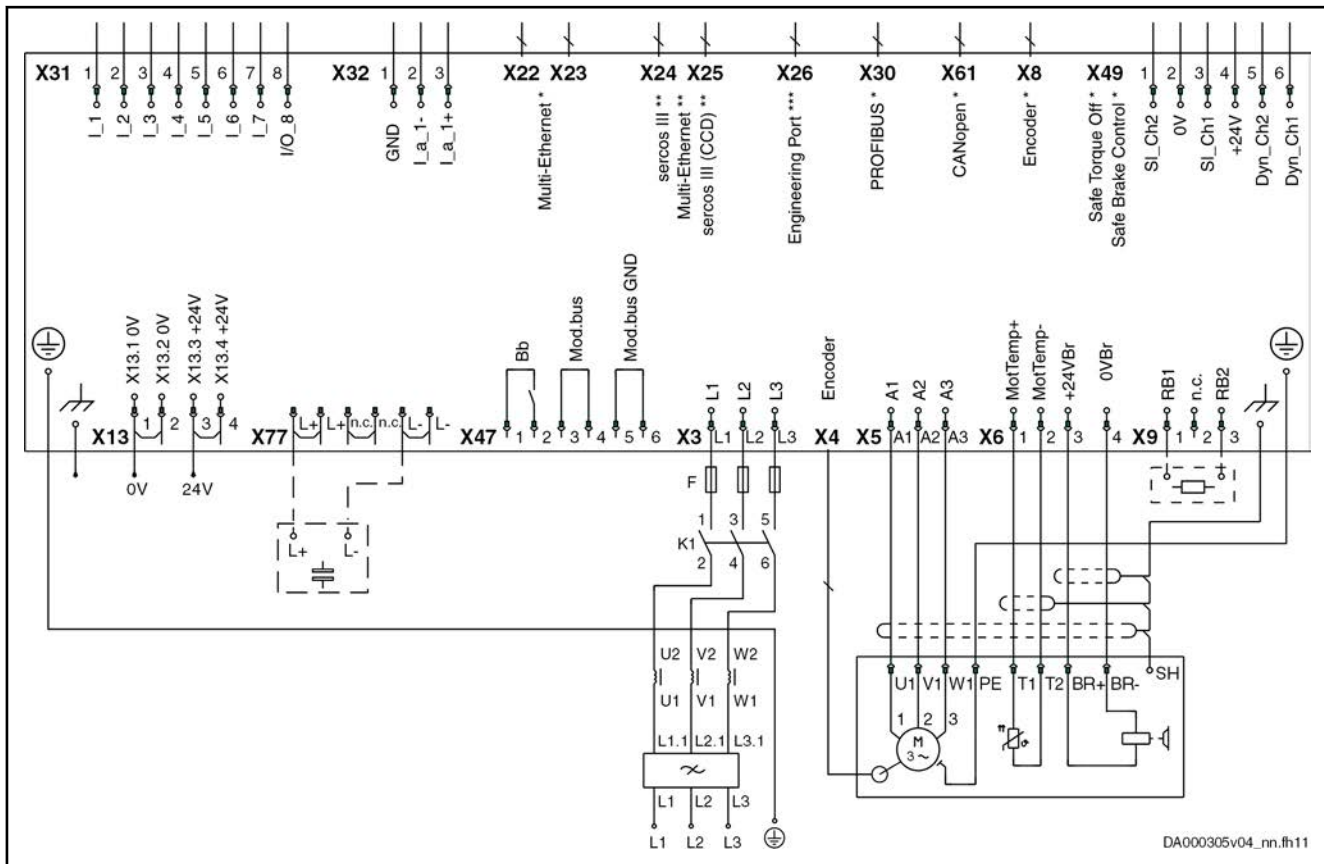
- **Tightening torque** of the mounting screws: **6 Nm**
- On the sides of the devices, there are **adhesive labels with notes on safety**. The supplied accessory HAS09 additionally contains these adhesive labels. If the adhesive labels at the devices are no longer visible after mounting, place the adhesive labels from the HAS09 accessory clearly visibly at the device or in the immediate vicinity of the device.

## Mounting and Installation

**Required Steps to Follow** HCS01 drive controllers were designed for control cabinet mounting. They are mounted with two screws (M6×20; contained in the supplied accessory HAS09).

**Mounting the drive controller**

1. Fix screws to the back panel of the control cabinet.
2. Attach the drive controller to the screws.
3. Fix the screws with 6 Nm.

**6.2 Electrical Connection****6.2.1 Overall Connection Diagram**

\* Optional

\*\* **ECONOMY** = sercos III; **BASIC** = Multi-Ethernet; **ADVANCED** = sercos III cross communication (CCD)

\*\*\* Only available at HCS01.1E-W00\*-A-0\*-A-CC (ADVANCED) devices

X6.1, X6.2 T1 and T2 are not available at MSM motors

X31 No standard assignment preset; make the assignment by means of firmware documentation (see Functional Description, index entry "Digital inputs/outputs")

X47.1, X47.2 For the "ready for operation" message of the device, the Bb relay contact (X47.1, X47.2) must be wired

X47.3...6 Module bus only available at HCS01.1E-W00xx-x-03 devices

X77 DC bus connection (L+, L-) only available at HCS01.1E-W00xx-x-03 devices


Fig.6-2: Connection Diagram



## 6.2.2 Connection Points
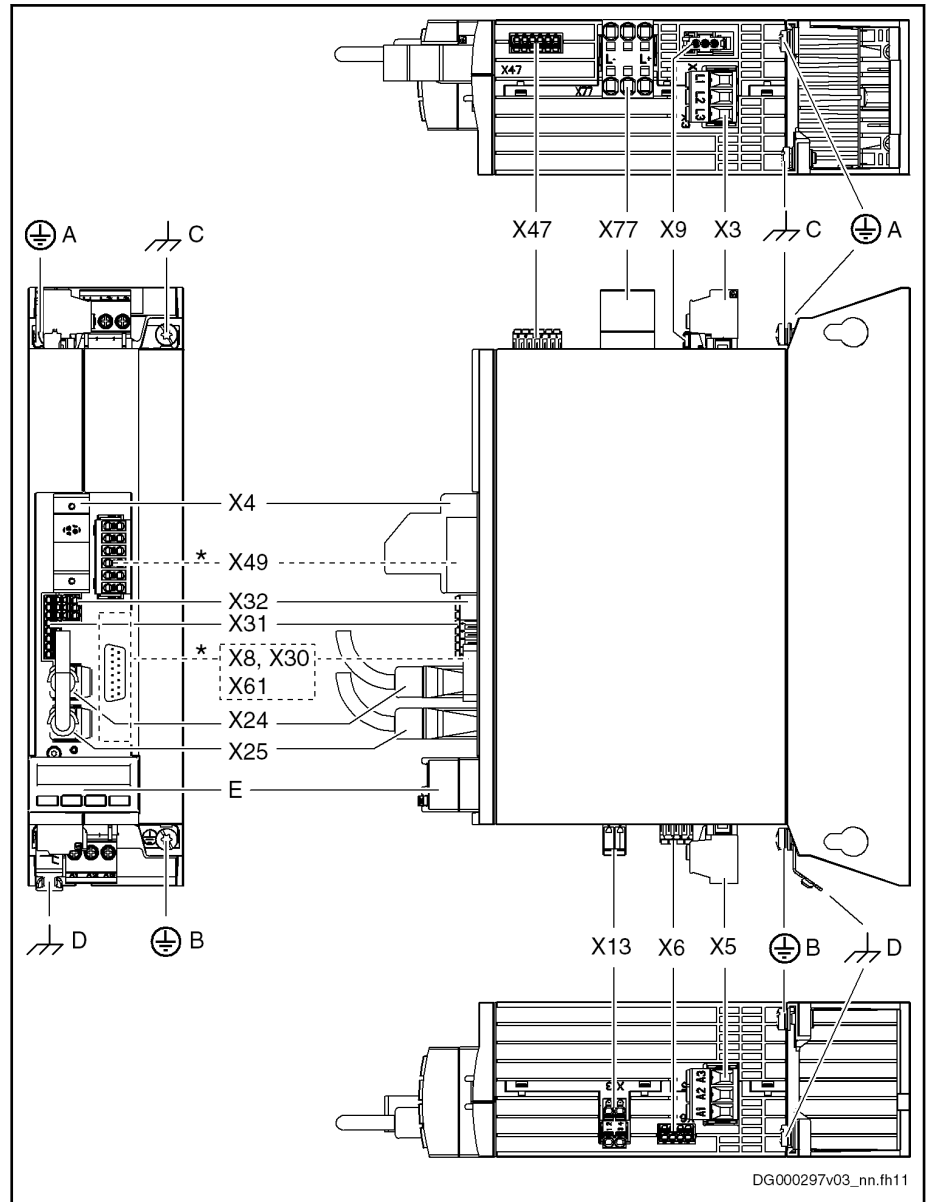
### Arrangement of the Connection Points HCS01

Connection Points HCS01 (ECONOMY, BASIC)



DG000297v03\_nn.fh11

- \* Optional connection point
- A Connection point of equipment grounding conductor, mains
- B Connection point of equipment grounding conductor, motor
- C Shield connection control lines
- D Shield connection motor cable
- E Control panel
- X3 Mains connection
- X4 Motor encoder
- X5 Motor connection
- X6 Motor temperature monitoring, motor holding brake
- X8 Optional encoder evaluation (EC); optional encoder emulation (EM)
- X9 Integrated/external braking resistor
- X13 24V supply (control voltage)


## Mounting and Installation

X24 / X25	<b>ECONOMY:</b> Communication sercos III; <b>BASIC:</b> Communication Multi-Ethernet
X30	Optional communication PROFIBUS (PB)
X31	Digital inputs, digital output
X32	Analog input
X47	Bb relay contact, module bus (module bus only at HCS01.1E-W00xx-x-03 devices)
X49	Optional safety technology (L3: "Safe Torque Off"; L4: "Safe Torque Off", "Safe Brake Control")
X61	Optional communication CANopen (CN)
X77	DC bus connection (only at HCS01.1E-W00xx-x-03 devices); DC bus connector optionally available (if the DC bus connector is not used, the DC bus connection must be covered with the supplied touch guard)

*Fig. 6-3: Connection Points HCS01*

Mounting and Installation

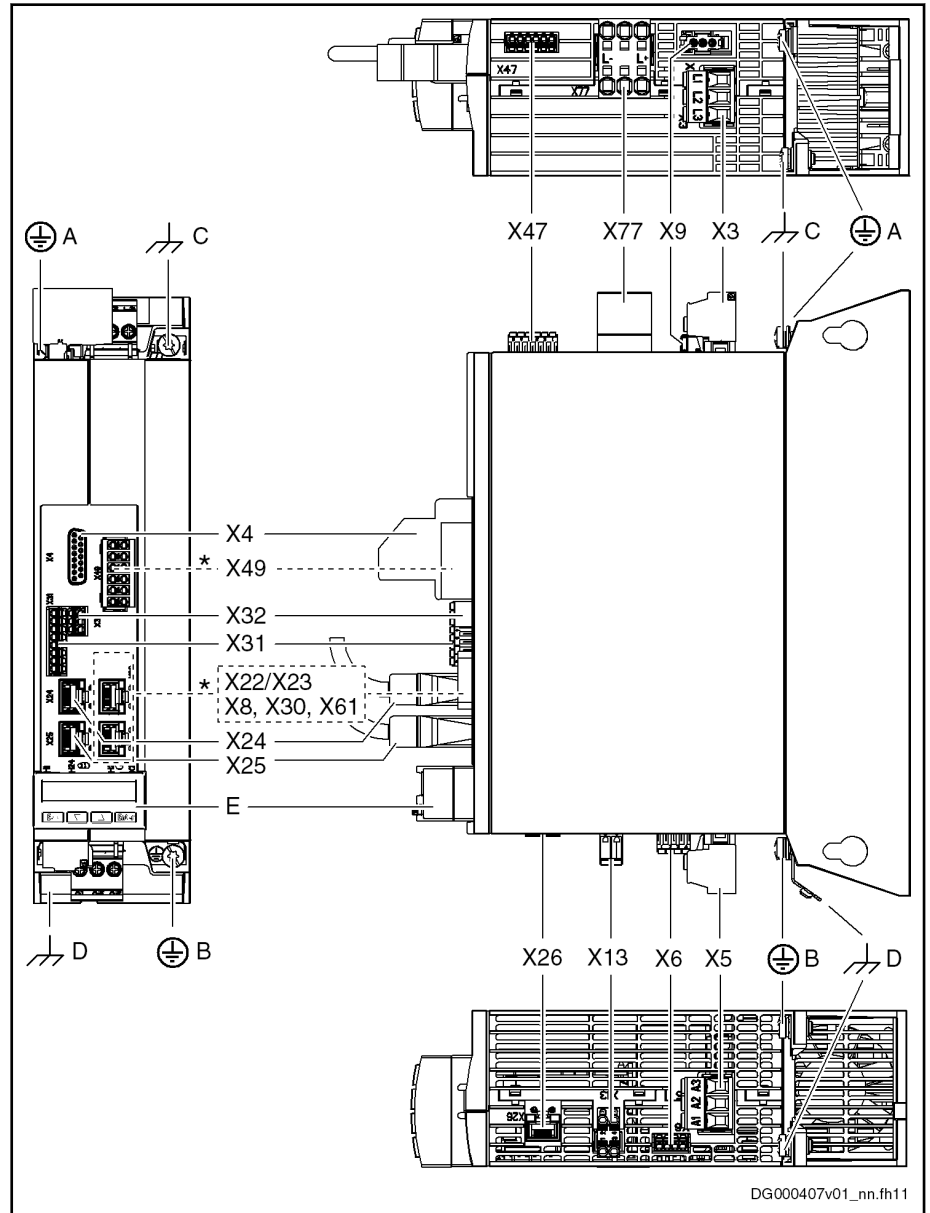Connection Points HCS01 (ADVANCED)



DG000407v01\_nn.fh11

- \* Optional connection point
- A Connection point of equipment grounding conductor, mains
- B Connection point of equipment grounding conductor, motor
- C Shield connection control lines
- D Shield connection motor cable
- E Control panel
- X3 Mains connection
- X4 Motor encoder
- X5 Motor connection
- X6 Motor temperature monitoring, motor holding brake
- X8 Optional encoder evaluation (EC); optional encoder emulation (EM)
- X9 Integrated/external braking resistor
- X13 24V supply (control voltage)
- X22 / X23 Optional communication Multi-Ethernet (ET)
- X24 / X25 sercos III master
- X26 Engineering interface
- X30 Optional communication PROFIBUS (PB)

## Mounting and Installation

X31	Digital inputs, digital output
X32	Analog input
X47	Bb relay contact, module bus (module bus only at HCS01.1E-W00xx-x-03 devices)
X49	Optional safety technology (L3: "Safe Torque Off"; L4: "Safe Torque Off", "Safe Brake Control")
X61	Optional communication CANopen (CN)
X77	DC bus connection (only at HCS01.1E-W00xx-x-03 devices); DC bus connector optionally available (if the DC bus connector is not used, the DC bus connection must be covered with the supplied touch guard)

Fig. 6-4:

## 6.2.3 On-Board Connection Points

### Connection of Equipment Grounding Conductor

#### WARNING

High housing voltage and high leakage current! Danger to life, risk of injury by electric shock!

- Before switching on and before commissioning, ground or connect the components of the electric drive and control system to the equipment grounding conductor at the grounding points.
- Connect the equipment grounding conductor of the components of the electric drive and control system permanently to the main power supply at all times. The leakage current is greater than 3.5 mA.
- Establish an equipment grounding connection with a copper wire of a cross section of at least 10 mm<sup>2</sup> (8 AWG) or additionally run a second equipment grounding conductor of the same cross section as the original equipment grounding conductor.

#### WARNING

Lethal electric shock by live parts with more than 50 V!

Exclusively operate the device

- with plugged on connectors (even if there haven't been any lines connected to the connectors) and
- with connected equipment grounding conductor!



#### Equipment grounding conductor: Material and cross section

For the equipment grounding conductor, use the same metal (e.g. copper) as for the outer conductors.

For the connections from the equipment grounding conductor connection of the device to the equipment grounding conductor system in the control cabinet, make sure the cross sections of the lines are sufficient.

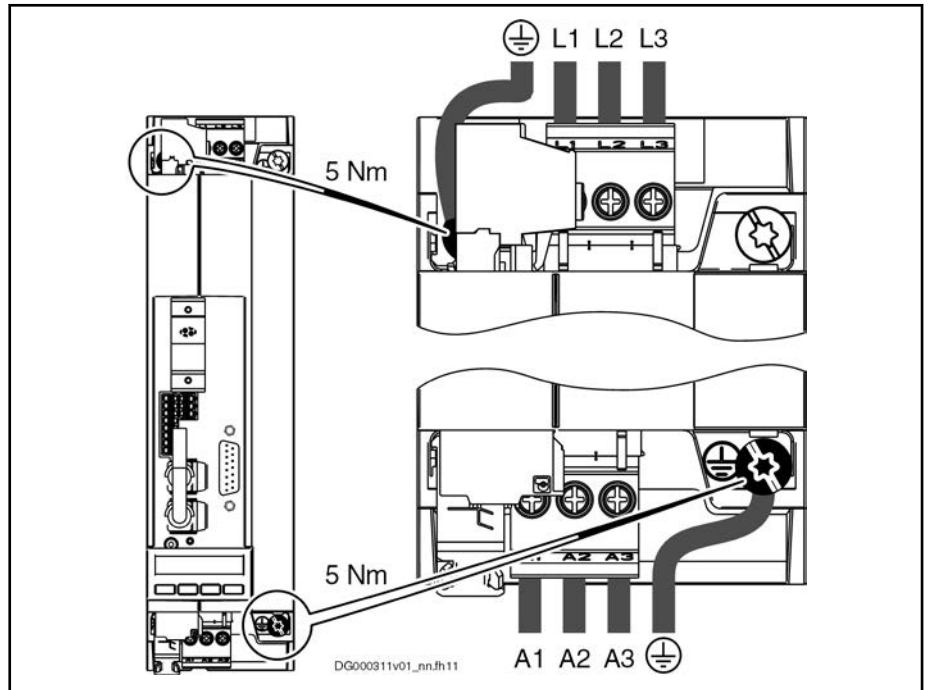
Cross sections of the equipment grounding connections:

For **HCS01** drive controllers, **at least 10 mm<sup>2</sup>**, but not smaller than the cross sections of the outer conductors of the mains supply feeder.

Additionally, mount the housing to a bare metal mounting plate. Connect the mounting plate, too, with at least the same cross section to the equipment grounding conductor system in the control cabinet.

Mounting and Installation

**Installation** Connect the equipment grounding conductor of the mains or motor cable via thread **M5** to the housing of the device (identification mark  $\oplus$ ; tightening torque: **5 Nm**). The screws **M5×12** required for this purpose are part of the supplied accessory HAS09.



L1, L2, L3 Mains connection  
 A1, A2, A3 Motor connection  
 Fig. 6-5: Connection Point of Equipment Grounding Conductor

**X3, Mains Connection**

**Important Notes**

**⚠ WARNING** Lethal electric shock by live parts with more than 50 V!

Exclusively operate the device

- with plugged on connectors (even if there haven't been any lines connected to the connectors) and
- with connected equipment grounding conductor!

**Notes on Installation**

- The **equipment grounding conductor is connected** directly to the device and not via the connection point X3 (see description for connection of equipment grounding conductor).
- Dimension the **required cross section** of the connection cables according to the determined phase current  $I_{LN}$  and the mains fuse.
- **Single-phase mains connection** (outer conductor and neutral conductor): Connection to X3 can be made via L1, L2 or L3.

## Mounting and Installation

**NOTICE****Risk of damage to the device!**

Provide strain relief for the terminal connectors of the device in the control cabinet.

**X3, Mains Connection HCS01.1E-W0003...W0013-x-02, -W0005-x-03, -W0008-x-03**

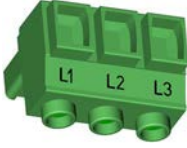
View	Identification	Function	
	L1	Connection to supply mains (L1)	
	L2	Connection to supply mains (L2)	
	L3	Connection to supply mains (L3)	
<b>Terminal block</b>	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>
<b>Connection cable</b> Stranded wire	mm <sup>2</sup>	0,25	2,5
	AWG	24	12
Stripped length	mm	8	
Tightening torque	Nm	0,5	0,6
Occurring current load and minimum required connection cross section		See technical data of device used ( $I_{LN}$ and $A_{LN}$ )	
Occurring voltage load		See technical data of device used ( $U_{LN}$ or $U_{LN,enn}$ )	

Fig.6-6: Function, Pin Assignment, Properties

**X3, Mains Connection HCS01.1E-W0018-x-02, -W0018-x-03, -W0028-x-03**


View	Identification	Function	
	L1	Connection to supply mains (L1)	
	L2	Connection to supply mains (L2)	
	L3	Connection to supply mains (L3)	
<b>Terminal block</b>	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>
<b>Connection cable</b> Stranded wire	mm <sup>2</sup>	0,25	6,0
	AWG	24	10
Stripped length	mm	10	
Tightening torque	Nm	0,7	0,8
Occurring current load and minimum required connection cross section		See technical data of device used ( $I_{LN}$ and $A_{LN}$ )	
Occurring voltage load		See technical data of device used ( $U_{LN}$ or $U_{LN,enn}$ )	

Fig.6-7: Function, Pin Assignment, Properties

### X3, Mains Connection HCS01.1E-W0054-x-03


View	Identification	Function	
	L1	Connection to supply mains (L1)	
	L2	Connection to supply mains (L2)	
	L3	Connection to supply mains (L3)	
<b>Terminal block</b>			
	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>
<b>Connection cable</b>	mm <sup>2</sup>	0,75	10,0
Stranded wire	AWG	18	8
Stripped length	mm	14	
Tightening torque	Nm	1,5	1,7
Occurring current load and minimum required connection cross section		See technical data of device used ( $I_{LN}$ and $A_{LN}$ )	
Occurring voltage load		See technical data of device used ( $U_{LN}$ or $U_{LN\_nenn}$ )	

Fig. 6-8: Function, Pin Assignment, Properties

### X4, Connection Motor Encoder

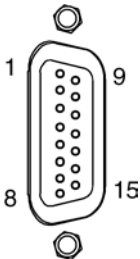
View	Identification	Function	
 <p>DA000053v01_nn.FH9</p>	X4	Motor encoder connection	
<b>D-Sub, 15-pin, female</b>			
	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>
<b>Connection cable</b>	mm <sup>2</sup>	0,25	0,5
Stranded wire			
Kind of encoder evaluation		EC Technical data: See description "EC - Standard Encoder Evaluation"	

Fig. 6-9: Function, Pin Assignment, Properties

#### Supported Encoder Systems

Encoder systems with a supply voltage of **5 and 12 volt**

- MSM motor encoder
- MSK motor encoder

## Mounting and Installation

- Sin-cos encoder 1V<sub>pp</sub>; HIPERFACE®
- Sin-cos encoder 1V<sub>pp</sub>; EnDat 2.1; (EnDat 2.2 in preparation)
- Sin-cos encoder 1V<sub>pp</sub>; with reference track
- 5V-TTL square-wave encoder; with reference track
- SSI
- Combined encoder for SSI (combination of SSI and sin-cos encoder 1V<sub>pp</sub>)
- Resolver
- Hall sensor box SHL02.1
- Digital Hall sensor in conjunction with Hall sensor adapter box SHL03.1

## Pin Assignment

Connection	Signal	Function
1	GND_shld	Connection signal shields (internal shields)
2	A+	Track A analog positive
3	A-	Track A analog negative
4	GND_Encoder	Reference potential power supplies
5	B+	Track B analog positive
6	B-	Track B analog negative
7	EncData+	Data transmission positive
	A+TTL	Track A TTL positive
8	EncData-	Data transmission negative
	A-TTL	Track A TTL negative
9	R+	Reference track positive
10	R-	Reference track negative
11	+12V	Encoder supply 12V
12	+5V	Encoder supply 5V
13	EncCLK+	Clock positive
	B+TTL	Track B TTL positive
14	EncCLK-	Clock negative
	B-TTL	Track B TTL negative
15	Sense-	Return of reference potential (Sense line)
	VCC_Resolver	Resolver supply
Connector housing		Overall shield

Fig. 6-10: Pin Assignment



## X5, Motor Connection

### Important Notes

#### **⚠ WARNING**

**Lethal electric shock by live parts with more than 50 V!**

Exclusively operate the device

- with plugged on connectors (even if there haven't been any lines connected to the connectors) and
- with connected equipment grounding conductor!

#### **NOTICE**

**Risk of damage to the device!**

Provide strain relief for the terminal connectors of the device in the control cabinet.

#### Notes on Installation

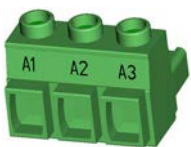
The equipment grounding conductor is connected directly to the device and not via the connection point X5 (see description for connection of equipment grounding conductor).

The indicated connection cross sections are the cross sections which can be connected. Dimension the **required cross section** of the connection lines according to the occurring current load.



- For optimum shield contact of the motor power cable, use the supplied accessory HAS09.
- For the connection between drive controller and motor use our ready-made motor power cables, where possible.
- When using NFD03.1 mains filters, the maximum allowed conductor cross section is limited to 4 mm<sup>2</sup>.

### X5, Motor Connection HCS01.1E-W0003...W0013-x-02, -W0005-x-03, -W0008-x-03

View	Identification	Function	
	A1	For power connection U1 at motor	
	A2	For power connection V1 at motor	
	A3	For power connection W1 at motor	
<b>Screw connection at connector</b>	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>
<b>Connection cable</b> Stranded wire	mm <sup>2</sup>	0,25	2,5
	AWG	24	12
Stripped length	mm	8	
Tightening torque	Nm	0,5	0,6
Occurring current load and minimum required connection cross section	A	See technical data of device used ( $I_{out}$ )	

## Mounting and Installation


Occurring voltage load	V	See technical data of device used ( $U_{out}$ )
Short circuit protection		A1, A2, A3 against each other and each of them against ground
Connection of equipment grounding conductor		Via connection point of equipment grounding conductor  at device (see index entry "Connection → Equipment grounding conductor")

Fig.6-11: Function, Pin Assignment, Properties

**X5, Motor Connection HCS01.1E-W0018-x-02, -W0018-x-03, -W0028-x-03**




View	Identification	Function	
	A1	For power connection U1 at motor	
	A2	For power connection V1 at motor	
	A3	For power connection W1 at motor	
<b>Screw connection at connector</b>			
	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>
<b>Connection cable</b>	mm <sup>2</sup>	0,25	6,0
Stranded wire	AWG	24	10
Stripped length	mm	10	
Tightening torque	Nm	0,7	0,8
Occurring current load and minimum required connection cross section	A	See technical data of device used ( $I_{out}$ )	
Occurring voltage load	V	See technical data of device used ( $U_{out}$ )	
Short circuit protection		A1, A2, A3 against each other and each of them against ground	
Connection of equipment grounding conductor		Via connection point of equipment grounding conductor  at device (see index entry "Connection → Equipment grounding conductor")	

Fig.6-12: Function, Pin Assignment, Properties

**X5, Motor Connection HCS01.1E-W0054-x-03**

View	Identification	Function	
	A1	For power connection U1 at motor	
	A2	For power connection V1 at motor	
	A3	For power connection W1 at motor	
<b>Screw connection at connector</b>			
	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>

Mounting and Installation


<b>Connection cable</b> Stranded wire	mm <sup>2</sup>	0,75	10,0
	AWG	18	8
Stripped length	mm	14	
Tightening torque	Nm	1,5	1,7
Occurring current load and minimum required connection cross section	A	See technical data of device used ( $I_{out}$ )	
Occurring voltage load	V	See technical data of device used ( $U_{out}$ )	
Short circuit protection		A1, A2, A3 against each other and each of them against ground	
Connection of equipment grounding conductor		Via connection point of equipment grounding conductor  at device (see index entry "Connection → Equipment grounding conductor")	

Fig.6-13: Function, Pin Assignment, Properties

## X6, Motor Temperature Monitoring and Motor Holding Brake

### WARNING

**Dangerous movements! Danger to persons from falling or dropping axes!**

The standard motor holding brake provided or an external motor holding brake controlled directly by the drive controller are not sufficient on their own to guarantee personal safety!

Personal safety must be achieved using higher-level, fail-safe measures:

- Block off danger zones with safety fences or safety guards
- Additionally secure vertical axes against falling or dropping after switching off the motor power by, for example,
  - mechanically securing the vertical axes
  - adding external braking/arrester/clamping mechanisms
  - ensuring sufficient equilibration of the vertical axes

### WARNING

**Lethal electric shock by live parts with more than 50 V!**

The input of the motor temperature evaluation is **not** galvanically isolated from the housing. If the voltage applied to the input is impermissibly high (e.g. because of a flashover of the motor winding voltage), this voltage may come into contact with the housing. Ensure that the temperature sensor of the connected motor has a **double** isolation against the motor winding.

### **NOTICE**

**Excessive voltage at the input of the motor temperature evaluation may cause damage to the device!**

The voltage allowed at the input of the motor temperature evaluation must correspond to the allowed control voltage of the device. If the voltage applied to the input is impermissibly high, the device may be damaged.

## Mounting and Installation

**Function** Connection point X6 contains the connections for

- monitoring the motor temperature
- controlling the motor holding brake



Via an integrated contact element (BR), the power section switches the voltage of the **external** 24-V supply to the output for controlling the motor holding brake.

View	Connection	Signal name	Function
	1	MotTemp+	Motor temperature evaluation input
	2	MotTemp-	
	3	+24VBr	Output for controlling the motor holding brake
	4	0VBr	
<b>Spring terminal (connector)</b>	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>
<b>Connection cable</b> Stranded wire	mm <sup>2</sup>	0,25	1,5
	AWG	24	16
Stripped length	mm	10	
Current carrying capacity of outputs X6	A	-	1,25
Time constant of load	ms	-	50
Number of switching operations at maximum time constant of load		Wear-free electronic contact	
Switching frequency	Hz	-	0,5
Short circuit protection		X6.3 against X6.4 (output for controlling the motor holding brake)	
Overload protection		X6.3 against X6.4 (output for controlling the motor holding brake)	

Fig.6-14: Function, pin assignment

**Motor holding brake: selection**

Maximum current carrying capacity of outputs X6: 1.25 A

$$\Rightarrow R_{br (min)} = U_{br (max)} / 1.25 \text{ A}$$

$R_{br (min)}$ : Minimum allowed resistance of the motor holding brake

$U_{br (max)}$ : Maximum supply voltage of the motor holding brake

If  $U_{br (max)} = 24 \text{ V} + 5\% = 25.2 \text{ V}$ , this results in:

$$R_{br (min)} = 20.16 \ \Omega \text{ (applicable to all operating and ambient conditions)}$$

**Motor holding brake: installation instructions**

Make sure the **power supply** for the motor holding brake at the motor is sufficient. You have to take into account that voltage drops on the supply line. Use connection lines with the highest possible cross section of the single strands.

Use an **external contact element in accordance with the required safety category**, if you wish to supply motor holding brakes with higher currents than the

Mounting and Installation

allowed current load at X6. Make sure to comply with the required minimum current consumption of 100 mA when using the external contact element. Otherwise, the brake current monitoring unit signals an error.

Connection diagram

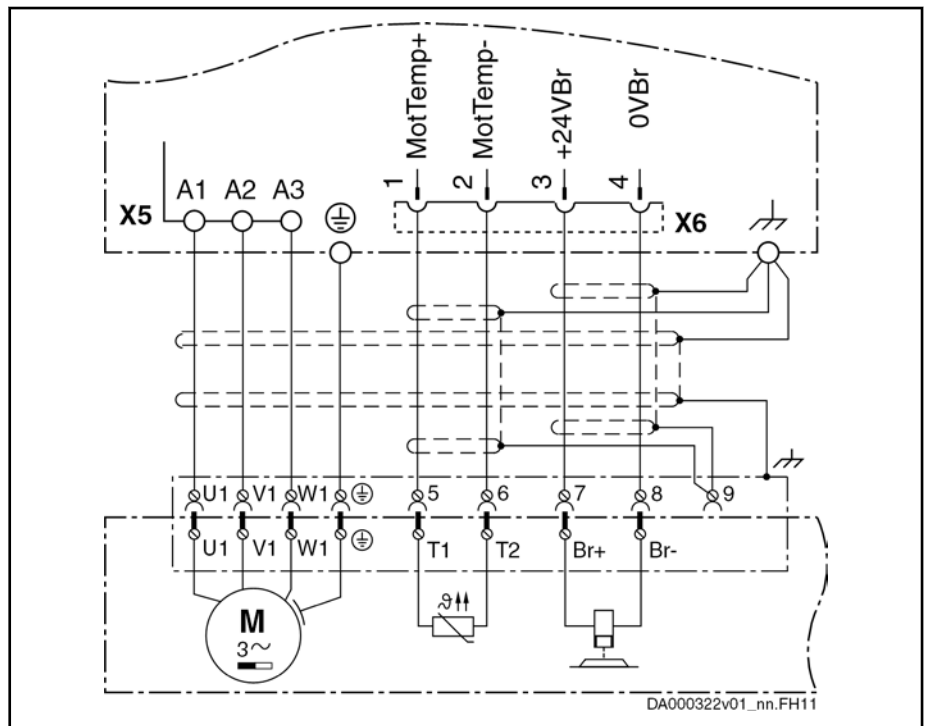


Fig. 6-15: Connection of motor temperature monitoring and motor holding brake

### X9, Integrated/External Braking Resistor

**⚠ WARNING**

Lethal electric shock by live parts with more than 50 V!

Exclusively operate the device

- with plugged on connectors (even if there haven't been any lines connected to the connectors) and
- with connected equipment grounding conductor!

**Function** X9 is used to connect the integrated or external braking resistor **HLR**. By means of an internal switch, the braking resistor is connected to the DC bus.



**Parameterize the external braking resistor** by means of the firmware to protect the drive controller and the braking resistor against overload:

- P-0-0860, Converter configuration
- P-0-0858, Data of external braking resistor

## Mounting and Installation

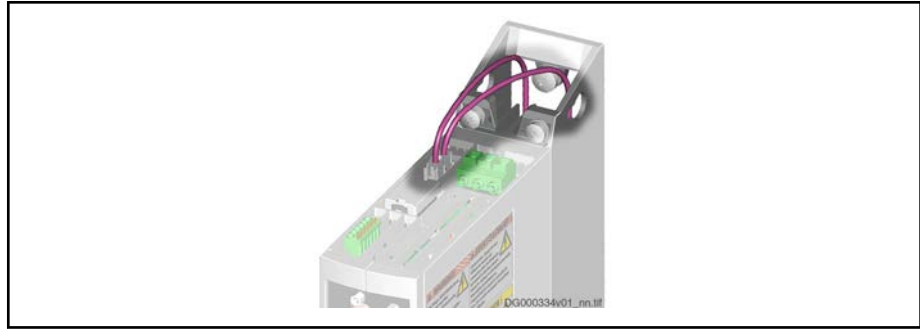
Connection (HCS01.1E-W0003...  
W0028)

Fig. 6-16: Connecting the Braking Resistor (HCS01.1E-W0003...W0028)

## Connection (HCS01.1E-W0054)

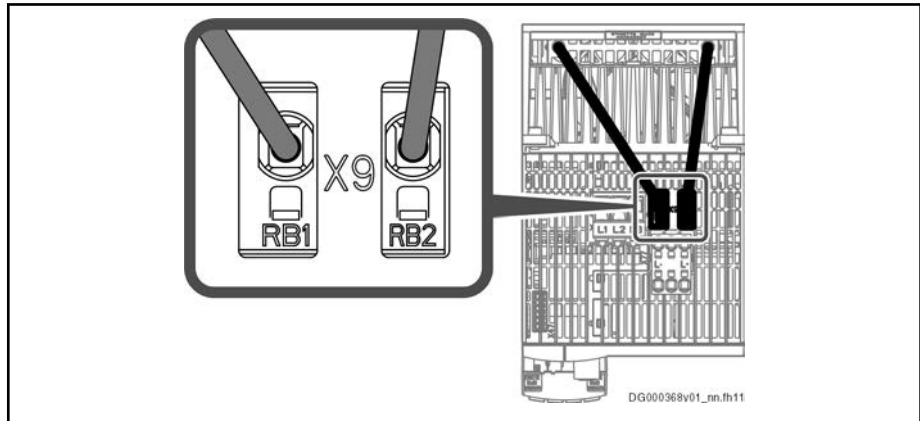


Fig. 6-17: Connecting the Braking Resistor (HCS01.1E-W0054)

## Notes on Installation

Maximum allowed line length to external braking resistor: **5 m**

**Twist** unshielded lines.

**⚠ WARNING**

Lethal electric shock by live parts with more than 50 V!

Risk of burns by hot housing surfaces! Risk of fire!

The temperature of the housing surface of an external HLR braking resistor can rise up to 150 °C. Run the connection lines with a sufficient distance (> 200 mm) to the housing of the HLR braking resistor to avoid damaging the insulation of the connection lines. Outside of the control cabinet, run the connection lines of an HLR braking resistor in a metal pipe with a wall thickness of at least 1 mm.

Do not touch hot housing surfaces! Mount the HLR braking resistor on a temperature-resistant mounting surface. Provide a sufficient distance between the HLR braking resistor and heat-sensitive materials. Make sure the cooling air supply is unrestricted. Take care that the environment can discharge the dissipation heat.

**NOTICE**

**Danger by insufficient installation!**

Protect the lines with the appropriate fusing elements in the supply feeder.

For the connection lines at X9, use at least the cross section of the lines for mains connection at X3. If this is impossible, select the cross section of the connection line at X9 in accordance with the continuous power of the braking resistor.

## X13, 24V Supply (Control Voltage)

**Function, Pin Assignment** The external 24V supply is applied via connection point X13 for

- the control section and power section of the drive controller
- brake control via X6
- the digital inputs and the digital output to X31 / X32


View	Con- nec- tion	Signal name	Function
	1	0V	Reference potential for power supply
	2	0V	
	3	+24V	Power supply
	4	+24V	
Spring terminal (connector)	Unit	Min.	Max.
<b>Connection cable</b>	mm <sup>2</sup>	1,0	2,5
	Stranded wire AWG	16	12
Stripped length	mm	10	
Power consumption	W	P <sub>N3</sub> (see data for control voltage)	
Voltage load capacity	V	U <sub>N3</sub> (see data for control voltage)	
<b>Current carrying capacity "looping through"</b> from 0V to 0V, 24V to 24V	A	10	
Polarity reversal protection		Within the allowed voltage range by internal protective diode	
Insulation monitoring		Possible	

Fig. 6-18: Function, Pin Assignment, Properties

**Notes on Installation** Requirements on the connection to the 24V supply:

- Minimum cross section: 1 mm<sup>2</sup>
- Maximum allowed inductance: 100 µH (2 twisted single strands, 75 m long)
- Parallel line routing where possible

Depending on the power consumption of the devices and the current carrying capacity of the connector X13, check via how many devices one line for 24V supply can be looped through. You might possibly have to connect another device directly to the 24V supply and then loop through the control voltage from this device to other devices.

## X24, X25, Multi-Ethernet

**Description** With the Multi-Ethernet communication module "ET", drive controllers can be integrated in different Ethernet field bus systems (e.g. sercos III, EtherCAT, EtherNet/IP or ProfiNet). For devices of ADVANCED design, the interface is used as sercos III master.

Mounting and Installation

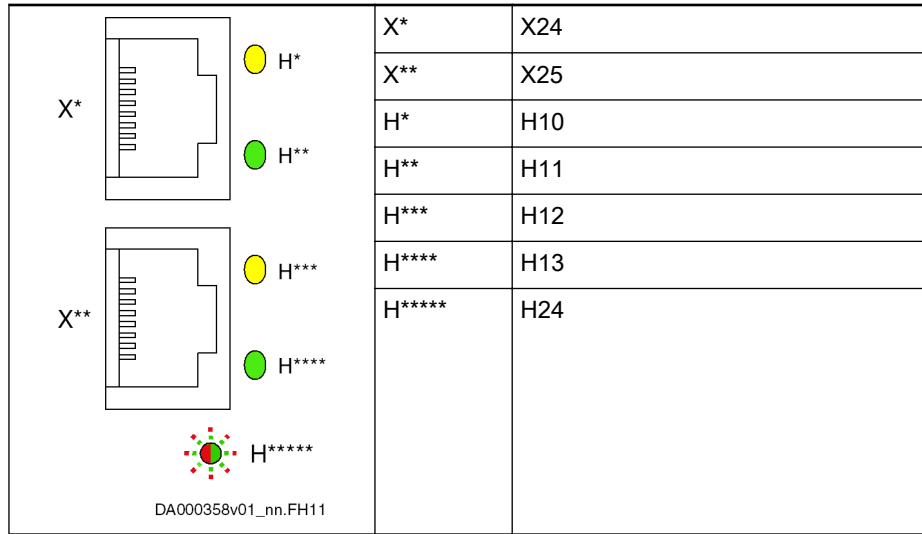


Fig.6-19: Connection Point  
 sercos III, EtherNet/IP, ProfiNet:

Connection

- Input: X24 or X25
- Output: X25 or X24

EtherCAT:

- Input: X25
- Output: X24

View	Connection	Signal name	Function
<p>DA000041v01_nn.FH</p>	1	TD+	Transmit, differential output A
	2	TD-	Transmit, differential output B
	3	RD+	Receive, differential input A
	4	n. c.	-
	5	n. c.	-
	6	RD-	Receive, differential input B
	7	n. c.	-
	8	n. c.	-
	Housing		Shield connection
<b>Properties</b>			
Standard	<ul style="list-style-type: none"> <li>• Ethernet</li> <li>• Type: RJ-45, 8-pin</li> </ul>		



Mounting and Installation

Compatibility	100Base-TX according to IEEE 802.3u
Recommended cable type	<ul style="list-style-type: none"> <li>• According to <b>CAT5e</b>; type of shield ITP (Industrial Twisted Pair)</li> <li>• Ready-made cables which can be ordered:                     <ul style="list-style-type: none"> <li>- <b>RKB0011</b>                              Long cables (no more than 100 m) to connect the drive system to the higher-level control unit or remoter communication users.                              Minimum bending radius:                             <ul style="list-style-type: none"> <li>- 48.75 mm if laid flexibly</li> <li>- 32.50 mm if laid permanently</li> </ul>                             Order code for a 30 m long cable: RKB0011/030,0</li> </ul> </li> <li>- <b>RKB0013</b>                              Short cables to connect devices arranged side by side in the control cabinet.                              4 lengths available: 0.19 m; 0.25 m; 0.35 m; 0.55 m                              Order code for a 0.55 m long cable: RKB0013/00,55                              Minimum bending radius: 30.75 mm</li> </ul>

Fig. 6-20: Function, Pin Assignment, Properties

**LEDs** See index entry "LED → H10, H11, H12, H13" and "LED → H24".

**X24, X25, sercos III Master (CCD)**

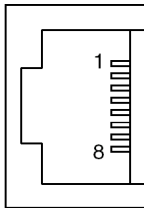
- Description**
- Only available at HCS01.1E-W00\*\*-A-0\*-**A-CC** (ADVANCED) devices
  - Complies with IEEE 802.3 standard
  - Is used as "master" for cross communication (CCD = Cross Communication Drives)

**Connection Point** Technical data: See description "X24, X25, Multi-Ethernet - ET"

**LEDs** See index entry "LED → H10, H11, H12, H13" and "LED → H24".

**X26, Engineering Interface**

**Description** Exclusively available at HCS01.1E-W00\*\*-A-0\*-**A-CC** (ADVANCED).

View	Connection	Signal name	Function
 <p>DA000041v01_nn.FH</p>	1	TD+	Transmit, differential output A
	2	TD-	Transmit, differential output B
	3	RD+	Receive, differential input A
	4	n. c.	-
	5	n. c.	-
	6	RD-	Receive, differential input B
	7	n. c.	-
	8	n. c.	-
	Housing		Shield connection
<b>Properties</b>			


## Mounting and Installation

Standard	<ul style="list-style-type: none"> <li>Ethernet</li> <li>Type: RJ-45, 8-pin</li> </ul>
Compatibility	100Base-TX according to IEEE 802.3u
Recommended cable type	<ul style="list-style-type: none"> <li>According to <b>CAT5e</b>; type of shield ITP (Industrial Twisted Pair)</li> <li>Ready-made cables which can be ordered: <ul style="list-style-type: none"> <li><b>RKB0011</b> Long cables (no more than 100 m) to connect the drive system to the higher-level control unit or remoter communication users. Minimum bending radius: <ul style="list-style-type: none"> <li>48.75 mm if laid flexibly</li> <li>32.50 mm if laid permanently</li> </ul> Order code for a 30 m long cable: RKB0011/030,0</li> <li><b>RKB0013</b> Short cables to connect devices arranged side by side in the control cabinet. 4 lengths available: 0.19 m; 0.25 m; 0.35 m; 0.55 m Order code for a 0.55 m long cable: RKB0013/00,55 Minimum bending radius: 30.75 mm</li> </ul> </li> </ul>

Fig.6-21: Function, Pin Assignment, Properties

LEDs See index entry "LED → H10, H11, H12, H13".
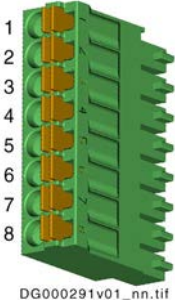
## X31, Digital Inputs, Digital Output

View	Conne- ction	Signal name	Function	Default assignment
 DG000291v01_nn.tif	1	I_1	Digital input	Probe 1
	2	I_2		Probe 2
	3	I_3		E-Stop input
	4	I_4		Travel range limit switch input
	5	I_5		Travel range limit switch input
	6	I_6		Not assigned
	7	I_7		Not assigned
	8	I/O_8	Digital input/output	Not assigned
<b>Spring terminal (connector)</b>	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>	
<b>Connection cable</b>	mm <sup>2</sup>	0,2	1,5	
Stranded wire	AWG	24	16	
Stripped length	mm	-	10	
Input current	A	-	0,01	

Mounting and Installation

Input voltage	V	-	24
Output current I/O_8	A	-	0,5

Fig.6-22: Function, Pin Assignment, Properties



The **reference potential** for the digital inputs and the digital input/output is applied to X13.1 and X13.2.

Technical Data See index entry "Technical data → Digital inputs"

X32, Analog Input

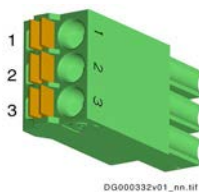
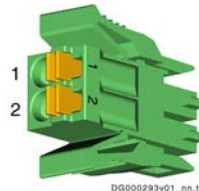
View	Conne- ction	Signal name	Function
 <small>DG000332v01_en.tif</small>	1	GND	GND reference
	2	I_a_1-	Analog input
	3	I_a_1+	
<b>Spring terminal (connector)</b>	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>
<b>Connection cable</b>	mm <sup>2</sup>	0,2	1,5
Stranded wire	AWG	24	16
Stripped length	mm	10	
Input current	A	-	0,01
Input voltage	V	-	±10

Fig.6-23: Function, Pin Assignment, Properties

Technical Data See index entry "Technical data → Analog input"

X47, Bb Relay Contact, Module Bus

HCS01.1E-xxxx-x-02			
View	Conne- ction	Signal name	Function
 <small>DG000293v01_en.tif</small>	1	Rel1	Bb relay contact <sup>1)</sup>
	2	Rel2	Bb relay contact <sup>1)</sup>
<b>Spring terminal (connector)</b>	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>
<b>Connection cable</b>	mm <sup>2</sup>	0,2	1,5
Stranded wire	AWG	24	16


## Mounting and Installation

Stripped length	mm	10	
Contact rating	V		30
	A	0,01	1

- 1) Wire the Bb relay contact in the control circuit for mains connection (see index entry "Mains connection → Control circuit"). When the contact opens, the mains contactor must interrupt the power supply.

*Fig. 6-24: Function, Pin Assignment, Properties*

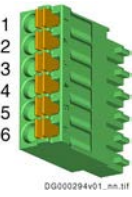**Technical Data** See index entry "Technical data → Relay contact"

HCS01.1E-xxxx-x-03			
View	Con- nection	Signal name	Function
	1	Rel1	Bb relay contact <sup>1)</sup>
	2	Rel2	Bb relay contact <sup>1)</sup>
	3	Mod1	Module bus <sup>2)</sup>
	4	Mod2	Module bus <sup>2)</sup>
	5	0V_Mod	Module bus GND <sup>2)</sup>
	6	0V_Mod	Module bus GND <sup>2)</sup>
<b>Spring terminal (connector)</b>	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>
<b>Connection cable</b> Stranded wire	mm <sup>2</sup>	0,2	1,5
	AWG	24	16
Stripped length	mm	10	
Contact rating	V		30
	A	0,01	1

- 1) Wire the Bb relay contact in the control circuit for mains connection (see index entry "Mains connection → Control circuit"). When the contact opens, the mains contactor must interrupt the power supply. When several devices assume the DC bus supply (group supply), connect the Bb relay contacts (X47) of all supplying devices in series.

- 2) The pins 3, 4 and 5, 6 are jumpered. This allows looping through the module bus from one device to the next. Use **shielded lines** to loop through the module bus, when the length of all module bus connections is **greater than 3 m**.

*Fig. 6-25: Function, Pin Assignment, Properties*

**Technical Data** See index entry "Technical data → Relay contact"

## X77, L+ L-, DC Bus Connection

### WARNING

**Lethal electric shock by live parts with more than 50 V!**

Before working on live parts: De-energize installation and secure power switch against unintentional or unauthorized re-energization.

Before accessing the device, wait at least **30 minutes** after switching off the supply voltages to allow discharging.

Check whether voltage has fallen below 50 V before touching live parts!

**Never operate the drive controller without touch guard or without DC bus connector.** Only remove the touch guard, if you want to use the DC bus connector at the drive controller. If you do not use the DC bus connector any longer, you have to cover the DC bus connection with the supplied touch guard.

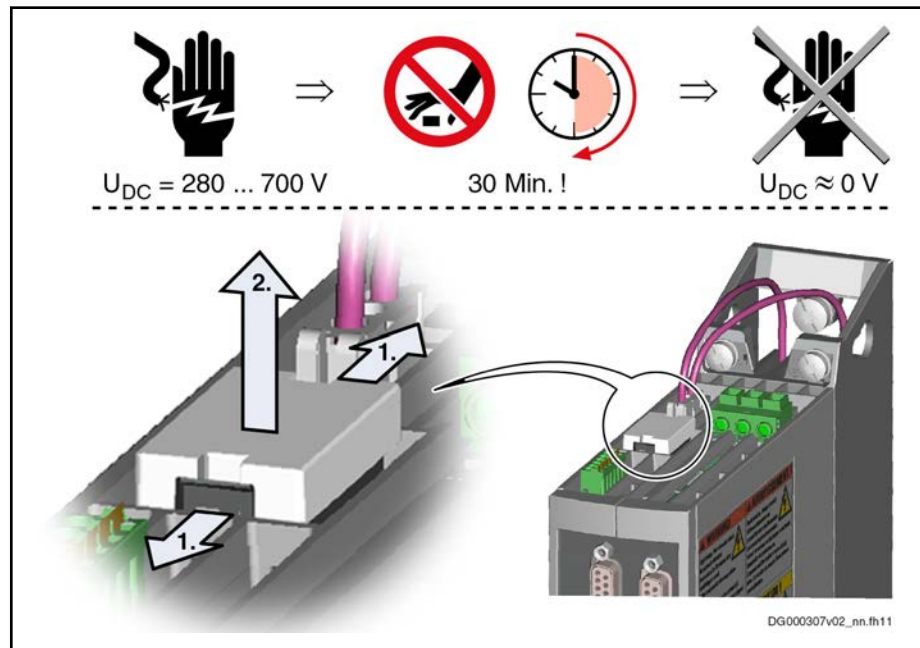


Observe the information on DC bus coupling (index entry "DC bus → Coupling").

<b>Function, Pin Assignment</b>	The DC bus connection connects <ul style="list-style-type: none"><li>• several HCS01.1E-W00xx-x-03 to each other</li><li>• one drive controller to a DC bus capacitor unit (to backup the DC bus voltage)</li></ul>
<b>Touch Guard</b>	The DC bus connection has been provided with a touch guard at the factory. To plug the DC bus connector, you have to remove the touch guard.

## Mounting and Installation

## How to Remove the Touch Guard:



$U_{DC}$  DC bus voltage

30 Min. !

Before accessing the device, wait at least 30 minutes after switching off the supply voltages to allow discharging.

1. With a small screwdriver (blade width < 3 mm), push the fixing device outwards and simultaneously lever out the touch guard.
2. Pull off touch guard.
3. Store the touch guard in a place where you can find it later on. If you want to operate the device without DC bus connector, you have to plug the touch guard on connection point X77 again.

Fig.6-26: How to Remove the Touch Guard

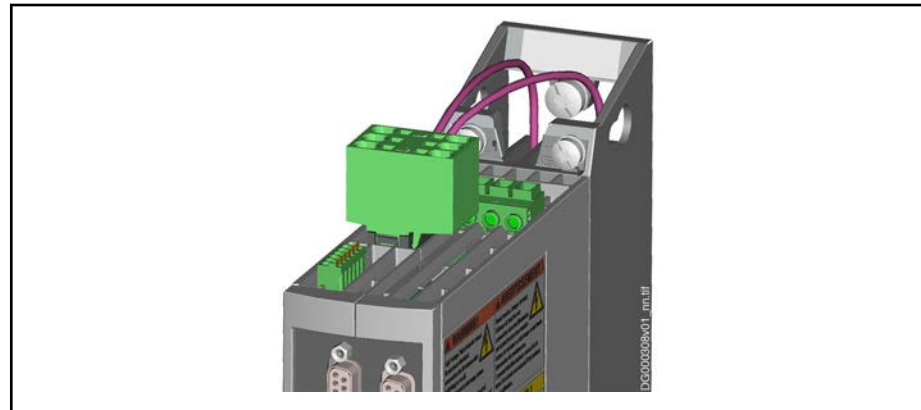


Fig.6-27: DC Bus Connector at Device

Mounting and Installation

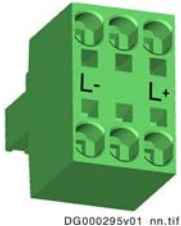
View	Identification	Function	
	L-	Connection points for connecting DC bus connections of several devices (The DC bus connector is available as an accessory; see index entry "Accessories → DC bus connector")	
	L-		
	n. c.		
	n. c.		
	L+		
	L+		
	Unit	Min.	Max.
<b>Connection cable</b>	mm <sup>2</sup>	0,25	6
Stranded wire	AWG	24	8
Stripped length	mm	15	
Short circuit protection		Via fusing elements connected in the incoming circuit to the mains connection	
Overload protection		Via fusing elements connected in the incoming circuit to the mains connection	
<b>Current carrying capacity "looping through" from L+ to L+, L- to L-</b>	A	-	31

Fig.6-28: Function, Pin Assignment, Properties

Notes on Installation

To wire the DC bus, use the shortest possible flexible, **twisted** wires. When the DC buses of several devices have been coupled, the lines **mustn't be run outside of the control cabinet**.

**NOTICE**

**Risk of damage by reversing the polarity of the DC bus connections L- and L+**

Make sure the polarity is correct.


Length of twisted wire	Max. 2 m
Line cross section	Min. 6 mm <sup>2</sup> , but not smaller than cross section of supply feeder
Line protection	By means of fuses in the mains connection
Dielectric strength of single strand against ground	≥ 750 V (e.g.: strand type – H07)

Fig.6-29: DC Bus Line


There are two options for interconnecting the DC buses of several devices:

- Direct connection of the DC bus connections:
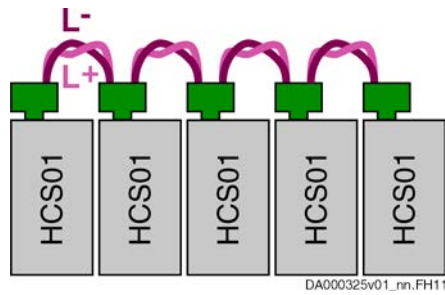
## Mounting and Installation




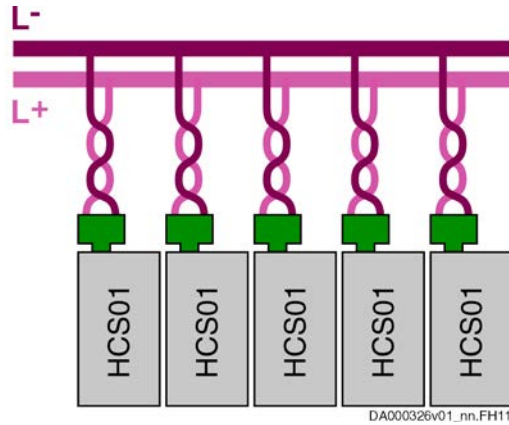- Connection of DC bus connections via connecting bars:



## Shield Connection

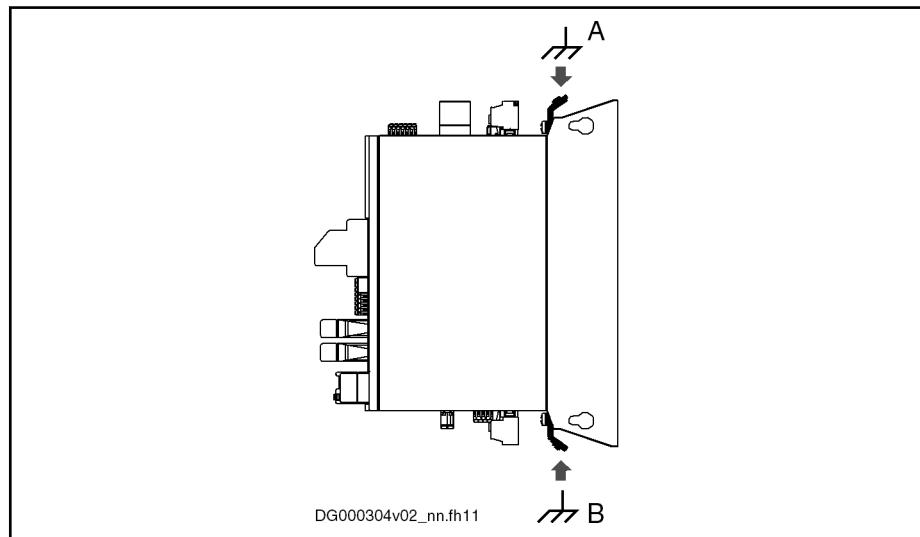Special plates are used for shield connection of cables which are connected to the device. The plates are part of the **HAS09** accessories and are screwed to the device.



- A Shield connection control lines  
B Shield connection motor cable


Fig.6-30: Shield Connection



The shield connection mustn't be used for strain relief of the cables. Mount a separate strain relief near the drive controller.



**Shield Connection Motor Cable**

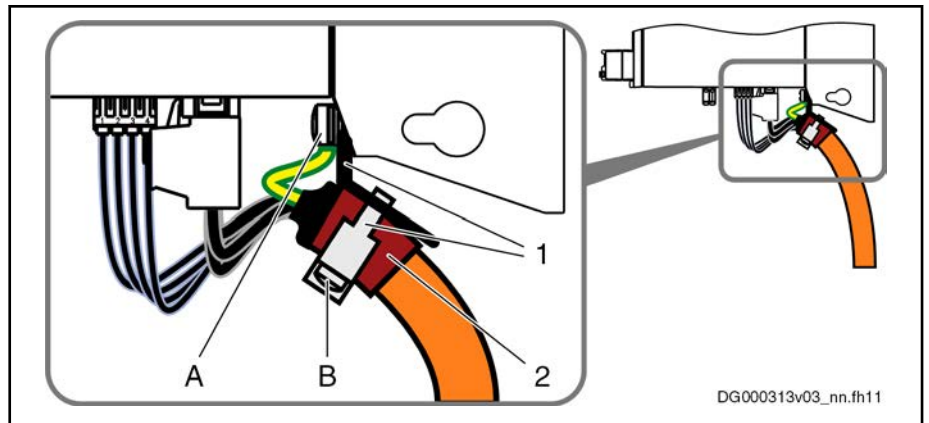

- 1 Plates
- 2 Shield of motor cable
- A Screw (M5×12 or M5×16); tightening torque: 5 Nm
- B Screw (M5×30); tightening torque: 1 Nm

Fig. 6-31: Shield Connection Motor Cable

**Shield Connection Control Lines**

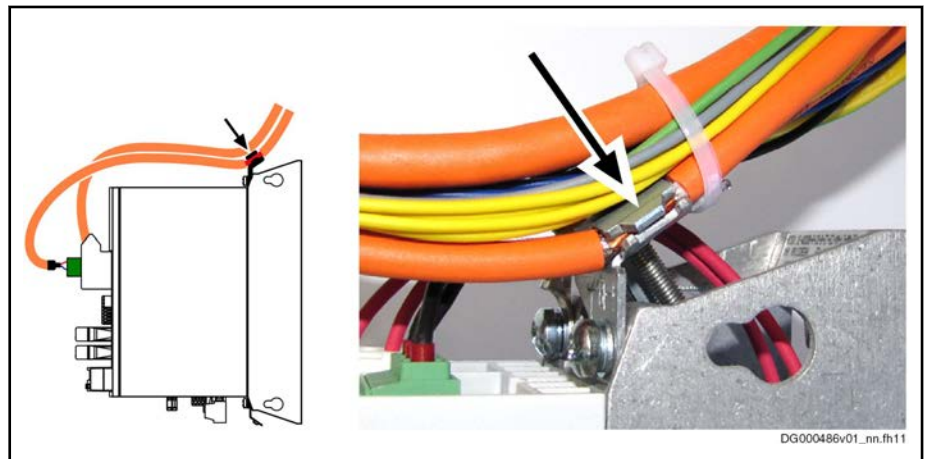


Fig. 6-32: Shield Connection of Shielded Lines at the Top of the Device

**Ground Connection**

The ground connection of the housing is used to provide functional safety of the drive controllers and protection against contact in conjunction with the equipment grounding conductor.

Ground the housings of the drive controllers:

1. Connect the bare metal back panel of the drive controller in conductive form to the mounting surface in the control cabinet. To do this, use the supplied mounting screws.
2. Connect the mounting surface of the control cabinet in conductive form to the equipment grounding system.
3. For the ground connection, observe the maximum allowed ground resistance.

**6.2.4 Optional Connection Points**

**X8, Optional Encoder (Option EC)**

You can connect an optional encoder to connection point X8.

Technical data: See description of connection point X4.

## Mounting and Installation

## X8, Encoder Emulation (Option EM)

**Description** Emulation of absolute value and incremental encoder signals for further evaluation by a control unit. The signals are galvanically isolated from the circuit board.

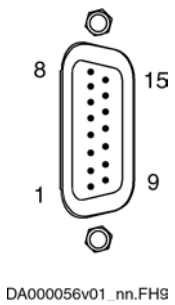
View	Identification	Function	
 <p>DA000056v01_nn.FHG</p>	X8	Encoder emulation	
<b>D-Sub 15-pin, male</b>	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>
<b>Connection cable</b> Stranded wire	mm <sup>2</sup>	0,25	0,5

Fig.6-33: Function, Pin Assignment, Properties

- Emulated Encoder Systems**
- Incremental encoder
  - SSI encoder
  - Incremental encoder with signal level converter

## Pin Assignment

Connection	Signal	Level	Input/Output	Function	Incremental encoder	SSI encoder	Incremental encoder with signal level converter
1	n. c.	-	-	Not assigned			
2	UL	5 ... 30 V	In	Power supply for output driver			✓
3	SSI_CLK+	RS422	In	SSI clock positive		✓	
4	SSI_CLK-	RS422	In	SSI clock negative		✓	
5	n. c.	-	-	Not assigned			
6	ULA0	UL	Out	Reference track with UL level			✓
7	ULA1	UL	Out	Track A1 with UL level			✓
8	ULA2	UL	Out	Track A2 with UL level			✓
9	ULA0+	RS422	Out	Reference track positive	✓		
	SSI_Data+	RS422	Out	SSI data positive		✓	
10	0 V	0 V	-	Reference potential / inner shield	✓	✓	✓

Mounting and Installation

Conne- ction	Signal	Level	Input/ Output	Function	Incremen- tal encod- er	SSI en- coder	Incremen- tal encod- er with signal lev- el convert- er
11	ULA0-	RS422	Out	Reference track negative	✓		
	SSI_Data-	RS422	Out	SSI data negative		✓	
12	UA1+	RS422	Out	Track A1 positive	✓		
13	UA1-	RS422	Out	Track A1 negative	✓		
14	UA2+	RS422	Out	Track A2 positive	✓		
15	UA2-	RS422	Out	Track A2 negative	✓		
Connector housing	-	-	-	Overall shield			

Fig. 6-34: Pin Assignment

**X22/X23, Multi-Ethernet / sercos III (Option ET)**

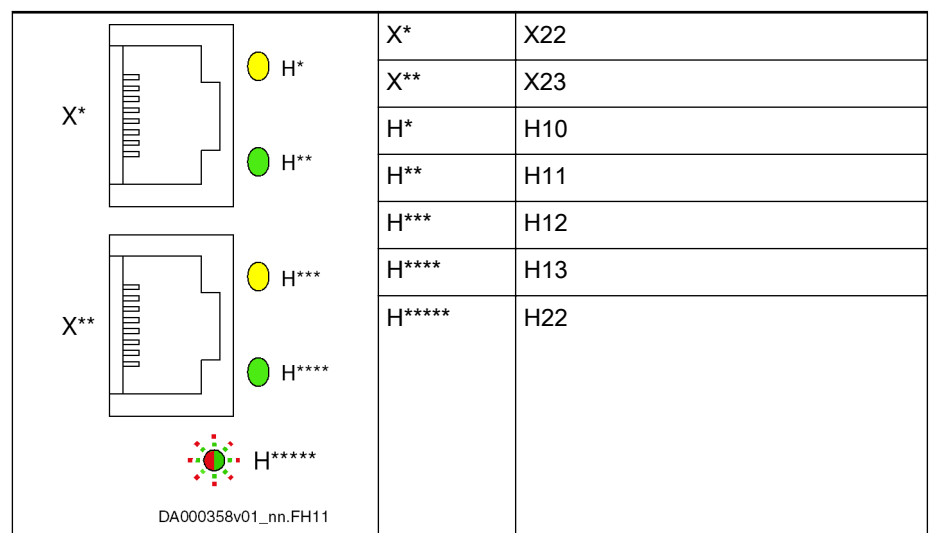


Fig. 6-35: Connection Point

Technical data: See description "X24, X25, Multi-Ethernet - ET"

**X30, PROFIBUS PB**

Description

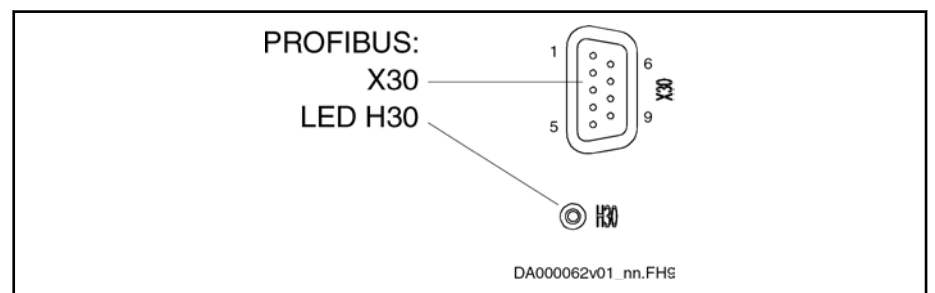


Fig. 6-36: PROFIBUS Interface

## Mounting and Installation

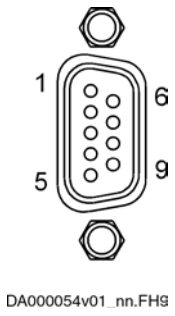
View	Identification	Function	
 DA000054v01_nn.FHG	X30	PROFIBUS PB	
<b>D-Sub, 9-pin, female</b>	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>
Connection cable Stranded wire	mm <sup>2</sup>	0,08	0,5

Fig.6-37: Function, Pin Assignment, Properties

## Pin Assignment

Pin	DIR	Signal	Function
1		-	n. c.
2		-	n. c.
3	I/O	RS485+	Receive/transmit data-positive
4	O	CNTR-P	Repeater control signal
5		0 V	0 V
6	O	+5 V	Repeater supply
7		-	n. c.
8	I/O	RS485-	Receive/transmit data-negative
9		0V	0 V

Fig.6-38: Signal Assignment

**Shield Connection**

Via D-sub mounting screws and metallized connector housing.

**Compatibility of the Interface**

According to DIN EN 50 170

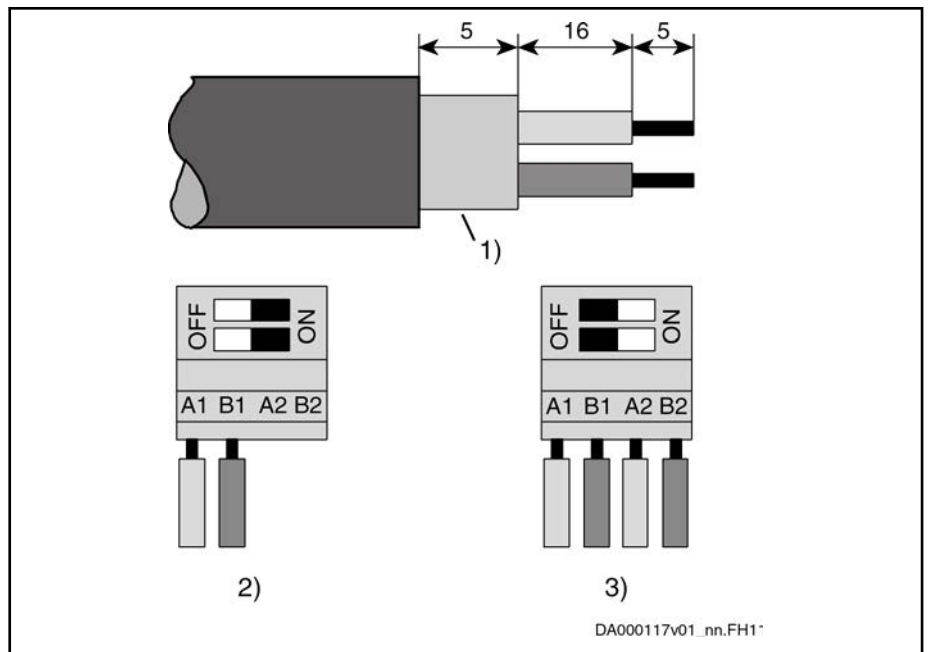
**Recommended Cable Type**

According to DIN EN 50 170 - 2, cable type A

**Bus Connectors**

The PROFIBUS connectors each have a connectable terminating resistor. The terminating resistor must always be active at both the first and last bus node. Carry out the connection as shown in the figures below.

Mounting and Installation



- 1) Shield
- 2) Bus connection and switch position for first node and last node
- 3) Bus connection and switch position for all other nodes

Fig. 6-39: Preparing a Cable for Connecting a Bus Connector

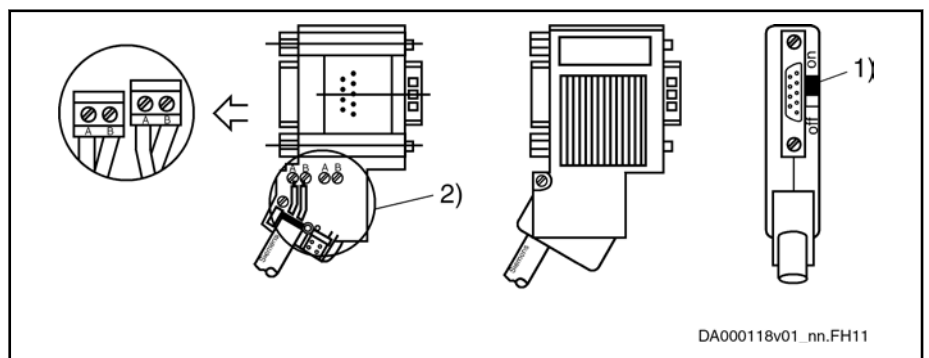
To assemble the bus cable, proceed as follows:

- Use cable according to DIN EN50170 / 2 edition 1996
- Strip cable (see figure above)
- Insert both cores into screw terminal block



Do not interchange the cores for A and B.


- Press cable sheath between both clamps
- Screw on both cores in screw terminals



- 1) Switch position for first slave and last slave in PROFIBUS-DP
- 2) Cable shield must have direct contact to metal


Fig. 6-40: Bus Connection for First and Last Slave, Bus Connector With 9-pin D-Sub Female Connector, INS0541

## Mounting and Installation

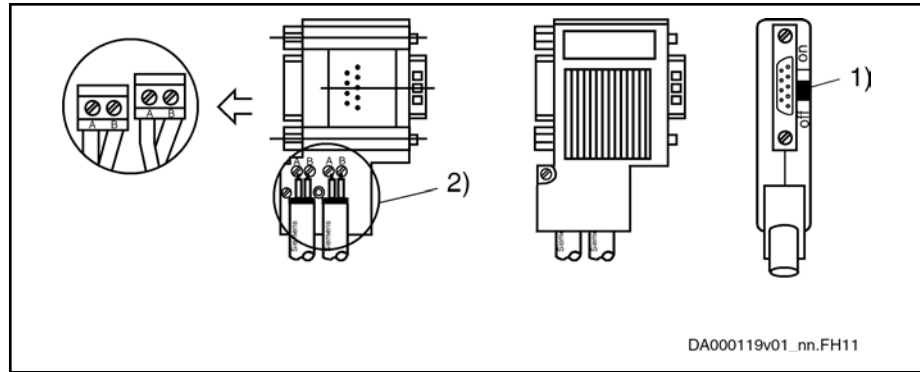


- 1) Terminating resistor is off
- 2) Cable shield must have direct contact to metal

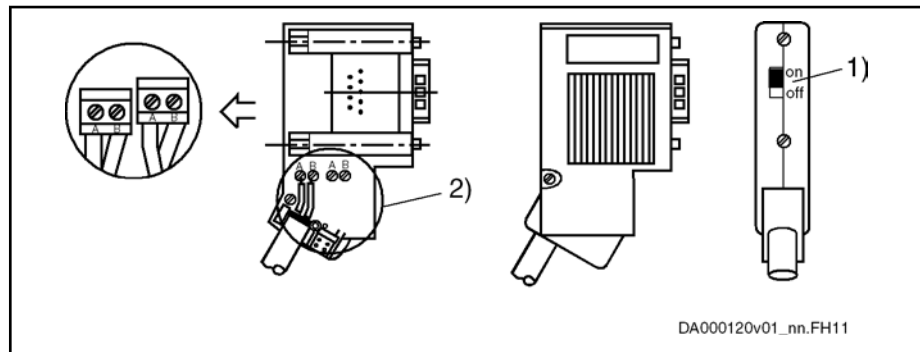Fig. 6-41: Bus Connection for all Other Slaves, Bus Connector With 9-pin D-Sub Female Connector, INS0541



- 1) Switch position for first slave and last slave in PROFIBUS-DP
- 2) Cable shield must have direct contact to metal

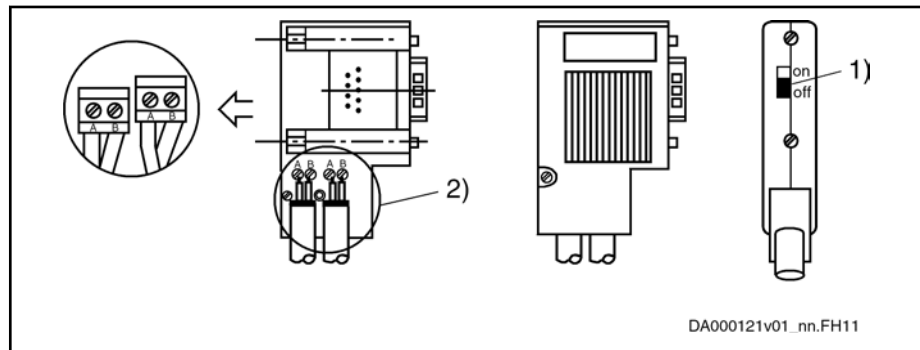Fig. 6-42: Bus Connection for First and Last Slave, Without 9-pin D-Sub Female Connector, INS0540



- 1) Terminating resistor is off
- 2) Cable shield must have direct contact to metal

Fig. 6-43: Bus Connection for all Other Slaves, Without 9-pin D-Sub Female Connector, INS0540

Connect the drive controller to a control unit using a shielded two-wire line in accordance with DIN 19245/Part 1.

**Signal Specification**

See index entry "PROFIBUS → Signal specification"

## X49, Optional Safety Technology L3 or L4

### Data

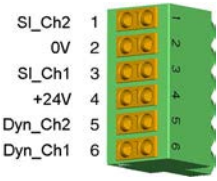
View	Identifica- tion	Function	
	X49	L3: Safe Torque Off L4: Safe Torque Off, Safe Brake Control	
Spring terminal (connector)	Unit	Min.	Max.
Connection cable	mm <sup>2</sup>	1	1,5
Stranded wire	AWG	16	16
Stripped length	mm	8	
Output current per output	mA	-	350
Input current 24V supply	mA	-	700
Voltage load	V	-	60
Polarity reversal protection for power supply	-	Available	

Fig. 6-44: Data

### Pin Assignment, Function

Function	Signal	Connection	Technical data
Selection channel 1	SI_Ch1	3	Digital Inputs <sup>1)</sup>
Selection channel 2	SI_Ch2	1	
Dynamization output channel 1	Dyn_Ch1	6	Digital Outputs <sup>2)</sup>
Dynamization output channel 2	Dyn_Ch2	5	
Power supply of <b>isolated</b> inputs and outputs	+24V	4	DC 19.2 ... 30 V
	0V	2	Min. 100 mA Max. 700 mA

1) See index entry "Digital inputs → Technical data; safety technology "L options""

2) See index entry "Digital outputs → Technical data; safety technology "L options""

Fig. 6-45: Pin Assignment, Function



When the dynamization outputs do not work, check the power supply connection. The polarity might possibly have been reversed.

## Mounting and Installation

## X61, CANopen (Option CN)

## Description

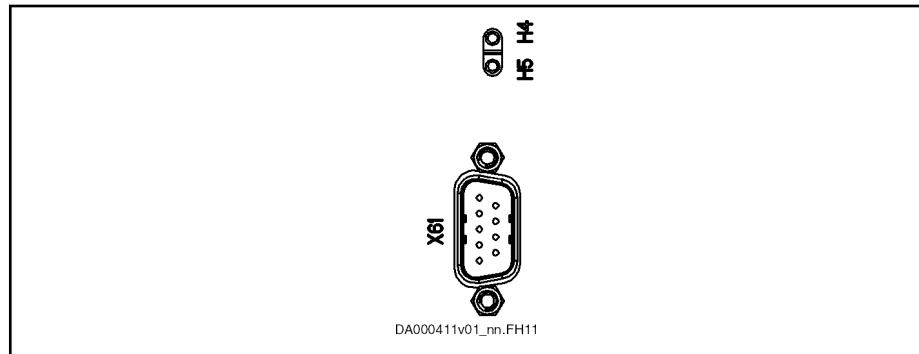


Fig. 6-46: CANopen

## Connection Point

Connection point	Type	Number of poles	Type of design	Stranded wire [mm <sup>2</sup> ]	Figure
X61	D-Sub	9	Pins on device	0,25–0,5	

Fig. 6-47: Connection Point

## Pin Assignment

Pin	Signal	Function
1	n. c.	-
2	CAN-L	Negated CAN signal (Dominant Low)
3	CAN-GND	Reference potential of CAN signals
4	n. c.	-
5	Drain/Shield	Shield connection
6	GND	Reference potential of device
7	CAN-H	Positive CAN signal (Dominant High)
8	n. c.	-
9	VCC	24 V supply voltage – plus

Fig. 6-48: Signal Assignment

## 6.2.5 EMC Measures for Design and Installation

## Rules for Design of Installations With Drive Controllers in Compliance With EMC

The following rules are the basics for designing and installing drives in compliance with EMC.

**Mains filter**

Correctly use a mains filter recommended by Rexroth for radio interference suppression in the supply feeder of the drive system.

**Control Cabinet Grounding**

Connect all metal parts of the cabinet with one another over the largest possible surface area to establish a good electrical connection. This, too, applies to the mounting of the mains filter. If required, use serrated washers which



## Mounting and Installation

	<p>cut through the paint surface. Connect the cabinet door to the control cabinet using the shortest possible grounding straps.</p>
<b>Line Routing</b>	<p>Avoid coupling routes between lines with high potential of noise and noise-free lines; therefore, signal, mains and motor lines and power cables have to be routed separately from another. Minimum distance: 10 cm. Provide separating sheets between power and signal lines. Ground separating sheets several times.</p> <p>The lines with high potential of noise include:</p> <ul style="list-style-type: none"><li>• Lines at the mains connection (incl. synchronization connection)</li><li>• Lines at the motor connection</li><li>• Lines at the DC bus connection</li></ul> <p>Generally, interference injections are reduced by routing cables close to grounded sheet steel plates. For this reason, cables and wires should not be routed freely in the cabinet, but close to the cabinet housing or mounting panels. Separate the incoming and outgoing cables of the radio interference suppression filter.</p>
<b>Interference Suppression Elements</b>	<p>Provide the following components in the control cabinet with interference suppression combinations:</p> <ul style="list-style-type: none"><li>• Contactors</li><li>• Relays</li><li>• Solenoid valves</li><li>• Electromechanical operating hours counters</li></ul> <p>Connect these combinations directly at each coil.</p>
<b>Twisted Wires</b>	<p>Twist unshielded wires belonging to the same circuit (feeder and return cable) or keep the surface between feeder and return cable as small as possible. Wires that are not used have to be grounded at both ends.</p>
<b>Lines of Measuring Systems</b>	<p>Lines of measuring systems must be shielded. Connect the shield to ground at both ends and over the largest possible surface area. The shield may not be interrupted, e.g. using intermediate terminals.</p>
<b>Digital Signal Lines</b>	<p>Ground the shields of digital signal lines at both ends (transmitter <b>and</b> receiver) over the largest possible surface area and with low impedance. In the case of bad ground connection between transmitter and receiver, additionally route a bonding conductor (min. 10 mm<sup>2</sup>). Braided shields are better than foil shields.</p>
<b>Analog Signal Lines</b>	<p>Ground the shields of analog signal lines at one end (transmitter <b>or</b> receiver) over the largest possible surface area and with low impedance. This avoids low-frequency interference current (in the mains frequency range) on the shield.</p>
<b>Connecting the Mains Choke</b>	<p>Keep connection lines of the mains choke at the drive controller as short as possible and twist them.</p>
<b>Installing the Motor Power Cable</b>	<ul style="list-style-type: none"><li>• Use shielded motor power cables or run motor power cables in a shielded duct</li><li>• Use the shortest possible motor power cables</li><li>• Ground shield of motor power cable at both ends over the largest possible surface area to establish a good electrical connection</li><li>• Run motor lines in shielded form inside the control cabinet</li><li>• Do not use any steel-shielded lines</li><li>• The shield of the motor power cable mustn't be interrupted by mounted components, such as output chokes, sine filters or motor filters</li></ul>

## Mounting and Installation

### EMC-Optimal Installation in Facility and Control Cabinet

#### General Information

For EMC-optimal installation, a spatial separation of the interference-free area (mains connection) and the interference-susceptible area (drive components) is recommended, as shown in the figures below.



Recommendation: For EMC-optimal installation in the control cabinet, use a separate control cabinet panel for the drive components.

#### Division Into Areas (Zones)

Exemplary arrangements in the control cabinet: See section [Control Cabinet Design According to Interference Areas - Exemplary Arrangements, page 145](#).

We distinguish three areas:

1. Interference-free area of control cabinet (**area A**):

This includes:

- Supply feeder, input terminals, fuse, main switch, mains side of mains filter for drives and corresponding connecting lines
- Control voltage or auxiliary voltage connection with power supply unit, fuse and other parts unless connection is run via the mains filter of the AC drives
- All components that are not electrically connected with the drive system

2. Interference-susceptible area (**area B**):

- Mains connections between drive system and mains filter for drives, mains contactor
- Interface lines of drive controller

3. Strongly interference-susceptible area (**area C**):

- Motor power cables including single cores

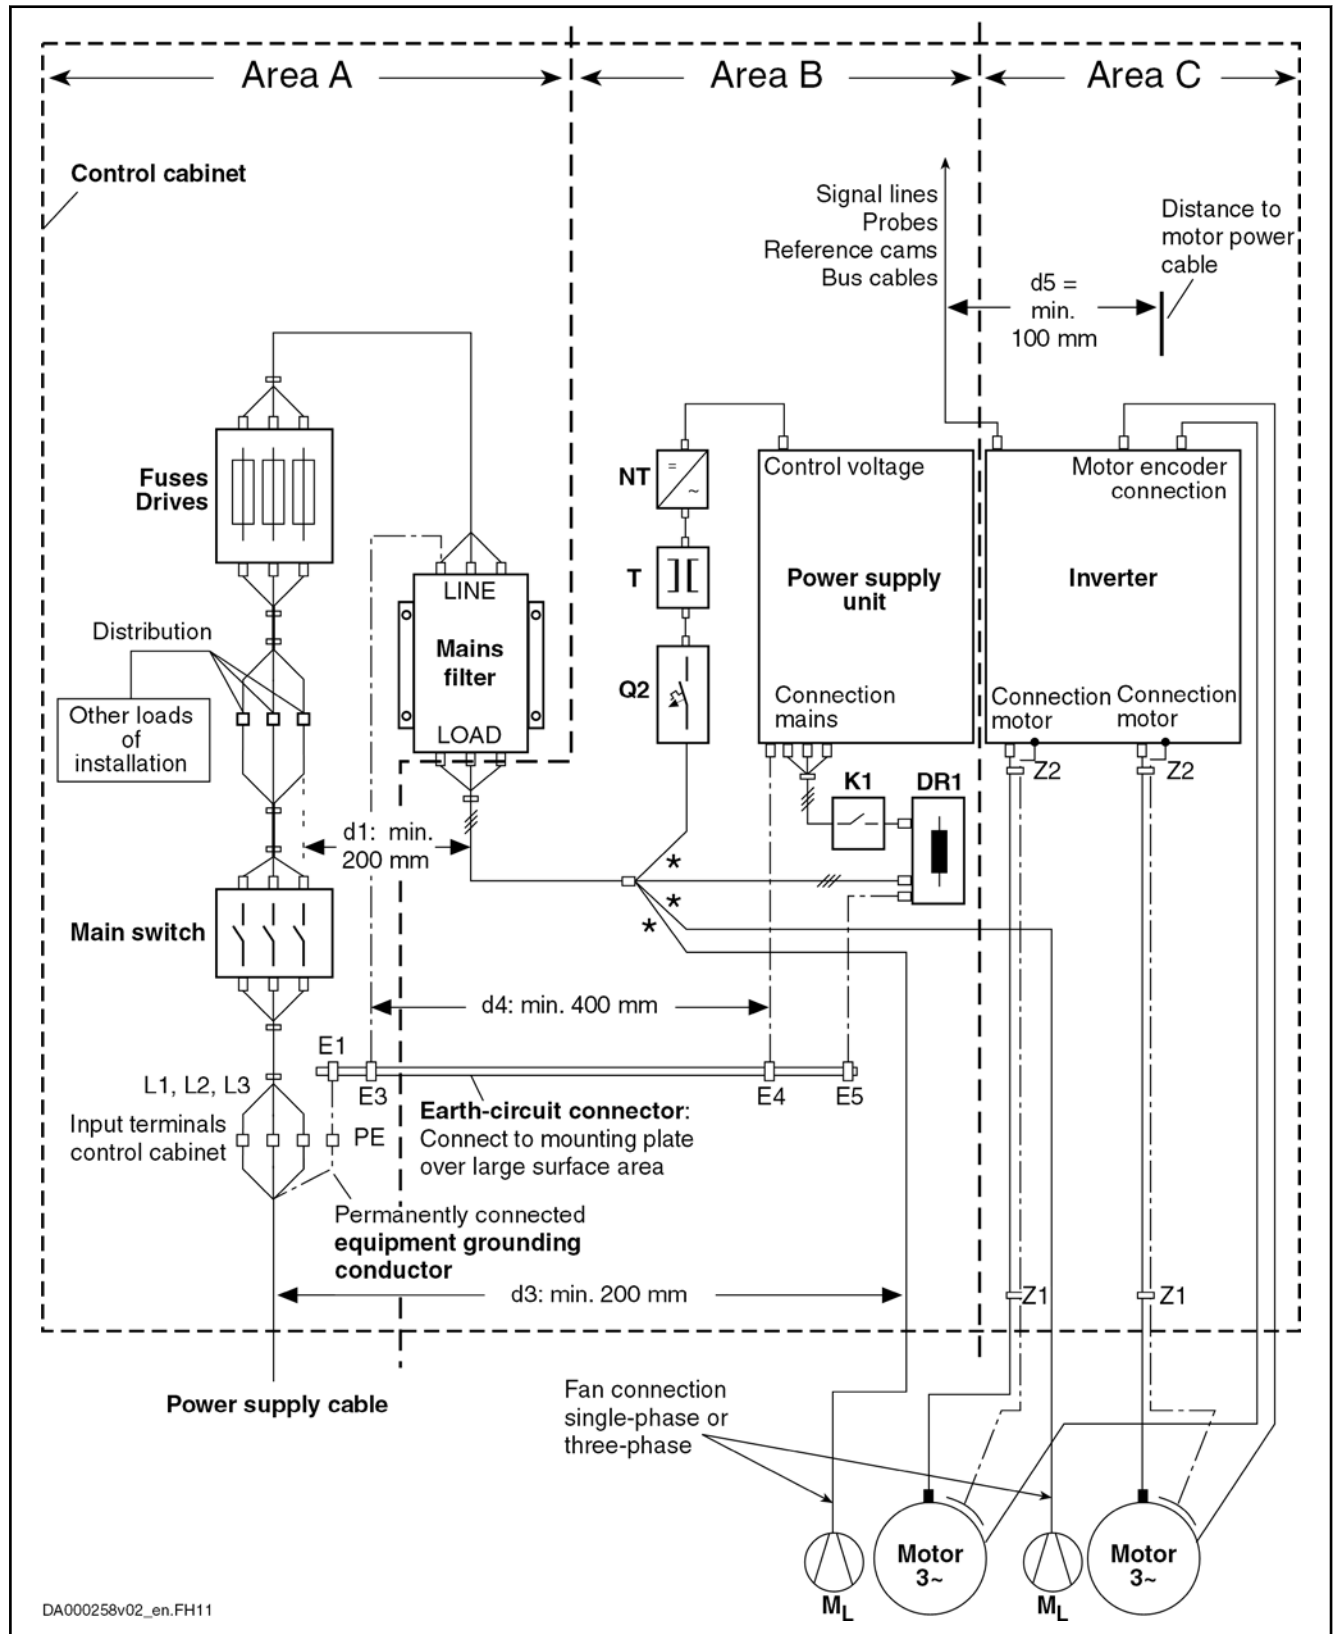
Never run lines of one of these areas in parallel with lines of another area so that there isn't any unwanted interference injection from one area to the other and that the filter is jumpered with regard to high frequency. Use the shortest possible connecting lines.

Recommendation for complex systems: Install drive components in one cabinet and the control units in a second, separate cabinet.

Badly grounded control cabinet doors act as antennas. Therefore, connect the control cabinet doors to the cabinet on top, in the middle and on the bottom via short equipment grounding conductors with a cross section of at least 6 mm<sup>2</sup> or, even better, via grounding straps with the same cross section. Make sure connection points have good contact.

### Control Cabinet Design According to Interference Areas - Exemplary Arrangements

Infeeding Supply Unit or Converter



DA000258v02\_en.FH11

## Mounting and Installation

E1...E5	Equipment grounding conductor of the components
K1	External mains contactor for supply units and converters without integrated mains contactor
M <sub>L</sub>	Motor fan
NT	Power supply unit
Q2	Fusing
T	Transformer
Z1, Z2	Shield connection points for cables
*	Not allowed at HNF mains filter

*Fig. 6-49: Infeeding Supply Unit or Converter – EMC Areas in the Control Cabinet*

**Design and Installation in Area A - Interference-Free Area of Control Cabinet****Arranging the Components in the Control Cabinet**

Comply with recommended distance of at least **200 mm** (distance d1 in the figure):

- Between components and electrical elements (switches, pushbuttons, fuses, terminal connectors) in the interference-free area A and the components in the two other areas B and C

Comply with recommended distance of at least **400 mm** (distance d4 in the figure):

- Between magnetic components (such as transformers, mains chokes and DC bus chokes that are directly connected to the power connections of the drive system) and the interference-free components and lines between mains and filter including the mains filter in area A

If these distances are not kept, the magnetic leakage fields are injected to the interference-free components and lines connected to the mains and the limit values at the mains connection are exceeded in spite of the installed filter.

**Cable Routing of the Interference-Free Lines to the Mains Connection**

Comply with recommended distance of at least **200 mm** (distance d1 and d3 in the figure):

- Between supply feeder or lines between filter and exit point from the control cabinet in area A and the lines in area B and C

If this is impossible, there are two alternatives:

1. Install lines in shielded form and connect the shield at several points (at least at the beginning and at the end of the line) to the mounting plate or the control cabinet housing over a large surface area.
2. Separate lines from the other interference-susceptible lines in areas B and C by means of a grounded distance plate vertically attached to the mounting plate.


Install the shortest possible lines within the control cabinet and install them directly on the grounded metal surface of the mounting plate or of the control cabinet housing.

Mains supply lines from areas B and C must not be connected to the mains without a filter.



In case you do not observe the information on cable routing given in this section, the effect of the mains filter is totally or partly neutralized. This will cause the noise level of the interference emission to be higher within the range of 150 kHz to 40 MHz and the limit values at the connection points of the machine or installation will thereby be exceeded. Consider the specified distances to be recommended data, provided that the dimensions of the control cabinet allow installing the lines accordingly.

Mounting and Installation

<b>Routing and Connecting a Neutral Conductor (N)</b>	<p>If a neutral conductor is used together with a three-phase connection, it must not be installed unfiltered in zones B and C, in order to keep interference off the mains.</p>
<b>Motor Fan at Mains Filter</b>	<p>Single-phase or three-phase supply lines of motor fans, that are usually routed in parallel with motor power cables or interference-susceptible lines, must be filtered:</p> <ul style="list-style-type: none"><li>• In drive systems with <b>regenerative supply units</b>, via a separate single-phase (NFE type) or three-phase filter (HNF type) near the mains connection of the control cabinet</li><li>• In drive systems with <b>only infeeding supply units</b>, via the available three-phase filter of the drive system</li></ul> <p>When switching power off, make sure the fan is not switched off. When switching power off, make sure the fan is not switched off.</p>
<b>Loads at Mains Filter of Drive System</b>	<p> <b>Only operate allowed loads at the mains filter of the drive system!</b></p> <p>At the three-phase filter for the power connection of regenerative supply units, it is only allowed to operate the following loads:</p> <ul style="list-style-type: none"><li>• HMV supply unit with mains choke and, if necessary, mains contactor</li></ul> <p>Do not operate any motor fans, power supply units etc. at the mains filter of the drive system.</p>
<b>Shielding Mains Supply Lines in Control Cabinet</b>	<p>If there is a high degree of interference injection to the mains supply line within the control cabinet, although you have observed the above instructions (to be found out by EMC measurement according to standard), proceed as follows:</p> <ul style="list-style-type: none"><li>• Only use shielded lines in area A</li><li>• Connect shields to the mounting plate at the beginning and the end of the line by means of clips</li></ul> <p>The same procedure may be required for long cables of more than 2 m between the point of power supply connection of the control cabinet and the filter within the control cabinet.</p>
<b>Mains Filters for AC Drives</b>	<p>Ideally mount the mains filter on the parting line between the areas A and B. Make sure the ground connection between filter housing and housing of the drive controllers has good electrically conductive properties.</p> <p>If <b>single-phase</b> loads are connected on the load side of the filter, their current may be a maximum of 10% of the three-phase operating current. A highly imbalanced load of the filter would deteriorate its interference suppression capacity.</p> <p>If the mains voltage is more than 480 V, connect the filter to the output side of the transformer and not to the supply side of the transformer.</p>
<b>Grounding</b>	<p>In the case of bad ground connections in the installation, the distance between the lines to the grounding points E1, E2 in area A and the other grounding points of the drive system should be at least <math>d_4 = 400</math> mm, in order to minimize interference injection from ground and ground cables to the power input lines.</p> <p>See also <a href="#">Division Into Areas (Zones)</a>, page 144.</p>
<b>Point of Connection for Equipment Grounding Conductor at Machine, Installation, Control Cabinet</b>	<p>The equipment grounding conductor of the power cable of the machine, installation or control cabinet has to be <b>permanently connected</b> at point PE and have a <b>cross section of at least 10 mm<sup>2</sup></b> or to be complemented by a second equipment grounding conductor via separate terminal connectors (according to EN 61800-5-1:2007, section 4.3.5.5.2). If the cross section of the outer</p>

## Mounting and Installation

conductor is bigger, the cross section of the equipment grounding conductor must be accordingly bigger.

### Design and Installation in Area B - Interference-Susceptible Area of Control Cabinet

#### Arranging Components and Lines

Modules, components and lines in area B should be placed at a distance of at least **d1 = 200 mm** from modules and lines in area A.

Alternative: Shield modules, components and lines in area B by distance plates mounted vertically on the mounting plate from modules and lines in area A or use shielded lines.

Only connect power supply units for auxiliary or control voltage connections in the drive system to the mains via a mains filter. See [Division Into Areas \(Zones\)](#), page 144.

Install the shortest possible lines between drive controller and filter.

#### Control Voltage or Auxiliary Voltage Connection

Only in exceptional cases should you connect power supply unit and fusing for the control voltage connection to phase and neutral conductor. In this case, mount and install these components in area A far away from the areas B and C of the drive system. For details see section [Design and Installation in Area A - Interference-Free Area of Control Cabinet](#), page 146.

Run the connection between control voltage connection of the drive system and power supply unit used through area B over the shortest distance.

#### Line Routing

Run the lines along grounded metal surfaces, in order to minimize radiation of interference fields to area A (transmitting antenna effect).

### Design and Installation in Area C - Strongly Interference-Susceptible Area of Control Cabinet

Area C mainly concerns the motor power cables, especially at the connection point at the drive controller.

#### Influence of the Motor Power Cable

The longer the motor power cable, the greater its leakage capacitance. To comply with a certain EMC limit value, the allowed leakage capacitance of the mains filter is limited. For the calculation of the leakage capacitance, see the documentation on the drive system of the drive controller used.



- Run the shortest possible motor power cables.
- Only use **shielded** motor power cables by Rexroth.

#### Routing the Motor Power Cables and Motor Encoder Cables

Route the motor power cables and motor encoder cables along grounded metal surfaces, both inside the control cabinet and outside of it, in order to minimize radiation of interference fields. If possible, route the motor power cables and motor encoder cables in metal-grounded cable ducts.

Route the motor power cables and motor encoder cables

- with a distance of at least **d5 = 100 mm** to interference-free lines, as well as to signal cables and signal lines  
(alternatively separated by a grounded distance plate)
- in separate cable ducts, if possible

#### Routing the Motor Power Cables and Mains Connection Lines

For converters (drive controllers with individual mains connection), route motor power cables and (unfiltered) mains connection lines **in parallel for a maximum distance of 300 mm**. After that distance, route motor power cables and power supply cables in opposite directions and preferably in separate **cable ducts**.

Ideally, the outlet of the motor power cables at the control cabinet should be provided in a distance of at least  $d3 = 200 \text{ mm}$  from the (filtered) power supply cable.

**Converter - Routing the Motor Power Cables**

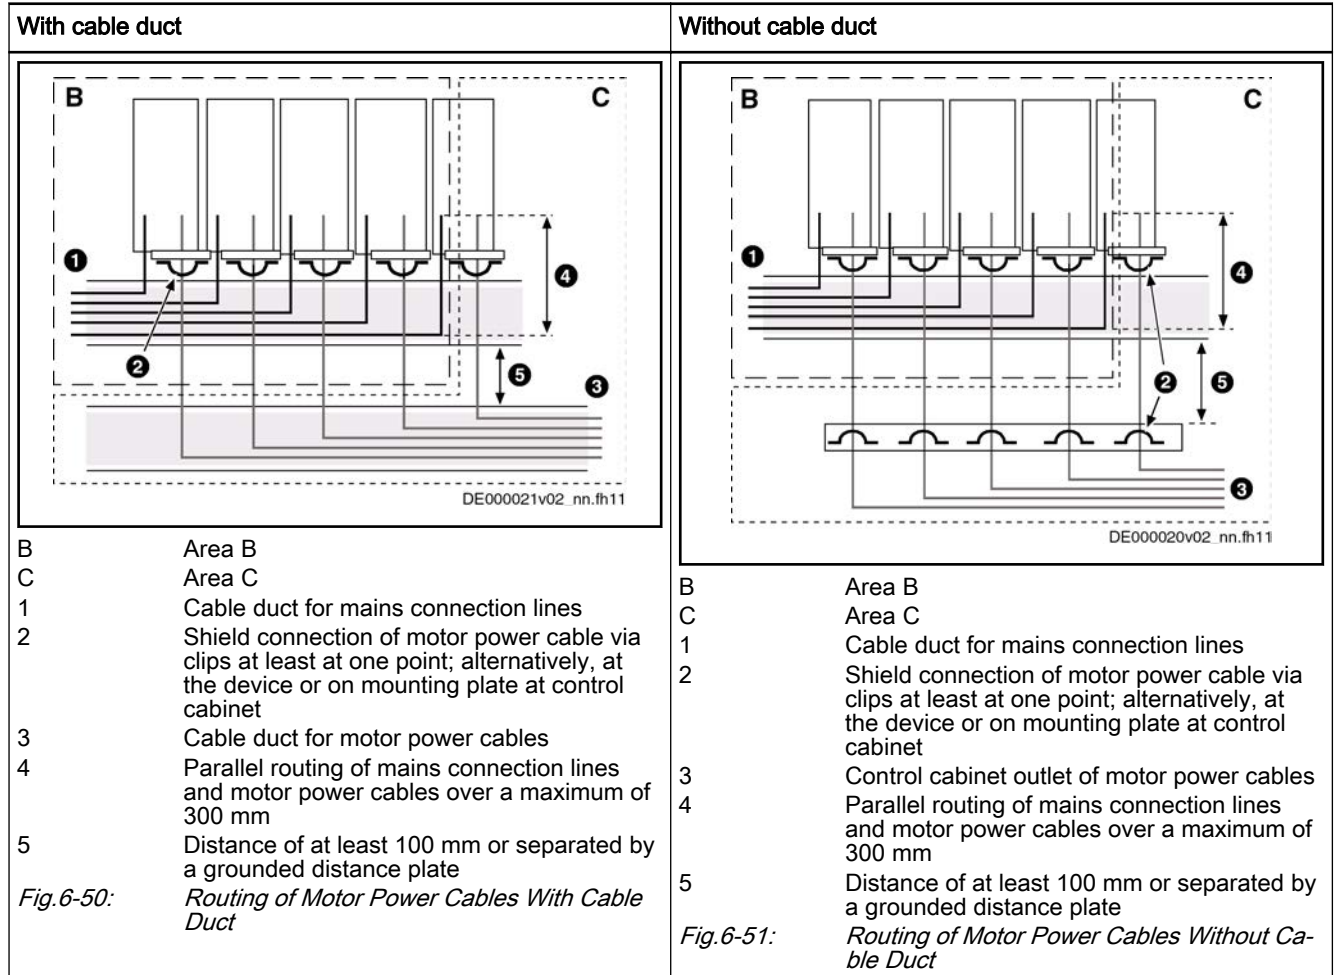


Fig. 6-52: Routing of Cables for Converter

**Ground Connections**

**Housing and Mounting Plate**

By means of appropriate ground connections, it is possible to avoid the emission of interference, because interference is discharged to ground on the shortest possible way.

Ground connections of the metal housings of EMC-critical components (such as filters, devices of the drive system, connection points of the cable shields, devices with microprocessor and switching power supply units) have to be well contacted over a large surface area. This also applies to all screw connections between mounting plate and control cabinet wall and to the mounting of a ground bus to the mounting plate.

The best solution is to use a zinc-coated mounting plate. Compared to a lacquered plate, the connections in this case have a good long-time stability.

**Connection Elements**

For lacquered mounting plates, always use screw connections with tooth lock washers and zinc-coated, tinned screws as connection elements. At the connection points, remove the lacquer so that there is safe electrical contact over a large surface area. You achieve contact over a large surface area by

## Mounting and Installation

<b>Metal Surfaces</b>	<p>means of bare connection surfaces or several connection screws. For screw connections, you can establish the contact to lacquered surfaces by using tooth lock washers.</p> <p>Always use connection elements (screws, nuts, plain washers) with good electroconductive surface.</p> <p>Bare zinc-coated or tinned metal surfaces have <b>good electroconductive properties</b>.</p> <p>Anodized, yellow chromated, black gunmetal finish or lacquered metal surfaces have <b>bad electroconductive properties</b>.</p>
<b>Ground Wires and Shield Connections</b>	<p>For connecting ground wires and shield connections, it is not the cross section but the size of contact surface that is important, as the high-frequency interference currents mainly flow on the surface of the conductor.</p> <p>Always connect cable shields, especially shields of the motor power cables, to ground potential over a large surface area.</p>

## Installing Signal Lines and Signal Cables

<b>Line Routing</b>	<p>For measures to prevent interference, see the Project Planning Manuals of the respective device. In addition, we recommend the following measures:</p> <ul style="list-style-type: none"> <li>• Route signal and control lines separately from the power cables with a minimum distance of <b>d5 = 100 mm</b> (see <a href="#">Division Into Areas (Zones), page 144</a>) or with a grounded separating sheet. The optimum way is to route them in separate cable ducts. If possible, lead signal lines into the control cabinet at one point only.</li> <li>• If signal lines are crossing power cables, route them in an angle of 90° in order to avoid interference injection.</li> <li>• Ground spare cables, that are not used and have been connected, at least at both ends so that they do not have any antenna effect.</li> <li>• Avoid unnecessary line lengths.</li> <li>• Run cables as close as possible to grounded metal surfaces (reference potential). The ideal solution are closed, grounded cable ducts or metal pipes which, however, is only obligatory for high requirements (sensitive instrument leads).</li> <li>• Avoid suspended lines or lines routed along synthetic carriers, because they are functioning like reception antennas (noise immunity) and like transmitting antennas (emission of interference). Exceptional cases are flexible cable tracks over short distances of a maximum of 5 m.</li> </ul>
<b>Shielding</b>	<p>Connect the cable shield immediately at the devices in the shortest and most direct possible way and over the largest possible surface area.</p> <p>Connect the shield of <b>analog signal lines</b> at one end over a large surface area, normally in the control cabinet at the analog device. Make sure the connection to ground/housing is short and over a large surface area.</p> <p>Connect the shield of <b>digital signal lines</b> at both ends over a large surface area and in short form. In the case of potential differences between beginning and end of the line, run an additional bonding conductor in parallel. This prevents compensating current from flowing via the shield. The guide value for the cross section is 10 mm<sup>2</sup>.</p> <p>You absolutely have to equip separable connections with connectors with grounded metal housing.</p> <p>In the case of non-shielded lines belonging to the same circuit, twist feeder and return cable.</p>



## General Measures of Radio Interference Suppression for Relays, Contactors, Switches, Chokes and Inductive Loads

If, in conjunction with electronic devices and components, inductive loads, such as chokes, contactors, relays are switched by contacts or semiconductors, appropriate interference suppression has to be provided for them:

- By arranging free-wheeling diodes in the case of d.c. operation
- In the case of a.c. operation, by arranging usual RC interference suppression elements depending on the contactor type, immediately at the inductance

Only the interference suppression element arranged immediately at the inductance does serve this purpose. Otherwise, the emitted noise level is too high which can affect the function of the electronic system and of the drive.



## 7 Technical Data of the Components

### 7.1 Control Section

#### 7.1.1 EC - Standard Encoder Evaluation

##### Supported Encoder Systems

###### Supported Encoder Systems

Encoder systems with a supply voltage of **5 and 12 volt**

- MSM motor encoder
- MSK motor encoder
- Sin-cos encoder 1V<sub>pp</sub>; HIPERFACE®
- Sin-cos encoder 1V<sub>pp</sub>; EnDat 2.1; (EnDat 2.2 in preparation)
- Sin-cos encoder 1V<sub>pp</sub>; with reference track
- 5V-TTL square-wave encoder; with reference track
- SSI
- Combined encoder for SSI (combination of SSI and sin-cos encoder 1V<sub>pp</sub>)
- Resolver
- Hall sensor box SHL02.1
- Digital Hall sensor in conjunction with Hall sensor adapter box SHL03.1

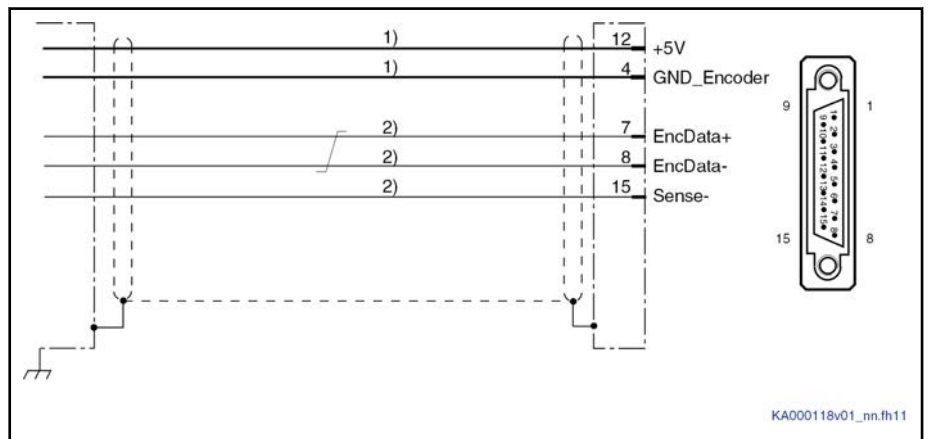
##### Encoder Type

###### IndraDyn S MSM Motors (5V Supply Voltage)

###### Properties

Encoder systems of the MSM motors are digital encoder systems that can be evaluated in absolute form. The optionally available battery box (see index entry "SUP-E01-MSM-BATTERYBOX") allows multi-turn functionality.

###### Connection Diagram



- 1) Line cross section  $\geq 0.5 \text{ mm}^2$ ; observe allowed encoder cable length  
 2) Line cross section  $\geq 0.14 \text{ mm}^2$

Fig.7-1: Connection Diagram EC with Encoder System of IndraDyn S MSM Motors



For **direct** connection to the encoder system, use our cable **RKG0033**.

###### Power Supply

**5 V** (the voltage is made available via the EC interface)

Technical specification of the power supply: See index entry "Encoder → 5 V power supply".

## Technical Data of the Components

**Cable Length** 75 m at most (when using the Sense function)

When you do not use the Sense function, the maximum cable length is reduced (see index entry "Encoder → Cable length").

**Battery Box** With long encoder cables, use the optionally available battery box (SUP-E01-MSM-BATTERYBOX) to correct the supply voltage at the encoder. The battery box contains a connection between Sense- and GND.

Install the battery box as near as possible to the motor so that the voltage drop via the supply line between battery box and encoder is as small as possible.

Description of the Sense function: See index entry "Encoder → 5 V power supply".

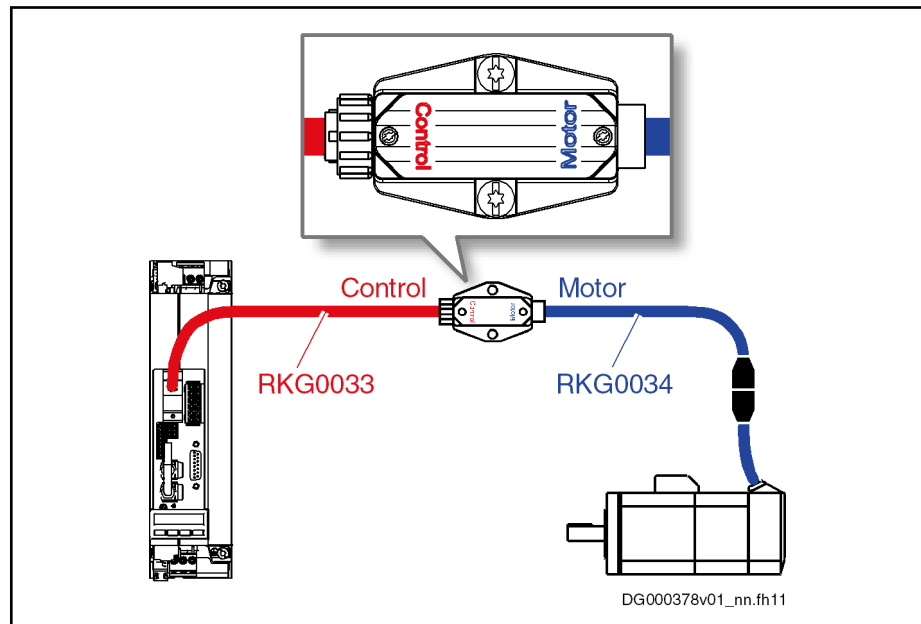



Fig.7-2: Battery Box SUP-E01-MSM-BATTERYBOX

### IndraDyn S MSK/QSK Motors S1/M1, S2/M2, S3/M3, S5/M5 (12 V Supply Voltage)

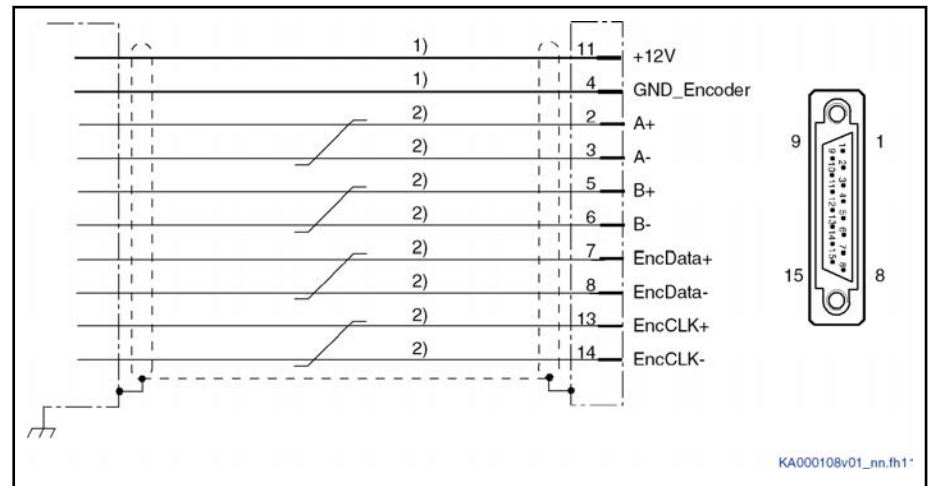**Properties** Encoder systems of the MSK/QSK motors are HIPERFACE® (S1/M1, S3/M3, S5/M5) or EnDat 2.1 (S2/M2) encoder systems.

The type code of the motor shows whether the encoder system supports the single-turn (Sx) or multi-turn (Mx) functionality. Example: The MSK050C-0600-NN-S1-UG0-NNNN motor has a single-turn HIPERFACE® encoder system.

#### Connection Diagram



- 1) Line cross section  $\geq 0.5 \text{ mm}^2$ ; observe allowed encoder cable length
- 2) Line cross section  $\geq 0.14 \text{ mm}^2$

Fig.7-3: Connection Diagram MSK/QSK Encoder Interface for S1/M1, S2/M2, S5/M5 Encoder Systems



For **direct** connection to the encoder system, use our cable **RKG4200**.

**Power Supply** 12 V (the voltage is made available via the EC interface)


Technical specification of the power supply: See index entry "Encoder → 12 V power supply".

**Cable Length** The maximum allowed cable length depends on several factors: See index entry "Encoder → Cable length".

## Technical Data of the Components

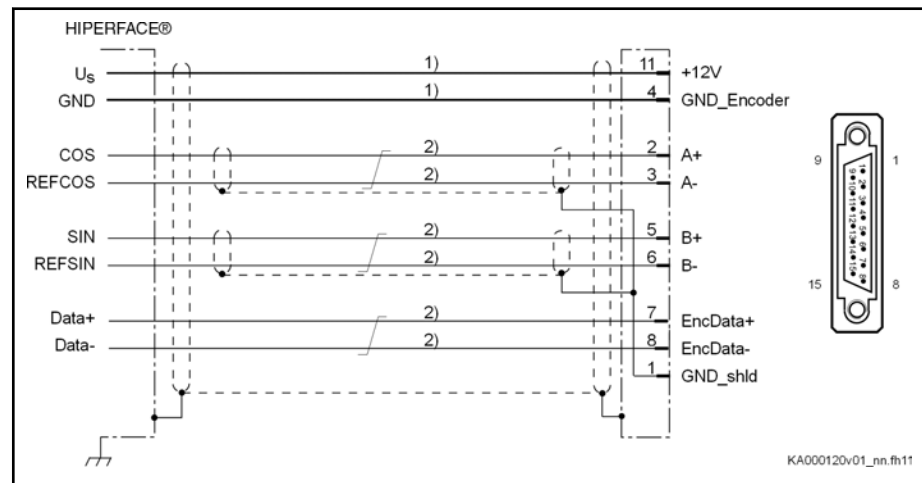**HIPERFACE® (12 V Supply Voltage)**

For how to connect the encoder system, see the connection diagram.

**Connection Diagram**

- 1) Line cross section  $\geq 0.5 \text{ mm}^2$ ; observe allowed encoder cable length  
 2) Line cross section  $\geq 0.14 \text{ mm}^2$

Fig.7-4: Connection Diagram HIPERFACE® Encoder System

**Power Supply**

The HIPERFACE® encoder system needs a supply voltage of 12 V. This supply voltage is made available via the EC interface.

Technical specification of the power supply: See index entry "Encoder → 12 V power supply".



Observe that the third-party encoder used must be suited for the voltage available at the EC interface as voltage for encoder supply.

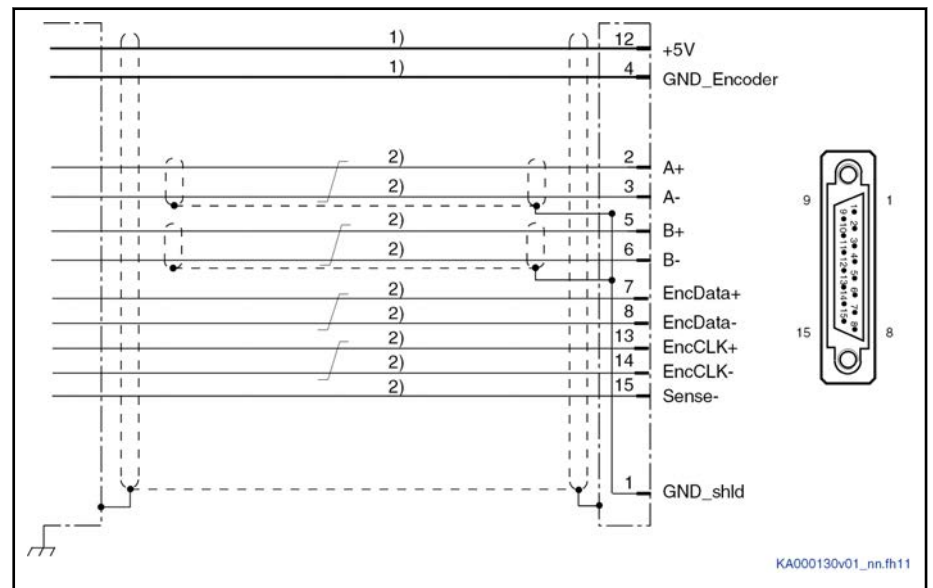
**Cable Length**

The maximum possible cable length depends on several factors: See index entry "Encoder → Cable length".

### EnDat 2.1 according to Heidenhain Standard (5 V Supply Voltage)

For how to connect the encoder system, see the connection diagram.

#### Connection Diagram



- 1) Line cross section  $\geq 0.5 \text{ mm}^2$ ; observe allowed encoder cable length
- 2) Line cross section  $\geq 0.14 \text{ mm}^2$

Fig.7-5: Connection Diagram EC with EnDat 2.1 Encoder System



For **direct** connection to the encoder system, use our cable **RKG0036**.


- Power Supply** 5 V (the voltage is made available via the EC interface)  
 Technical specification of the power supply: See index entry "Encoder → 5 V power supply".
- Cable Length** 75 m at most (when using the Sense function)  
 When you do not use the Sense function, the maximum cable length is reduced (see index entry "Encoder → Cable length").
- Technical Properties** To ensure stable power supply at the encoder, use the Sense function. Description of the Sense function: See index entry "Encoder → 5 V power supply".

## Technical Data of the Components

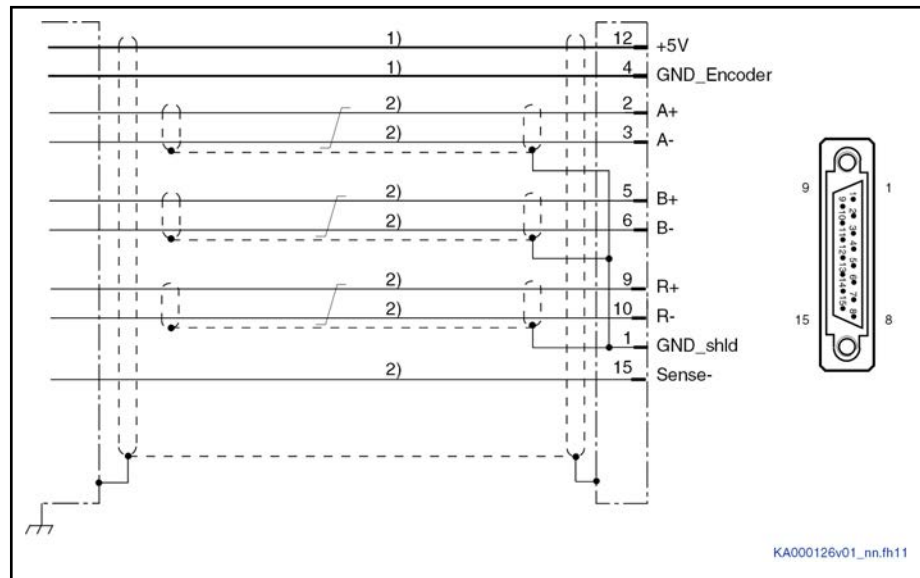**1V<sub>pp</sub> according to Heidenhain Standard (5 V Supply Voltage)**

For how to connect the encoder system, see the connection diagram.

## Connection Diagram



- 1) Line cross section  $\geq 0.5 \text{ mm}^2$ ; observe allowed encoder cable length  
 2) Line cross section  $\geq 0.14 \text{ mm}^2$

Fig. 7-6: Connection Diagram EC with 1V<sub>pp</sub> Encoder System

For **direct** connection to the encoder system, use our cable **RKG0035**.

**Power Supply** 5 V (the voltage is made available via the EC interface)

Technical specification of the power supply: See index entry "Encoder → 5 V power supply".

**Cable Length** 75 m at most (when using the Sense function)

When you do not use the Sense function, the maximum cable length is reduced (see index entry "Encoder → Cable length").

**Technical Properties**

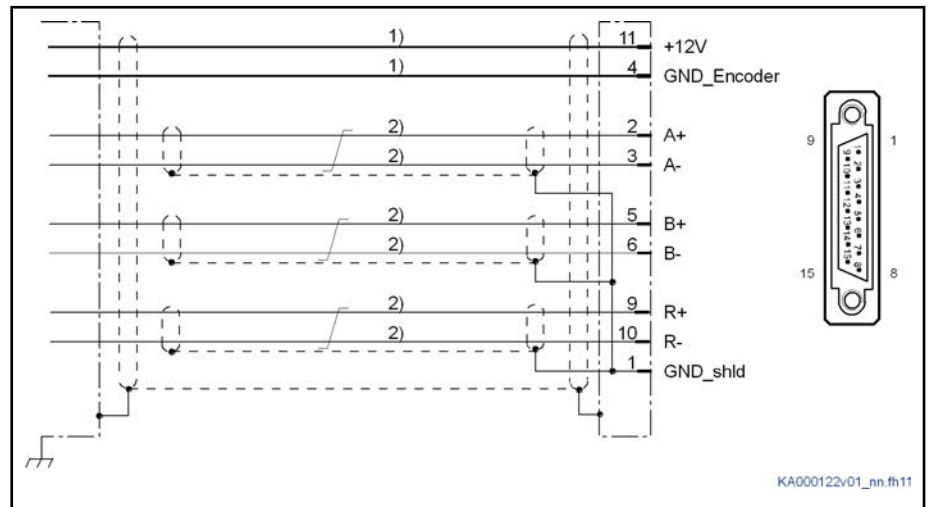
To ensure stable power supply at the encoder, use the Sense function. Description of the Sense function: See index entry "Encoder → 5 V power supply".



### 1V<sub>pp</sub> (12 V Supply Voltage)

For how to connect the encoder system, see the connection diagram.

#### Connection Diagram



- 1) Line cross section  $\geq 0.5 \text{ mm}^2$ ; observe allowed encoder cable length
- 2) Line cross section  $\geq 0.14 \text{ mm}^2$


Fig.7-7: Connection Diagram 1V<sub>pp</sub> Encoder System

- Power Supply** 12 V (the voltage is made available via the EC interface)  
 Technical specification of the power supply: See index entry "Encoder → 12 V power supply".
- Cable Length** The maximum allowed cable length depends on several factors: See index entry "Encoder → Cable length".

## Technical Data of the Components

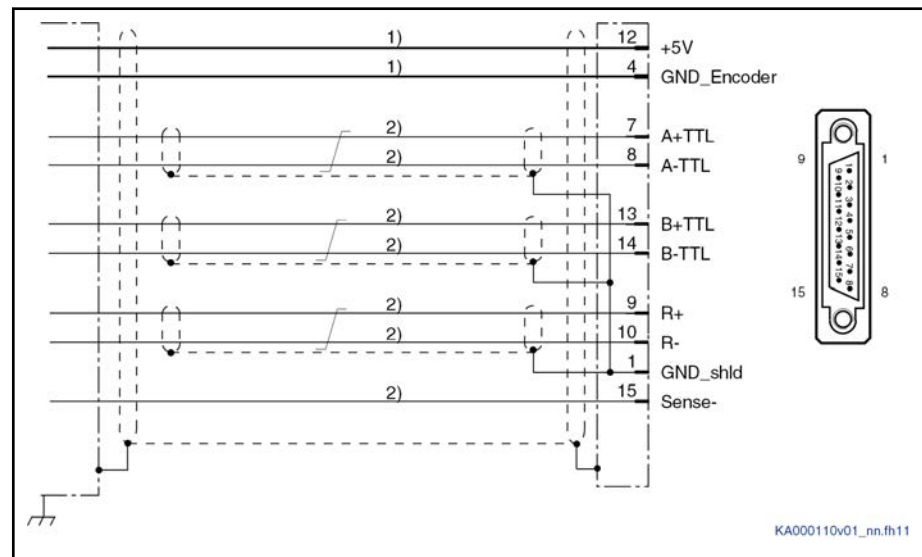**TTL (5 V Supply Voltage)**

For how to connect the encoder system, see the connection diagram.

**Connection Diagram**

- 1) Line cross section  $\geq 0.5 \text{ mm}^2$ ; observe allowed encoder cable length  
 2) Line cross section  $\geq 0.14 \text{ mm}^2$

Fig.7-8: Connection Diagram EC with TTL Encoder System

**Power Supply** 5 V (the voltage is made available via the EC interface)

Technical specification of the power supply: See index entry "Encoder → 5 V power supply".

**Cable Length** 75 m at most (when using the Sense function)


When you do not use the Sense function, the maximum cable length is reduced (see index entry "Encoder → Cable length").

**Technical Properties** To ensure stable power supply at the encoder, use the Sense function. Description of the Sense function: See index entry "Encoder → 5 V power supply".

### TTL (12 V Supply Voltage)

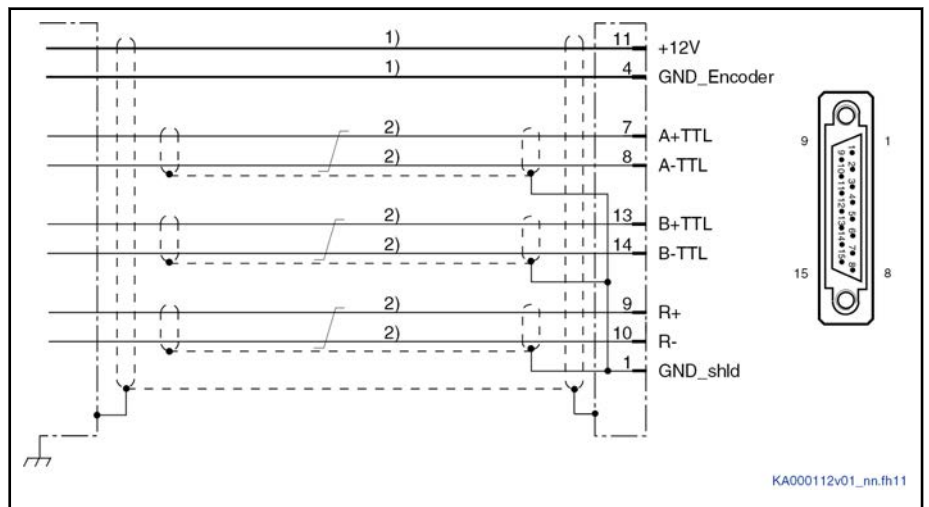For how to connect the encoder system, see the connection diagram.

#### Connection Diagram



- 1) Line cross section  $\geq 0.5 \text{ mm}^2$ ; observe allowed encoder cable length
- 2) Line cross section  $\geq 0.14 \text{ mm}^2$

Fig. 7-9: Connection Diagram TTL Encoder System

**Power Supply** 12 V (the voltage is made available via the EC interface)


Technical specification of the power supply: See index entry "Encoder → 12 V power supply".

**Cable Length** The maximum allowed cable length depends on several factors: See index entry "Encoder → Cable length".

## Technical Data of the Components

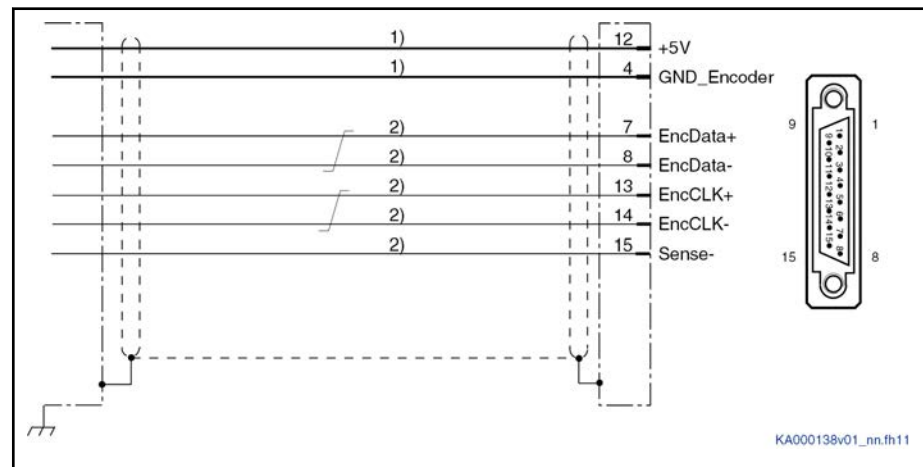**SSI (5 V Supply Voltage)**

For how to connect the encoder system, see the connection diagram.

**Connection Diagram**

- 1) Line cross section  $\geq 0.5 \text{ mm}^2$ ; observe allowed encoder cable length  
 2) Line cross section  $\geq 0.14 \text{ mm}^2$

*Fig.7-10: Connection Diagram EC with SSI Encoder System*

**Power Supply** 5 V (the voltage is made available via the EC interface)

Technical specification of the power supply: See index entry "Encoder → 5 V power supply".

**Cable Length** 75 m at most (when using the Sense function)


When you do not use the Sense function, the maximum cable length is reduced (see index entry "Encoder → Cable length").

**Technical Properties** To ensure stable power supply at the encoder, use the Sense function. Description of the Sense function: See index entry "Encoder → 5 V power supply".

### SSI (12 V Supply Voltage)

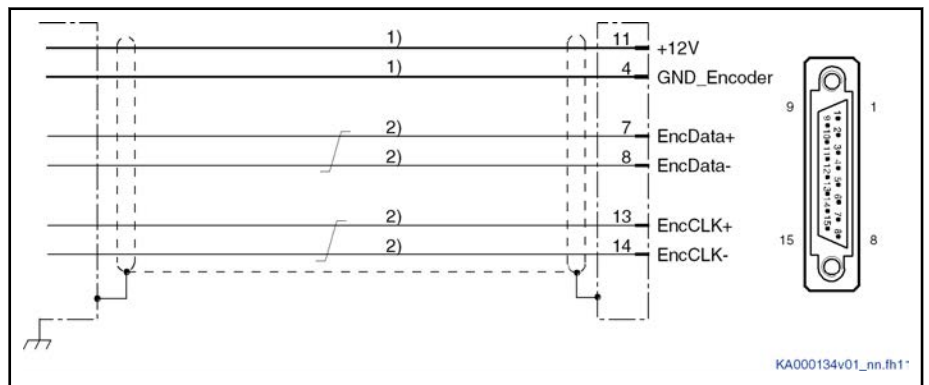For how to connect the encoder system, see the connection diagram.

#### Connection Diagram



- 1) Line cross section  $\geq 0.5 \text{ mm}^2$ ; observe allowed encoder cable length
- 2) Line cross section  $\geq 0.14 \text{ mm}^2$

Fig.7-11: Connection Diagram SSI Encoder System


- Power Supply** 12 V (the voltage is made available via the EC interface)  
Technical specification of the power supply: See index entry "Encoder → 12 V power supply".
- Cable Length** The maximum allowed cable length depends on several factors: See index entry "Encoder → Cable length".

## Technical Data of the Components

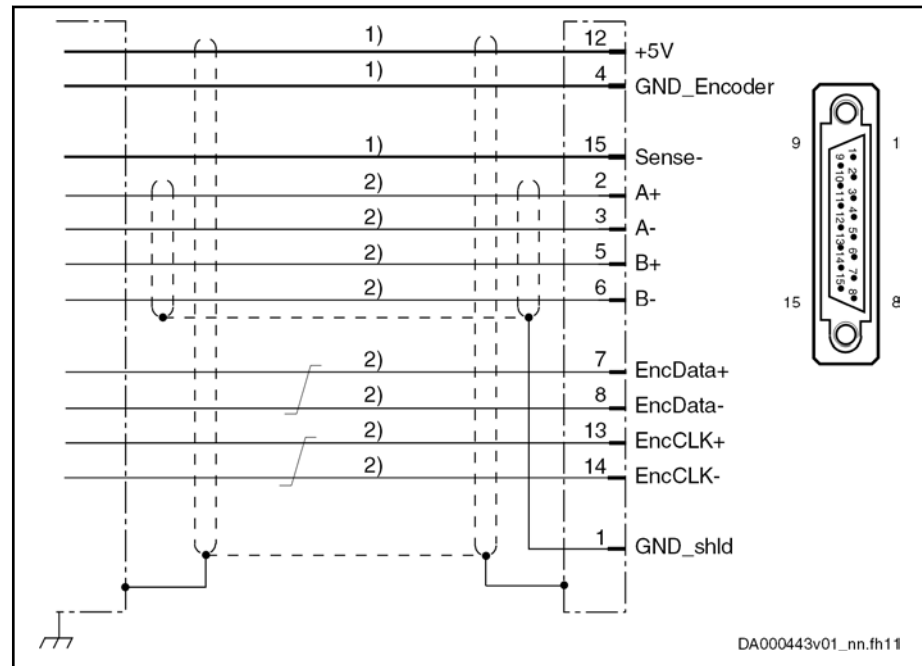**Combined Encoder for SSI (5 V Supply Voltage)**

The combined encoder for SSI is a combination of SSI and sin-cos encoder  $1V_{pp}$ .

For how to connect the encoder system, see the connection diagram.

**Connection Diagram**

- 1) Line cross section  $\geq 0.5 \text{ mm}^2$ ; observe allowed encoder cable length  
2) Line cross section  $\geq 0.14 \text{ mm}^2$

Fig.7-12: Connection Diagram EC with SSI Encoder System

**Power Supply** 5 V (the voltage is made available via the EC interface)

Technical specification of the power supply: See index entry "Encoder → 5 V power supply".

**Cable Length** 75 m at most (when using the Sense function)


When you do not use the Sense function, the maximum cable length is reduced (see index entry "Encoder → Cable length").

**Technical Properties** To ensure stable power supply at the encoder, use the Sense function. Description of the Sense function: See index entry "Encoder → 5 V power supply".

### Resolver without Encoder Data Memory

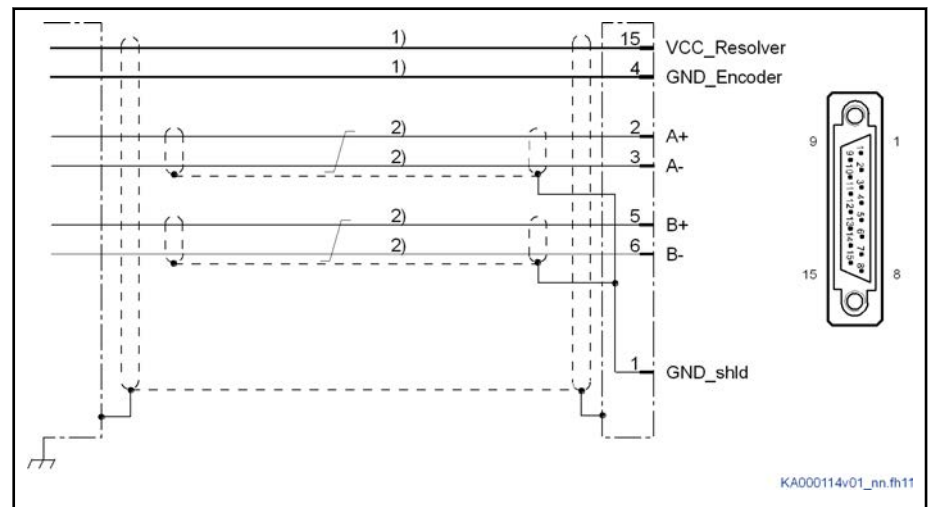For how to connect the encoder system, see the connection diagram.

#### Connection Diagram



- 1) Line cross section  $\geq 0.5 \text{ mm}^2$ ; observe allowed encoder cable length
- 2) Line cross section  $\geq 0.14 \text{ mm}^2$

Fig.7-13: Connection Diagram EC with Resolver Encoder System

#### Power Supply

The EC interface supplies the resolver encoder system with a carrier voltage amplitude of  $11 \text{ V}_{pp}$ .

Technical specification of the power supply: See index entry "Encoder → Resolver power supply".



Observe that the resolver encoder used must be suited for the voltage available at the EC interface as voltage for encoder supply.

#### Cable Length

75 m at most

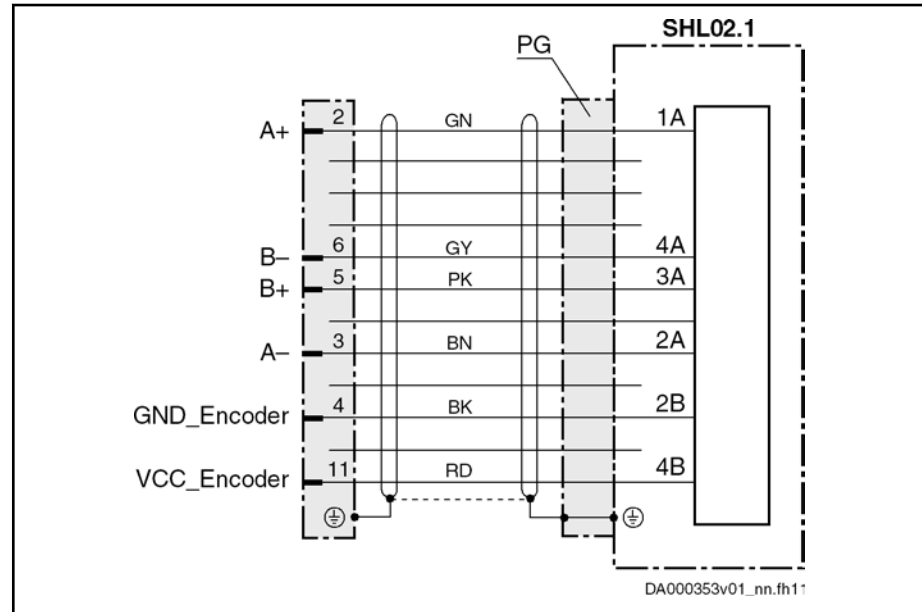
#### Specific Technical Features

The encoder evaluation has been sized for resolvers with a **transfer ratio** of 0.5.

## Technical Data of the Components

**Hall Sensor Box SHL02.1 (12 V Supply Voltage)**

For how to connect the Hall sensor box SHL02.1, see the connection diagram.

**Connection Diagram**


VCC\_En- +12 V  
coder

Fig. 7-14: Connection Diagram Hall Sensor Box SHL02.1

**Power Supply** 12 V (the voltage is made available via the EC interface)

Technical specification of the power supply: See index entry "Encoder → 12 V power supply".

**Cable Length** The maximum allowed cable length depends on several factors: See index entry "Encoder → Cable length".

**Specific Technical Features**  For detailed information on the Hall sensor box SHL02.1, see the Functional Description "Rexroth Hall Sensor Box SHL02.1" (R911292537).



## Power Supply

### 5 V Power Supply

#### 5 V Power Supply

Data	Unit	Min.	Typ.	Max.
DC output voltage +5V	V	5,0		5,25
Output current	mA			500 <sup>1)</sup>

1) The sum of the power consumptions of all connected encoder systems (5 V / 12 V) mustn't exceed **6 W**. See also index entry "Control voltage → Project planning".

*Fig. 7-15: 5 V Power Supply*

#### Sense Function

The EC encoder evaluation provides the option of correcting the 5 V supply voltage at the encoder. It is thereby possible, within certain limits, to compensate for voltage drops on the encoder cable.

**Functional principle:** The current consumption of the connected encoder system generates a voltage drop due to the ohmic resistance of the encoder cable (line cross section and line length). This reduces the signal at the encoder input. The actual value of the 0 V encoder potential at the encoder is measured via a separate "Sense" line (Sense-) and is fed back to the drive controller. Thus, the drive controller can influence the voltage of the encoder supply.



For correct "Sense" evaluation, the encoder supply lines "+5V" and "GND\_Encoder" must have the same line cross section..

If the encoder has a "Sense-" connection, connect the "Sense-" line at this connection. The "Sense+" connection, which might possibly exist, is not used.

If the encoder has no "Sense" connection, apply the 0 V encoder potential to the "Sense-" line on the encoder side.

## Technical Data of the Components

**12 V Power Supply****12 V Power Supply**

Data	Unit	Min.	Typ.	Max.
Voltage for encoder supply	V	10,7	12	12,3
Output current	mA			500 <sup>1)</sup>

1) The sum of the power consumptions of all connected encoder systems (5 V / 12 V) mustn't exceed **6 W**. See also index entry "Control voltage → Project planning".

*Fig.7-16: 12 V Power Supply*

**Resolver Power Supply****Resolver Encoder System**

Data	Unit	Min.	Typ.	Max.
AC output voltage VCC_Resolver (peak-peak value)	V	8,3	10	12
Output frequency sine	kHz		8	
Output current (peak value)	mA			60
Output current (rms value)	mA			40

*Fig.7-17: Resolver Encoder Supply*

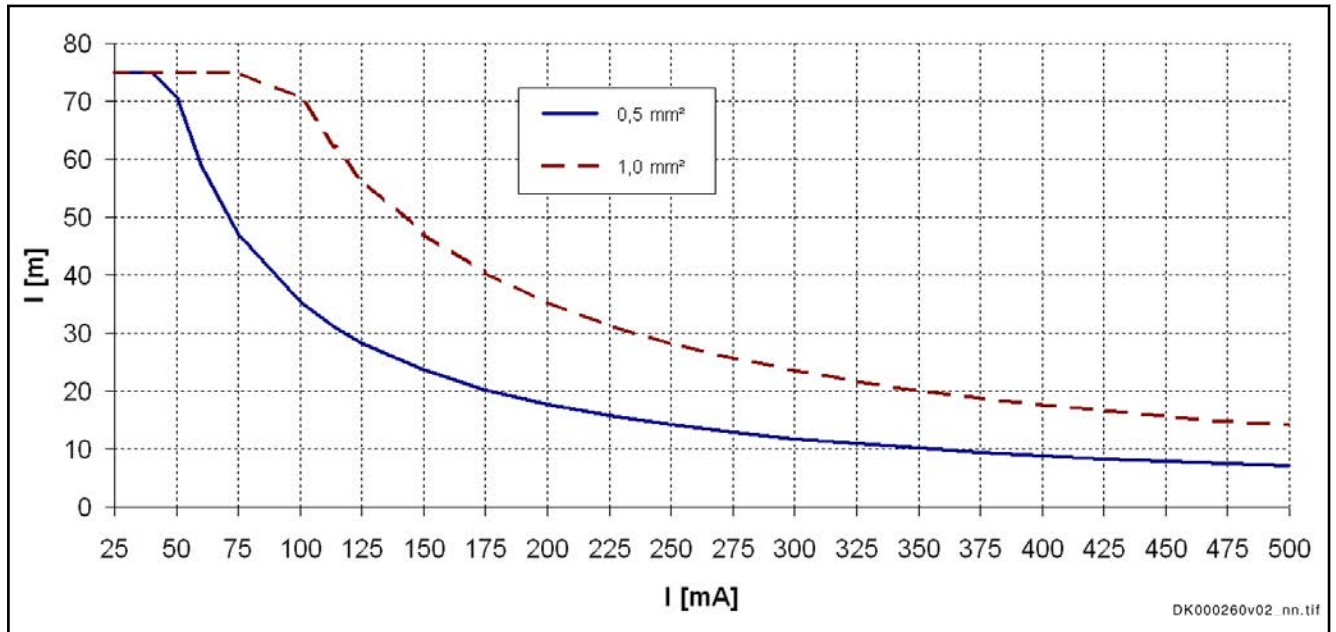
## Encoder Cable Length



For encoder supply, use lines with the same line cross section.

### Allowed Encoder Cable Length for 5 V Encoder Systems without Sense Function

If the encoder system used does not support the Sense function, the maximum possible cable length results from the diagram below.



I [mA] Encoder current consumption  
 l [m] Cable length  
 0.5 mm²; 1.0 mm² Line Cross Sections

Fig. 7-18:

Maximum Allowed Encoder Cable Lengths for 5 V Encoder Systems without Sense Connection Depending on Line Cross Section



Nominal current consumption of the MSM motor encoders: 75 mA

### Allowed Encoder Cable Length for 5 V Encoder Systems with Sense Function

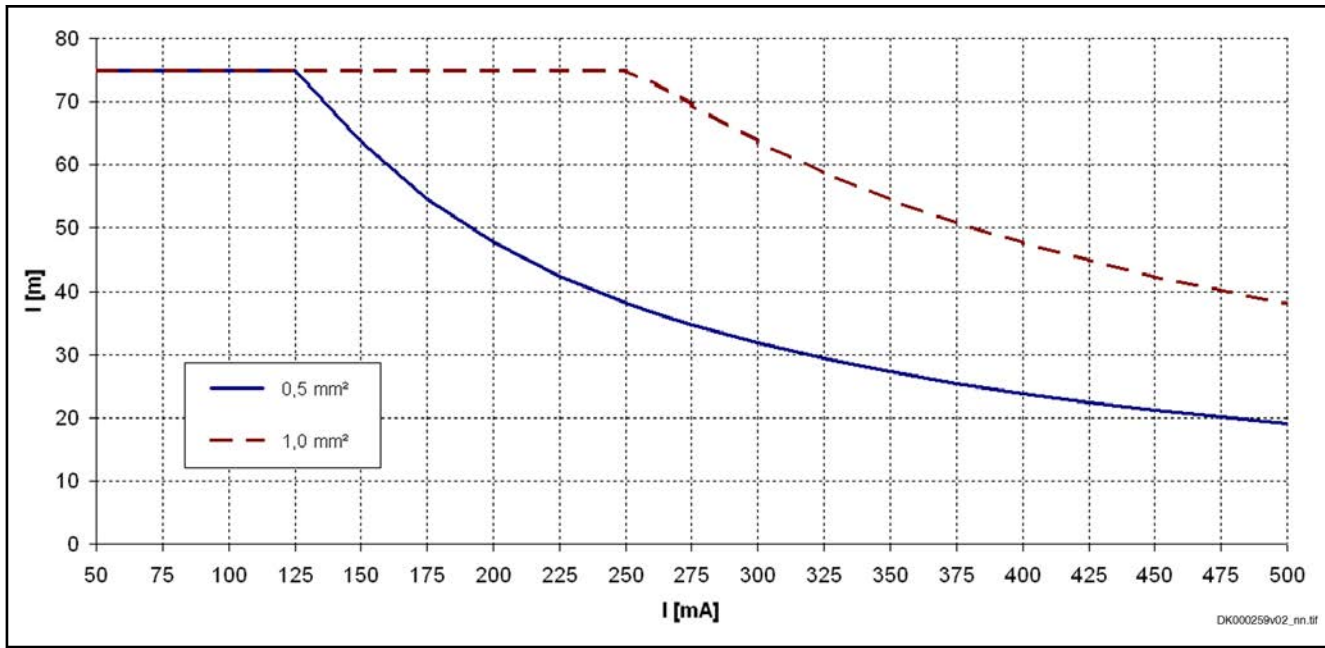
75 m at most (The cross section of the supply voltage lines must be at least 0.5 mm².)

### Allowed Encoder Cable Length for 12 V Encoder Systems

Requirements:

- The **cross section** of the supply voltage lines is at least **0.5 mm²**
- The minimum allowed **supply voltage** at the encoder is **10 V**

Technical Data of the Components



I [mA] Encoder current consumption  
 l [m] Cable length  
 0.5 mm²; 1.0 mm² Line Cross Sections

Fig. 7-19: Maximum Allowed Encoder Cable Lengths for 12 V Encoder Systems Depending on Line Cross Section at a Supply Voltage of 10 V



Nominal current consumption of the MSK motor encoders: 60 mA

Allowed Encoder Cable Length for Resolver Encoder Systems

75 m at most (The cross section of the supply voltage lines must be at least 0.5 mm².)

Technical Data of Encoder Evaluation EC

Input Circuit for Sine Signals A+, A-, B+, B-, R+, R-

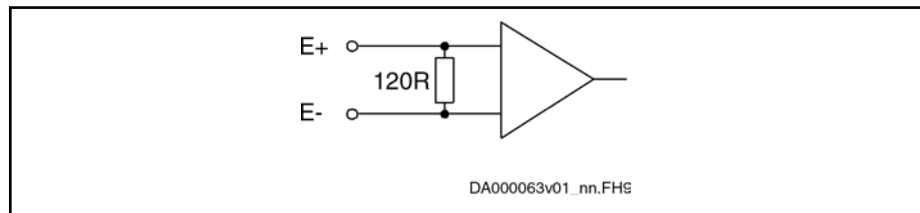


Fig. 7-20: Input Circuit for Sine Signals (Block Diagram)

Properties of Differential Input for Sine Signals

Data	Unit	Min.	Typ.	Max.
Amplitude of encoder signal peak-peak ( $U_{PP\text{encodersignal}}$ )	V	0,8	1,0	1,2
Cut-off frequency (-3 dB)	kHz		400	
Converter width A/D converter	Bit		12	
Input resistance	ohm		120	

Fig. 7-21: Differential Input Sine

Technical Data of the Components

Resolver Input Circuit for A+, A-, B+, B-

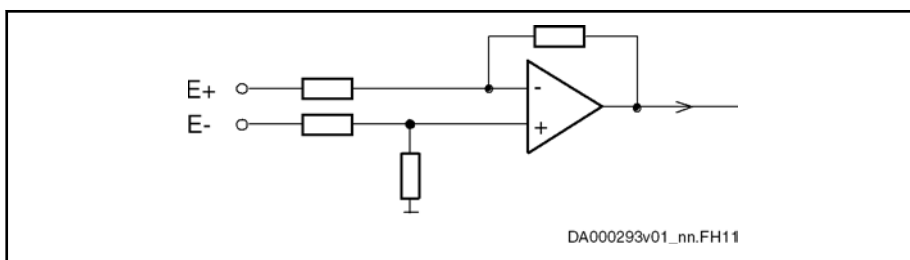


Fig.7-22: Input Circuit for Resolver Evaluation (Block Diagram)

Input Circuit for Square-Wave Signals

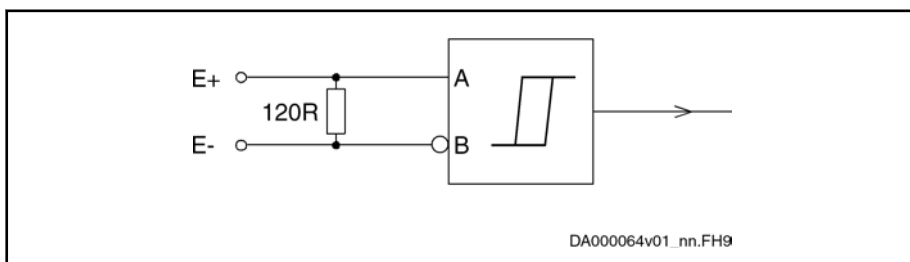


Fig.7-23: Input Circuit for Square-Wave Signals (Block Diagram)

Properties of Differential Input for Square-Wave Signals

Data	Unit	Min.	Typ.	Max.
Input voltage "high"	V	2,4		5,0
Input voltage "low"	V	0		0,8
Input frequency	kHz			1000
Input resistance	ohm		120	

Fig.7-24: Differential Input Square-Wave Signals

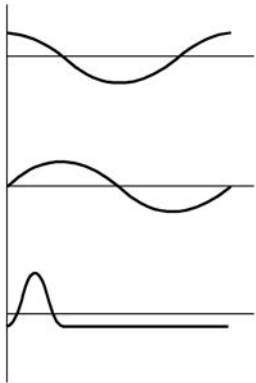






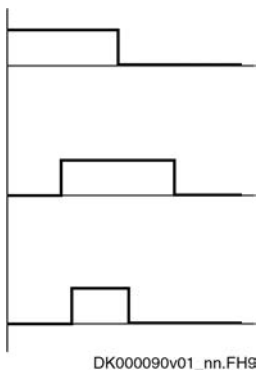






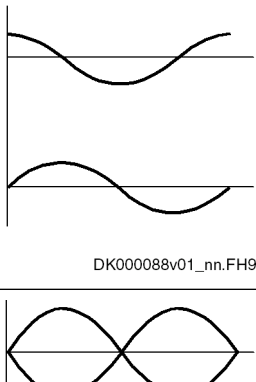




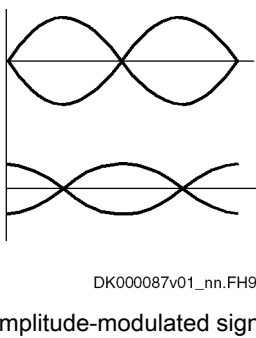




Differential Input for Resolver Operation

Data	Unit	Min.	Typ.	Max.
Amplitude encoder signal sine ( $U_{pp}$ )	V		5	6
Input resistance	kohm		12	
Converter width A/D converter	Bit		12	

Fig.7-25: Input Data Resolver Operation


Technical Data of the Components

Signal Assignment to the Actual Position Value


Signal assignment <sup>1)</sup>	Signal designation	Signal shape	Actual position value (with default setting)
 <p>DK000089v01_nn.FH9</p>	<p>A+ </p> <p>A- </p> <p>B+ </p> <p>B- </p> <p>R+ </p> <p>R- </p> <p>DF000381v01_nn.FH11</p>	<p>Sine (1 V<sub>pp</sub>) Without absolute value</p>	<p>Increasing</p>
 <p>DK000090v01_nn.FH9</p>	<p>A+TTL </p> <p>A-TTL </p> <p>B+TTL </p> <p>B-TTL </p> <p>R+ </p> <p>R- </p> <p>DF000380v01_nn.FH11</p>	<p>Square-wave (TTL) Without absolute value</p>	<p>Increasing</p>
 <p>DK000088v01_nn.FH9</p>	<p>A+ </p> <p>A- </p> <p>B+ </p> <p>B- </p> <p>DF000382v01_nn.FH11</p>	<p>Sine (1 V<sub>pp</sub>) With absolute value (e.g. En-Dat)</p>	<p>Increasing</p>
 <p>DK000087v01_nn.FH9</p> <p>Amplitude-modulated signal</p>	<p>A+ </p> <p>A- </p> <p>B+ </p> <p>B- </p> <p>DF000382v01_nn.FH11</p>	<p>Resolver</p>	<p>Increasing</p>

1) See following note  
 Fig. 7-26: Signal Assignment to the Actual Position Value

Technical Data of the Components

- 

The encoder signal assignment to the inputs is based on clockwise rotation (front view to motor shaft).

    - Track A (A+, A-) advances track B (B+, B-) 90° electrically.
    - The actual position value increases (prerequisite: negation of the encoder signals was not parameterized).
    - If available, the reference track R (R+, R-) provides the reference mark pulse at positive signals of track A and track B (in the so-called "0-th" quadrant).
- 
- 

Standard setting: See Functional Description of firmware.

## 7.1.2 EM - Encoder Emulation

### Cable

Data	Unit	Min.	Typ.	Max.
Allowed length	m			40
Allowed capacitance between outputs	nF/m			5
Allowed capacitance between output and 0 V	nF/m			10
Shielding		Double shielding (individual shields and overall shield)		

Fig.7-27: Line at MEM

**NOTICE** Risk of damage by use of unshielded lines and lines with single shielding!

Use lines with double shielding.

## Incremental Encoder Emulation

Connection

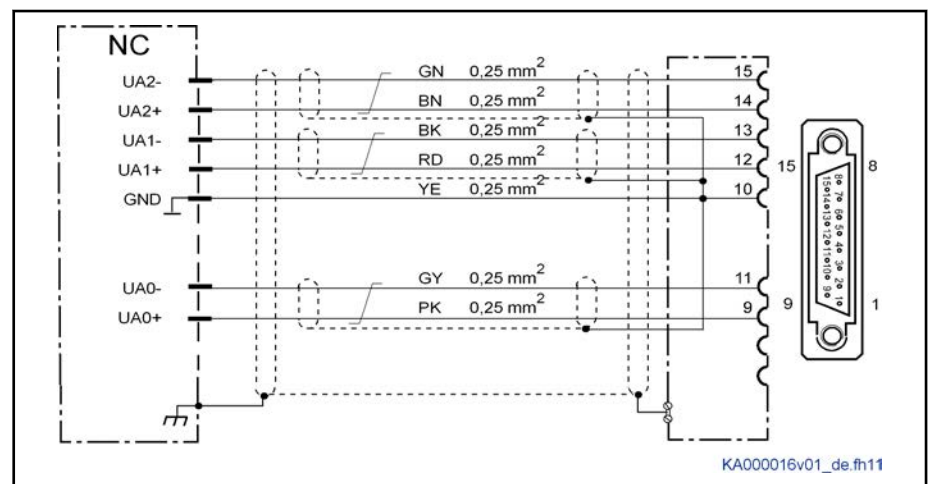


Fig.7-28: Connection of Incremental Actual Position Value Output


Technical Data of the Components

Differential Outputs Incremental Encoder Emulation

Data	Unit	Min.	Typ.	Max.
Output voltage "high"	V	2,5		5
Output voltage "low"	V	0		0,5
Output current I <sub>out</sub>	mA			20
Load capacitance between output and 0 V	nF			10
Output frequency f	MHz			1
Overload protection		Available		

Fig.7-29: Differential Outputs

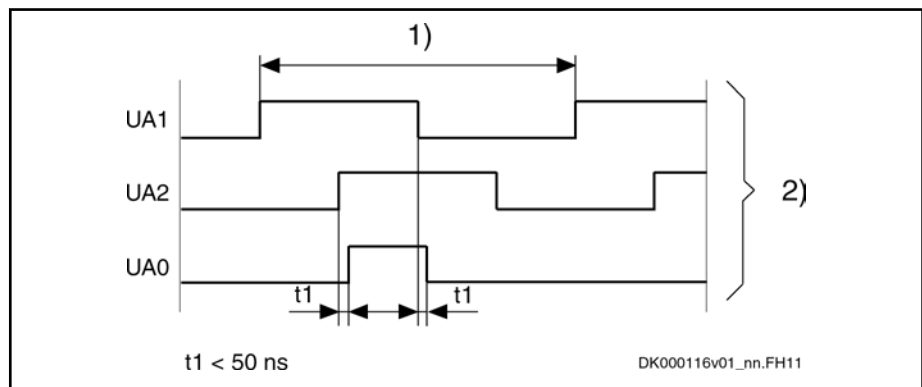Signals for Incremental Actual Position Value Output



- t1 < 50 ns
- 1) One line
- 2) Square-wave pulses with view to the motor shaft and clockwise rotation

Fig.7-30: Signals for Incremental Actual Position Value Output

Output frequency f

$$f = \frac{S}{U} \times n$$

- f Output frequency
- S Number of lines
- U Revolution
- n Speed

Fig.7-31: Calculating the Output Frequency f



The output frequency results from the respective parameter setting.  
 See also Functional Description of firmware: Encoder Emulation.

Control-Side Signal Filter for UA1 and UA2



Due to the signal processing in the control section, the periodic time and duty cycle of the output signals are influenced.  
 Depending on the parameterized output frequency, there are the following requirements to the signal filtering of the control unit for channels UA1 and UA2:

- With f<sub>out</sub> ≥ 500 kHz: f<sub>filter</sub> ≥ 1 MHz
- With f<sub>out</sub> < 500 kHz: f<sub>filter</sub> ≥ 2 × f<sub>out</sub>

Speed Measurement



Frequency measurement is **not** suited to measure the speed from the incremental emulator signals.



### Incremental Encoder Emulation with Signal Level Conversion

Connection

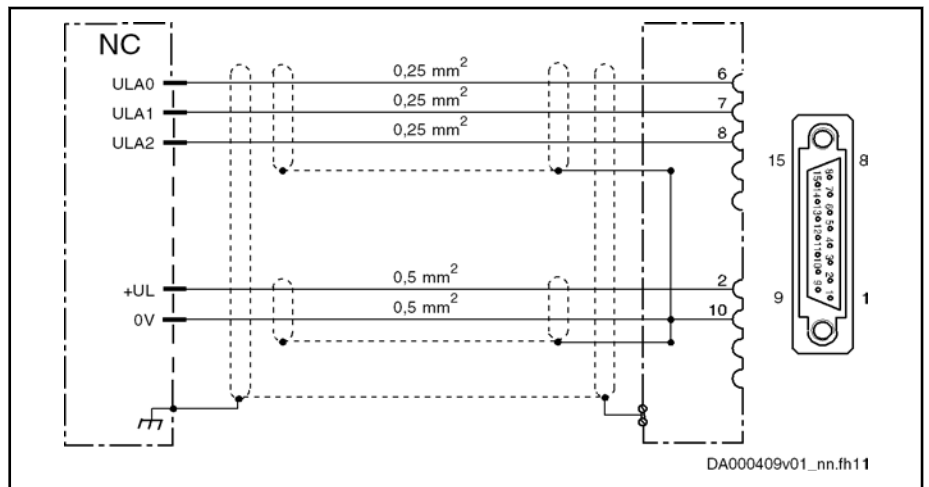


Fig.7-32: Connection

Electrical Data

Data	Unit	Min.	Typ.	Max.
Supply voltage UL	V	5		30
Supply current UL	mA		16	
Output voltage "high"	V	UL - 0.7		
Output voltage "low"	V	0		
Output current I <sub>out</sub>	mA			40
Output frequency f	MHz			1
Overload protection		Present, output voltage is reduced		

Fig.7-33: Supply and outputs

### Absolute Encoder Emulation (SSI Format)

Connection Absolute Encoder Emulation

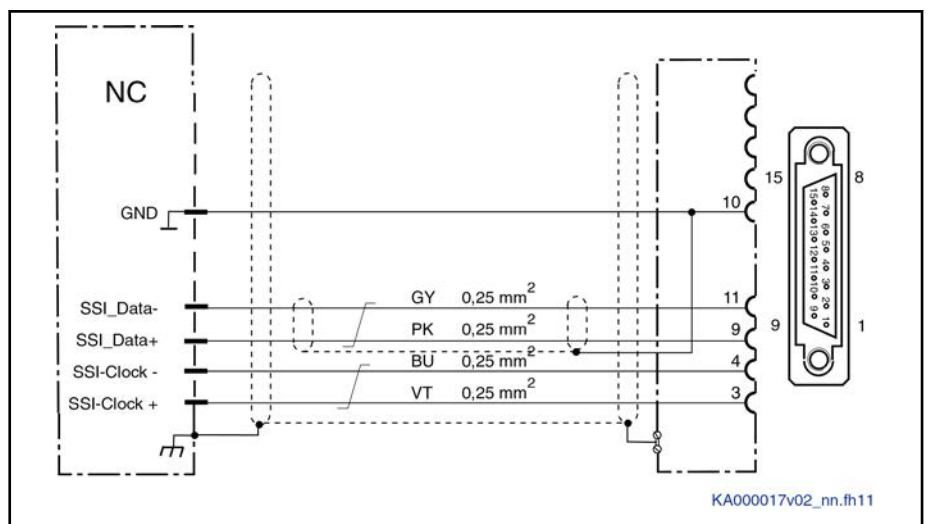


Fig.7-34: Output of Absolute Actual Position Values According to SSI Format

## Technical Data of the Components

## Differential Input Circuit Absolute Encoder Emulation

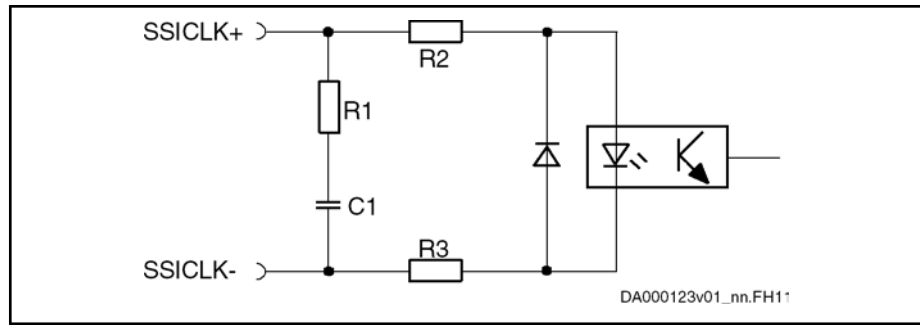


Fig. 7-35: Differential Input Circuit (Block Diagram)

## Differential Inputs Absolute Encoder Emulation

Data	Unit	Min.	Typ.	Max.
Input voltage "high"	V	2,5		5
Input voltage "low"	V	0		0,5
Input resistance	ohm	Approx. 160 (see circuit)		
Clock frequency f	kHz	100–1000		
Polarity reversal protection		Within the allowed input voltage range		
Galvanic isolation		Signals from circuit board		

Fig. 7-36: Differential Inputs

## Differential Outputs Absolute Encoder Emulation


Data	Unit	Min.	Typ.	Max.
Output voltage "high"	V	2,5		5
Output voltage "low"	V	0		0,5
Output current I <sub>out</sub>	mA			120 I
Load capacitance between output and 0 V	nF			10
Output frequency f	MHz			1
Overload protection		Available		
Terminating resistor at load	ohm	150–180		

Fig. 7-37: Differential Outputs



The differential output corresponds to the RS422 specifications. On the control side, a line terminating resistor must be available for the SSI data signal. If this resistor is not available, connect an external line terminating resistor (150–180 ohm).

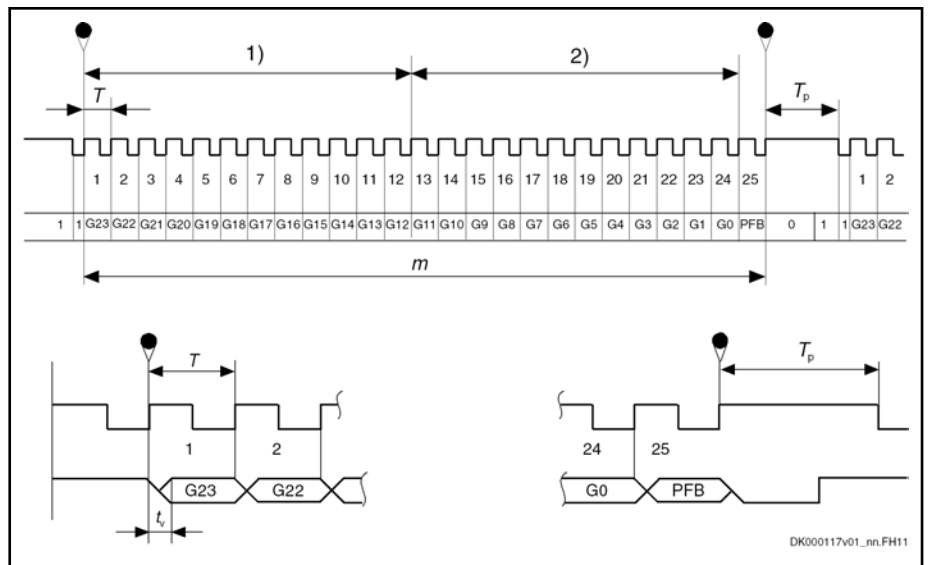Technical Data of the Components



- 1) Resolution for 4096 revolutions
  - 2) Resolution for 1 revolution
  - G0 Least significant bit in Gray code
  - G23 Most significant bit in Gray code
  - m Stored parallel information
  - T Clock time
  - $T_p$  Clock break  $\geq 20 \mu s$
  - $t_v$  Delay time max. 200 ns
  - PFB Power failure bit (not used and always logically LOW)
- Fig.7-38: Pulse Diagram With Absolute Actual Position Value Output (SSI Format)

### 7.1.3 ET - Multi-Ethernet

#### Display Elements

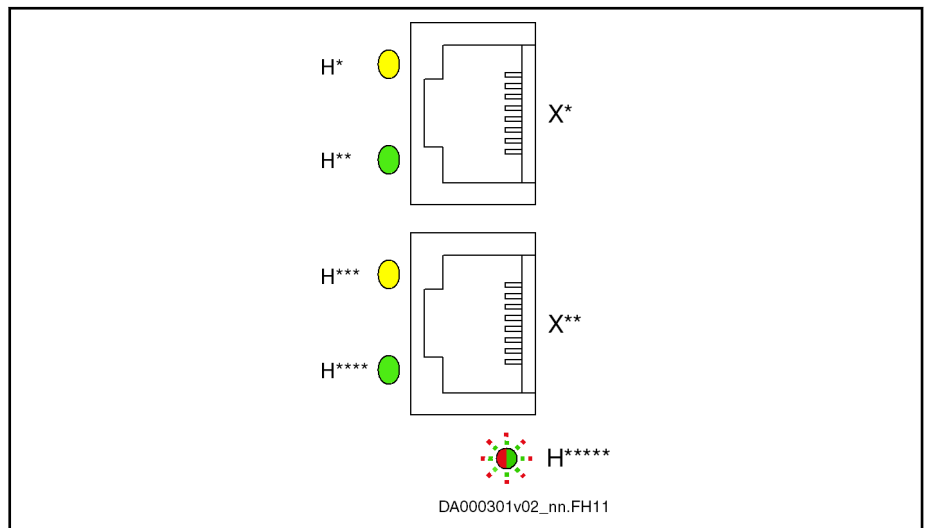


Fig.7-39: ET, Display Elements

Display elements of optional module ET:








- Two LEDs at each connection point
- One bicolor LED (H\*\*\*\*\*: H24, for example)

The significance of the LED displays depends on the field bus system.

## Technical Data of the Components

## Ethernet/IP











## Ethernet/IP Display Elements

LED	Significance	Color	Description
H10, H12	Status	 Permanently lit yellow	Data transmission running
H11, H13	Link	 Permanently lit green	Connection to network available
H*****	Not active	○ Off	Interface has been switched off (24V supply) or has no IP address
	Not connected	 Flashing green	Interface has an IP address, but no connection
	Connected	 Permanently lit green	Connection to network available, data transmission running
	Timeout	 Flashing red	Existing connection was aborted
	Invalid IP address	 Permanently lit red	Assigned IP address is already used by another device
	Self test	 Flashing red-green	After switching on, interface carries out a self test

H\*\*\*\*\* H24, for example  
Fig. 7-40: Ethernet/IP Display Elements

## EtherCAT

### EtherCAT Display Elements

LED	Significance	Color / flashing pattern	Description
H10, H12	None	-	With EtherCAT, these LEDs have no function
H11, H13	Link	 Off	No connection to the network
		 Permanently lit green	Connection to network available, but no telegram exchange (EtherCAT bus inactive)
		 Flickering green	Connection to network available with telegram exchange (EtherCAT bus active)
H*****	Status INIT	 Off	<ul style="list-style-type: none"> <li>Cyclic process data and acyclic data channel are not transmitted</li> <li>No error</li> </ul>
	Status PRE-OPERATIONAL	 Flashing green	Acyclic data channel is transmitted
	Status SAFE-OPERATIONAL	 Green, one LED lighting up	Acyclic data channel is transmitted
	Status OPERATIONAL	 Permanently lit green	Cyclic process data and acyclic data channel are transmitted
	Configuration error	 Flashing red	General EtherCAT configuration error
	Synchronization error	 Red, one LED lighting up	<ul style="list-style-type: none"> <li>The drive controller has not been synchronized to the EtherCAT master</li> <li>Communication error of the drive controller</li> </ul>
	Timeout - watchdog	 Red, two LEDs lighting up	<ul style="list-style-type: none"> <li>Timeout during monitoring of the cyclic process data</li> <li>Watchdog of the EtherCAT master</li> </ul>

1) Flashing pattern: One square corresponds to a duration of 200 ms; the arrow marks the end of a cycle; abbreviations on the squares: GN = LED permanently lit green, RD = LED permanently lit red, -- = LED is off

H\*\*\*\*\* H24, for example  
 Fig. 7-41: EtherCAT Display Elements

## Technical Data of the Components

## 7.1.4 PB - PROFIBUS

## Signal Specification

Signal	Specification
+5V Repeater supply	+5 V ( $\pm 10\%$ ) Max. 75 mA
Repeater control signal	TTL-compatible: <ul style="list-style-type: none"> <li>• 1: Transmit</li> <li>• 0: Receive</li> </ul> Output resistance: 350R $V_{OL} \leq 0.8 \text{ V}$ at $I_{OL} \leq 2 \text{ mA}$ $V_{OH} \geq 3.5 \text{ V}$ at $I_{OH} \leq 1 \text{ mA}$
Receive/transmit data	EIA-RS485 standard

Fig. 7-42: Signal Specification

**NOTICE**

**Danger of destroying output  
"+5V repeater supply" by overload!**

Do not short-circuit the output.

Do not exceed the maximum current.

**Diagnostic Displays** For the significance of the diagnostic displays, see firmware documentation.

## 7.1.5 CN - CANopen

## Display Elements CANopen



LED	Significance	Color	Description
H4	Run	 Green	Signals operating states; see Functional Description of firmware
H5	Error	 Red	Signals error states; see Functional Description of firmware

Fig. 7-43: Significance of Display Elements for CANopen

## Main Features

Feature	CANopen
Compatibility	According to EN 50325-4
Max. possible number of nodes	127 nodes
Bus Topology	Line topology
Bus terminator (ISO 11898)	124 ohm each, 1%, 200 mW; connect at both bus ends to X61.2 and X61.7
Transmission medium	2 twisted two-wire lines (4-pin) with shield
Max. allowed bus (line) lengths	Depending on bit rate
Recommended connection cable	Our RKS number or third-party type

Fig. 7-44: Main Features

Technical Data of the Components

Bus Lengths Depending on Bit Rates

Bit rate [kBaud]	Max. allowed network dimension [m]
1000	25
800	50
500	100
250	250
125	500
50	1000
20	2500
10	5000

Fig.7-45: Network Dimension

### 7.1.6 Digital Inputs/Outputs

#### General Information

The digital inputs/outputs correspond to "IEC 61131, type 1".



Do not operate digital outputs at low-resistance sources!  
 In the Functional Description of the firmware, observe the Notes on Commissioning for digital inputs/outputs.

#### Digital Inputs

##### Digital Inputs Type A (Standard)

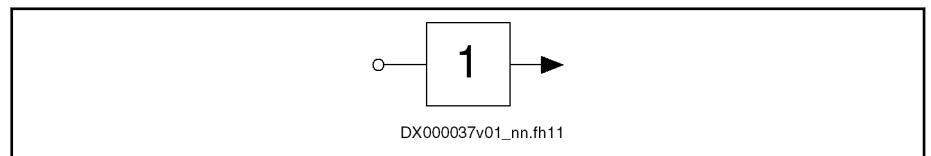


Fig.7-46: Symbol

Data	Unit	Min.	Typ.	Max.
Allowed input voltage	V	-3		30
On	V	15		
Off	V			5
Input current	mA	2		5
Input resistance	kΩ	7,42		
Sampling frequency	kHz	Depending on firmware		
Control delay	μs	20		1000 + 1 cycle time of po- sition con- trol

Fig.7-47: Digital Inputs Type A

## Technical Data of the Components

**Digital Inputs Type B (Probe)****Function**

See "Probe" in the Functional Description of the firmware.


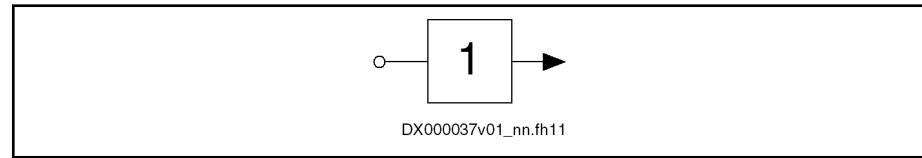
**Technical data**

Fig.7-48: Symbol

Data	Unit	Min.	Typ.	Max.
Allowed input voltage	V	-3		30
On	V	15		
Off	V			5
Input current	mA	2		5
Input resistance	kΩ	7,42		
Pulse width $t_{Puls}$	μs	4		
Measuring accuracy $t_x$	μs			1

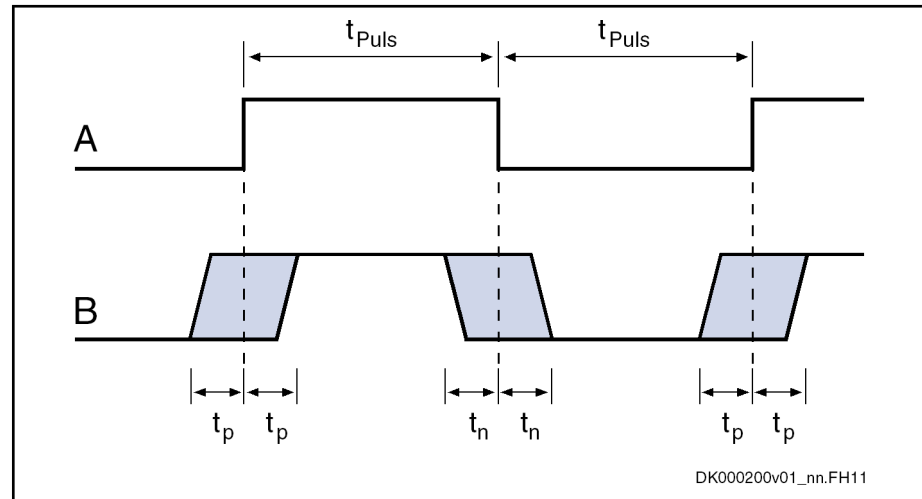Fig.7-49: Digital Inputs Type B



A Signal

B Signal detection at probe input

 $t_{Puls}$  Pulse width $t_p$  Measuring accuracy of the positive signal edge $t_n$  Measuring accuracy of the negative signal edge

Fig.7-50: Signal Detection at Probe Input

**Use** To acquire fast digital input signals.

**Probe inputs** are "fast" inputs. For control use bounce-free switching elements (e.g. electronic switches) to avoid incorrect evaluation.

**Digital Inputs (Safety Technology "L Options")**

The digital inputs correspond to IEC 61131, type 2.



Technical Data of the Components

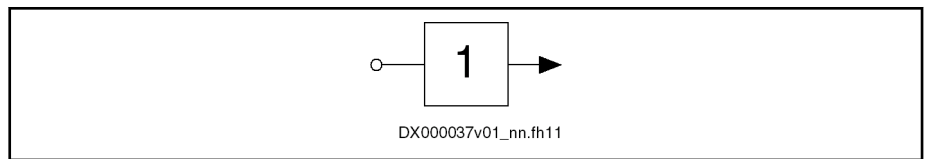


Fig.7-51: Symbol

Data	Unit	Min.	Typ.	Max.
Allowed input voltage	V	0		30
On	V	11		
Off	V			5
Input current				
On	mA	7		
Off	mA			2
Input resistance	kΩ	1 ... 3,5		

Fig.7-52: Digital Inputs (Safety Technology "L Options")

Digital Outputs

The digital outputs are compatible with digital inputs of types 1, 2 and 3 (IEC 61131).

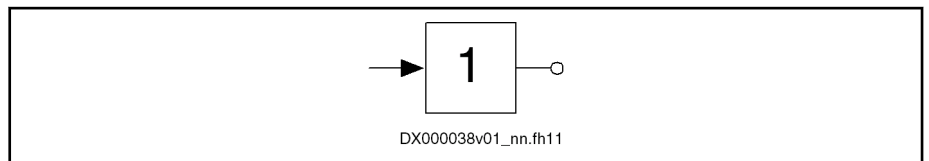


Fig.7-53: Symbol

Data	Unit	Min.	Typ.	Max.
Output voltage ON	V	$U_{ext} - 0.5$	24	$U_{ext}$
Output voltage OFF	V			2,1
Output current OFF	mA			0,05
Allowed output current per output	mA			500
Allowed output current per group (8 outputs)	mA			2000
Update interval	ns	Depending on firmware		
Short circuit protection		Present		
Overload protection		Present		
Allowed energy content of connected inductive loads, e.g. relay coils; only allowed as single pulse Per output	mJ			250

## Technical Data of the Components

Data	Unit	Min.	Typ.	Max.
Allowed energy content of connected inductive loads, e.g. relay coils; only allowed as single pulse Per group (8 outputs)	mJ			1000
Block diagram output:	<p style="text-align: right; font-size: small;">DA000309v01_nn.FH11</p>			

Fig.7-54: Digital outputs



- The digital outputs have been realized with high-side switches. This means that these outputs only can actively supply current.
- The energy absorption capacity of the outputs is used to limit voltage peaks caused when inductive loads are switched off. Limit voltage peaks by using free-wheeling diodes directly at the relay coil.

## Digital Outputs (Safety Technology "L Options")

The digital outputs are compatible with digital inputs of types 1, 2 and 3 (IEC 61131).


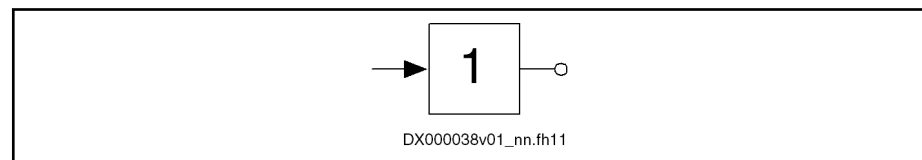


Fig.7-55: Symbol

Data	Unit	Min.	Typ.	Max.
Output voltage ON	V	11	24	30
Output voltage OFF	V			5
Output current OFF	mA			2
Allowed output current per output	mA			300
Short circuit protection		Available		
Overload protection		Available		

Fig.7-56: Digital Outputs (Safety Technology "L Options")

## 7.1.7 Analog Input

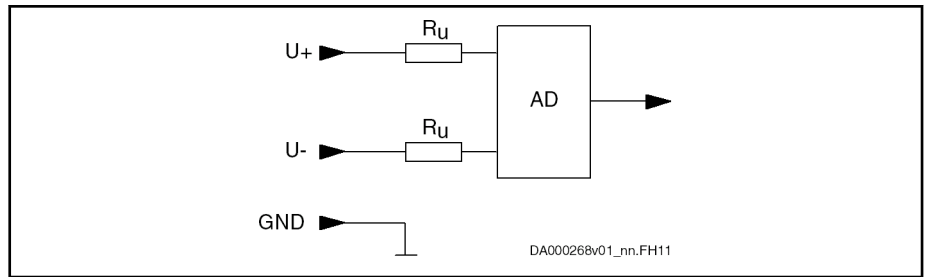

AD Analog/digital converter  
 Fig.7-57: Analog Voltage Input

Data	Unit	Min.	Typ.	Max.
Allowed input voltage	V	-50		+50
Working range input voltage $U_{on\_work}$	V	-10		+10
Input resistance	k $\Omega$		240	
Input bandwidth (-3 dB)	kHz		1,3	
Common-mode range	V	-50		+50
Common-mode rejection	dB	50		
Relative measuring error at 90% $U_{on\_work}$	%	-1		+1
Converter width A/D converter incl. polarity sign	Bit		12	
Oversampling			8-fold	
Dynamic converter width with over-sampling	Bit		14	
Resulting resolution	mV/inc		1,23	
Cyclic conversion	$\mu$ s		n.s.	
Conversion time	$\mu$ s		n.s.	

Fig.7-58: Analog Voltage Input

## 7.1.8 Relay Contacts

### Relay Contact Type 2

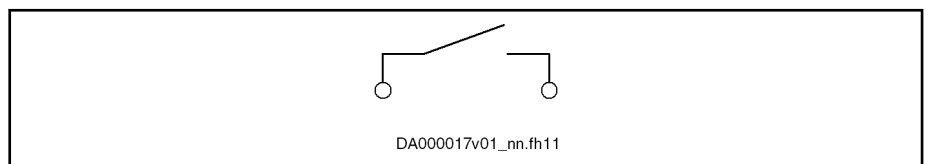


Fig.7-59: Relay Contact

Data	Unit	Min.	Typ.	Max.
Current carrying capacity	A			DC 1
Voltage load capacity	V			DC 30
Minimum load of the contacts	mA	10		

## Technical Data of the Components

Data	Unit	Min.	Typ.	Max.
Contact resistance at minimum current	mΩ			1000
Switching actions at max. time constant of load			1 × 10 <sup>6</sup>	
Number of mechanical switching cycles			1 × 10 <sup>8</sup>	
Time constant of load	ms	ohmic		
Pick up delay	ms			10
Drop out delay	ms			10

Fig.7-60: Relay Contacts Type 2

## 7.2 Control Panel

### 7.2.1 Design

#### Standard Control Panel



For a detailed description of the standard control panel, see the documentation "Application Manual, Functions" of the firmware used (index entry "Control panels").



Fig.7-61: Standard Control Panel

#### Description

The standard control panel

- has a single-line display
- must have been plugged in when the drive controller is switched on so that it can be recognized (not suited for hot plug)
- can be used as programming module
- The **display** shows operating states, command and error diagnoses and pending warnings.
- Using the four **keys**, the commissioning engineer or service technician can have extended diagnoses displayed and trigger simple commands.
- Memory
  - 400 kbytes for MLD boot program
  - 492 bytes for MLD retain variables

#### ADVANCED Control Panel



For a detailed description of the ADVANCED control panel, see the documentation "Application Manual, Functions" of the firmware used (index entry "Control panels").

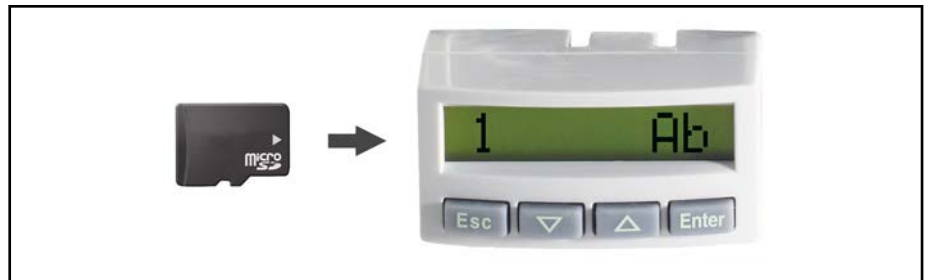


Fig.7-62: ADVANCED Control Panel

**Description**

The ADVANCED control panel

- has a slot for a **microSD memory card (PFM04.1)**
- has a single-line display
- must have been plugged in when the drive controller is switched on so that it can be recognized (not suited for hot plug)
- can be used as programming module
- The **display** shows operating states, command and error diagnoses and pending warnings.
- Using the four **keys**, the commissioning engineer or service technician can have extended diagnoses displayed and trigger simple commands.
- Memory
  - 400 kbytes for MLD boot program  
(4 MB with optional microSD memory card)
  - 31724 bytes for MLD retain variables

## 7.3 Power Section

### 7.3.1 Control Voltage

Data for Control Voltage Supply

Description	Symbol	Unit	HCS01.1E -W0003- _02	HCS01.1E -W0006- _02	HCS01.1E -W0009- _02	HCS01.1E -W0013- _02	HCS01.1E -W0018- _02
Rated control voltage input (UL) <sup>1)</sup>	U <sub>N3</sub>	V	24 ± 20%				
Control voltage when using motor holding brake with motor cable length < 50 m (HCS01 < 40 m) <sup>2)</sup>	U <sub>N3</sub>	V	24 ± 5%				
Control voltage when using motor holding brake with motor cable length > 50 m <sup>3)</sup>	U <sub>N3</sub>	V	26 ± 5%				
Maximum inrush current at 24V supply	I <sub>EIN3_max</sub>	A	3,30				
Pulse width of I <sub>EIN3</sub>	t <sub>EIN3Lade</sub>	ms	2				

Last modification: 2012-01-23

## Technical Data of the Components

Description	Symbol	Unit	HCS01.1E -W0003- _02	HCS01.1E -W0006- _02	HCS01.1E -W0009- _02	HCS01.1E -W0013- _02	HCS01.1E -W0018- _02	
Input capacitance	$C_{N3}$	mF	0,04					
Rated power consumption control voltage input at $U_{N3}$ (UL) <sup>4)</sup>	$P_{N3}$	W	27		28		34	
Last modification: 2012-01-23								

- 1) 2) 3) Observe supply voltage for motor holding brakes  
 4) HMS, HMD, HCS plus motor holding brake and control section;  
 HCS01 including control section  
*Fig. 7-63: HCS - Data for Control Voltage Supply*

**Data for Control Voltage Supply**

Description	Symbol	Unit	HCS01.1E -W0005- _03	HCS01.1E -W0008- _03	HCS01.1E -W0018- _03	HCS01.1E -W0028- _03	HCS01.1E -W0054- _03	
Rated control voltage input (UL) <sup>1)</sup>	$U_{N3}$	V	24 ± 20%					
Control voltage when using motor holding brake with motor cable length < 50 m (HCS01 < 40 m) <sup>2)</sup>	$U_{N3}$	V	24 ± 5%					
Control voltage when using motor holding brake with motor cable length > 50 m <sup>3)</sup>	$U_{N3}$	V	26 ± 5%					
Maximum inrush current at 24V supply	$I_{EIN3\_max}$	A	3,30				4,50	
Pulse width of $I_{EIN3}$	$t_{EIN3Lade}$	ms	2					
Input capacitance	$C_{N3}$	mF	0,04					0,06
Rated power consumption control voltage input at $U_{N3}$ (UL) <sup>4)</sup>	$P_{N3}$	W	27	28	34		45	
Last modification: 2012-01-23								

- 1) 2) 3) Observe supply voltage for motor holding brakes  
 4) HMS, HMD, HCS plus motor holding brake and control section;  
 HCS01 including control section  
*Fig. 7-64: HCS - Data for Control Voltage Supply*

**Overvoltage**

Overvoltage greater than 33 V has to be discharged by means of the appropriate electrical equipment of the machine or installation.

This includes:

- 24V power supply units that reduce incoming overvoltage to the allowed value.
- Overvoltage limiters at the control cabinet input that limit existing overvoltage to the allowed value. This, too, applies to long 24V lines that have been run in parallel to power cables and mains cables and can absorb overvoltage by inductive or capacitive coupling.

## 7.3.2 Mains Voltage

Data for Mains Voltage Supply

Description	Symbol	Unit	HCS01.1E -W0003- -02	HCS01.1E -W0006- -02	HCS01.1E -W0009- -02	HCS01.1E -W0013- -02	HCS01.1E -W0018- -02	
Input frequency (UL)	$f_{LN}$	Hz	50...60					
Tolerance input frequency (UL)		Hz	± 2					
Maximum allowed mains frequency change	$\Delta f_{LN}/\Delta t$	Hz/s	2					
Rotary field condition			None					
Short circuit current rating (UL)	SCCR	A rms	42000					
Nominal mains voltage	$U_{LN\_nenn}$	V	3 AC 230					
Mains voltage single-phase	$U_{LN}$	V	110...230					
Mains voltage three-phase at TN-S, TN-C, TT mains	$U_{LN}$	V	110...230					
Mains voltage three-phase at IT mains <sup>1)</sup>	$U_{LN}$	V	110...230					
Mains voltage three-phase at Corner-grounded-Delta mains <sup>2)</sup>	$U_{LN}$	V	110...230					
Tolerance rated input voltage (UL)		%	± 10					
Minimum short circuit power of the mains for failure-free operation	$S_{k\_min}$	MVA	0,02	0,03	0,05	0,1	0,2	
Minimum inductance of the mains supply (inductance of mains phase) <sup>3)</sup>	$L_{min}$	µH	40					
Assigned type of mains choke			-					
Inrush current	$I_{L\_trans\_max\_on}$	A	See figure					
Maximum allowed ON-OFF cycles per minute <sup>4)</sup>			1					
Mains input continuous current at $U_{LN\_nenn}$ and $P_{DC\_cont}$ (single-phase, without mains choke) <sup>5)</sup>	$I_{LN}$	A	1,80	2,80	5,00	8,30	12,80	
Mains input continuous current at $U_{LN\_nenn}$ and $P_{DC\_cont}$ (three-phase, without mains choke) <sup>6)</sup>	$I_{LN}$	A	0,60	1,20	2,30	4,50	9,60	
Mains input continuous current at $U_{LN\_nenn}$ and $P_{DC\_cont}$ (single-phase, with mains choke) <sup>7)</sup>	$I_{LN}$	A	-					
Mains input continuous current at $U_{LN\_nenn}$ and $P_{DC\_cont}$ (three-phase, with mains choke) <sup>8)</sup>	$I_{LN}$	A	-					

Last modification: 2012-06-28

## Technical Data of the Components

Description	Symbol	Unit	HCS01.1E -W0003- _02	HCS01.1E -W0006- _02	HCS01.1E -W0009- _02	HCS01.1E -W0013- _02	HCS01.1E -W0018- _02
Nominal current AC1 for mains contactor at nom. data			ILN				
Mains fuse according to EN 60204-1 (single-phase, without mains choke)		A	4;gG		6;gG	10;gG	16;gG
Mains fuse according to EN 60204-1 (three-phase, without mains choke)		A	2;gG		4;gG	6;gG	16;gG
Mains fuse according to EN 60204-1 (single-phase, with mains choke)		A	-				
Mains fuse according to EN 60204-1 (three-phase, with mains choke)		A	-				
Required wire size according to EN 60204-1 <sup>9)</sup>	A <sub>LN</sub>	mm <sup>2</sup>	1,5				
Required wire size according to UL 508 A (internal wiring); (UL) <sup>10)</sup>	A <sub>LN</sub>	AWG	AWG 14				
Mains connection power at U <sub>LN_nenn</sub> and P <sub>DC_cont</sub> (three-phase, without mains choke)	S <sub>LN</sub>	kVA	0,30	0,53	0,92	1,55	3,52
Mains connection power at U <sub>LN_nenn</sub> and P <sub>DC_cont</sub> (three-phase, with mains choke)	S <sub>LN</sub>	kVA	-				
Mains connection power at U <sub>LN_nenn</sub> and P <sub>DC_cont</sub> (single-phase, without mains choke)	S <sub>LN</sub>	kVA	tbd				
Mains connection power at U <sub>LN_nenn</sub> and P <sub>DC_cont</sub> (single-phase, with mains choke)	S <sub>LN</sub>	kVA	-				
Power factor TPF ( $\lambda_L$ ) at U <sub>LN_nenn</sub> and P <sub>DC_cont</sub> (single-phase, without mains choke) <sup>11)</sup>	TPF		0,29	0,32	0,35	0,37	0,49
Power factor TPF ( $\lambda_L$ ) at U <sub>LN_nenn</sub> and P <sub>DC_cont</sub> (three-phase, without mains choke) <sup>12)</sup>	TPF		0,47		0,52	0,56	0,52
Power factor TPF ( $\lambda_L$ ) at U <sub>LN_nenn</sub> and P <sub>DC_cont</sub> (single-phase, with mains choke) <sup>13)</sup>	TPF		-				
Power factor TPF ( $\lambda_L$ ) at U <sub>LN_nenn</sub> and P <sub>DC_cont</sub> (three-phase, with mains choke) <sup>14)</sup>	TPF		-				

Last modification: 2012-06-28



Technical Data of the Components

Description	Symbol	Unit	HCS01.1E -W0003- _02	HCS01.1E -W0006- _02	HCS01.1E -W0009- _02	HCS01.1E -W0013- _02	HCS01.1E -W0018- _02
Power factor TPF ( $\lambda_L$ ) at $U_{LN\_nenn}$ and 10% $P_{DC\_cont}$ (single-phase, without mains choke)	TPF <sub>10%</sub>		tbd				
Power factor TPF ( $\lambda_L$ ) at $U_{LN\_nenn}$ and 10% $P_{DC\_cont}$ (three-phase, without mains choke)	TPF <sub>10%</sub>		0,28	0,33	0,38	0,40	0,37
Power factor TPF ( $\lambda_L$ ) at $U_{LN\_nenn}$ and 10% $P_{DC\_cont}$ (single-phase, with mains choke)	TPF <sub>10%</sub>		-				
Power factor TPF ( $\lambda_L$ ) at $U_{LN\_nenn}$ and 10% $P_{DC\_cont}$ (three-phase, with mains choke)	TPF <sub>10%</sub>		-				
Power factor of fundamental component DPF at $P_{DC\_cont}$ (single-phase, without mains choke)	$\cos\varphi^{h1}$		tbd				
Power factor of fundamental component DPF at $P_{DC\_cont}$ (three-phase, without mains choke)	$\cos\varphi^{h1}$		0,99				
Power factor of fundamental component DPF at $P_{DC\_cont}$ (single-phase, with mains choke)	$\cos\varphi^{h1}$		-				
Power factor of fundamental component DPF at $P_{DC\_cont}$ (three-phase, with mains choke)	$\cos\varphi^{h1}$		-				
Last modification: 2012-06-28							

- 1) 2) Mains voltage >  $U_{LN}$ : Use a transformer with grounded neutral point, don't use autotransformers!
- 3) Otherwise use mains choke HNL
- 4) Observe allowed number of switch-on processes; without external capacitors at the DC bus
- 5) 6) 7) 8) 11) Find interim values by interpolation
- 12) 13) 14)
- 9) Copper wire; PVC-insulation (conductor temperature 70 °C); installation method B1; table 6
- 10) Copper wire; PVC-insulation (conductor temperature 90 °C); table 28.1;  $T_a \leq 40$  °C

Fig.7-65: HCS - Data for Mains Voltage Supply

**Data for Mains Voltage Supply**

Description	Symbol	Unit	HCS01.1E -W0005- _03	HCS01.1E -W0008- _03	HCS01.1E -W0018- _03	HCS01.1E -W0028- _03	HCS01.1E -W0054- _03
Input frequency (UL)	$f_{LN}$	Hz	50...60				
Tolerance input frequency (UL)		Hz	± 2				
Last modification: 2012-06-28							

## Technical Data of the Components

Description	Symbol	Unit	HCS01.1E -W0005- _03	HCS01.1E -W0008- _03	HCS01.1E -W0018- _03	HCS01.1E -W0028- _03	HCS01.1E -W0054- _03	
Maximum allowed mains frequency change	$\Delta f_{LN}/\Delta t$	Hz/s	2					
Rotary field condition			None					
Short circuit current rating (UL)	SCCR	A rms	42000					
Nominal mains voltage	$U_{LN\_nenn}$	V	3 AC 400					
Mains voltage single-phase	$U_{LN}$	V	Not allowed					
Mains voltage three-phase at TN-S, TN-C, TT mains	$U_{LN}$	V	200...500					
Mains voltage three-phase at IT mains <sup>1)</sup>	$U_{LN}$	V	200...230					
Mains voltage three-phase at Corner-grounded-Delta mains <sup>2)</sup>	$U_{LN}$	V	200...230					
Tolerance rated input voltage (UL)		%	$\pm 10$					
Minimum short circuit power of the mains for failure-free operation	$S_{k\_min}$	MVA	0,05	0,1	0,2	0,3	0,9	
Minimum inductance of the mains supply (inductance of mains phase) <sup>3)</sup>	$L_{min}$	$\mu H$	40					
Assigned type of mains choke			-			HNL01.1E -1000- N0012- A-500- NNNN	HNL01.1E -0600- N0032- A-500- NNNN	
Inrush current	$I_{L\_trans\_max\_on}$	A	See figure					
Maximum allowed ON-OFF cycles per minute <sup>4)</sup>			1					
Mains input continuous current at $U_{LN\_nenn}$ and $P_{DC\_cont}$ (single-phase, without mains choke) <sup>5)</sup>	$I_{LN}$	A	-					
Mains input continuous current at $U_{LN\_nenn}$ and $P_{DC\_cont}$ (three-phase, without mains choke) <sup>6)</sup>	$I_{LN}$	A	1,50	2,50	5,00	8,00	25,00	
Mains input continuous current at $U_{LN\_nenn}$ and $P_{DC\_cont}$ (single-phase, with mains choke) <sup>7)</sup>	$I_{LN}$	A	-					
Mains input continuous current at $U_{LN\_nenn}$ and $P_{DC\_cont}$ (three-phase, with mains choke) <sup>8)</sup>	$I_{LN}$	A	-		tbd	10,00	28,00	
Nominal current AC1 for mains contactor at nom. data			ILN					

Last modification: 2012-06-28

Technical Data of the Components

Description	Symbol	Unit	HCS01.1E -W0005- _03	HCS01.1E -W0008- _03	HCS01.1E -W0018- _03	HCS01.1E -W0028- _03	HCS01.1E -W0054- _03	
Mains fuse according to EN 60204-1 (single-phase, without mains choke)		A	-					
Mains fuse according to EN 60204-1 (three-phase, without mains choke)		A	2;gG	4;gG	6;gG	10;gG	32;gG	
Mains fuse according to EN 60204-1 (single-phase, with mains choke)		A	-					
Mains fuse according to EN 60204-1 (three-phase, with mains choke)		A	-		tbd	16;gG	32;gG	
Required wire size according to EN 60204-1 <sup>9)</sup>	A <sub>LN</sub>	mm <sup>2</sup>	1,5				6	
Required wire size according to UL 508 A (internal wiring); (UL) <sup>10)</sup>	A <sub>LN</sub>	AWG	AWG 14				AWG 10	
Mains connection power at U <sub>LN,nenn</sub> and P <sub>DC,cont</sub> (three-phase, without mains choke)	S <sub>LN</sub>	kVA	1,00	1,54	3,50	4,90	16,00	
Mains connection power at U <sub>LN,nenn</sub> and P <sub>DC,cont</sub> (three-phase, with mains choke)	S <sub>LN</sub>	kVA	-		tbd	5,50	18,00	
Mains connection power at U <sub>LN,nenn</sub> and P <sub>DC,cont</sub> (single-phase, without mains choke)	S <sub>LN</sub>	kVA	-					
Mains connection power at U <sub>LN,nenn</sub> and P <sub>DC,cont</sub> (single-phase, with mains choke)	S <sub>LN</sub>	kVA	-					
Power factor TPF ( $\lambda_L$ ) at U <sub>LN,nenn</sub> and P <sub>DC,cont</sub> (single-phase, without mains choke) <sup>11)</sup>	TPF		-					
Power factor TPF ( $\lambda_L$ ) at U <sub>LN,nenn</sub> and P <sub>DC,cont</sub> (three-phase, without mains choke) <sup>12)</sup>	TPF		0,49	0,56	0,52	0,53	0,56	
Power factor TPF ( $\lambda_L$ ) at U <sub>LN,nenn</sub> and P <sub>DC,cont</sub> (single-phase, with mains choke) <sup>13)</sup>	TPF		-					
Power factor TPF ( $\lambda_L$ ) at U <sub>LN,nenn</sub> and P <sub>DC,cont</sub> (three-phase, with mains choke) <sup>14)</sup>	TPF		-		tbd	0,72	0,78	

Last modification: 2012-06-28


## Technical Data of the Components

Description	Symbol	Unit	HCS01.1E -W0005- _-03	HCS01.1E -W0008- _-03	HCS01.1E -W0018- _-03	HCS01.1E -W0028- _-03	HCS01.1E -W0054- _-03
Power factor TPF ( $\lambda_L$ ) at $U_{LN\_nenn}$ and 10% $P_{DC\_cont}$ (single-phase, without mains choke)	TPF <sub>10%</sub>		-				
Power factor TPF ( $\lambda_L$ ) at $U_{LN\_nenn}$ and 10% $P_{DC\_cont}$ (three-phase, without mains choke)	TPF <sub>10%</sub>		0,30	0,35	0,38	0,40	0,45
Power factor TPF ( $\lambda_L$ ) at $U_{LN\_nenn}$ and 10% $P_{DC\_cont}$ (single-phase, with mains choke)	TPF <sub>10%</sub>		-				
Power factor TPF ( $\lambda_L$ ) at $U_{LN\_nenn}$ and 10% $P_{DC\_cont}$ (three-phase, with mains choke)	TPF <sub>10%</sub>		-		tbd		
Power factor of fundamental component DPF at $P_{DC\_cont}$ (single-phase, without mains choke)	$\cos\phi^{h1}$		-				
Power factor of fundamental component DPF at $P_{DC\_cont}$ (three-phase, without mains choke)	$\cos\phi^{h1}$		0,99	0,98	0,99	0,98	0,97
Power factor of fundamental component DPF at $P_{DC\_cont}$ (single-phase, with mains choke)	$\cos\phi^{h1}$		-				
Power factor of fundamental component DPF at $P_{DC\_cont}$ (three-phase, with mains choke)	$\cos\phi^{h1}$		-		tbd	0,99	0,95
Last modification: 2012-06-28							

- 1) 2) Mains voltage >  $U_{LN}$ : Use a transformer with grounded neutral point, don't use autotransformers!
- 3) Otherwise use mains choke HNL
- 4) Observe allowed number of switch-on processes; without external capacitors at the DC bus
- 5) 6) 7) 8) 11) Find interim values by interpolation
- 12) 13) 14)
- 9) Copper wire; PVC-insulation (conductor temperature 70 °C); installation method B1; table 6
- 10) Copper wire; PVC-insulation (conductor temperature 90 °C); table 28.1;  $T_a \leq 40$  °C

Fig.7-66: HCS - Data for Mains Voltage Supply

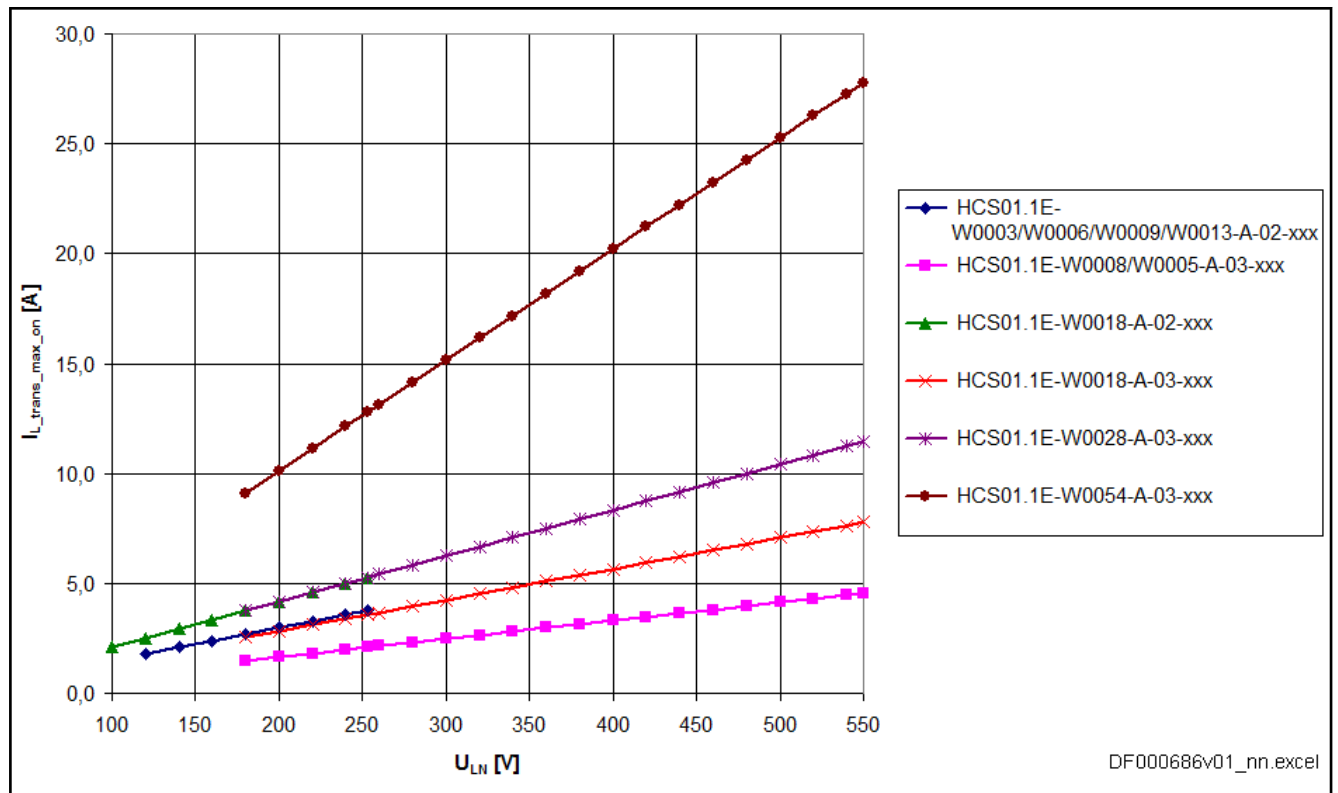Technical Data of the Components



$I_{L,trans\_max\_on}$  Maximum inrush current  
 $U_{LN}$  Mains voltage  
 Fig.7-67: Maximum Inrush Current vs. Mains Voltage

### 7.3.3 DC Bus

#### Data of Power Section - DC Bus

Description	Symbol	Unit	HCS01.1E -W0003- -02	HCS01.1E -W0006- -02	HCS01.1E -W0009- -02	HCS01.1E -W0013- -02	HCS01.1E -W0018- -02	
DC bus voltage	$U_{DC}$	V	ULN x 1,41					
Capacitance in DC bus	$C_{DC}$	mF	0,44		0,78		1,20	
DC resistance in DC bus (L+ to L-)	$R_{DC}$	kohm	663,00					61,20
Rated power ( $t > 10$ min) at $f_s = 4$ kHz; $U_{LN\_nenn}$ ; control factor $a_0 > 0.8$ ; with mains choke	$P_{DC\_cont}$	kW	-					
Rated power ( $t > 10$ min) at $f_s = 4$ kHz; $U_{LN\_nenn}$ ; control factor $a_0 > 0.8$ ; without mains choke	$P_{DC\_cont}$	kW	0,15	0,25	0,46	0,80	1,80	
Factor to reduce $P_{DC\_cont}$ at single-phase mains voltage	$f_{1\_3ph}$		1,00			0,80	0,70	
$P_{DC\_cont}$ and $P_{DC\_max}$ vs. mains input voltage; $U_{LN} \leq U_{LN\_nenn}$		%/V	PDC_cont (ULN) = PDC_cont x [1 - (230-ULN) x 0,0025]					
Last modification: 2012-05-16								

## Technical Data of the Components

Description	Symbol	Unit	HCS01.1E -W0003- _02	HCS01.1E -W0006- _02	HCS01.1E -W0009- _02	HCS01.1E -W0013- _02	HCS01.1E -W0018- _02	
$P_{DC\_cont}$ and $P_{DC\_max}$ vs. mains input voltage; $U_{LN} > U_{LN\_nenn}$		%/V	No power increase					
Maximum allowed DC bus power at $U_{LN\_nenn}$ ; with mains choke	$P_{DC\_max}$	kW	-					
Maximum allowed DC bus power at $U_{LN\_nenn}$ ; without mains choke	$P_{DC\_max}$	kW	0,45	0,75	1,38	2,40	4,80	
Balancing factor for $P_{DC\_cont}$ (for parallel operation at common DC bus) with mains choke			-					
Balancing factor for $P_{DC\_cont}$ (for parallel operation at common DC bus) without mains choke			-					
Monitoring value maximum DC bus voltage, switch-off threshold	$U_{DC\_lim-it\_max}$	V	420					
Monitoring value minimum DC bus voltage, undervoltage threshold	$U_{DC\_lim-it\_min}$	V	0.75 x ULN or "P-0-0114, Undervoltage threshold", if P-0-0114 > 0.75 x ULN					
Charging resistor continuous power	$P_{DC\_Start}$	kW	0,03					0,15
Allowed external DC bus capacitance (nom.) at $U_{LN\_nenn}$ <sup>1)</sup>	$C_{DCext}$	mF	-					
Charging time at maximum allowed $C_{DCext}$ external DC bus capacitance at $U_{LN\_nenn}$	$t_{lade\_DC\_Cext}$	s	2,50					
Last modification: 2012-05-16								

1) Use assigned type of mains choke  
Fig.7-68: HCS - Data of Power Section - DC bus

## Data of Power Section - DC Bus

Description	Symbol	Unit	HCS01.1E -W0005- _03	HCS01.1E -W0008- _03	HCS01.1E -W0018- _03	HCS01.1E -W0028- _03	HCS01.1E -W0054- _03	
DC bus voltage	$U_{DC}$	V	ULN x 1,41					
Capacitance in DC bus	$C_{DC}$	mF	0,11		0,33		0,78	
DC resistance in DC bus (L+ to L-)	$R_{DC}$	kohm	320,00		230,00		136,00	
Rated power (t > 10 min) at $f_s = 4$ kHz; $U_{LN\_nenn}$ ; control factor $a_0 > 0.8$ ; with mains choke	$P_{DC\_cont}$	kW	-		tbd	4,00	14,00	
Rated power (t > 10 min) at $f_s = 4$ kHz; $U_{LN\_nenn}$ ; control factor $a_0 > 0.8$ ; without mains choke	$P_{DC\_cont}$	kW	0,46	0,86	1,70	2,60	9,00	
Last modification: 2012-06-26								

Technical Data of the Components

Description	Symbol	Unit	HCS01.1E -W0005- _03	HCS01.1E -W0008- _03	HCS01.1E -W0018- _03	HCS01.1E -W0028- _03	HCS01.1E -W0054- _03
Factor to reduce $P_{DC\_cont}$ at single-phase mains voltage	$f_{1\_3ph}$		1-phase operation not allowed				
$P_{DC\_cont}$ and $P_{DC\_max}$ vs. mains input voltage; $U_{LN} \leq U_{LN\_nenn}$		%/V	$P_{DC\_cont} (ULN) = P_{DC\_cont} \times [1 - (400 - ULN) \times 0,0025]$				
$P_{DC\_cont}$ and $P_{DC\_max}$ vs. mains input voltage; $U_{LN} > U_{LN\_nenn}$		%/V	No power increase				
Maximum allowed DC bus power at $U_{LN\_nenn}$ ; with mains choke	$P_{DC\_max}$	kW	-			9,70	19,00
Maximum allowed DC bus power at $U_{LN\_nenn}$ ; without mains choke	$P_{DC\_max}$	kW	1,38	2,58	5,10	6,20	14,00
Balancing factor for $P_{DC\_cont}$ (for parallel operation at common DC bus) with mains choke			-			0,80	
Balancing factor for $P_{DC\_cont}$ (for parallel operation at common DC bus) without mains choke			-			0,50	
Monitoring value maximum DC bus voltage, switch-off threshold	$U_{DC\_limit\_max}$	V	900				
Monitoring value minimum DC bus voltage, undervoltage threshold	$U_{DC\_limit\_min}$	V	0.75 x ULN or "P-0-0114, Undervoltage threshold", if P-0-0114 > 0.75 x ULN				
Charging resistor continuous power	$P_{DC\_Start}$	kW	0,03		0,05	0,15	0,50
Allowed external DC bus capacitance (nom.) at $U_{LN\_nenn}$ <sup>1)</sup>	$C_{DCext}$	mF	-		3,00	4,00	13,00
Charging time at maximum allowed $C_{DCext}$ external DC bus capacitance at $U_{LN\_nenn}$	$t_{lade\_DC\_Cext}$	s	2,50				

Last modification: 2012-06-26

1) Use assigned type of mains choke  
 Fig.7-69: HCS - Data of Power Section - DC bus

### 7.3.4 Integrated Braking Resistor



Information on the external braking resistor: See [chapter 8.3.4 "External Braking Resistors HLR"](#) on page 246.

## Technical Data of the Components

## Data of Integrated Braking Resistor

Description	Symbol	Unit	HCS01.1E -W0003- _02	HCS01.1E -W0006- _02	HCS01.1E -W0009- _02	HCS01.1E -W0013- _02	HCS01.1E -W0018- _02
Braking Resistor Continuous Power	$P_{BD}$	kW	0,02			0,03	0,15
Braking Resistor Peak Power	$P_{BS}$	kW	1,68				2,24
Nominal braking resistance	$R_{DC\_Bleeder}$	ohm	100				68
Braking resistor switch-on threshold - mains voltage independent <sup>1)</sup>	$U_{R\_DC\_On\_f}$	V	390				
Braking resistor switch-on threshold - mains voltage dependent <sup>2)</sup>	$U_{R\_DC\_On\_v}$		-				
Maximum allowed on-time duty	$t_{on\_max}$	s	0,20				1,34
Minimum allowed cycle time	$T_{cycl}$	s	16,80	11,20		20,00	
Regenerative power to be absorbed	$W_{R\_max}$	kWs	0,40				3,00
Balancing factor for $P_{BD}$ (for parallel operation at common DC bus)	f		-				
Cooling of integrated braking resistor			Natural convection			Forced ventilation	
Last modification: 2012-05-16							

1) 2) Factory setting  
Fig.7-70: HCS - Data of Integrated Braking Resistor

## Data of Integrated Braking Resistor

Description	Symbol	Unit	HCS01.1E -W0005- _03	HCS01.1E -W0008- _03	HCS01.1E -W0018- _03	HCS01.1E -W0028- _03	HCS01.1E -W0054- _03
Braking Resistor Continuous Power	$P_{BD}$	kW	0,02	0,03	0,05	0,15	0,50
Braking Resistor Peak Power	$P_{BS}$	kW	4,00		7,20	10,60	25,80
Nominal braking resistance	$R_{DC\_Bleeder}$	ohm	180		100	68	28
Braking resistor switch-on threshold - mains voltage independent <sup>1)</sup>	$U_{R\_DC\_On\_f}$	V	820				
Braking resistor switch-on threshold - mains voltage dependent <sup>2)</sup>	$U_{R\_DC\_On\_v}$		130% of parameter P-0-0815, max. 820V				
Maximum allowed on-time duty	$t_{on\_max}$	s	0,20		0,32	0,28	0,50
Minimum allowed cycle time	$T_{cycl}$	s	40,00	26,70	45,40	20,00	26,00
Regenerative power to be absorbed	$W_{R\_max}$	kWs	0,80		2,25	3,00	13,00
Last modification: 2012-05-16							



Technical Data of the Components

Description	Symbol	Unit	HCS01.1E -W0005- _03	HCS01.1E -W0008- _03	HCS01.1E -W0018- _03	HCS01.1E -W0028- _03	HCS01.1E -W0054- _03	
Balancing factor for P <sub>BD</sub> (for parallel operation at common DC bus)	f		0,80					
Cooling of integrated braking resistor			Forced ventilation					
Last modification: 2012-05-16								

1) 2) Factory setting  
 Fig.7-71: HCS - Data of Integrated Braking Resistor

### 7.3.5 Inverter

#### Data of Power Section - Inverter

Description	Symbol	Unit	HCS01.1E -W0003- _02	HCS01.1E -W0006- _02	HCS01.1E -W0009- _02	HCS01.1E -W0013- _02	HCS01.1E -W0018- _02	
Allowed switching frequencies <sup>1)</sup>	f <sub>s</sub>	kHz	4, 8, 12, 16					
Output voltage, fundamental wave with open-loop operation	U <sub>out_eff</sub>	V	~ UDC x 0,71					
Output voltage, fundamental wave with closed-loop operation	U <sub>out_eff</sub>	V	~ UDC x 0,71					
Rise of voltage at output with U <sub>LN_nenn</sub> and 15 m motor cable length phase-phase (10-90%) <sup>2)</sup>	dv/dt	kV/μs	5,00					
Rise of voltage at output with U <sub>LN_nenn</sub> and 15 m motor cable length phase-ground (10-90%) <sup>3)</sup>	dv/dt	kV/μs	5,00					
Output frequency range at f <sub>s</sub> = 4 kHz	f <sub>out_4k</sub>	Hz	0...400					
Output frequency range at f <sub>s</sub> = 8 kHz	f <sub>out_8k</sub>	Hz	0...800					
Output frequency range at f <sub>s</sub> = 12 kHz	f <sub>out_12k</sub>	Hz	0...1200					
Output frequency range at f <sub>s</sub> = 16 kHz	f <sub>out_16k</sub>	Hz	0...1600					
Output frequency threshold to detect motor standstill <sup>4)</sup>	f <sub>out_still</sub>	Hz	4					
Maximum output current at f <sub>s</sub> = 4 kHz	I <sub>out_max4</sub>	A	3,3	6,0	9,0	13,0	18,0	
Maximum output current at f <sub>s</sub> = 8 kHz	I <sub>out_max8</sub>	A	3,3	6,0	9,0	13,0	18,0	
Maximum output current at f <sub>s</sub> = 12 kHz	I <sub>out_max12</sub>	A	3,3	6,0	9,0	13,0	18,0	
Last modification: 2012-01-23								

## Technical Data of the Components

Description	Symbol	Unit	HCS01.1E -W0003- _02	HCS01.1E -W0006- _02	HCS01.1E -W0009- _02	HCS01.1E -W0013- _02	HCS01.1E -W0018- _02
Maximum output current at $f_s = 16$ kHz	$I_{out\_max16}$	A	3,3	6,0	9,0	13,0	16,5
Continuous output current at $f_s = 4$ kHz	$I_{out\_cont4}$	A	1,4	2,4	3,0	4,4	7,6
Continuous output current at $f_s = 8$ kHz	$I_{out\_cont8}$	A	1,0	1,8	2,6	4,2	6,1
Continuous output current at $f_s = 12$ kHz <sup>5)</sup>	$I_{out\_cont12}$	A	0,6	1,2	1,7	2,7	4,1
Continuous output current at $f_s = 16$ kHz <sup>6)</sup>	$I_{out\_cont16}$	A	0,5	0,8	1,1	1,9	2,5
Continuous output current at $f_s = 4$ kHz; output frequency $f_{out} < f_{out\_still}$	$I_{out\_cont0Hz\_4}$	A	1,1	2,1	3,0	4,4	7,0
Continuous output current at $f_s = 8$ kHz; output frequency $f_{out} < f_{out\_still}$	$I_{out\_cont0Hz\_8}$	A	0,9	1,6	2,3	3,1	2,3
Continuous output current at $f_s = 12$ kHz; output frequency $f_{out} < f_{out\_still}$ <sup>7)</sup>	$I_{out\_cont0Hz\_12}$	A	0,5	1,0	1,4	2,0	1,4
Continuous output current at $f_s = 16$ kHz; output frequency $f_{out} < f_{out\_still}$ <sup>8)</sup>	$I_{out\_cont0Hz\_16}$	A	0,4	0,7	0,9	1,3	0,4
Assigned output filters at nom. data; $f_s = 4$ kHz			tbd				
Last modification: 2012-01-23							

- 1) Also depending on firmware and control section; see parameter description "P-0-0001, Switching frequency of the power output stage"; see "P-0-4058, Amplifier type data"
- 2) 3) Guide value, see following note
- 4) See following note regarding reduction output current
- 5) 6) 7) 8) See parameter description "P-0-0556, Config word of axis controller", load-dependent reduction of switching frequency  $f_s$

Fig.7-72: HCS - Data of Power Section - Inverter

## Data of Power Section - Inverter

Description	Symbol	Unit	HCS01.1E -W0005- _03	HCS01.1E -W0008- _03	HCS01.1E -W0018- _03	HCS01.1E -W0028- _03	HCS01.1E -W0054- _03
Allowed switching frequencies <sup>1)</sup>	$f_s$	kHz	4, 8, 12, 16				4, 8, 12
Output voltage, fundamental wave with open-loop operation	$U_{out\_eff}$	V	~ UDC x 0,71				
Output voltage, fundamental wave with closed-loop operation	$U_{out\_eff}$	V	~ UDC x 0,71				
Last modification: 2012-05-16							

Technical Data of the Components

Description	Symbol	Unit	HCS01.1E -W0005- _03	HCS01.1E -W0008- _03	HCS01.1E -W0018- _03	HCS01.1E -W0028- _03	HCS01.1E -W0054- _03	
Rise of voltage at output with $U_{LN\_nenn}$ and 15 m motor cable length phase-phase (10-90%) <sup>2)</sup>	dv/dt	kV/ $\mu$ s	5,00					
Rise of voltage at output with $U_{LN\_nenn}$ and 15 m motor cable length phase-ground (10-90%) <sup>3)</sup>	dv/dt	kV/ $\mu$ s	5,00					
Output frequency range at $f_s = 4$ kHz	$f_{out\_4k}$	Hz	0...400					
Output frequency range at $f_s = 8$ kHz	$f_{out\_8k}$	Hz	0...800					
Output frequency range at $f_s = 12$ kHz	$f_{out\_12k}$	Hz	0...1200					
Output frequency range at $f_s = 16$ kHz	$f_{out\_16k}$	Hz	0...1600					-
Output frequency threshold to detect motor standstill <sup>4)</sup>	$f_{out\_still}$	Hz	4					
Maximum output current at $f_s = 4$ kHz	$I_{out\_max4}$	A	5,0	8,0	18,0	28,5	54,0	
Maximum output current at $f_s = 8$ kHz	$I_{out\_max8}$	A	5,0	8,0	18,0	28,5	40,0	
Maximum output current at $f_s = 12$ kHz	$I_{out\_max12}$	A	5,0	8,0	18,0	21,9	30,4	
Maximum output current at $f_s = 16$ kHz	$I_{out\_max16}$	A	5,0	8,0	16,5	17,6	-	
Continuous output current at $f_s = 4$ kHz	$I_{out\_cont4}$	A	2,0	2,7	7,6	11,5	21,0	
Continuous output current at $f_s = 8$ kHz	$I_{out\_cont8}$	A	1,6	2,3	6,1	7,9	21,0	
Continuous output current at $f_s = 12$ kHz <sup>5)</sup>	$I_{out\_cont12}$	A	1,0	1,5	4,1	4,6	15,5	
Continuous output current at $f_s = 16$ kHz <sup>6)</sup>	$I_{out\_cont16}$	A	0,7	1,0	2,5	3,1	-	
Continuous output current at $f_s = 4$ kHz; output frequency $f_{out} < f_{out\_still}$	$I_{out\_cont0Hz\_4}$	A	1,8	2,7	7,0	11,5	21,0	
Continuous output current at $f_s = 8$ kHz; output frequency $f_{out} < f_{out\_still}$	$I_{out\_cont0Hz\_8}$	A	1,3	1,9	2,3	4,7	12,0	
Continuous output current at $f_s = 12$ kHz; output frequency $f_{out} < f_{out\_still}$ <sup>7)</sup>	$I_{out\_cont0Hz\_12}$	A	0,8	1,2	1,4	2,2	7,5	

Last modification: 2012-05-16

## Technical Data of the Components

Description	Symbol	Unit	HCS01.1E -W0005- _03	HCS01.1E -W0008- _03	HCS01.1E -W0018- _03	HCS01.1E -W0028- _03	HCS01.1E -W0054- _03
Continuous output current at $f_s = 16$ kHz; output frequency $f_{out} < f_{out\_still}^{8)}$	$I_{out\_cont0Hz\_16}$	A	0,6	0,8	0,4	1,2	-
Assigned output filters at nom. data; $f_s = 4$ kHz			tbd				
Last modification: 2012-05-16							

- 1) Also depending on firmware and control section; see parameter description "P-0-0001, Switching frequency of the power output stage"; see "P-0-4058, Amplifier type data"
- 2) 3) Guide value, see following note
- 4) See following note regarding reduction output current
- 5) 6) 7) 8) See parameter description "P-0-0556, Config word of axis controller", load-dependent reduction of switching frequency  $f_s$

*Fig.7-73: HCS - Data of Power Section - Inverter*



#### Guide value "Rise of voltage at output"

Observe that the voltage load at the motor is almost independent of the power section used.

Especially when using **standard motors**, make sure that they comply with the occurring voltage load.



#### Reduced output current at motor standstill

Depending on the electric output frequency, the output current is reduced for thermal protection of the power section.

The output current is reduced, when the electric output frequency has fallen below the threshold to detect motor standstill.

## 8 Cables, Accessories, Additional Components

### 8.1 Overview

#### 8.1.1 Cables

Motor power cables	See documentation "Rexroth Connection Cables IndraDrive and IndraDyn"
Encoder cables	<ul style="list-style-type: none"> <li>• RKG0033 (MSM motor)</li> <li>• RKG0034 (MSM motor, extension)</li> <li>• RKG0035 (1V<sub>pp</sub> Heidenhain standard)</li> <li>• RKG0036 (EnDat, SSI)</li> <li>• RKG0041 (incl. D-Sub connector RGS0001/K01; MSM motor)</li> <li>• RKG4200 (HIPERFACE®)</li> </ul> See also index entry "Cables → Encoder cables"
Multi-Ethernet cables	<ul style="list-style-type: none"> <li>• RKB0011 (To connect the drive system to the higher-level control unit)</li> <li>• RKB0013 (To connect devices arranged side by side)</li> </ul> See also index entry "Cables → RKB0011" and "Cables → RKB0013"

Fig. 8-1: Cables - Overview

#### 8.1.2 Accessories

Accessories	Note
<b>Mounting and connection accessories (HAS09)</b> <ul style="list-style-type: none"> <li>• Screws for mounting the component</li> <li>• Screws for connecting the equipment grounding conductor</li> <li>• Parts for shield connection and strain relief of cables (plates, screws, clips)</li> <li>• Adhesive labels with notes on safety in the English and French languages</li> </ul>	Standard supply
<b>DC bus connector (RLS0778/K06)</b> Connector for connecting <ul style="list-style-type: none"> <li>• the DC buses of several HCS01.1E-W00xx-x-03 drive controllers</li> <li>• an HCS01.1E-W00xx-x-03 drive controller to an HLC01.2 DC bus capacitor unit</li> </ul>	To be ordered separately
<b>Battery box (SUP-E01-MSM-BATTERYBOX)</b> Accessory for operating MSM motors with absolute value encoder	To be ordered separately
<b>Replacement battery (SUP-E03-DKC*CS-BATTERY)</b> Replacement battery for SUP-E01-MSM-BATTERYBOX	To be ordered separately
<b>Encoder cable (RKG0041)</b> Accessory for operating MSM motors with absolute value encoder	To be ordered separately

## Cables, Accessories, Additional Components

Accessories	Note
<b>D-Sub connector (RGS0001/K01)</b> Accessory for assembling an encoder cable for MSM motors with absolute value encoder	To be ordered separately
<b>Hall sensor adapter box (SHL03.1-NNN-S-NNN)</b> Accessory for connecting digital Hall sensors	To be ordered separately

Fig. 8-2: Accessories - Overview

## 8.1.3 Additional Components

Additional component	Type
Transformer	DST (autotransformer)
Mains filter	NFE NFD
Mains choke	HNL01.1E
Braking resistor	HLR01.2
DC bus capacitor unit	HLC01.2

Fig. 8-3: Additional Components - Overview

## 8.2 Accessories

### 8.2.1 Mounting and Connection Accessories (HAS09)

**Use** The accessories contain:

- Screws for mounting the component
- Screws for connecting the equipment grounding conductor
- Parts for shield connection of cables (plates, screws)
- Adhesive labels with notes on safety in the English and French languages. Place the adhesive labels clearly visibly at the component or in the immediate vicinity of the component, if the adhesive labels existing at the component are hidden by neighboring components.

**Assignment**

Accessories	Component
HAS09.1-001-NNN-NN	HCS01.1E-W0003 ... W0028
HAS09.1-003-NNN-NN	HCS01.1E-W0054
HAS09.1-004-NNN-NN	HLC01.2; HLR01.2N


*Fig. 8-4: HAS09 and HCS01*

Cables, Accessories, Additional Components

Product Insert HAS09.1-001-NNN-NN

Made in Germany  
109-1304-4825-AD

## HAS09.1-001-NNN-NN

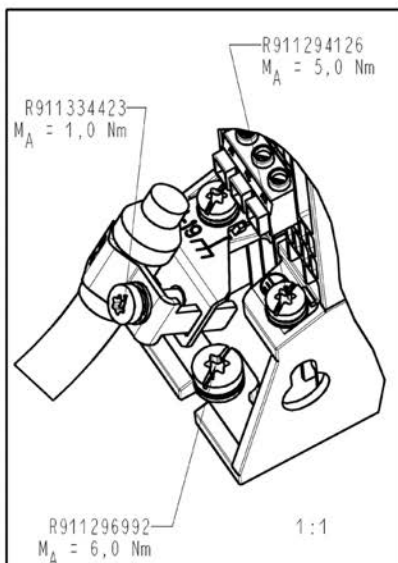


R911332680

Stck	Benennung	MNI
1	SCHILD-KLEBE UL-CSA WARNHINWEIS EN/FR 30	R911326524
2	KOMBI-SCHRAUBE Z15010644-M6X20-8,8 &	R911296992
2	KOMBI-SCHRAUBE Z15010644-M5X30-8,8 &	R911334423
4	KOMBI-SCHRAUBE Z15010644-M5X12-8,8 &	R911294126
1	BLECH HCS01.1 SCHIRM KLEMMBUEGEL 08-19	R911330442
1	BLECH HCS01.1 SCHIRM KLEMMBUEGEL 04-13	R911333478
2	BLECH HCS01.1 SCHIRM KLEMMAUFLAGE 04-19	R911330441

### BEIPACKZETTEL HAS09.1-001-NNN-NN

Stck	Benennung	MNI
2	BLECH HCS01.1 SCHIRM KLEMMAUFLAGE 04-19	R911330441
1	BLECH HCS01.1 SCHIRM KLEMMBUEGEL 04-13	R911333478
1	BLECH HCS01.1 SCHIRM KLEMMBUEGEL 08-19	R911330442
4	KOMBI-SCHRAUBE Z15010644-M5X12-8,8 &	R911294126
2	KOMBI-SCHRAUBE Z15010644-M5X30-8,8 &	R911334423
2	KOMBI-SCHRAUBE Z15010644-M6X20-8,8 &	R911296992
1	SCHILD-KLEBE UL-CSA WARNHINWEIS EN/FR 30	R911326524



R911294126  
 $M_A = 5,0 \text{ Nm}$

R911334423  
 $M_A = 1,0 \text{ Nm}$

R911296992  
 $M_A = 6,0 \text{ Nm}$

1:1

Fig. 8-5: Product Insert HAS09.1-001-NNN-NN



Cables, Accessories, Additional Components

HAS09.1-003-NNN-NN

Made in Germany  
109-1304-4824-AE

## HAS09.1-003-NNN-NN

R911331869

1	SCHILD-KLEBE UL-CSA WARNHINWEIS EN/FR 30	R911326524
4	KOMBI-SCHRAUBE Z1S010644-M6x20-8.8 &	R911296992
2	KOMBI-SCHRAUBE Z1S010644-M5x30-8.8 &	R911334423
4	KOMBI-SCHRAUBE Z1S010644-M5x16-8.8 &	R911294127
1	BLECH HCS01.1 SCHIRM KLEMMUEGEL 09-28	R911330693
1	BLECH HCS01.1 SCHIRM KLEMMUEGEL 08-19	R911330442
1	BLECH HCS01.1 SCHIRM KLEMMAUFLAGE 09-28	R911330692
1	BLECH HCS01.1 SCHIRM KLEMMAUFLAGE 04-19	R911330441

**BEIPACKZETTEL HAS09.1-003-NNN-NN**

Stck	Benennung	MN
1	BLECH HCS01.1 SCHIRM KLEMMAUFLAGE 04-19	R911330441
08-231916		1:2
1	BLECH HCS01.1 SCHIRM KLEMMAUFLAGE 09-28	R911330692
08-251831		1:2
1	BLECH HCS01.1 SCHIRM KLEMMUEGEL 08-19	R911330442
08-231555		1:2
1	BLECH HCS01.1 SCHIRM KLEMMUEGEL 09-28	R911330693
08-241965		1:2
4	KOMBI-SCHRAUBE Z1S010644-M5x16-8.8 &	R911294127
08-328012		1:1
2	KOMBI-SCHRAUBE Z1S010644-M5x30-8.8 &	R911334423
08-242069		1:1
4	KOMBI-SCHRAUBE Z1S010644-M6x20-8.8 &	R911296992
08-146136		1:1
1	SCHILD-KLEBE UL-CSA WARNHINWEIS EN/FR 30	R911326524
08-220913		1:2


R911334423  
 $M_A = 1,0 \text{ Nm}$   
 R911334423  
 $M_A = 5,0 \text{ Nm}$   
 R911296992  
 $M_A = 6,0 \text{ Nm}$   
 1:1

Datum	2010-03-31	Benennung
Name	rauehirt	BEIPACKZETTEL HAS09.1-003-NNN-NN
Material-Nr.	R911331870	Zeich-Nr. 109-1304-4232-AE
Datum	08238x26	Erzdurch 109-1304-4232-AD AEM Nr. 5-74736

Fig. 8-6: Product Insert HAS09.1-003-NNN-NN

## Cables, Accessories, Additional Components
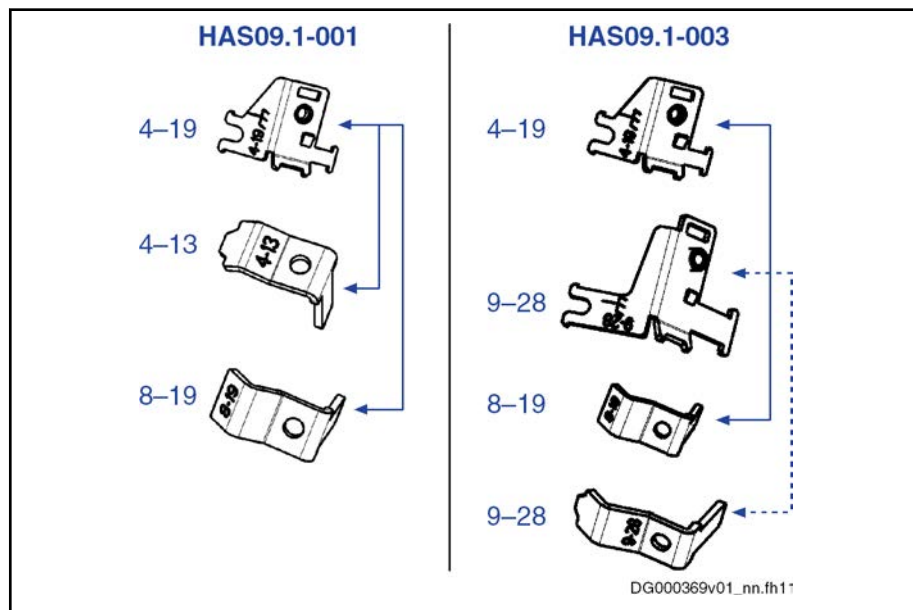
## Plates for Shield Connection of Cables



HAS09.1-0 Plates for cable diameters 4–13 mm and 8–19 mm

01



HAS09.1-0 Plates for cable diameters 8–19 mm and 9–28 mm

03


*Fig.8-7: HAS09; Plates*

Cables, Accessories, Additional Components

HAS09.1-004-NNN-NN

<p>Made in Germany 109-1304-4829-AA</p> <p style="text-align: center; font-size: 1.2em;"><b>HAS09.1-004-NNN-NN</b></p> <div style="text-align: center;">                   R911336154             </div> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th style="width: 5%;">Stck</th> <th style="width: 65%;">Benennung</th> <th style="width: 30%;">MN</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>SCHILD-KLEBE UL-CSA WARNHINWEIS EN/FR 30</td> <td>R911326524</td> </tr> <tr> <td>4</td> <td>KOMB1-SCHRAUBE Z15010644-M6X20-8.8 &amp;</td> <td>R911296992</td> </tr> <tr> <td>1</td> <td>KOMB1-SCHRAUBE Z15010644-M5X12-8.8 &amp;</td> <td>R911294126</td> </tr> </tbody> </table>	Stck	Benennung	MN	1	SCHILD-KLEBE UL-CSA WARNHINWEIS EN/FR 30	R911326524	4	KOMB1-SCHRAUBE Z15010644-M6X20-8.8 &	R911296992	1	KOMB1-SCHRAUBE Z15010644-M5X12-8.8 &	R911294126	<p style="text-align: center; font-size: 0.8em;"><b>BEIPACKZETTEL HAS09.1-004-NNN-NN</b></p> <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 5%;">Stck</th> <th style="width: 65%;">Benennung</th> <th style="width: 30%;">MN</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>KOMB1-SCHRAUBE Z15010644-M5X12-8.8 &amp;</td> <td>R911294126</td> </tr> <tr> <td>4</td> <td>KOMB1-SCHRAUBE Z15010644-M6X20-8.8 &amp;</td> <td>R911296992</td> </tr> <tr> <td>1</td> <td>SCHILD-KLEBE UL-CSA WARNHINWEIS EN/FR 30</td> <td>R911326524</td> </tr> </tbody> </table> <div style="text-align: center; margin-top: 10px;">                   1:2             </div> <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th style="width: 15%;">Datum</th> <th style="width: 35%;">2011-08-29</th> <th style="width: 50%;">Benennung</th> </tr> </thead> <tbody> <tr> <td>Zeichnr.</td> <td>109-1304-4244-AA</td> <td>BEIPACKZETTEL HAS09.1-004-NNN-NN</td> </tr> <tr> <td>Materiell-Nr.</td> <td>R911336154</td> <td></td> </tr> <tr> <td>Datum</td> <td>08/24/19</td> <td>Ersuchen ...</td> </tr> <tr> <td></td> <td></td> <td>AEM-Nr. ...</td> </tr> </tbody> </table>	Stck	Benennung	MN	1	KOMB1-SCHRAUBE Z15010644-M5X12-8.8 &	R911294126	4	KOMB1-SCHRAUBE Z15010644-M6X20-8.8 &	R911296992	1	SCHILD-KLEBE UL-CSA WARNHINWEIS EN/FR 30	R911326524	Datum	2011-08-29	Benennung	Zeichnr.	109-1304-4244-AA	BEIPACKZETTEL HAS09.1-004-NNN-NN	Materiell-Nr.	R911336154		Datum	08/24/19	Ersuchen ...			AEM-Nr. ...
Stck	Benennung	MN																																						
1	SCHILD-KLEBE UL-CSA WARNHINWEIS EN/FR 30	R911326524																																						
4	KOMB1-SCHRAUBE Z15010644-M6X20-8.8 &	R911296992																																						
1	KOMB1-SCHRAUBE Z15010644-M5X12-8.8 &	R911294126																																						
Stck	Benennung	MN																																						
1	KOMB1-SCHRAUBE Z15010644-M5X12-8.8 &	R911294126																																						
4	KOMB1-SCHRAUBE Z15010644-M6X20-8.8 &	R911296992																																						
1	SCHILD-KLEBE UL-CSA WARNHINWEIS EN/FR 30	R911326524																																						
Datum	2011-08-29	Benennung																																						
Zeichnr.	109-1304-4244-AA	BEIPACKZETTEL HAS09.1-004-NNN-NN																																						
Materiell-Nr.	R911336154																																							
Datum	08/24/19	Ersuchen ...																																						
		AEM-Nr. ...																																						

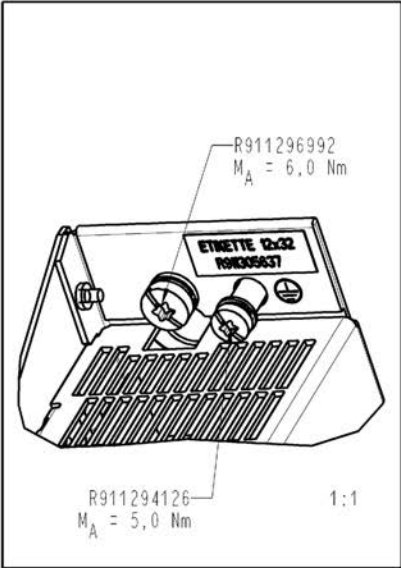

1:1

DL000141v01\_en\_01

Fig. 8-8: Product Insert HAS09.1-004-NNN-NN

Cables, Accessories, Additional Components

## 8.2.2 DC Bus Connector (RLS0778/K06)

**Use** Connector for connecting

- the DC buses of several HCS01.1E-W00xx-x-03 drive controllers
- an HCS01.1E-W00xx-x-03 drive controller to a DC bus capacitor unit

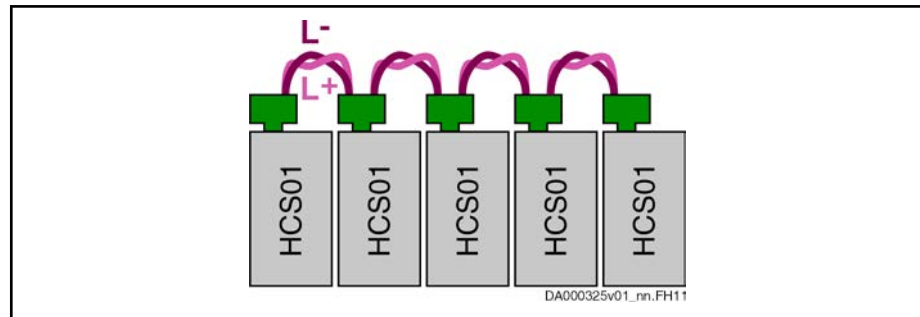


Fig.8-9: Connecting the DC Buses via DC Bus Connectors

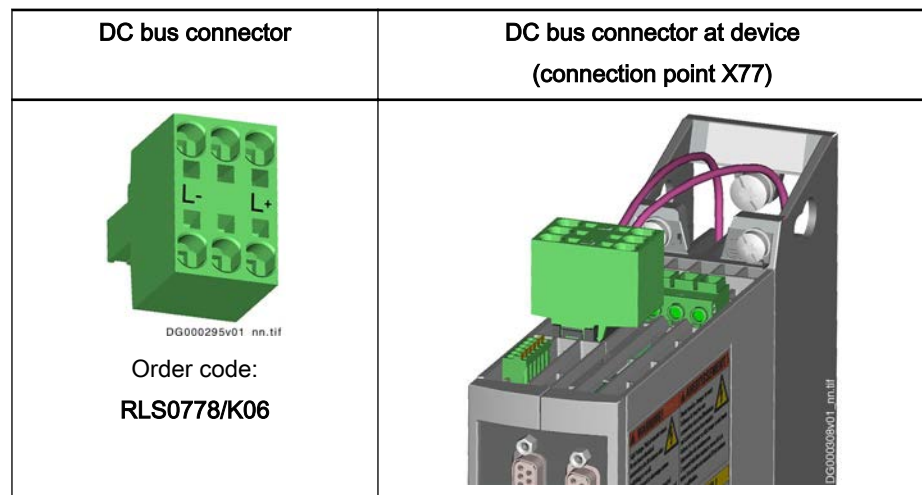


Fig.8-10: DC Bus Connector

### 8.2.3 Battery Box for MSM Motors (SUP-E01-MSM-BATTERYBOX)

**Use** The battery box "SUP-E01-MSM-BATTERYBOX" is a set of accessories used to operate MSM motors with absolute value encoder and to backup the encoder data in case voltage is switched off.

Scope of Supply

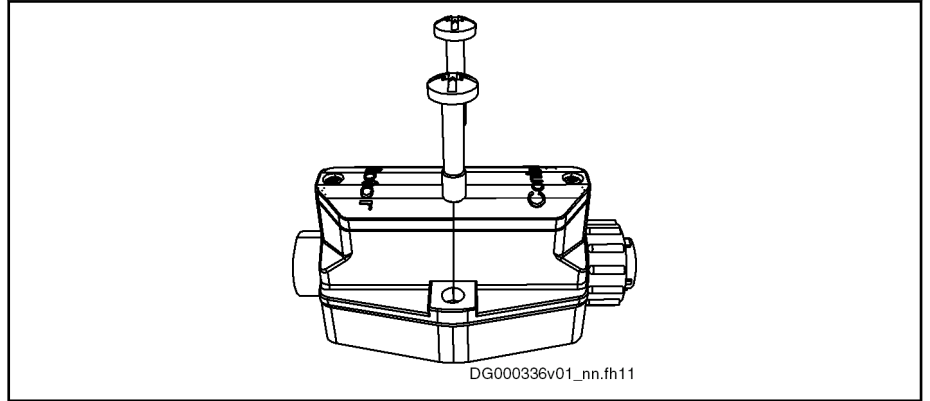



Fig. 8-11: Battery Box

**Battery box** complete with

- **Battery:** Type: ER6C, 3.6 V; 1800 mA, lithium; Service life: Up to 10 years, according to load and ambient temperature
- **Mounting screws:** M6×30; Screw head: Torx and slot

The battery box "SUP-E01-MSM-BATTERYBOX" is supplied in ready-for-operation status with battery.

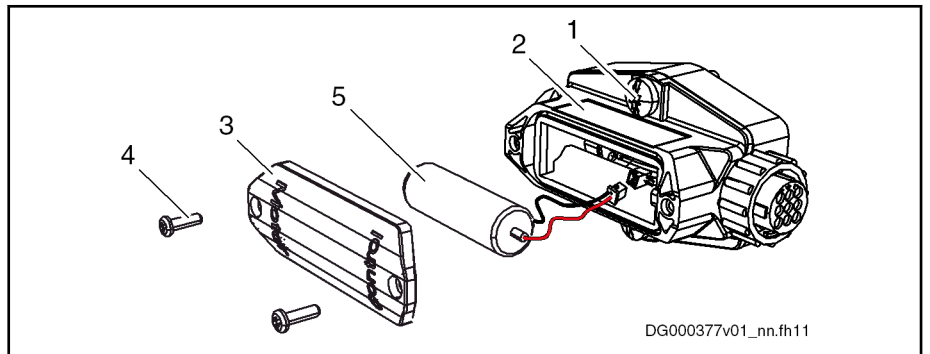Parts:



- |   |  |
|---|--|
| 1 | Mounting screw   |
| 2 | Housing  |
| 3 | Housing cover  |
| 4 | Housing cover screw (self-shaping screw 30×10; tightening torque 0.8 Nm) |
| 5 | Battery  |

Fig. 8-12: Parts of the Battery Box

## Cables, Accessories, Additional Components

## Dimensions

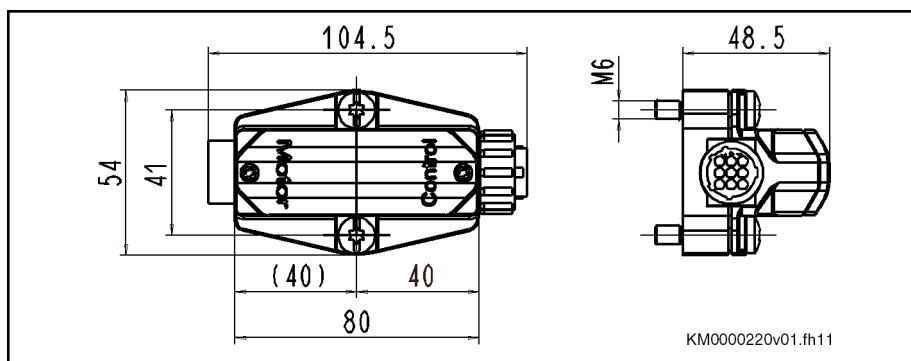


Fig. 8-13: Dimensions

Weight 120 g

## Mounting



Mount the battery box as near as possible to the motor (maximum distance: 2 m).


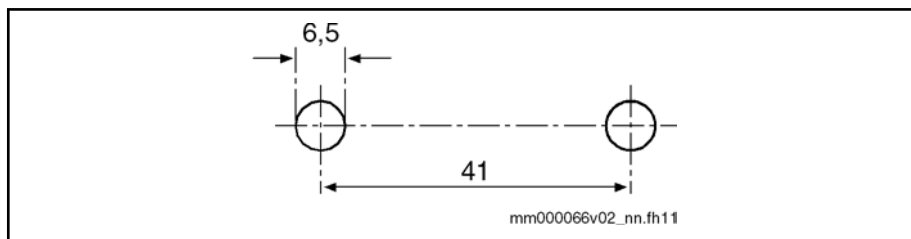


Fig. 8-14: Boring Diagram for Battery Box

- Mounting screws: M6×30
- Tightening torque  $M_A$ : 3 Nm

## Cabling

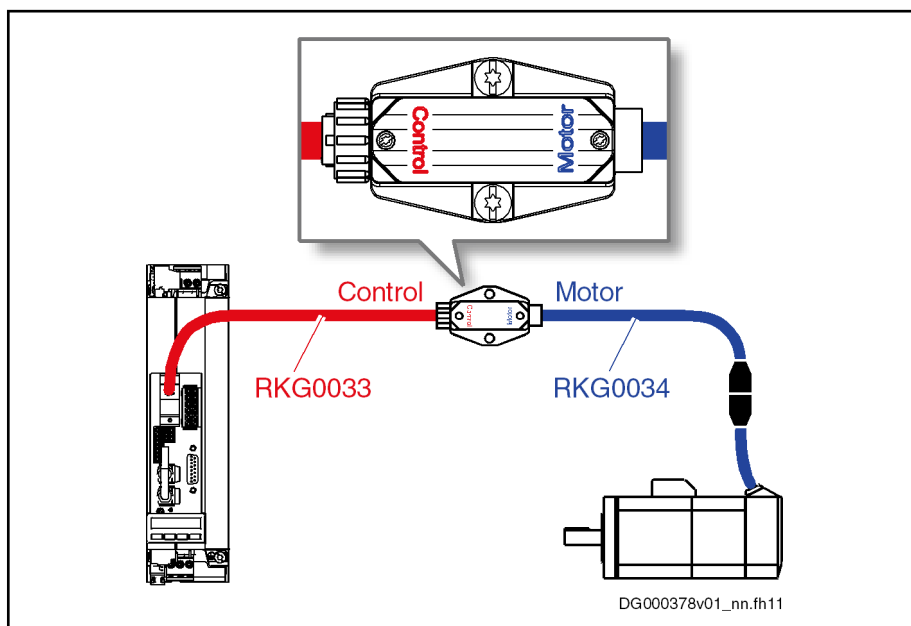

RKG0033 Encoder cable  
RKG0034 Extension cable (optional)

Fig. 8-15: Cabling of the Battery Box

## 8.2.4 Battery and Refresh Resistor (SUP-E03-DKC\*CS-BATTERY)

**Use** The **battery** is used as a replacement battery for the battery box "SUP-E01-MSM-BATTERYBOX".

The **refresh resistor** is used to prepare the battery before the battery is used in the battery box "SUP-E01-MSM-BATTERYBOX".

### Content

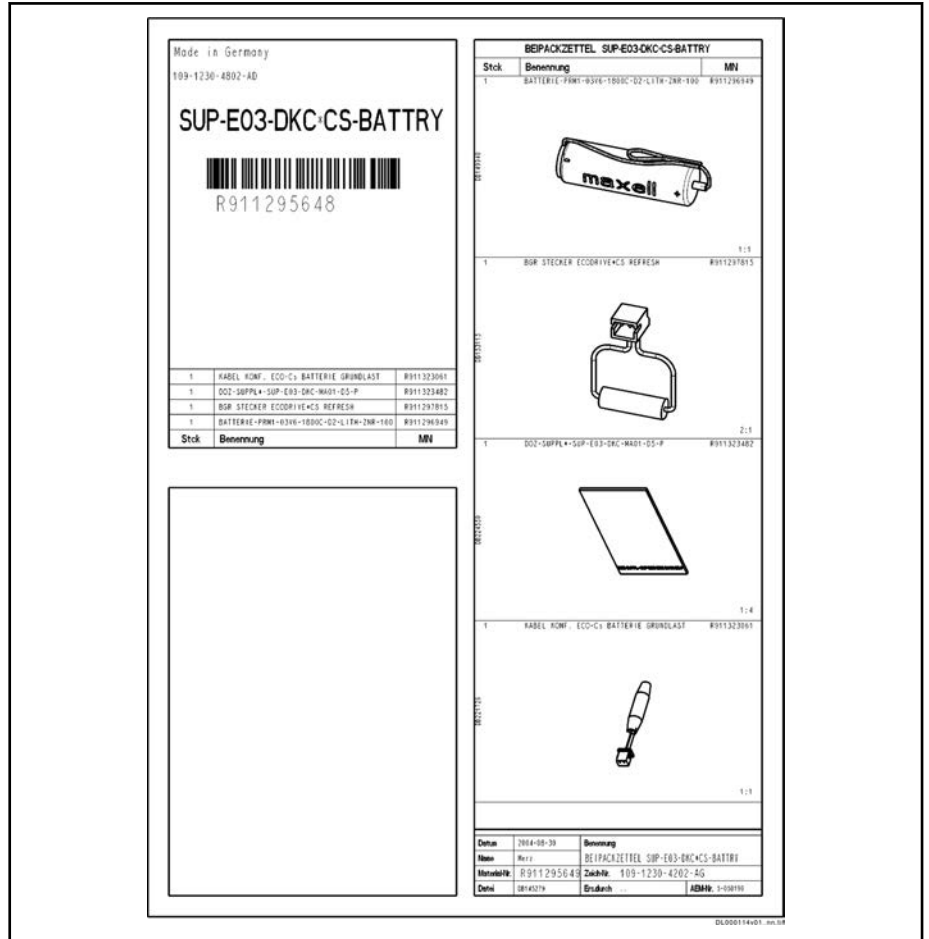



Fig. 8-16: SUP-E03-DKC\*CS-BATTERY - Product Insert

<b>Battery</b>	Type: ER6C, 3.6 V; 1800 mA, lithium; Service life: Up to 10 years, according to load and ambient temperature
<b>Refresh resistor</b>	10 ohm; the refresh resistor is used to prepare the battery before the battery is used in the battery box "SUP-E01-MSM-BATTERYBOX".
<b>Documentation (DOZ-SUPPL*-SUP-E03-DKC-MA01-D5-P)</b>	Information in 5 languages on the refresh procedure of the battery and on how to connect the battery and the base load resistor.
<b>Base load resistor</b>	The base load resistor (500 kOhm) is only relevant to <b>EcoDrive Cs</b> drive controllers (when they are operated without the SUP-E01-MSM-BATTERYBOX battery box).

Fig. 8-17: SUP-E03-DKC\*CS-BATTERY - Content

## Cables, Accessories, Additional Components

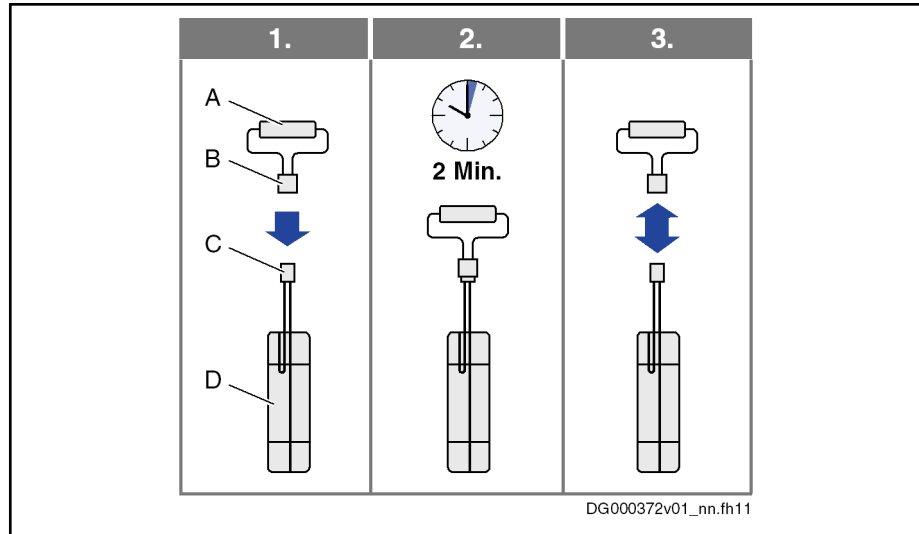**Refresh** Before using a new battery, you must always carry out the so-called "refresh" procedure:



- A Refresh resistor  
B Mating connector  
C Connector  
D Battery

Fig.8-18: Refresh Procedure of the Battery

1. Connect connector of battery to mating connector at refresh resistor.
2. Wait **2 minutes**.
3. Disconnect connector from mating connector.

### Replacing the Battery

In order to maintain the **absolute value encoder position** when the battery is replaced, the following requirements must be fulfilled:

- The **control voltage** at the drive controller has been switched on
- The **encoder** has been connected to the drive controller via the encoder cable

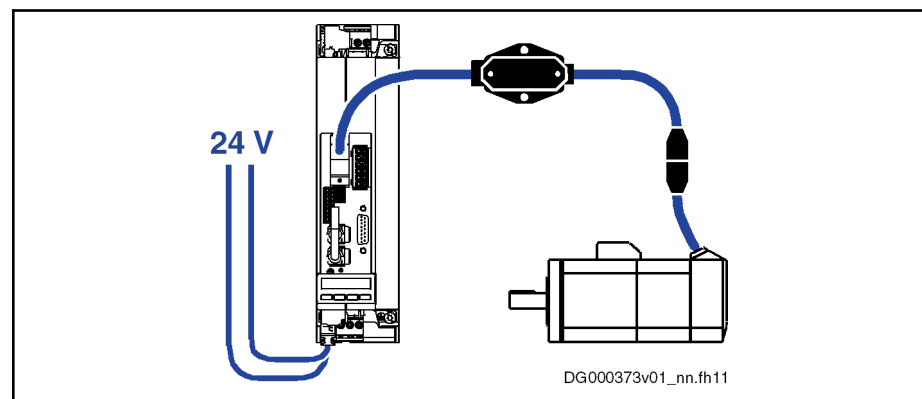


Fig.8-19: Control Voltage Switched On and Encoder Connected

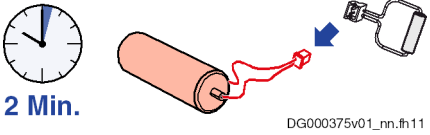
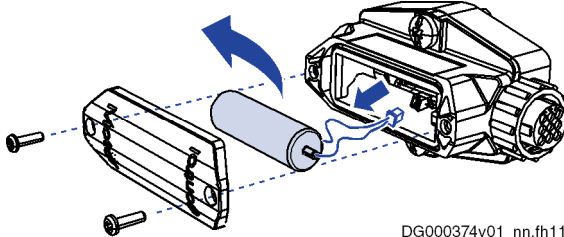


Cables, Accessories, Additional Components



When you replace the battery with the control voltage switched off, the absolute value encoder position and thereby the position data reference of the axis are lost.

Reestablishing the position data reference: See firmware function "Establishing Position Data Reference for Absolute Measuring Systems → "Set Absolute Position" Command"

1.	 <p>DG000375v01_nn.fh11</p>	<ul style="list-style-type: none"><li>• If not yet done, carry out refresh procedure with the new battery.</li></ul>
2.	 <p>DG000374v01_nn.fh11</p>	<ul style="list-style-type: none"><li>• Unscrew cover of battery box.</li><li>• Remove old battery and dispose of it according to directives valid in your country.</li></ul>

## Cables, Accessories, Additional Components

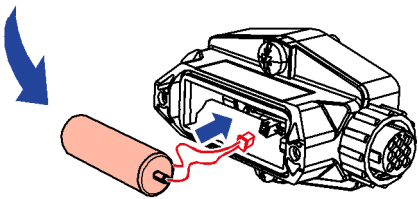
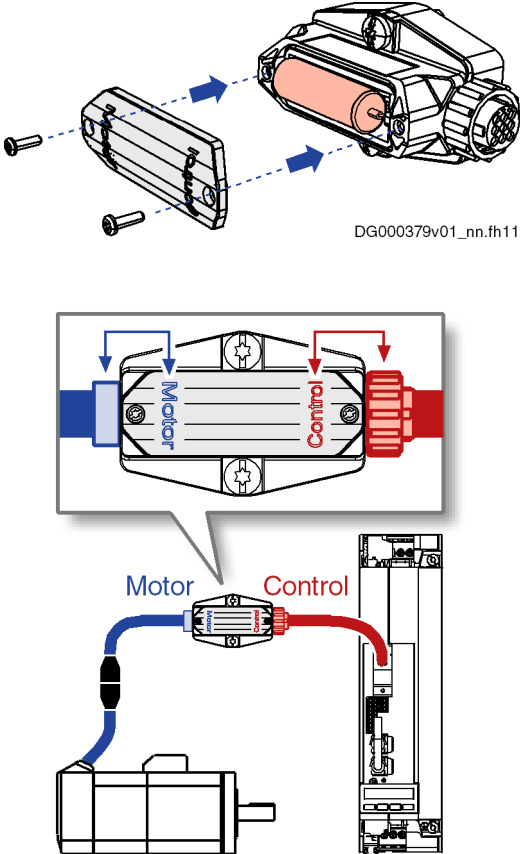
3.	 <p>DG000376v01_nn.fh11</p>	<ul style="list-style-type: none"> <li>• Insert new battery into battery compartment.</li> <li>• Connect connector of battery to mating connector in battery compartment.</li> <li>• Place cable in battery compartment in such a way that cover is flush with battery box when screwed on in the next step.</li> </ul>
4.	 <p>DG000379v01_nn.fh11</p> <p>DG000380v01_nn.fh11</p>	<ul style="list-style-type: none"> <li>• Screw on cover in correct orientation (tightening torque: 0.8 Nm).</li> <li>• Check whether cover fits correctly. Cable in battery compartment mustn't get stuck between cover and battery box. Cover must be flush with battery box at all points.</li> </ul>


Fig.8-20: Replacing the Battery

## 8.2.5 Encoder Cable for MSM Motors with Absolute Value Encoder (RKG0041)
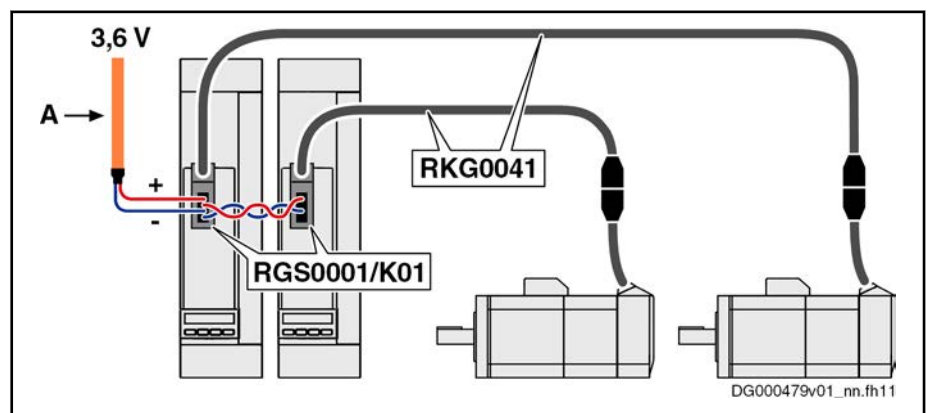
### Use

The encoder cable **RKG0041** (part no.: R911335747) is used to operate MSM motors with absolute value encoder. The encoder cable is connected to the encoder evaluation of the drive controller via a D-Sub connector with integrated 4-pin spring terminal (RGS0001/K01).

A battery or a UPS is connected to the spring terminal so that the encoder data are buffered and the position of the absolute value encoder is retained in case voltage is switched off. For drive controllers arranged side by side, the voltage can be looped through via the spring terminal to the neighboring drive controllers.



3.6 V	Direct voltage source (battery or UPS)
A	Shielded lines; e.g. (2x0.5)C
RKG0041	Encoder cable
RGS0001/K01	D-Sub connector with integrated 4-pin spring terminal
1	

Fig. 8-21: RKG0041 with D-Sub Connector RGS0001/K01

Cables, Accessories, Additional Components

Properties

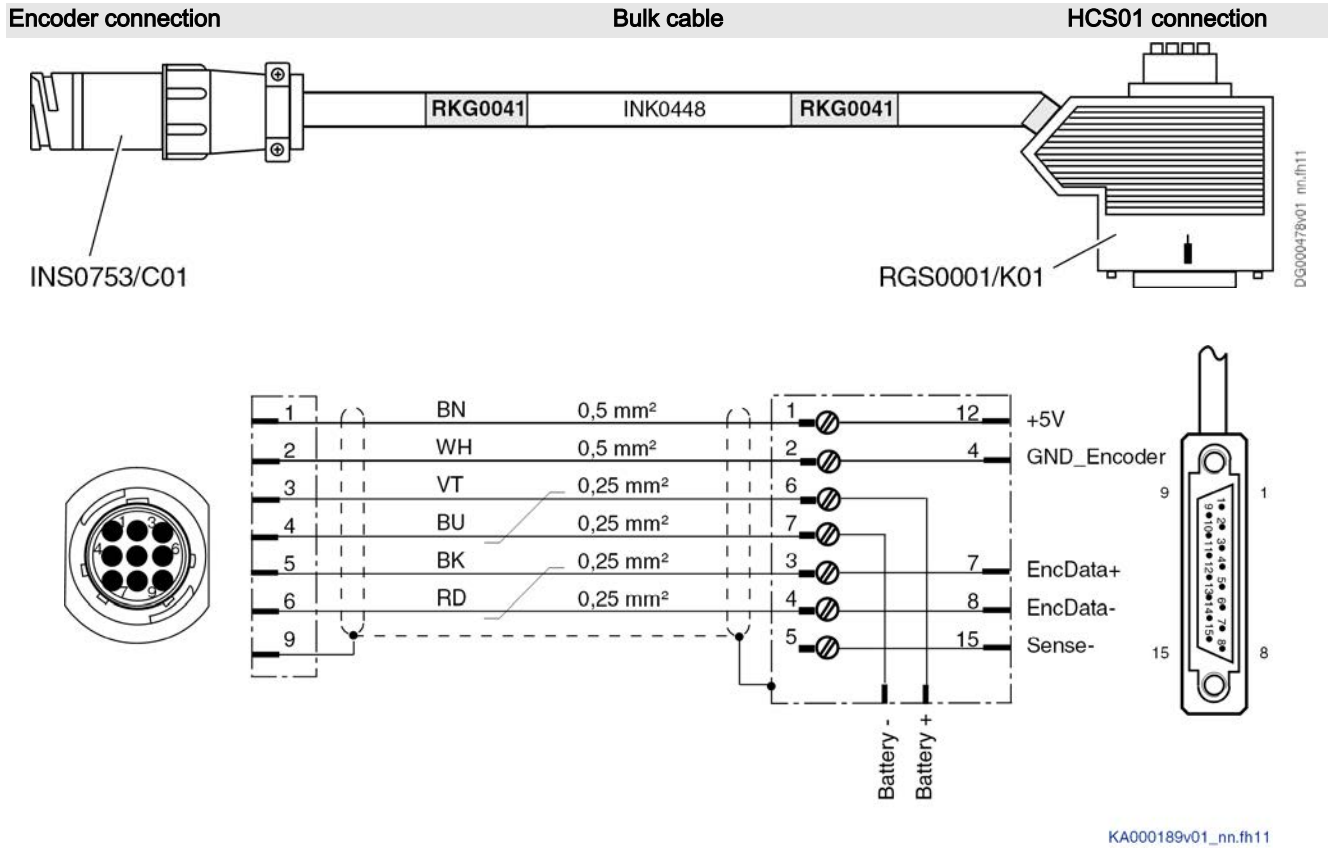


Fig.8-22: RKG0041

**Length** 40 m at most (reason: no Sense line active).

If you need longer encoder cables, use the accessory SUP-E01-MSM-BATTERYBOX.

Spring Terminal

View	Con- nection	Signal name	Function
	+	+3.6V	Voltage input
	+		
	-	0V	Reference potential
	-		
<b>Spring terminal (connector)</b>	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>
<b>Connection cable</b>	mm <sup>2</sup>	0,25	1,5
Stranded wire	AWG	24	16
Stripped length	mm	10	

Fig.8-23: Spring Terminal

## Project Planning

**UPS** DC 3.6 V  $\pm$ 10%; 1 mA

**Battery** 3.6 V; lithium

Lithium batteries are long-life batteries and can be stored for a long time. The required capacity depends on the desired service life of the battery and the number of connected motors. The battery is not included in the scope of supply and must be ordered separately.

- Recommended battery type:  
maxell ER6C; 3.6 V / 1.8 Ah  
(The accessory SUP-E03-DKC\*CS-BATTERY (part no.: R911295648) contains this battery.)
- Alternative battery types:
  - TADIRAN SL760, 3.6 V / 2.1 Ah
  - JAUCH ER17505, 3.6 V / 3.6 Ah
  - JAUCH ER34615 3.6 V / 19 Ah



To be observed for transport:

The alternative battery types have a relatively high content of lithium and are hazardous material Class 9.

**Selecting the Battery Capacity** 1.8 Ah per drive

The base load resistance in the D-Sub connector has been adjusted to this battery capacity. The service life of the battery depends on the switch-on and switch-off times of the drive and with a battery capacity of 1.8 Ah it is approx. 2 to 10 years.

Battery current per drive (encoder current + base load current):

- Drive Off: Approx. 70  $\mu$ A
- Drive On: Approx. 10  $\mu$ A

**Battery Base Load and Battery Capacity**

The D-Sub connector contains a base load resistance of 499 k $\Omega$ . The base load resistance causes a standby current of 7  $\mu$ A which must flow with 3.6 V / 1.8 Ah for a lithium battery. This avoids premature aging of the battery and a relatively long service life.

If you use a bigger battery (> 1.8 Ah) at one D-Sub connector only, connect an external resistor at the 4-pin spring terminal so that a higher standby current flows.

How to calculate the external resistance ( $R_{\text{ext}}$ ):

$$R_{\text{ext}} = 3.6 \text{ V} / I_{\text{ext}}$$

$$I_{\text{ext}} = [\text{battery capacity} / 1.8 \text{ Ah}] \times 7 \mu\text{A} - (7 \mu\text{A} \times \text{number\_connectors})$$

*Examples*

- 1 D-Sub connector + battery 1.8 Ah  $\Rightarrow$   
No additional base load resistance required

## Cables, Accessories, Additional Components

- 1 D-Sub connector + battery 3.6 Ah  $\Rightarrow$   
Additional base load resistance of 499 k $\Omega$  required
- 2 D-Sub connectors + battery 3.6 Ah  $\Rightarrow$   
No additional base load resistance required
- 5 D-Sub connectors + battery 36 Ah  $\Rightarrow$   
Additional base load resistance of 34 k $\Omega$  required

*Calculation*

- $I_{\text{ext}} = [36 \text{ Ah} / 1.8 \text{ Ah}] \times 7 \mu\text{A} - (7 \mu\text{A} \times 5) = 105 \mu\text{A}$
- $R_{\text{ext}} = 3.6 \text{ V} / 105 \mu\text{A} = 3.6 \text{ V} / 0.000105 \text{ A} = 34 \text{ k}\Omega$



The examples contain guide values for the base load resistance. The required base load resistance cannot be calculated by means of the capacity for every lithium battery.

A lithium battery with a 5-fold higher capacity might possibly require not more than a 3-fold higher base load current. If you use other batteries than ER6C (1800 mAh), ask the battery manufacturer for the required base load current.

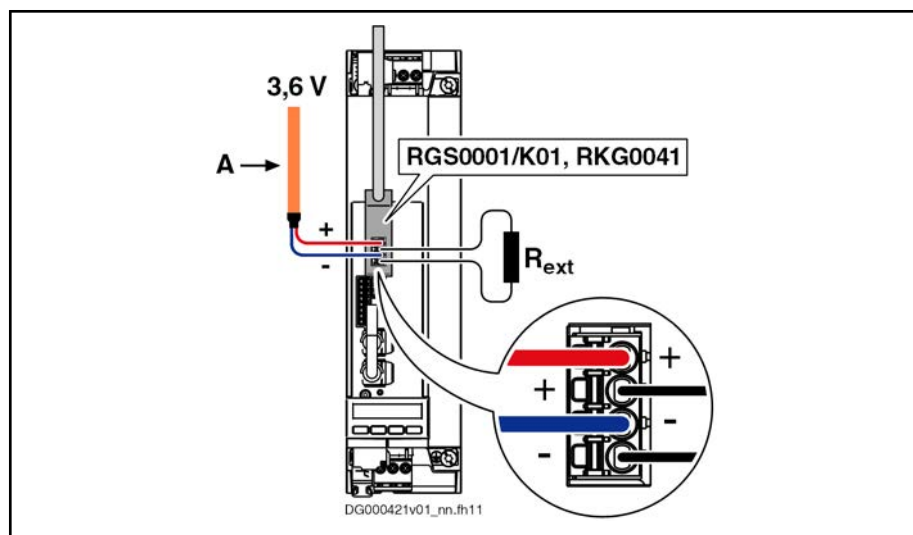
## Installation

## Connecting the Battery / UPS

**⚠ WARNING****Risk of injury by exploding batteries!**

Pay attention to

- the correct polarity when connecting the battery
- the correct dimensioning of the external resistor
- the safety instructions of the battery manufacturer



3.6 V

Direct voltage source (battery or UPS)

A

Shielded lines, e.g. (2x0.5)C; connect shield of cable to the shield connection at the top of the device

 $R_{\text{ext}}$ External resistor: If you use a bigger battery (> 1.8 Ah) at one RGS0001/K01 D-Sub connector only, connect an additional external resistor (value of  $R_{\text{ext}}$ : See "Battery Base Load and Battery Capacity").

Fig. 8-24:

Connecting the Battery / UPS

Cables, Accessories, Additional Components

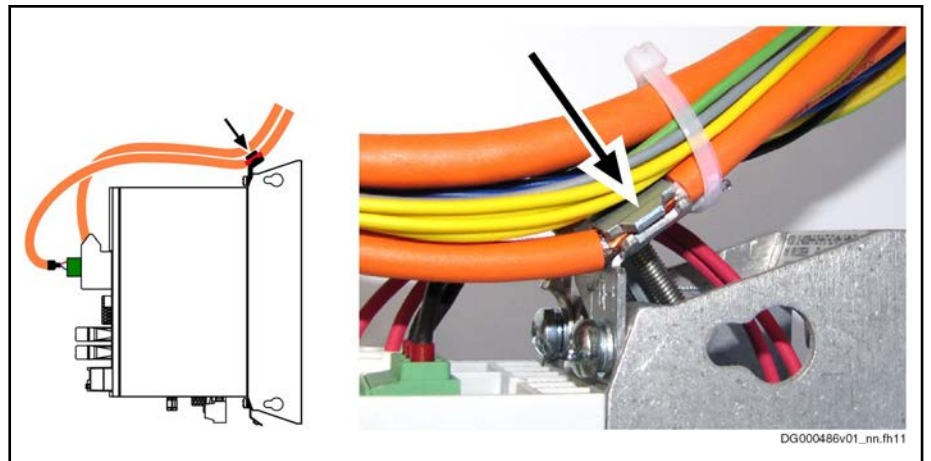


Fig. 8-25: Shield Connection of Shielded Lines at the Top of the Device


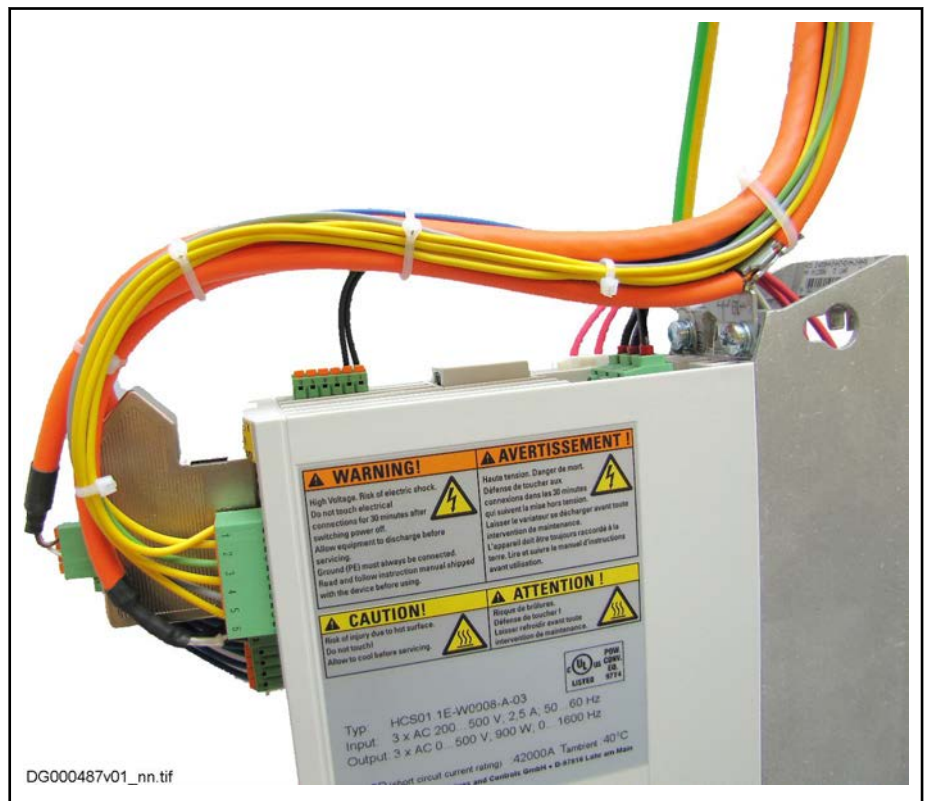


Fig. 8-26: Example of a Complete Wiring

**Fixing the Battery** You can fix the battery to the encoder cable with a cable tie, for example.

## Cables, Accessories, Additional Components
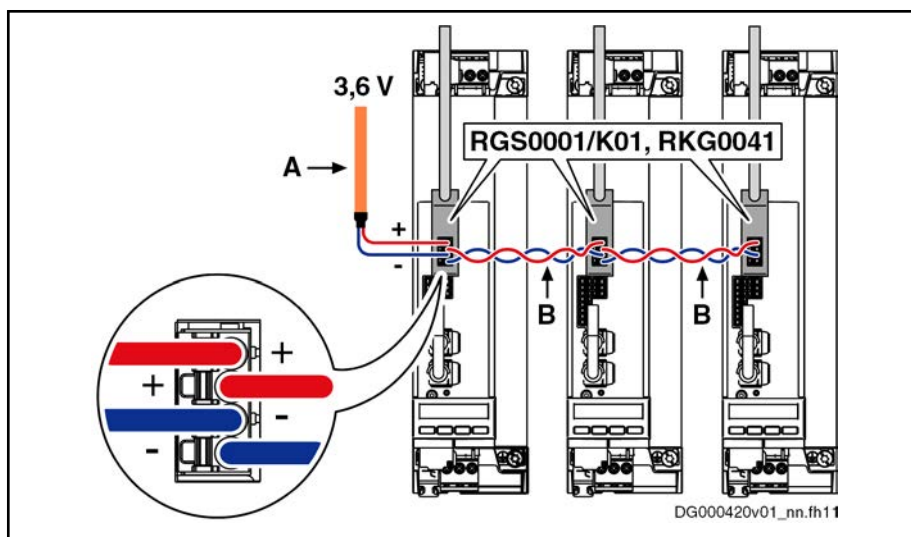
## Looping Through the Voltage



- 3.6 V Direct voltage source (battery or UPS)  
 A Shielded lines, e.g. (2x0.5)C; connect shield of cable to the shield connection at the top of the device  
 B Twisted single wires  
*Fig.8-27: Looping Through the Voltage*

## Replacing the Device

When replacing an HCS01, observe the following aspect:

Leave the 4-pin spring terminal with the connected battery/UPS at the D-Sub connector so that voltage is still applied and the encoder position is retained.



## 8.2.6 D-Sub Connector for Encoder Cable and Battery Connection (RGS0001/K01)




Using our **ready-made encoder cable RKG0041** (part no. R911335747) saves you the time-consuming and error-prone work of assembling your encoder cable.

The RKG0041 encoder cable comes with an RGS0001/K01 D-Sub connector and a correctly wired motor-side encoder connection.

**Use** The accessory **RGS0001/K01** (part no. R911335738) is used to operate MSM motors with absolute value encoders. RGS0001/K01 is a D-Sub connector with an integrated 4-pin spring terminal and an internal terminal connector for encoder cables.

A battery or a UPS is connected to the spring terminal so that the encoder data are buffered and the position of the absolute value encoder is retained in case voltage is switched off.

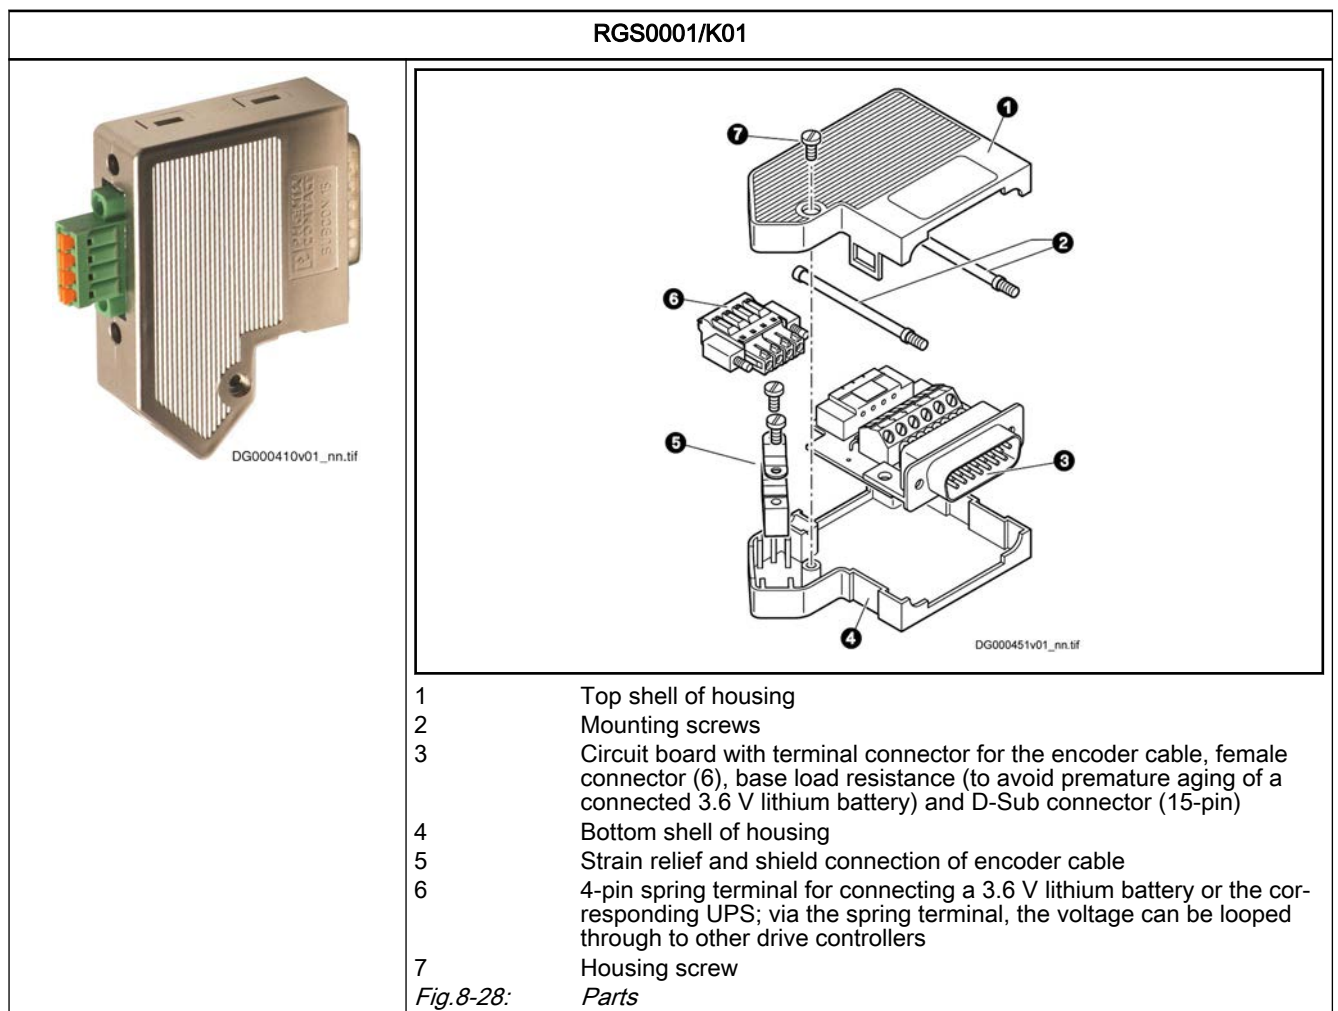

*Fig. 8-29: RGS0001/K01*

## Cables, Accessories, Additional Components



When you connect the RGS0001/K01 connector to an encoder cable, you must assemble the encoder cable accordingly on the motor side:

In accordance with the interconnection diagram, connect the battery wires for motor-side encoder connection in the connector (INS0753/C01).

## Scope of Supply

- RGS0001/K01
- Product insert with information on assembly

## Dimensions

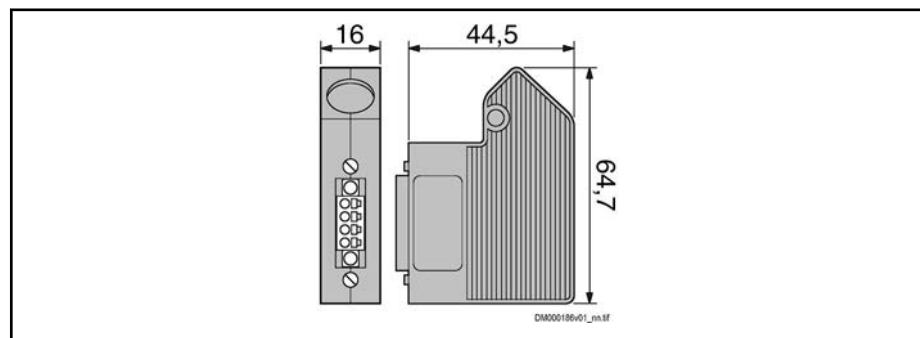


Fig. 8-30: Dimensions

## Interconnection Diagram


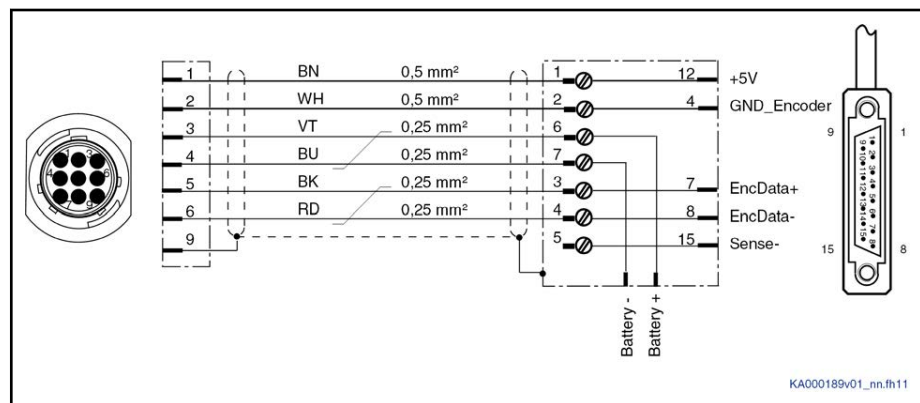


Fig. 8-31: Interconnection Diagram

## Assembly in Conjunction with Cable INK0448

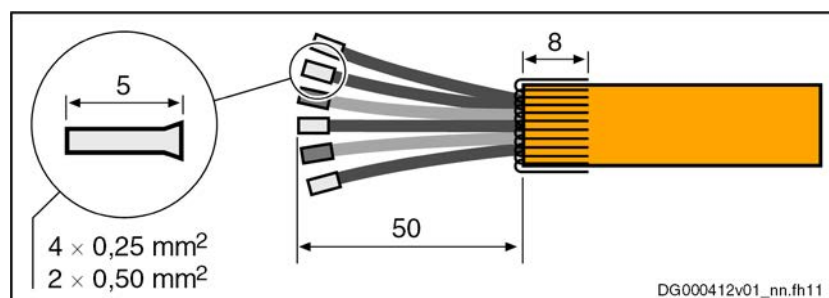1. Assemble cable:



Required ferrules:

- 4 x 0,25 mm<sup>2</sup>

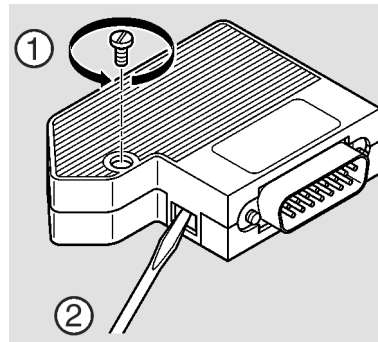
Cables, Accessories, Additional Components

- $2 \times 0.50 \text{ mm}^2$
- Length: 5 mm
- Without plastic collar


Length of inner wires incl. ferrules starting at cable jacket: 50 mm

Fold back shield braid over outer cable jacket, comb it out and cut it to 8 mm.

2. Open housing:




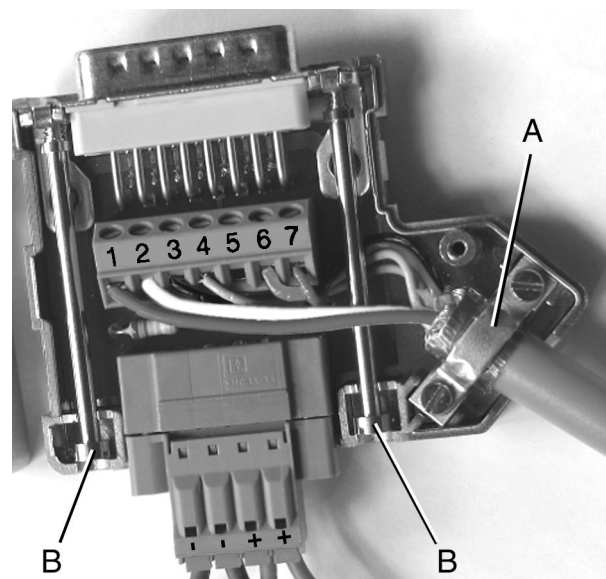- Unscrew housing screw ①.
  - Unlock top shell of housing with screwdriver and open housing ②.
3. Connect cable according to interconnection diagram.
4. Insert circuit board into housing in accordance with desired outgoing direction of encoder cable.



- Put shield braid under clip (A) of strain relief and screw on clip (A).
  - Insert mounting screws (B) and tuck wires away.
5. Close housing:  
Put top shell of housing onto bottom shell of housing, engage it in bottom shell and screw housing screw down.
6. Unless already done:
- By means of appropriate crimping tool, add the two contacts for battery connection.

## Cables, Accessories, Additional Components

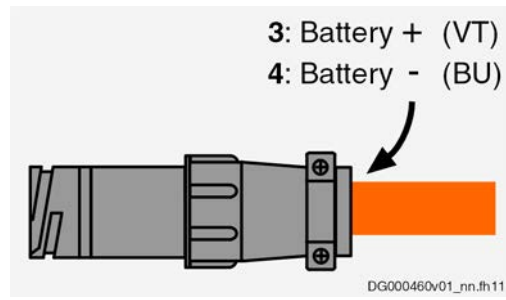


## 8.2.7 Hall Sensor Adapter Box (SHL03.1-NNN-S-NNN)

**Use** The Hall sensor adapter box "SHL03.1-NNN-S-NNN" (part number: R911335257) is used to operate linear MCL motors. The Hall sensor adapter box processes signals of the following systems:

- Digital Hall sensor
- Length measuring system

The Hall sensor adapter box transmits the signals for encoder evaluation to the drive controller.

The housing is made of sheet steel and has the degree of protection IP20.

 For detailed information on linear MCL motors, see the documentation "Rexroth IndraDyn L, Coreless Linear Motors MCL" (R911330592).

### Dimensions

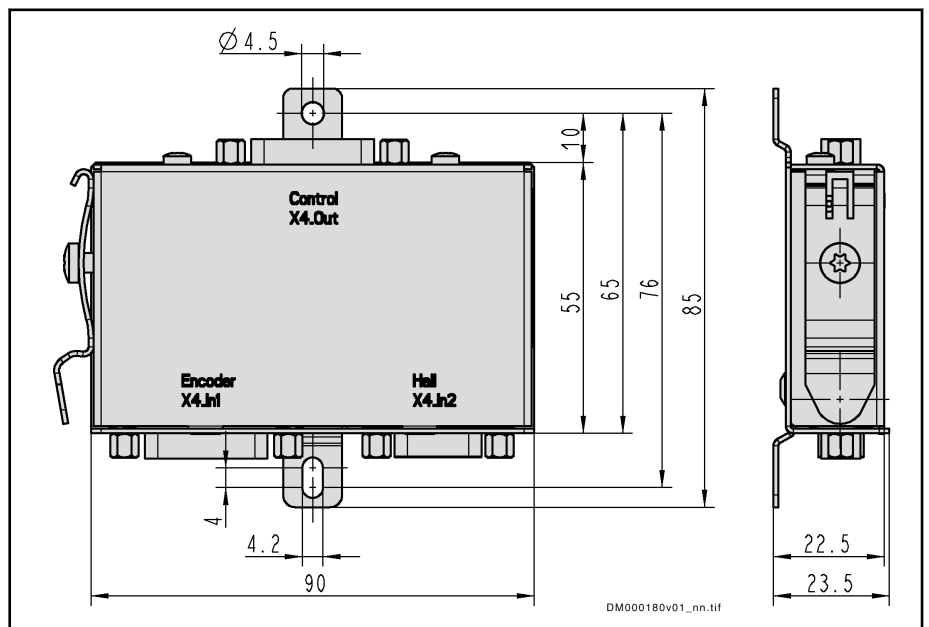


Fig. 8-32: Dimensions

**Mounting** Options for mounting:

- Top-hat rail (TH 35-7.5 according to EN 60715)
- With 2 screws (M4) to the mounting surface; select the appropriate screw type and length for the mounting surface

The mounting position can be selected as desired.

## Cables, Accessories, Additional Components

## Connection Points

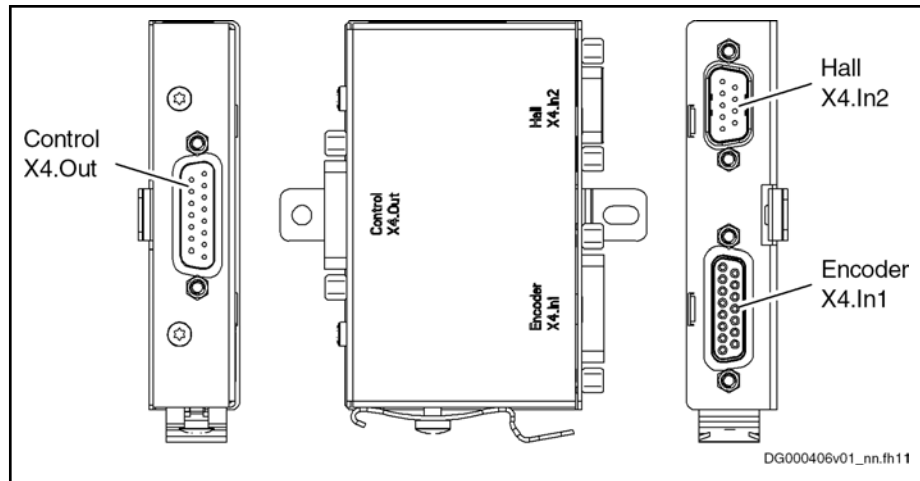


Fig. 8-33: Connection Points

## Encoder X4.In1

View	Identification	Function	
<p>DA000053v01_nn.FH9</p>	Encoder X4.In1	Encoder connection	
<b>D-Sub, 15-pin, female</b>	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>
<b>Connection cable</b> Stranded wire	mm <sup>2</sup>	0,25	0,5

Fig. 8-34: Function, Pin Assignment, Properties

Connection	Signal	Function
1	GND_shld	Connection signal shields (inner shields)
2	A+	Track A positive
3	A-	Track A negative
4	GND_Encoder	Reference potential for power supplies
5	B+	Track B positive
6	B-	Track B negative
7	n. c.	
8	n. c.	
9	R+	Reference track positive
10	R-	Reference track negative

Cables, Accessories, Additional Components

Connection	Signal	Function
11	+12V	Encoder supply 12 V
12	+5V	Encoder supply 5V
13	n. c.	
14	n. c.	
15	Sense	Return of reference potential (Sense line)
Connector housing		Overall shield

Fig. 8-35: Pin Assignment

Hall X4.In2

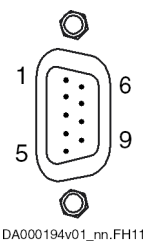
View	Identification	Function	
 <p>DA000194v01_nn.FH11</p>	Hall X4.In2	Hall sensor connection	
<b>D-Sub 9-pin, male</b>	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>
<b>Connection cable</b> Stranded wire	mm <sup>2</sup>	0,25	0,5

Fig. 8-36: Function, Pin Assignment, Properties

Connection	Signal	Function
1	+12 V	Power supply
2	S1	Hall sensor signal 1
3	GND	Reference potential for power supply
4	S2	Hall sensor signal 2
5	GND	Reference potential for power supply
6	GND	Reference potential for power supply
7	GND	Reference potential for power supply
8	S3	Hall sensor signal 3
9	GND	Reference potential for power supply
Connector housing		Overall shield

Fig. 8-37: Pin Assignment

## Cables, Accessories, Additional Components

## Control X4.Out

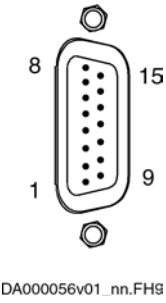
View	Identification	Function	
 <p>DA000056v01_nn.FH9</p>	Control X4.Out	Connection for encoder evaluation of drive controller	
<b>D-Sub 15-pin, male</b>	<b>Unit</b>	<b>Min.</b>	<b>Max.</b>
<b>Connection cable</b> Stranded wire	mm <sup>2</sup>	0,25	0,5

Fig.8-38: Function, Pin Assignment, Properties


Connection	Signal	Function
1	GND_shld	Connection signal shields (inner shields)
2	A+	Track A analog positive
3	A-	Track A analog negative
4	GND_Encoder	Reference potential for power supplies
5	B+	Track B analog positive
6	B-	Track B analog negative
7	Data_Hall+	Data transmission Hall sensor signal positive
8	Data_Hall-	Data transmission Hall sensor signal negative
9	R+	Reference track positive
10	R-	Reference track negative
11	+12V	Encoder supply 12 V
12	+5V	Encoder supply 5V
13	CLK_Hall+	Clock Hall sensor signal positive
14	CLK_Hall-	Clock Hall sensor signal negative
15	Sense-	Return of reference potential (Sense line)
Connector housing		Overall shield

Fig.8-39: Pin Assignment



Cables, Accessories, Additional Components

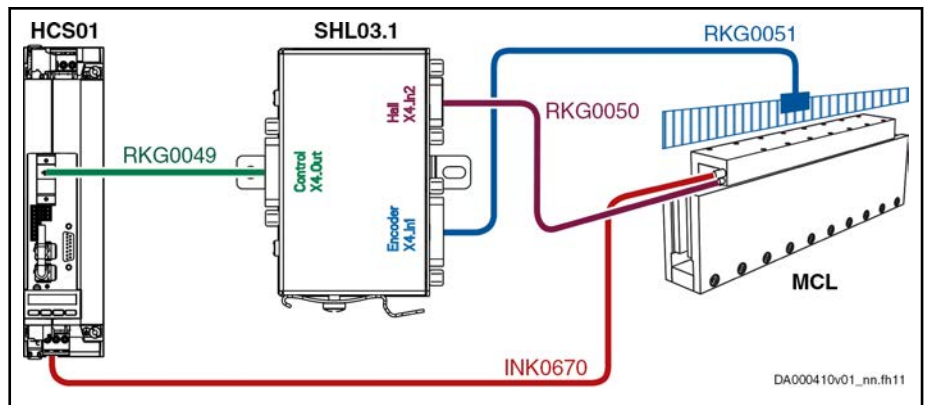Cables



- INK0670 Motor power cable; length: max. 75 m
- RKG0049 Hall sensor adapter box (Control X4.Out) ↔ Encoder evaluation at drive controller (X4, X8); length: max. 75 m
- RKG0050 Digital Hall sensor ↔ Hall sensor adapter box (Hall X4.In2); length: max. 30 m
- RKG0051 Length measuring system ↔ Hall sensor adapter box (Encoder X4.In1); length: max. 30 m

Fig. 8-40: Cables

Interconnection Diagram  
 RKG0049

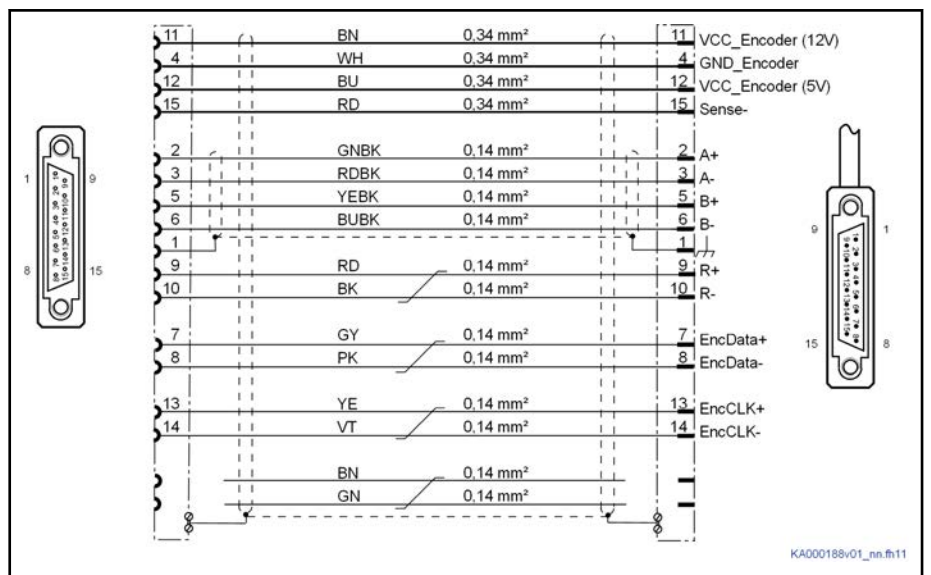


Fig. 8-41: RKG0049

Interconnection Diagram  
 RKG0050

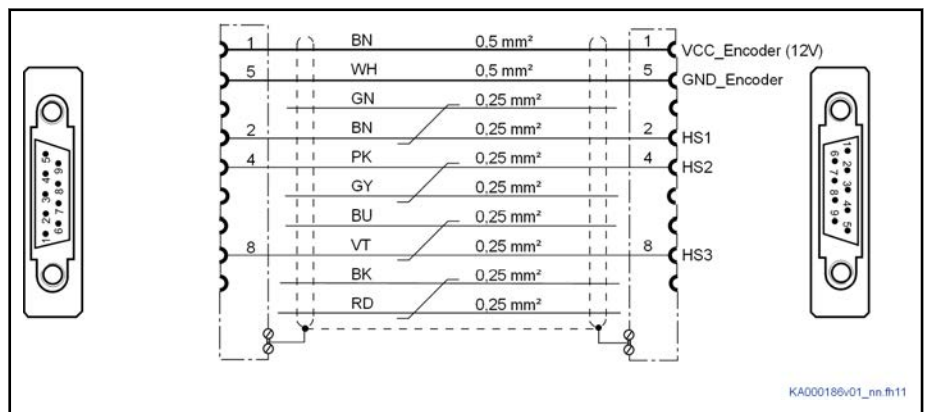


Fig. 8-42: RKG0050

## Cables, Accessories, Additional Components

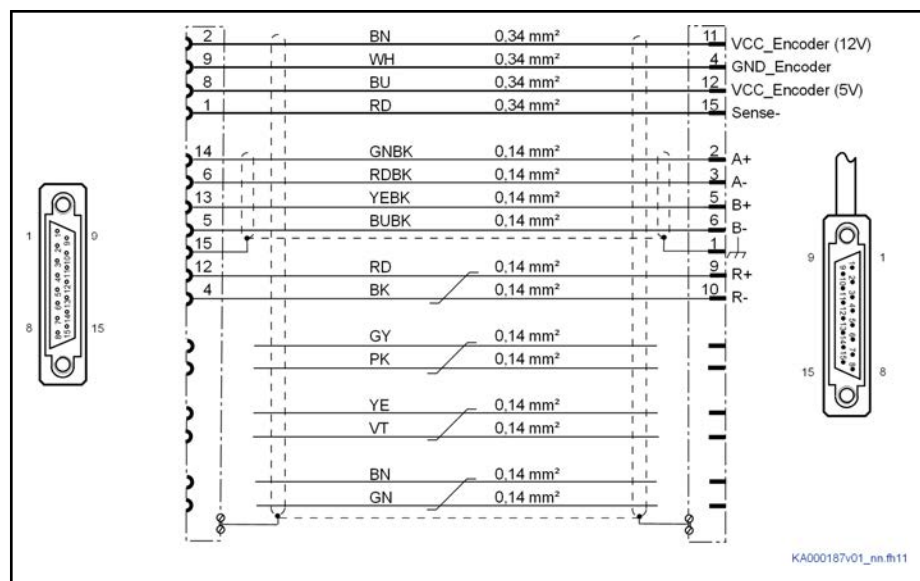
Interconnection Diagram  
RKG0051

Fig.8-43: RKG0051

## 8.3 Additional Components

## 8.3.1 Transformers

## General Information

Transformers are only needed when the mains voltage is outside of the allowed nominal voltage of the drive controller.

**Grounded Mains** For grounded mains, the mains voltage is adjusted to the nominal voltage of the device by means of **autotransformers** which have been sized for a **specific output voltage range**.

**Ungrounded Mains** For voltage adjustment of ungrounded mains, always connect **isolating transformers** to prevent overvoltages between outer conductor and ground.

## Autotransformers for Drive Controllers

### Types


Abbrev. Column	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0
Example:	T	R	A	F	O		D	S	T		•	4	,	0	0	/	L	/	3	8	0	,	4	1	5	,	4	4	0	-	2	2	0				1	0	M	M
<b>1. Object</b>																																								
1.1	Transformer . . . . = TRAF0																																							
<b>2. Product</b>																																								
2.1	DST . . . . . = DST																																							
<b>3. Nominal power</b>																																								
3.1	2.0 kVA . . . . . = •2,00																																							
3.2	2.5 kVA . . . . . = •2,50																																							
3.3	4.0 kVA . . . . . = •4,00																																							
3.4	5.0 kVA . . . . . = •5,00																																							
3.5	7.5 kVA . . . . . = •7,50																																							
3.6	10.0 kVA . . . . . = 10,00																																							
3.7	12.5 kVA . . . . . = 12,50																																							
3.8	15.0 kVA . . . . . = 15,00																																							
3.9	18.0 kVA . . . . . = 18,00																																							
3.10	20.0 kVA . . . . . = 20,00																																							
3.11	25.0 kVA (for vertical mounting <b>only</b> ) . . . . . = 25,00																																							
3.12	35.0 kVA (for vertical mounting <b>only</b> ) . . . . . = 35,00																																							
3.13	50.0 kVA (for vertical mounting <b>only</b> ) . . . . . = 50,00																																							
<b>4. Construction (design)</b>																																								
4.1	Suitable for mounting into IP55 housing . . . . . = G																																							
4.2	Horizontal mounting . . . . . = L																																							
4.3	Vertical mounting . . . . . = S																																							
<b>5. Nominal input voltage (phase-phase)</b>																																								
5.1	e.g., AC 380 V, AC 415 V, AC 440 V . . . . . = 380, 415, 440																																							
<b>6. Nominal output voltage (phase-phase)</b>																																								
6.1	e.g., AC 230 V . . . . . = 220																																							
<b>7. Special design</b>																																								
7.1	Does not apply to standard transformers.																																							
7.2	Frequency: e.g., 100 Hz . . . . . = 100HZ																																							
7.3	Max. line diameter: e.g., 10 mm <sup>2</sup> . . . . . = 10MM																																							
7.4	Degree of protection: e.g., IP23, in protective housing ST0 . . . . . = IP23																																							
7.5	Nema type . . . . . = NEMA																																							
7.6	UL standard . . . . . = UL-N																																							
<b>8. Standard reference</b>																																								
	<u>Standard</u>	<u>Title</u>	<u>Edition</u>																																					
	DIN EN 60529	Degrees of protection provided by enclosures (IP code)	2000-09																																					
		(IEC 60529:1989 + A1:1999); German version																																						
		EN 60529:1991 + A1:2000																																						
<b>Note:</b>																																								
	• = Field does not apply																																							
																															<b>Illustration example: DST</b>									
																																								
	DT000027v01_en.FH11																																							

Fig. 8-44: Type Code DST

Cables, Accessories, Additional Components
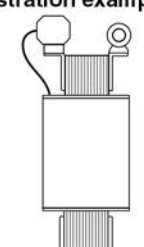
### Selected Transformers

Degree of protection IP00

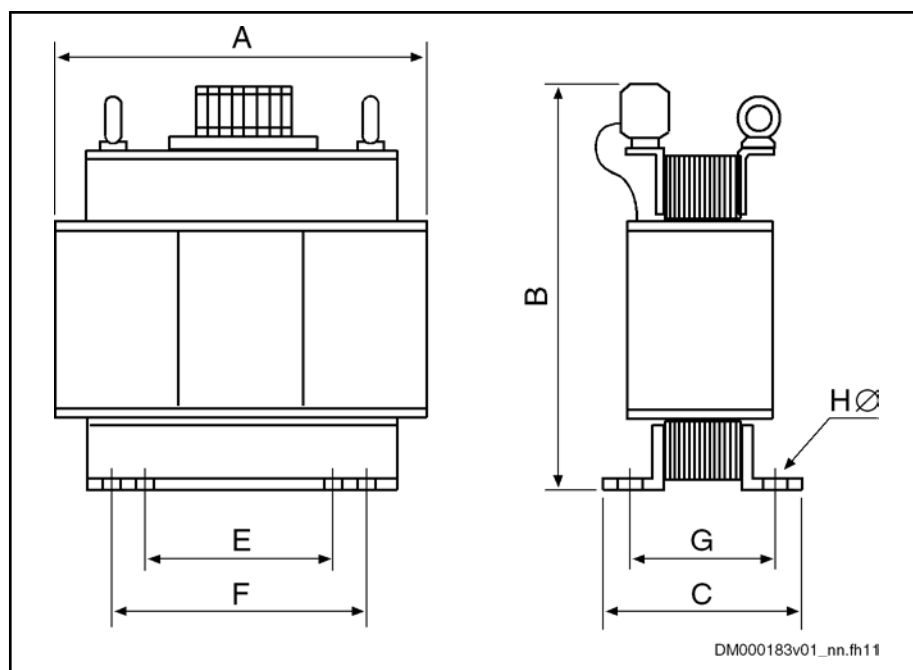


Fig.8-45: Dimensional Drawing

kVA / type of construction / nominal input voltage - nominal output voltage (Part number)	A	B	C	E	F	V	HØ	Terminal connector [mm <sup>2</sup> ]	Weight [kg]
2.00 / S / 380,400,415,440 - 220 (R911226187)	205	210	120	95	145	85	7×15	4	12
15.00 / S / 400,460 - 220 (R911255074)	360	395	190	170	250	160	11×18	16	62
35.00 / S / 380,415 - 220 (R911226907)	420	450	245	190	280	200	14×26	35	125
50.00 / S / 380,415 - 220 (R911236960)	420	450	275	190	280	225	14×26	70	157

Fig.8-46: Data

**Degree of Protection IP55**  
**2.5...5.0 kVA**

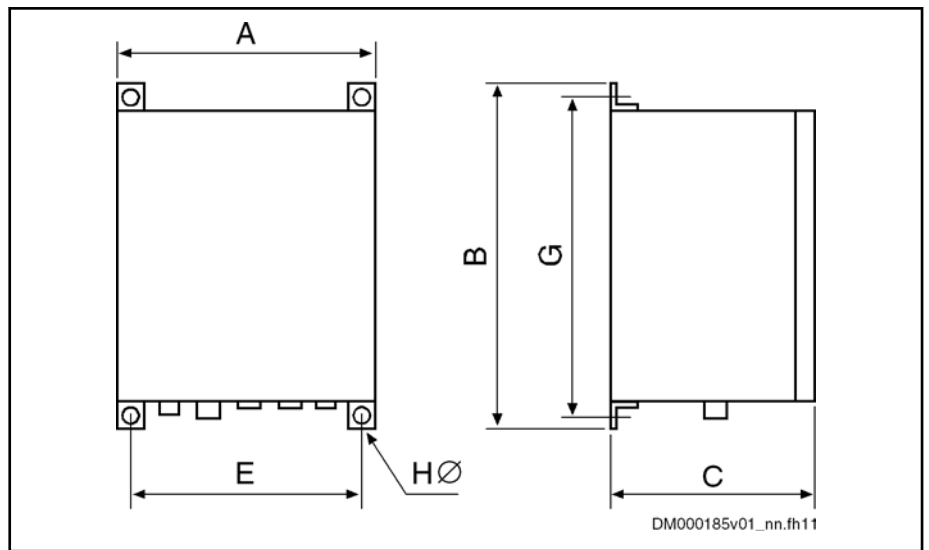


Fig. 8-47: Dimensional Drawing

kVA / type of construction / nominal input voltage - nominal output voltage (Part number)	A	B	C	E	V	HØ	Terminal connector [mm <sup>2</sup> ]	Weight [kg]
2.50 / G / 400,415,440,460 - 230 (R911264345)	300	445	235	250	415	12	4	31
3.00 / G / 400,480,500,525 - 230 (R911269274)	300	445	235	250	415	12	4	31
5.00 / G / 400,415,440,460 - 230 (R911264346)	375	570	235	300	540	12	6	51

Fig. 8-48: Data

## Cables, Accessories, Additional Components

## 10...25 kVA

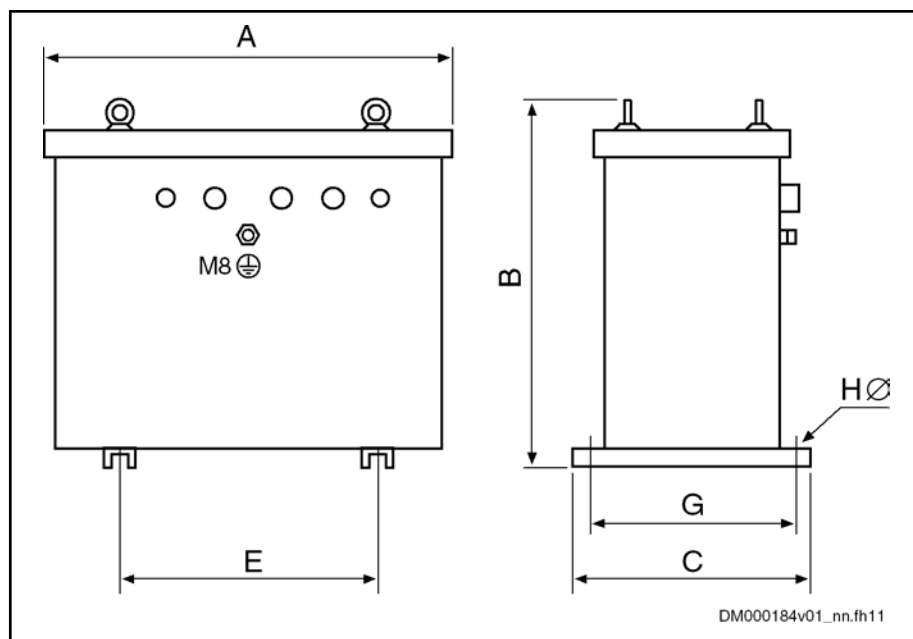


Fig.8-49: Dimensional Drawing

kVA / type of construction / nominal input voltage - nominal output voltage (Part number)	A	B	C	E	V	HØ	Terminal connector [mm <sup>2</sup> ]	Weight [kg]
10.00 / G / 400,415,440,460 - 230 (R911267133)	490	500	400	250	370	16	6	90
10.00 / G / 400,480,500,525 - 230 (R911264347)	490	500	400	250	370	16	6	90
10.00 / G / 400,500,525 - 230 (R911260301)	490	500	400	250	370	16	6	88
15.00 / G / 400,500,525 - 230 (R911260303)	595	600	480	280	440	16	16	143
25.00 / G / 400,415,440,460 - 230 (R911269581)	595	600	480	280	440	16	35	165

Fig.8-50: Data

### 8.3.2 Mains Filters NFD / NFE

#### Type Code NFE / NFD

#### NFE02.1 - Mains Filter, Single-Phase

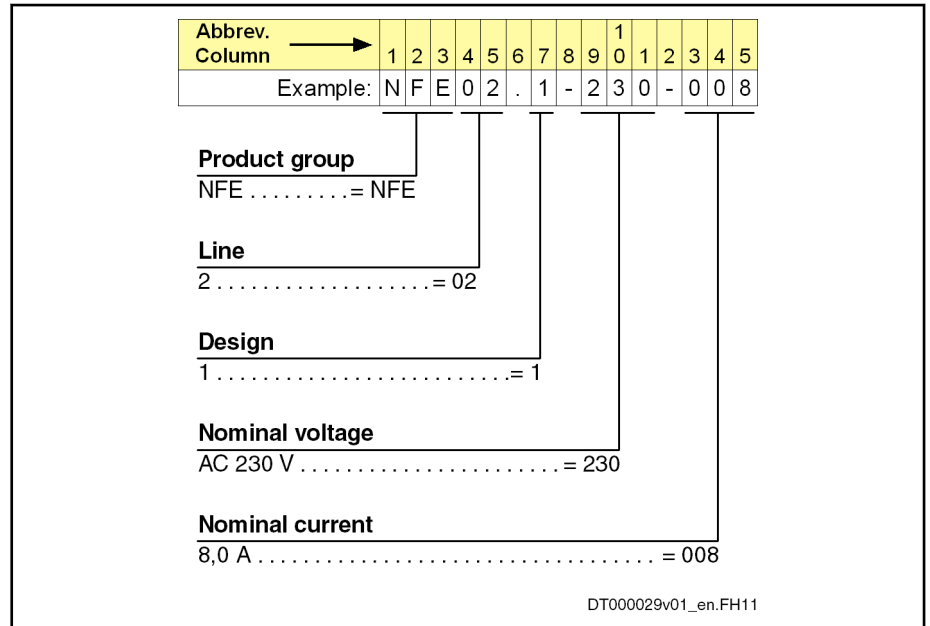


Fig.8-51: Type Code NFE02.1

#### NFD03.1 - Mains Filter, Three-Phase

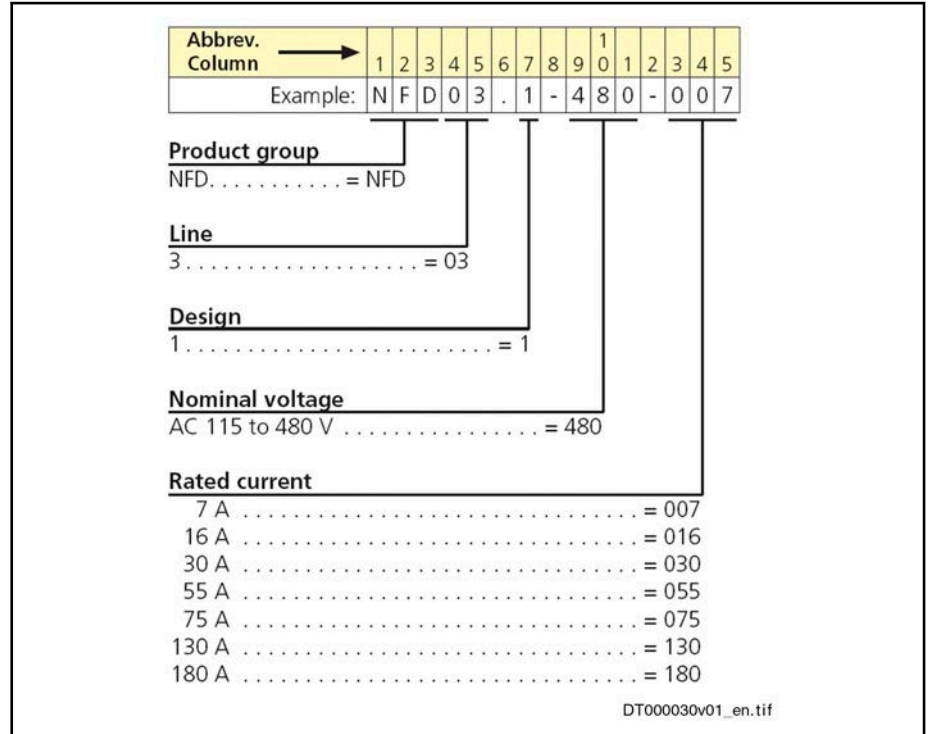
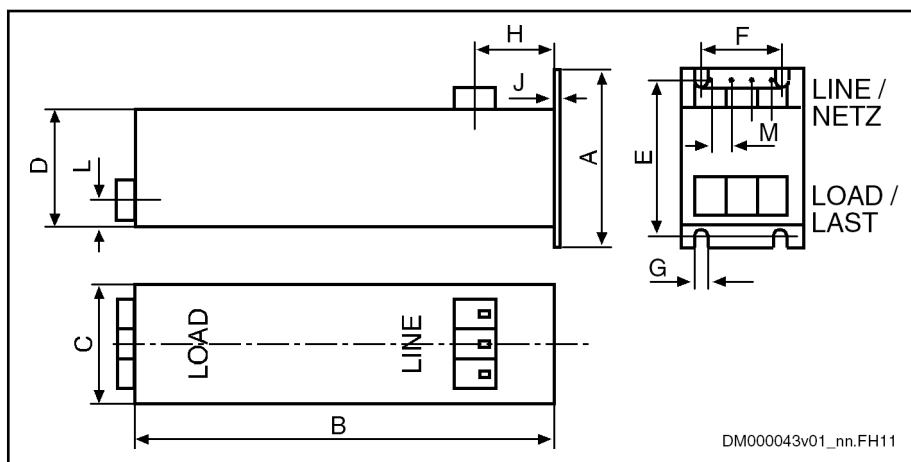


Fig.8-52: Type Code NFD03.1

Cables, Accessories, Additional Components

**Mechanical Data NFE / NFD****NFE02.1**

Type NFE02.1-230-008 (with 3 terminal connectors)  
 Fig.8-53: Single-Phase Filter NFE02.1 for Drives

**Allowed Mounting Positions** Every mounting position is allowed.



**NFD03.1**

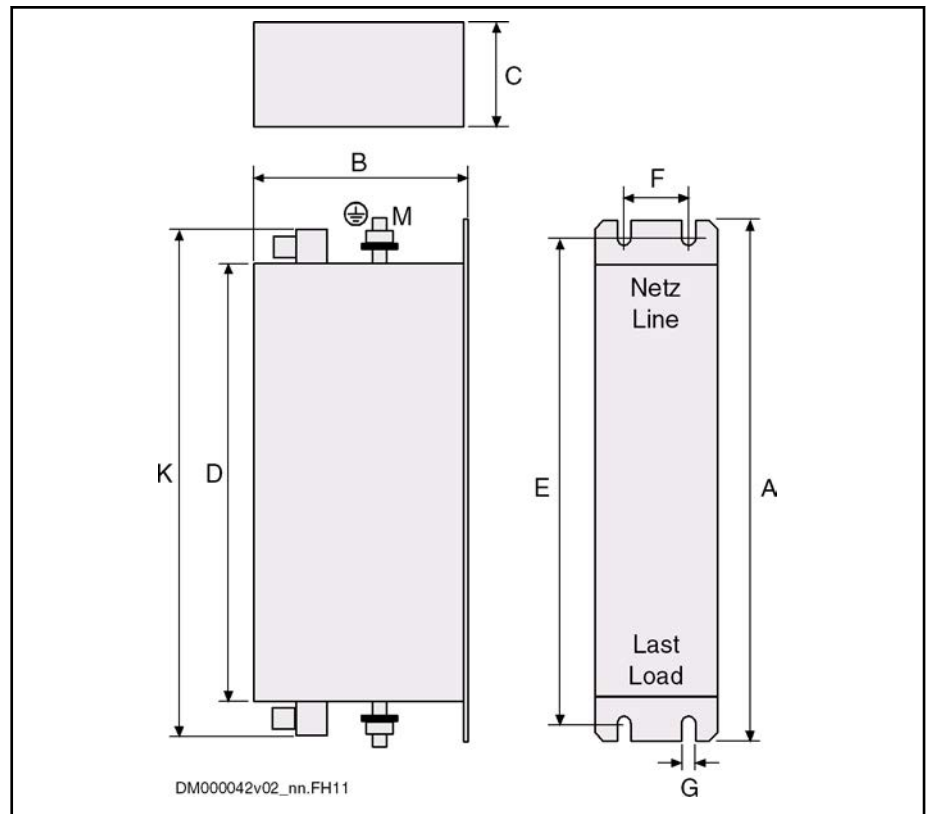


Fig. 8-54: Three-Phase Current Filter NFD03.1 for Drives

Tolerance limits for NFD03.1:

- The dimensions B, C, D, K are maximum values. They can be reduced up to 15 mm.
- The ground studs M can also be arranged horizontally (protruding from the mounting flange), instead of vertically (as illustrated above).

Mains filter type	A	B	C	D	E	F	G	H	J	K	L	M	M <sub>AE</sub>	M <sub>AKI</sub>
NFD 03.1-480-007	190	90	50	160	180	20	5,4	-	-	190	-	M5	2,2	0,8
NFD 03.1-480-016	250	90	55	220	235	25	5,4	-	-	250	-	M5	2,2	0,8
NFD 03.1-480-030	270	100	60	240	255	30	5,4	-	-	270	-	M5	2,2	2
NFD 03.1-480-055	250	105	90	220	235	60	5,4	-	-	260	-	M6	4	2,2
NFD 03.1-480-075	270	145	90	240	255	60	6,5	-	-	280	-	M6	4	4,5
NFD 03.1-480-130	270	160	100	240	255	65	6,5	-	-	330	-	M10	18	8
NFD 03.1-480-180	380	180	130	350	365	102	6,5	-	-	455	-	M10	18	20
NFE 02.1-230-008	90	210	60	60	80	40	5,3	40	0,75	-	15	10	0,8	0,8

M<sub>AE</sub> Maximum tightening torque of the ground stud in Nm

M<sub>AKI</sub> Maximum tightening torque of the terminal in Nm

Fig. 8-55: Dimensions of the Mains Filters NFD/NFE

## Cables, Accessories, Additional Components

## Allowed Mounting Positions

Mounting position	Note
G1	Allowed without restrictions
G2	Allowed without restrictions
G3	Mains filter may only be loaded with 80% of the maximum allowed continuous current
G4	Allowed without restrictions
G5	Mains filter may only be loaded with 80% of the maximum allowed continuous current

Fig. 8-56: Allowed Mounting Positions

## Electrical Data NFE / NFD



## Using mains filters in mains grounded via outer conductor

When using mains filters NFD03 in **mains grounded via outer conductor**, use an isolating transformer between mains and mains filter.

Maximum mains connection voltage of mains 50...60 Hz $U_N$	Nominal mains current $I_{nenn}$ (1)	Number of phases	Mains filter type	Terminal connectors (3)			Power dissipation approx. W	Weight kg	Type of construction
				Flexible [mm <sup>2</sup> ]	Rigid [mm <sup>2</sup> ]	AWG			
In V	In A								
AC 480V +10%	7	3	NFD 03.1-480-007	4 (3)	6 (3)	AWG 12	3,9	0,7	Vertical
AC 480V +10%	16	3	NFD 03.1-480-016	4 (3)	6 (3)	AWG 12	6,4	1,0	Vertical
AC 480V +10%	30	3	NFD 03.1-480-030	10	16	AWG 6	11,9	1,4	Vertical
AC 480V +10%	55	3	NFD 03.1-480-055	16	25	AWG 4	25,9	2,0	Vertical
AC 480V +10%	75	3	NFD 03.1-480-075	25	35	AWG 3	30,4	3,5	Vertical
AC 480V +10%	130	3	NFD 03.1-480-130	50	50	AWG 1/0	38	4,7	Vertical
AC 480V +10%	180	3	NFD 03.1-480-180	95	95	AWG 4/0	61	10	Vertical

Cables, Accessories, Additional Components

Maximum mains connection voltage of mains 50...60 Hz $U_N$	Nominal mains current $I_{Nenn}$ (1)	Number of phases	Mains filter type	Terminal connectors (3)			Power dissipation approx.	Weight	Type of construction
AC 230V +10%	7,5	1	NFE 02.1-230-008	4 (3)	6 (3)	AWG 10	7,2	1,1	Vertical

- NFD Three-phase filter  
 NFE Single-phase filter  
 (1) Mains-side maximum continuous current at 45 °C ambient temperature  
 (2) Only use for interference suppression of the power supply unit NTM  
 (3) For the equipment grounding conductor, connect a conductor cross section of 10 mm<sup>2</sup> by means of terminal pin or ring cable lug


Fig. 8-57: Technical data

<b>Operating frequency</b>	From 0–60 Hz at 45 °C
<b>Power dissipation</b>	Measured 2 or 3 × $RI^2_{Nenn DC}$
<b>Temperature range</b>	-25 ... +85 °C
<b>Overload</b>	$1.5 \times I_{Nenn}$ 1 minute per hour or $4 \times I_{Nenn}$ for 10 s
<b>Effective attenuation</b>	Frequency range 0.15–30 MHz
<b>Saturation behavior</b>	Reduction of filter attenuation by 6 dB at 2.5-fold to 3-fold nominal current
<b>Test voltage</b>	L/N → PE or L → PE: 2000 V, 50 Hz, 2 s at 25 °C L/ N → L: DC 1,100 V, 2 s at 25 °C
<b>Current reduction in the case of overtemperature</b>	See formula for reduction in chapter "Calculations"
<b>Leakage current at 50 Hz</b>	Symmetrical three-phase operation: Typ. 30 mA Single-phase operation or in the case of tripped fuses of a phase: Typ. 175 ... 190 mA
<b>Degree of protection</b>	IP 20

Fig. 8-58: Technical Data


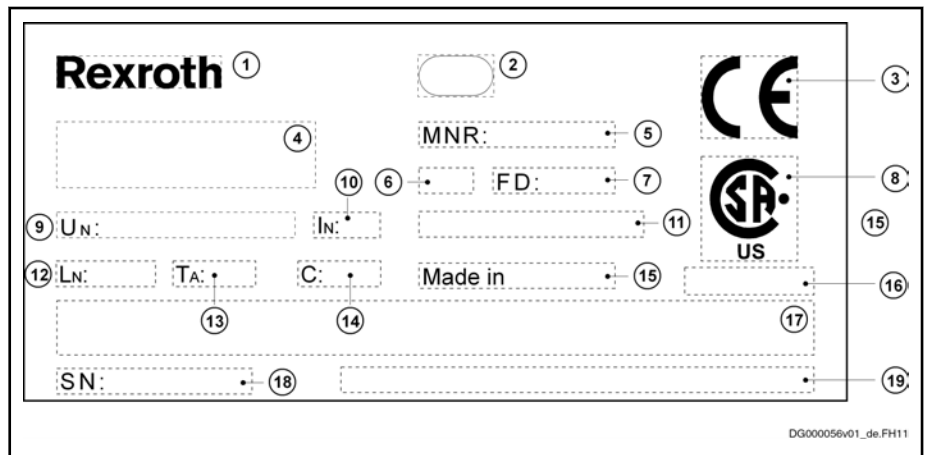
## Type Plate



- |    |  |
|----|--|
| 1  | Word mark  |
| 2  | Business facility number                         |
| 3  | CE label   |
| 4  | Type designation (two lines, 20 characters each) |
| 5  | Part number                                      |
| 6  | Change release                                   |
| 7  | Production date (YYWww)                          |
| 8  | Certification label                              |
| 9  | Nominal voltage / frequency                      |
| 10 | Nominal current                                  |
| 11 | Number of design specification                   |
| 12 | Nominal inductance                               |
| 13 | Temperature                                      |
| 14 | Number and value of additional capacitors        |
| 15 | Designation of origin                            |
| 16 | Approval number                                  |
| 17 | Bar code (39 or 93)                              |
| 18 | Serial number                                    |
| 19 | Company address                                  |

Fig. 8-60: Type Plate

Cables, Accessories, Additional Components

**HNL01.1E - Mains Chokes, Infeeding****Technical Data****Mechanical System and Mounting**

Dimensions Type 1:

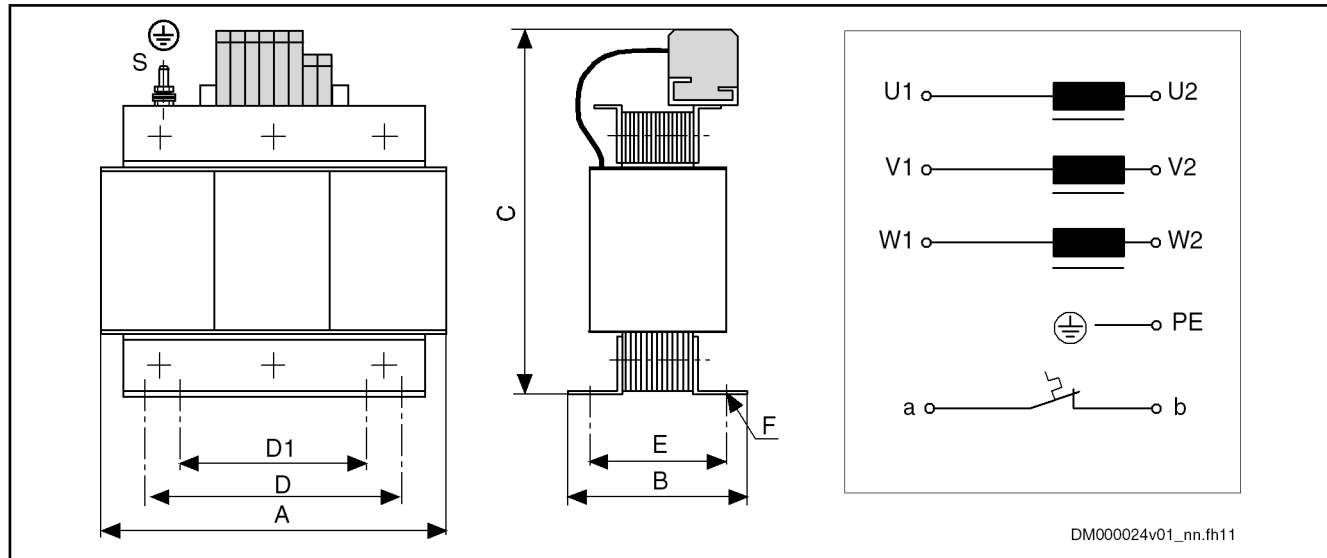


Fig. 8-61: Dimensions Type 1

Mains choke	Type	Dimensions [mm]										Weight [kg]
		A	B	C	D	D1	E	F 1)	G	H	S	
HNL01.1E-1000-N0012-A-500-NNNN	1	120	61	164	81	-	44	6,4 × 11	-	-	M5	2,7
HNL01.1E-0600-N0032-A-500-NNNN	1	150	66,5	185	113	-	49,5	6,4 × 11	-	-	M5	4,5

1) Long hole in "B" direction  
Fig. 8-62: Dimensions, Weight

Mains choke	Connection cross section mm <sup>2</sup> /AWG		Tightening torque Nm	
	U1, V1, W1 U2, V2, W2	a, b	U1, V1, W1 U2, V2, W2	a, b
HNL01.1E-1000-N0012-A-500-NNNN	4	4	Observe the data imprinted on the component.	
HNL01.1E-0600-N0032-A-500-NNNN	10	4		

Fig. 8-63: Connection Cross Section, Tightening Torque

**Basic Data**

Mains choke	U <sub>N</sub> [V]	I <sub>N</sub> [A]	L <sub>N</sub> [μH]	P <sub>V</sub> [W]	I <sub>max</sub> [A]	L <sub>min</sub> At I <sub>max</sub>
HNL01.1E-1000-N0012-A-500-NNNN	500	12	3 × 1000	40	25	50% of L <sub>N</sub>
HNL01.1E-0600-N0032-A-500-NNNN	500	32	3 × 600	75	80	50% of L <sub>N</sub>

Fig. 8-64: Electrical Data

Cables, Accessories, Additional Components

Temperature Contact a, b

Switching capacity	Switching temperature
1 A / AC 250 V DC 24 V	125 °C HNL01.1E mains chokes of type 1 are equipped with a temperature contact (a, b), types 2, 3 and 4 are not.

*Fig. 8-65: Temperature Contact*

Cables, Accessories, Additional Components

### 8.3.4 External Braking Resistors HLR

#### Types

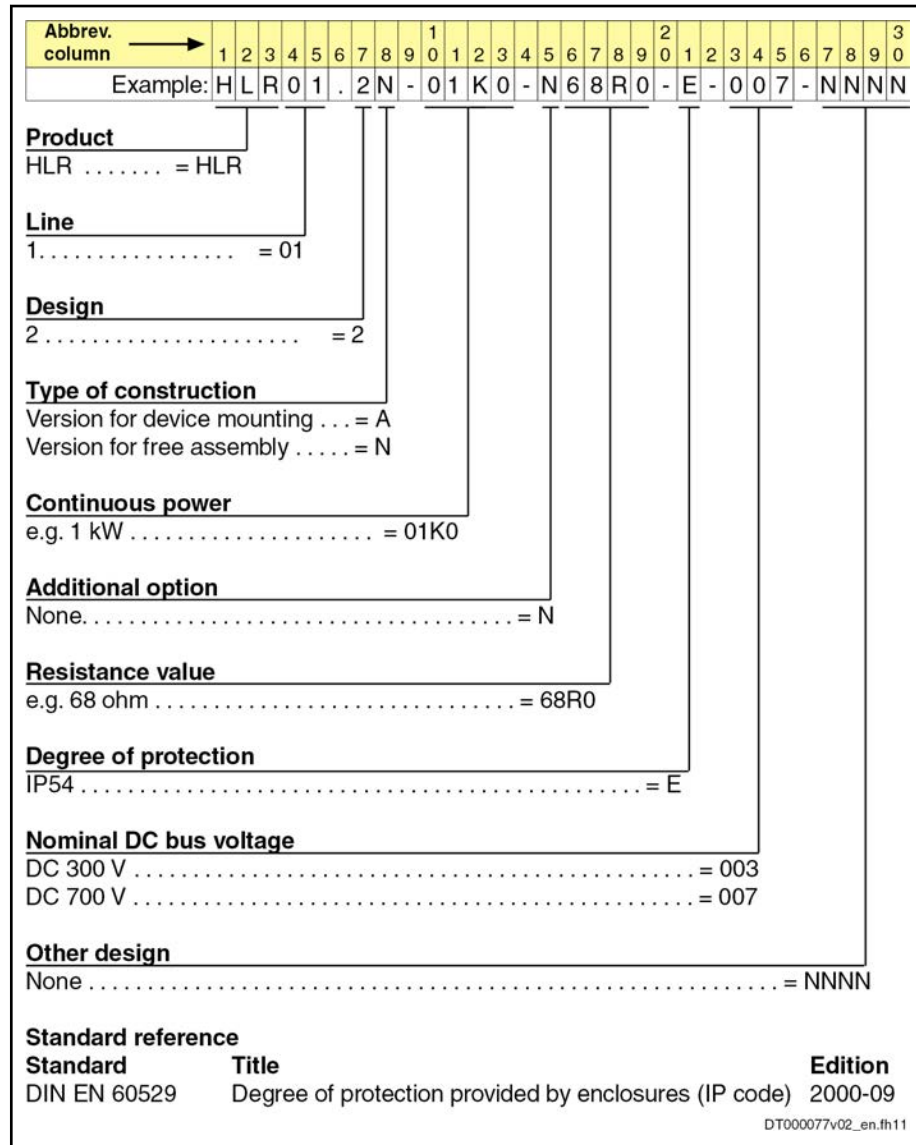


Fig.8-66: Type Code

Braking resistor HLR01.2N-...	Drive controller HCS01.1E-W00...	Continuous power [W]	Peak power [kW]	Resistance [Ω]	Energy absorption [kWs]	Weight [kg]
0100-N100R-E-003	03, 06, 09, 13	100	1,6	100	1	tbd
0100-N180R-E-007	05, 08	100	4	180	2,4	tbd
01K0-N68R0-E-007	18-02	1000	2,2	68	10	4,2
	18-03, 28		10			
01K0-N28R0-E-007	54	1000	25	28	30	

Fig.8-67: External Braking Resistors HLR



Dimensions

HLR01.2N-01K0-N28R0, ...-N68R0

Boring Dimensions


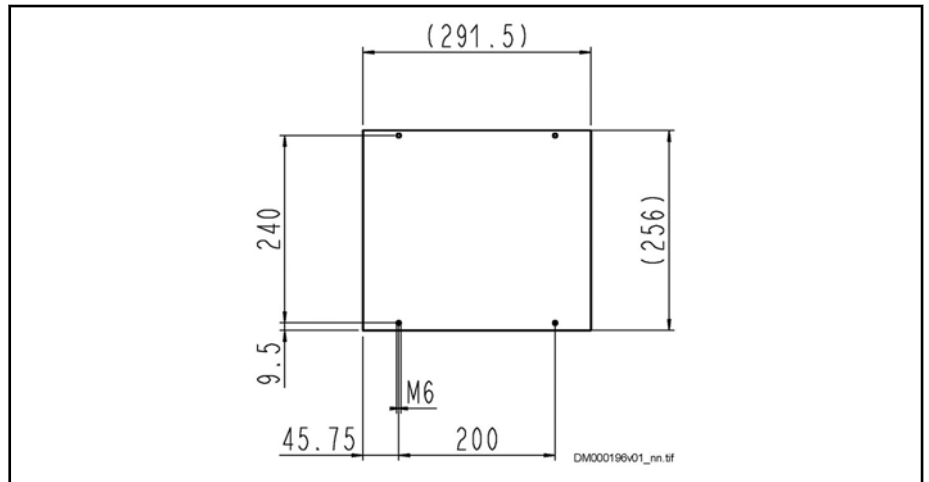


Fig.8-68: Boring Dimensions

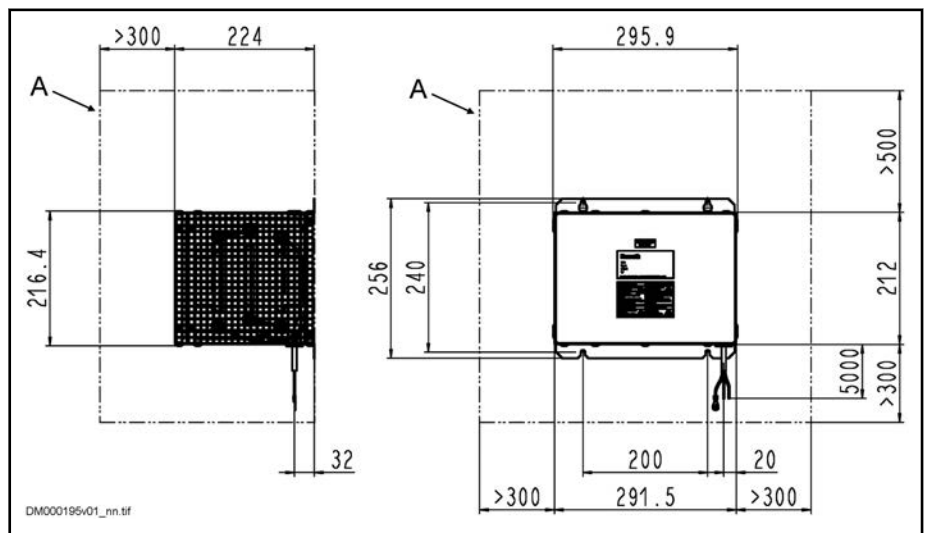
Dimensions (with Suspended Mounting)



A Minimum mounting clearance  
 Fig.8-69: Dimensions (with Suspended Mounting on the Wall)

## Cables, Accessories, Additional Components
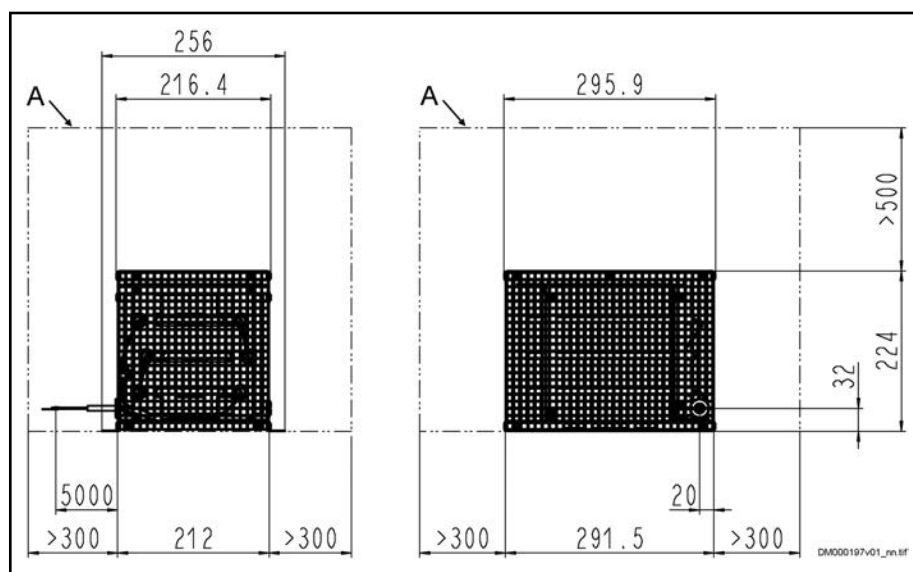
## Dimensions (with Upright Mounting)



A Minimum mounting clearance  
Fig. 8-70: Dimensions (with Upright Mounting on the Floor)

## Installation

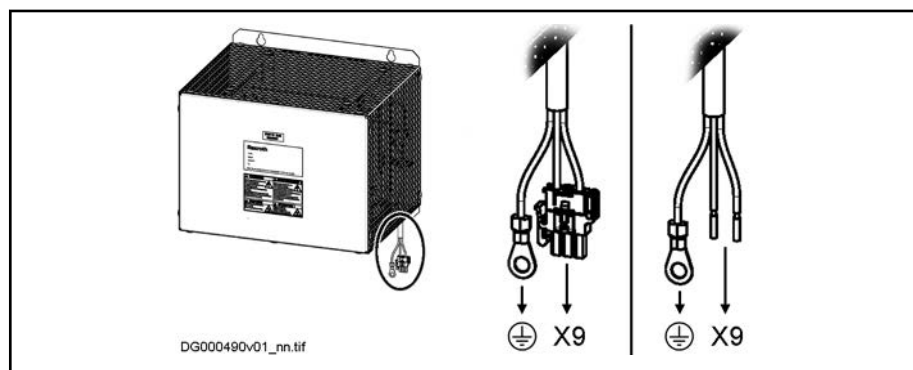


Fig. 8-71: Connection

When installing the braking resistor, observe the instructions given in the description of connection point X9.

### 8.3.5 DC Bus Capacitor Units HLC

#### Type Code

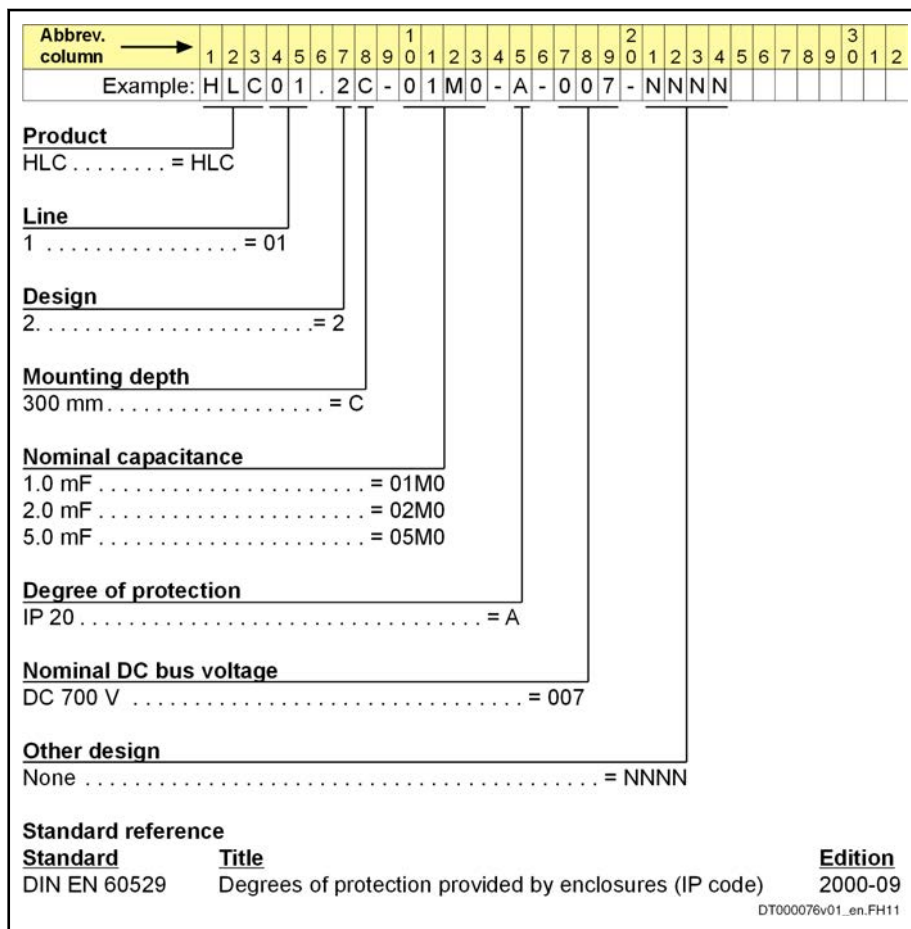


Fig. 8-72: Type Code

#### Technical Data

#### Technical Data


Description	Symbol	Unit	HLC01.2C-01M0	HLC01.2C-02M0	HLC01.2C-05M0
Allowed mounting position			G1		
Mass	m	kg	2,2	2,7	tbd
Allowed input voltage	U <sub>DC</sub>	V	DC 254...750		
DC bus capacitance	C <sub>DC</sub>	mF	1 ±20%	2 ±20%	5 ±20%
Power dissipation at continuous current and continuous DC bus power respectively (UL)	P <sub>Diss_cont</sub>	W	4,10	5,28	tbd
Maximum discharge time from U <sub>R_DC_On</sub> to DC 50 V	t <sub>ent_ZK</sub>	s	238	378	tbd
Allowed input current at L+ L-	I <sub>max(rms)</sub>	A	15	30	tbd

## Cables, Accessories, Additional Components

Description	Symbol	Unit	HLC01.2C-01M0	HLC01.2C-02M0	HLC01.2C-05M0
Insulation resistance (at DC 500 V)	$R_{is}$	Mohm	> 10	> 10	tbd
Cooling			Natural convection		

Fig.8-73: HLC - Technical Data
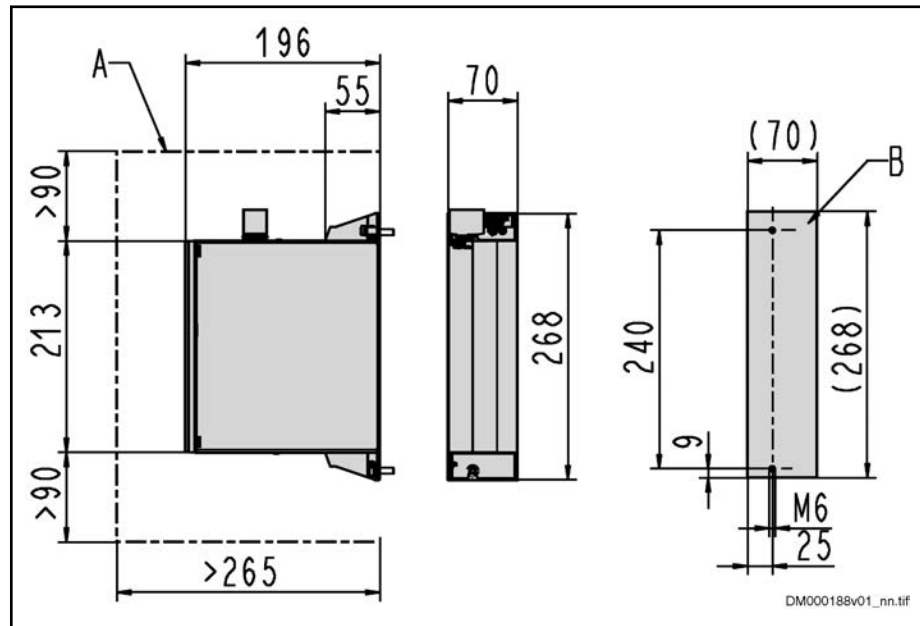
## Dimensions



A Minimum mounting clearance  
B Boring dimensions

Fig.8-74: Dimensions

## Connection

**⚠ WARNING**

**Lethal electric shock by live parts with more than 50 V!**

Before working on live parts: De-energize installation and secure power switch against unintentional or unauthorized re-energization.

Wait at least **30 minutes** after switching off the supply voltages to allow **discharging**.

Check whether voltage has fallen below 50 V before touching live parts!

Cables, Accessories, Additional Components

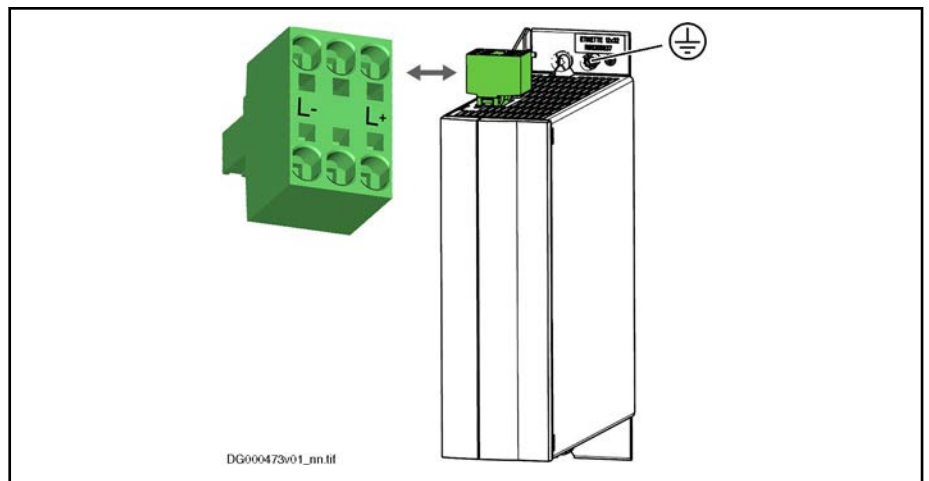


Fig. 8-75: Connection Points (DC Bus (L+ L-), Equipment Grounding Conductor)

<b>Equipment Grounding Conductor</b>	Connect the equipment grounding conductor via thread <b>M5</b> to the housing of the device (identification mark $\oplus$ ; tightening torque: <b>5 Nm</b> ). The <b>M5×12</b> screw required for this purpose is part of the supplied accessory HAS09.
<b>DC Bus</b>	Connect HLC01 to HCS01 with twisted lines: L+ to L+; L- to L- Technical data of the connection point: See description of connection point X77.
<b>Arrangement</b>	Place the HLC next to the most powerful drive controller of a drive system.
<b>Operation</b>	
<b>Mains Choke</b>	Always operate the DC bus capacitor units together with the mains choke assigned to the drive controller (see Data for mains voltage supply → Assigned type of mains choke). Special case "HCS01.1E-W0018-_-03" (in the technical data, no mains choke has been assigned to this drive controller): Use the mains choke "HNL01.1E-1000-N0012-A-500-NNNN".
<b>DC Bus Coupling</b>	Information on DC bus coupling: See index entry "DC bus → Coupling, DC bus capacitor unit".




## 9 Environmental Protection and Disposal

### 9.1 Environmental Protection

<b>Production Processes</b>	The products are made with energy- and resource-optimized production processes which allow re-using and recycling the resulting waste. We regularly try to replace pollutant-loaded raw materials and supplies by more environment-friendly alternatives.														
<b>No Release of Hazardous Substances</b>	Our products do not contain any hazardous substances which may be released in the case of appropriate use. Normally, our products will not have any negativ influences on the environment.														
<b>Significant Components</b>	Basically, our products contain the following components: <table><tr><td><b>Electronic devices</b></td><td><b>Motors</b></td></tr><tr><td>• steel</td><td>• steel</td></tr><tr><td>• aluminum</td><td>• aluminum</td></tr><tr><td>• copper</td><td>• copper</td></tr><tr><td>• synthetic materials</td><td>• brass</td></tr><tr><td>• electronic components and modules</td><td>• magnetic materials</td></tr><tr><td></td><td>• electronic components and modules</td></tr></table>	<b>Electronic devices</b>	<b>Motors</b>	• steel	• steel	• aluminum	• aluminum	• copper	• copper	• synthetic materials	• brass	• electronic components and modules	• magnetic materials		• electronic components and modules
<b>Electronic devices</b>	<b>Motors</b>														
• steel	• steel														
• aluminum	• aluminum														
• copper	• copper														
• synthetic materials	• brass														
• electronic components and modules	• magnetic materials														
	• electronic components and modules														

### 9.2 Disposal

<b>Return of Products</b>	Our products can be returned to our premises free of charge for disposal. It is a precondition, however, that the products are free of oil, grease or other dirt. Furthermore, the products returned for disposal must not contain any undue foreign material or foreign components. Send the products "free domicile" to the following address: <p style="text-align: center;">Bosch Rexroth AG Electric Drives and Controls Buergermeister-Dr.-Nebel-Strasse 2 97816 Lohr am Main, Germany</p>
<b>Packaging</b>	The packaging materials consist of cardboard, wood and polystyrene. These materials can be recycled anywhere without any problem. For ecological reasons, please refrain from returning the empty packages to us.
<b>Batteries and Accumulators</b>	Batteries and accumulators can be labeled with this symbol.  The symbol indicating "separate collection" for all batteries and accumulators is the crossed-out wheeled bin. The end user within the EU is legally obligated to return used batteries. Outside the validity of the EU Directive 2006/66/EC keep the stipulated directives. Used batteries can contain hazardous substances, which can harm the environment or the people's health when they are improper stored or disposed of. After use, the batteries or accumulators contained in Rexroth products have to be properly disposed of according to the country-specific collection.
<b>Recycling</b>	Most of the products can be recycled due to their high content of metal. In order to recycle the metal in the best possible way, the products must be disassembled into individual modules.

## Environmental Protection and Disposal

Metals contained in electric and electronic modules can also be recycled by means of special separation processes.

Products made of plastics can contain flame retardants. These plastic parts are labeled according to EN ISO 1043. They have to be recycled separately or disposed of according to the valid legal requirements.



## 10 Service and Support

Our worldwide service network provides an optimized and efficient support. Our experts offer you advice and assistance should you have any queries. You can contact us **24/7**.

**Service Germany** Our technology-oriented Competence Center in Lohr, Germany, is responsible for all your service-related queries for electric drive and controls.

Contact the **Service Helpdesk & Hotline** under:

Phone: **+49 9352 40 5060**  
Fax: **+49 9352 18 4941**  
E-mail: [service.svc@boschrexroth.de](mailto:service.svc@boschrexroth.de)  
Internet: <http://www.boschrexroth.com>

Additional information on service, repair (e.g. delivery addresses) and training can be found on our internet sites.

**Service worldwide** Outside Germany, please contact your local service office first. For hotline numbers, refer to the sales office addresses on the internet.

**Preparing information** To be able to help you more quickly and efficiently, please have the following information ready:

- Detailed description of malfunction and circumstances resulting in the malfunction
- Type plate name of the affected products, in particular type codes and serial numbers
- Your contact data (phone and fax number as well as your email address)



# 11 Appendix

## 11.1 Determining the Leakage Capacitance

The capacitances which generate so-called leakage currents against ground at the outputs of inverters are regarded as leakage capacitance  $C_{ab}$ . The decisive values for the total value  $C_{ab\_g}$  of the leakage capacitance are:

- Capacitances of output filters
- Capacitances of power cables (capacitance per unit length against shield and ground wire)
- Capacitances of motors (winding capacitance against housing)

The leakage capacitance consists of the values of power cable and motor of all individual drives operated at the mains filter.

Calculation:

$$C_{ab\_g} = C_{ab\_Mg} + C_{ab\_Kg}$$

$C_{ab\_g}$  Total value of leakage capacitance  
 $C_{ab\_Mg}$  Total value of leakage capacitance of motor  
 $C_{ab\_Kg}$  Total value of leakage capacitance of cable

*Fig. 11-1: Total Leakage Capacitance*

The total capacitance  $C_{ab\_Mg}$  results from the sum of capacitances of the individual motors. For these individual capacitances, see documentation of the motor. For a list of selected values, see Appendix of this documentation under "Leakage Capacitances".

$$C_{ab\_Mg} = C_{ab(Motor\_1)} + C_{ab(Motor\_2)} \dots + C_{ab(Motor\_n)}$$

$C_{ab(motor)}$  Leakage capacitance of a motor  
*Fig. 11-2: Total Leakage Capacitance of Motor*

$$C_{ab\_Kg} = C_{Y\_K\ typ\ (K1)} \times l_{(K1)} + C_{Y\_K\ typ\ (K2)} \times l_{(K2)} \dots + C_{Y\_K\ typ\ (Kn)} \times l_{(Kn)}$$

$C_{Y\_K\ typ}$  Capacitance per unit length of cables  
 $C_{ab\_Kg}$  Total leakage capacitance of cables  
*Fig. 11-3: Total Leakage Capacitance of Cables*

The total capacitance  $C_{ab\_Kg}$  consists of the sum of capacitances of the individual power cables. For the individual capacitances per unit length, see the technical data of the power cables. For a list of selected values, see Appendix of this documentation under "Leakage Capacitances".

## 11.2 Leakage Capacitances

### 11.2.1 Leakage Capacitance of Motors

The data of the typical leakage capacitance refer to the total capacitance of the power connections U, V, W against the motor housing. The tables below contain excerpts from the technical data of motors:

## Appendix

## Leakage Capacitance

Type	Leakage capacitance of the component	
	$C_{ab}$ nF	
MSM019A-0300-NN-__-__-__	0,3	
MSM019B-0300-NN-__-__-__	0,7	
MSM031B-0300-NN-__-__-__	0,7	
MSM031C-0300-NN-__-__-__	1,4	
MSM041B-0300-NN-__-__-__	1,3	
Last modification: 2008-11-20		

Fig. 11-4: MSM019A-0300-NN, MSM019B-0300-NN

Type	Leakage capacitance of the component	
	$C_{ab}$ nF	
MSK030B-0900-NN-__-__-__	0,7	
MSK030C-0900-NN-__-__-__	1,3	
MSK040B-0450-NN-__-__-__	1,3	
MSK040C-0450-NN-__-__-__	2,0	
MSK043C-0600-NN-__-__-__	2,1	
MSK050B-0300-NN-__-__-__	2,1	
MSK050C-0300-NN-__-__-__	2,6	
MSK060B-0300-NN-__-__-__	2,1	
MSK060C-0300-NN-__-__-__	2,1	
MSK061B-0300-NN-__-__-__	1,8	
MSK061C-0300-NN-__-__-__	2,4	
MSK070C-0150-NN-__-__-__	3,8	
MSK070D-0150-NN-__-__-__	5,0	
MSK070E-0150-NN-__-__-__	6,3	
MSK071C-0200-FN-__-__-__	4,6	
MSK071D-0200-FN-__-__-__	6,9	
MSK071E-0200-FN-__-__-__	8,9	
MSK075C-0200-NN-__-__-__		
MSK075D-0200-NN-__-__-__	4,6	
MSK075E-0200-NN-__-__-__	5,8	
MSK076C-0300-NN-__-__-__	6,5	
MSK100A-0200-NN-__-__-__	4,8	
Last modification: 2008-12-10		

Type	Leakage capacitance of the component	
	$C_{ab}$ nF	
MSK100B-0200-NN-__-__-__	10,3	
MSK100C-0200-NN-__-__-__	12,8	
MSK100D-0200-NN-__-__-__	17,6	
MSK101C-0200-FN-__-__-__	6,2	
MSK101D-0200-FN-__-__-__	13,2	
MSK101E-0200-FN-__-__-__	15,2	
MSK103A-0300-NN-__-__-__	1,5	
MSK103B-0300-NN-__-__-__	2,1	
MSK103D-0300-NN-__-__-__	6,0	
MSK131B-0200-NN-__-__-__	14,3	
MSK131D-0200-NN-__-__-__	27,7	
Last modification: 2008-12-10		

Fig. 11-5: MSK - Leakage Capacitance (Excerpt)

See also Rexroth IndraDyn - Technical Data.

## 11.2.2 Leakage Capacitance of Power Cables

The power cables (bulk cables) of the "RKL" line by Rexroth have the capacitances per unit length listed below. The values refer to the sum of the single capacitances of power cores 1, 2 and 3 against the overall shield.

See also Rexroth Connection Cables - Data Sheet Bulk Cables.

### Data Sheet Excerpt- Bulk Cables

Type	Cross section of power core	Leakage capacitance
	mm <sup>2</sup>	$C_{Y,K,typ}$ nF/m
INK0653	1,0	0,6
INK0650	1,5	0,8
INK0602	2,5	0,7
INK0603	4,0	0,8
INK0604	6,0	0,8
INK0605	10,0	1,0
INK0606	16,0	1,2
INK0607	25,0	1,1
INK0667	35,0	1,2
INK0668	50,0	1,3
Last modification: 2007-11-08		

Fig. 11-6: INK - Technical Data (Excerpt)

## Appendix

## Data Sheet Excerpt- Bulk Cables

Type	Cross section of power core	Leakage capacitance $C_{Y,K,typ}$
	mm <sup>2</sup>	nF/m
REH0800	2,5	0,2

Fig. 11-7: REH - Technical Data (Excerpt)



Approximate calculation is allowed with the following values:

- Cross section 1 ... 6 mm<sup>2</sup>: 1 nF/m
- Cross section 10 ... 50 mm<sup>2</sup>: 1.2 nF/m

# Index

## Symbols

1V <sub>pp</sub>	
Encoder, 12 V supply voltage .....	159
Encoder, 5 V supply voltage .....	158
24V supply	
Connection point .....	125
Continuous power .....	64
Installation .....	64
Peak current .....	64
Project planning .....	60

## A

Acceptance tests.....	101
Accessories	
Battery .....	213
Battery box, SUP-E01-MSM-BATTERY-BOX .....	211
DC bus connector .....	210
HAS09 .....	205
Mounting and connection accessories (HAS09) .....	205
Overview .....	203
Replacement battery .....	213
SUP-E03-DKC*CS-BATTERY .....	213
X77, DC bus connector .....	210
Accumulators.....	253
Additional components.....	232
Overview .....	204
Additional documentations.....	20
ADVANCED	
Control panel .....	186
HCS01 .....	9, 37
Ambient conditions.....	47
Analog input	
Connection point X32 .....	129
Technical data .....	185
Appropriate use.....	23
Applications .....	23
Approvals.....	101
Autotransformers.....	233
Axis coupling.....	93

## B

BASIC	
HCS01 .....	9, 37
Batteries.....	253
Battery	
Battery box .....	211
Buffer battery for absolute value encoder of an MSM motor .....	219
Refresh .....	214
Replace .....	214
Replacement battery .....	213
SUP-E03-DKC*CS-BATTERY .....	213

## B

Bb relay contact	
Connection point X47 .....	129
Control circuit for the mains connection .....	92
DC bus coupling .....	100
Technical data .....	185
Braking resistor	
External, connection .....	123
External, data .....	246
HLR, data .....	246
Integrated, connection .....	123
Integrated, data .....	197
Parameterization .....	123
Brief description	
HCS01 .....	35

## C

Cables	
Capacitance .....	259
Documentation .....	20
Encoder cable for MSM motors with absolute value encoder (RKG0041) .....	217
Encoder cables, selection table .....	46
Leakage capacitance .....	259
Motor power cables, allowed cable lengths ..	46
Motor power cables, selection .....	45
Overview .....	203
RKB0011 .....	127, 128
RKB0013 .....	127, 128
RKG0033 .....	153
RKG0035 .....	158
RKG0036 .....	157
RKG0041 .....	217
RKG4200 .....	155
Shield connection .....	134
Calculations	
Leakage capacitance .....	257
Mains choke HNL .....	90
Mains-side phase current .....	76
Phase current .....	76
CANopen	
Bus length .....	181
Connection point X61 .....	142
Display elements .....	180
Main features .....	180
Network dimension .....	181
Capacitance	
Additional capacitance (DC bus capacitor unit) .....	249
Motors .....	257
Power cables .....	259
CCC, China Compulsory Certification.....	102
CE label.....	101
Central supply.....	73
Certifications.....	101

## Index

**C**

Characteristic	
Fuses	82
China Compulsory Certification (CCC)	102
Combined encoder for SSI	
Encoder, 5 V supply voltage	164
Communication module	
Multi-Ethernet - ET	125
PROFIBUS PB, interface	137
PROFIBUS PB, signal specification	180
Compatibility	
With foreign matters	51
Components	
Combining	35
Mounting positions	58
Supplied	95
Supplying	95
Condition as supplied	105
Conditions	
Ambient and operating conditions	47
Configuration	
Drive system	35
Connection	
24V supply (X13)	125
Analog input (X32)	129
Bb relay contact (X47)	129
Braking resistor (X9)	123
Connection diagram	110
Connection points, overview	111
Control voltage (X13)	125
DC bus (X77)	131
Digital inputs, digital output (X31)	128
Electrical	110
Encoder emulation (X8)	136
Equipment grounding conductor	114
Ground	135
Mains	66
Mains (X3)	115
Module bus (X47)	129
Motor (X5)	119
Motor encoder (X4)	117
Motor holding brake (X6)	121
Motor temperature monitoring (X6)	121
Multi-Ethernet (X24, X25)	125
Optional encoder (X8)	135
Probe	128
PROFIBUS (X30)	137
Shield	134
Connection diagram	110
Connection points	
HCS01, overview	111
On-board	114
Optional	135
Contained substances	
see "Significant components"	253
Control cabinet	
Area A, interference-free	146

**C**

...Control cabinet	
Area B, interference-susceptible	148
Area C, strongly interference-susceptible	148
Cooling	49
Design	49
Interference areas	145
Control circuit	
For the mains connection	92
HCS01	92
Control lines	
Cable, shield connection	135
Control panel	
ADVANCED control panel	186
HAP01	16
Standard control panel	186
Type code	16
Type plate	107
Control voltage	
Connection point X13	125
Continuous power	64
Data	187
Determining the power requirement	61
For drive systems	60
HCS01	187
Installation	64
Looping through	66
Loop-through contacts (X13)	125
Peak current	64
Project planning	60
Requirements to the power supply unit	64
Supply with control voltage 24 V	60
Converter HCS01	7
Cooling	
HCS01	56
Corner-grounded delta mains	72
Coupling	
Axis coupling	93
DC bus coupling	93
C-UL-US listing	101
C-UR-US listing	102
<b>D</b>	
Data	
Ambient conditions	47
HCS01, braking resistor (external)	246
HCS01, braking resistor (integrated)	197
HCS01, control voltage	187
HCS01, cooling	56
HCS01, DC bus	195
HCS01, dimensional drawings	51
HCS01, dimensions	51
HCS01, distances	56
HCS01, housing dimensions	55
HCS01, insulation	55
HCS01, inverter	199
HCS01, mains voltage	189



## D

...Data	
HCS01, mass .....	55
HCS01, power dissipation .....	56
HCS01, temperatures .....	56
HCS01, UL ratings .....	50
Operating conditions .....	47
DC bus	
Connection point X77 .....	131
Connector, accessories .....	210
Coupling .....	93
Coupling, DC bus capacitor unit .....	99
Data, HCS01 .....	195
DC bus capacitor unit, HLC .....	249
Group .....	93
Declaration of conformity.....	101
Derating vs. installation altitude	
Overvoltage limiter .....	48
Design	
HCS01 .....	35
Devices	
Mounting positions .....	58
Supplied .....	95
Supplying .....	95
Digital inputs	
Connection point X31 .....	128
Probe .....	128, 182
Technical data .....	181
Technical data; safety technology "L options" .....	182
Digital outputs	
Connection point X31 .....	128
Technical data .....	183
Technical data; safety technology "L options" .....	184
Dimensional drawing	
HCS01.1E-W0003/5/6/8/9/13 .....	52
HCS01.1E-W0018/28 .....	53
HCS01.1E-W0054 .....	54
Dimensional drawings	
HCS01 .....	51
Dimensioning	
Line cross sections and fuses .....	77
Dimensions	
HCS01.1E-W0003/5/6/8/9/13 .....	52
HCS01.1E-W0018/28 .....	53
HCS01.1E-W0054 .....	54
Display elements	
Multi-Ethernet, LEDs .....	177
Disposal.....	253
Distances	
HCS01 .....	56
Documentation	
Additional documentations .....	20
Cables .....	20
Changes .....	19
Drive systems .....	20

## D

...Documentation	
Editions .....	19
Firmware .....	20
Motors .....	20
Overview .....	20
Purpose .....	18
Reference documentations .....	20
System components .....	20
Drive range	
Rexroth IndraDrive Cs .....	7
Drive system.....	25
Configuring .....	35
System structure .....	14
DST	
Autotransformers .....	233
<b>E</b>	
EC	
Standard encoder evaluation .....	153
ECONOMY	
HCS01 .....	9, 37
Electrical connection.....	110
Electrical project planning.....	60
Electric drive system.....	25
EM	
Encoder emulation .....	136
Encoder emulation, data .....	173
EMC	
Limit value classes .....	88
Measures for design and installation .....	142
Encoder	
12 V power supply .....	168
1V <sub>pp</sub> , 12 V supply voltage .....	159
1V <sub>pp</sub> , 5 V supply voltage .....	158
5 V power supply .....	167
Cable length .....	169
Combined encoder for SSI, 5 V supply voltage .....	164
Connection, X4 .....	117
Connection, X8, encoder emulation .....	136
EC, Standard encoder evaluation .....	153
Emulated encoder systems .....	136
EnDat 2.1, 5 V supply voltage .....	157
HIPERFACE®, 12 V supply voltage .....	156
Input circuit, resolver .....	171
Input circuit, sine signals .....	170
Input circuit, square-wave signals .....	171
MSK/QSK encoder interface .....	155
MSM, 5V supply voltage .....	153
Optional, X8 .....	135
Power supply .....	167
Resolver encoder system without encoder data memory .....	165
Resolver power supply .....	168
RGS0001/K01, D-Sub connector for encoder cable and battery connection .....	223

## Index

**E**

...Encoder	
Signal assignment to actual position value	172
SSI, 12 V supply voltage	163
SSI, 5 V supply voltage	162
Standard encoder evaluation EC	153
Supported encoder systems	12, 117, 153
TTL, 12 V supply voltage	161
TTL, 5 V supply voltage	160
Encoder cable length	169
Encoder emulation	
EM	136
EM, data	173
EnDat 2.1	
Encoder, 5 V supply voltage	157
Environmental protection	253
Equipment grounding conductor	
Connection	114
ET	
Multi-Ethernet, LEDs	177
Optional module, Multi-Ethernet	125
EtherCAT	
Multi-Ethernet, interface	126
Ethernet	
Multi-Ethernet, interface	125
External braking resistor	
Data	246
External wiring	82

**F**

Field wiring	82
File numbers	
UL	101
Firmware	
Assigned HCS01 device types	38
Documentation	20
MPB-16VRS	38
MPB-17VRS	38
MPC-17VRS	38
MPE-16VRS	38
MPE-17VRS	38
Type plate	107
Types	38
Variants	39
Foreign matters	
Compatibility	51
Functional equipment	
HCS01	9, 37
Functional features	
HCS01	9
Fuses	
Characteristic	82
Circuit breaker	82
Design	82
Dimensioning	77

**G**

G1, G2, G3, G4, G5	
Mounting positions	58
Ground	
Connection	135
Ground connection	135
Ground connections	149
Group supply	74

**H**

H10, H11, H12, H13	
LEDs	177, 179
H22	
LED	177, 179
H24	
LED	177, 179
H4, H5	
LED (CANopen)	180
Hall sensor adapter box	
SHL03.1-NNN-S-NNN	227
Hall sensor box	
SHL02.1	166
HAP01	
Control panel	16
HAS09	
Accessories (for mounting and installation)	205
Hazardous substances	253
HCS01	
ADVANCED	9, 37
BASIC	9, 37
Block diagram	35
Braking resistor (external), data	246
Braking resistor (integrated), data	197
Brief description	35
Combination with MSM	39
Connection points, overview	111
Control voltage, data	187
DC bus, data	195
Design (block diagram)	35
Dimensional drawings	51
Dimensions	51
Distances	56
ECONOMY	9, 37
Emulated encoder systems	136
Firmware	38
Functional equipment	9, 37
Functional features	9
Housing dimensions	55
Insulation	55
Inverter, data	199
Mains voltage, data	189
Mass	55
Mounting in the control cabinet	109
MSM, selection table	39
On-board connection points	114
Optional connection points	135

## H

...HCS01	
Performance features .....	11
Power dissipation .....	56
Scope of supply .....	107
Select appropriate converter .....	35
Sound pressure level .....	55
Supported encoder systems .....	12, 117, 153
Temperatures .....	56
Type code .....	15
UL ratings .....	50
HIPERFACE® .....	156
HLC	
DC bus capacitor unit .....	249
Type code .....	249
HLR	
Braking resistor (external) .....	246
Type code .....	246
HNL	
Type code .....	242
Type plate .....	243
HNL01.1E .....	244
Technical data .....	244
Housing dimensions	
HCS01 .....	55
<b>I</b>	
Identification	
Of the components .....	106
Inappropriate use .....	24
Consequences, exclusion of liability .....	23
Individual components	
Combining .....	35
Individual supply .....	73
IndraDrive Cs	
Overview .....	7
Target applications .....	8
Input	
Analog, X32 .....	129
Digital, X31 .....	128
Probe .....	128
Installation	
24V supply .....	64
Connection points .....	110
Control voltage supply .....	64
Electrical connection .....	110
EMC measures .....	142
Ground connections .....	149
Signal lines .....	150
Installation conditions .....	47
Installation methods .....	83
Installation type	
B1 .....	78, 81
B2 .....	79, 81
E .....	80, 81
NFPA .....	81
UL508A .....	81

## I

Installation types .....	83
Insulation	
HCS01 .....	55
Insulation resistance test .....	105
Integrated braking resistor	
Data .....	197
Internal wiring .....	82
Inverter, data	
HCS01 .....	199
IT mains type .....	70

## L

L+, L-	
DC bus .....	131
L3	
Safe Torque Off .....	141
L4	
Safe Torque Off, Safe Brake Control .....	141
Leakage capacitance	
Calculations .....	257
Determining .....	257
Motors .....	257
Power cables .....	259
Leakage currents	
Cause .....	67
LED	
H10, H11, H12, H13 .....	177, 179
H22 .....	177, 179
H24 .....	177, 179
H4, H5 (CANopen) .....	180
Limit value classes	
EMC (table) .....	88
Line	
Correction factor .....	82
Cross sections, dimensioning .....	77
Fuses, dimensioning .....	77
Listing	
C-UL-US .....	101
C-UR-US .....	102

## M

Mains	
Grounded via outer conductor .....	72
Types .....	69
Mains choke	
Combining with mains filter .....	91
Determining .....	90
HNL01.1E .....	244
Infeeding .....	244
Selection .....	90
Types .....	242
Mains connection	
Central supply .....	73
Circuit .....	92
Control circuit .....	92

## Index

**M**

...Mains connection	
Group supply .....	74
Individual supply .....	73
Mains current .....	76
Parallel operation .....	75
Power .....	76
Project planning .....	66
Transformer, mains filter, mains choke .....	91
Types .....	72
X3 .....	115
Mains contactor	
Dimensioning .....	90
Mains current.....	76
Mains filter	
Combining with mains choke .....	91
Dimensioning .....	84
Motor fan .....	147
NFD, NFE .....	237
Other loads .....	147
Mains-side phase current	
Calculating .....	76
Mains transformer	
Dimensioning .....	83
Selecting .....	83
Mains types.....	69
Mains voltage	
HCS01 .....	189
Mass	
HCS01 .....	55
Measures of radio interference suppression	
For relays, contactors, switches, chokes, inductive loads .....	151
Mechanical project planning.....	51
microSD memory card	
ADVANCED control panel .....	187
PFM04.1 .....	107
Module bus	
Connection point X47 .....	129
Parameterization .....	100
Motor	
Cable, shield connection .....	135
Cable lengths .....	46
Capacitance .....	257
Connection (X5) .....	119
Connection motor encoder (X4) .....	117
Connection motor holding brake (X6) .....	121
Connection motor temperature monitor- ing (X6) .....	121
Documentation .....	20
Leakage capacitance .....	257
Motor holding brake .....	121
Motor output (X5) .....	119
Motor temperature monitoring .....	121
MSM, supported MSM motors .....	39
Supported motors .....	39
Third-party motors .....	40

**M**

Motor fan	
Mains filter .....	147
Mounting	
HCS01 in the control cabinet .....	109
Mounting positions	
Definitions .....	58
MPB-16VRS.....	38
MPB-17VRS.....	38
MPC-17VRS.....	38
MPE-16VRS.....	38
MPE-17VRS.....	38
MSK/QSK encoder interface	
For S1/M1, S2/M2, S3/M3, S5/M5 encod- er systems .....	155
MSM	
Combination with HCS01 .....	39
Encoder, 5V supply voltage .....	153
Multi-Ethernet	
Display elements (LEDs) .....	177
Interface .....	125
Optional .....	137
<b>N</b>	
NFD	
Data, electrical .....	240
Data, mechanical .....	238
Mains filter .....	237
NFE	
Data, electrical .....	240
Data, mechanical .....	238
Mains filter .....	237
<b>O</b>	
On-board connection points	
HCS01 .....	114
Operating conditions.....	47
Operation at partial load.....	76
Optional connection points.....	135
Optional encoder	
X8 .....	135
Optional module	
CN, CANopen .....	142
EC, Standard encoder evaluation .....	153
EM, encoder emulation .....	136
ET, Multi-Ethernet .....	125
L3, Safe Torque Off .....	141
L4, Safe Torque Off, Safe Brake Control ...	141
PB, PROFIBUS, interface .....	137
PB, PROFIBUS, signal specification .....	180
S, standard control panel .....	186
Output, digital	
X31 .....	128
Overall connection diagram.....	110
Overview	
Accessories .....	203

## O

...Overview	
Additional components .....	204
Cables .....	203
Overvoltage limiter	
Derating vs. installation altitude .....	48

## P

Packaging.....	253
Parallel operation.....	75
PB	
Optional module, interface .....	137
Optional module, signal specification .....	180
PELV.....	29
Performance features	
HCS01 .....	11
PFM04.1	
microSD memory card .....	107
Phase current	
Calculating .....	76
Probe	
Technical data .....	182
Probe input (X31).....	128
Production processes.....	253
PROFIBUS	
Interface .....	137
Signal specification .....	180
ProfiNet	
Multi-Ethernet, interface .....	126
Project planning	
Electrical project planning .....	60
Mechanical project planning .....	51
Protective extra-low voltage.....	29

## R

RCCB.....	66
RCD.....	66
Recycling.....	253
Reference documentations.....	20
Refresh	
Battery (SUP-E03-DKC*CS-BATTERY) .....	214
Relay contact	
Connection point X47 .....	129
Control circuit for the mains connection .....	92
Technical data .....	185
Type 2 .....	185
Residual-current-operated circuit breakers.....	66
Resolver	
Encoder, input circuit .....	171
Encoder system without encoder data memory .....	165
Return of products.....	253
Rexroth IndraDrive Cs	
Drive range .....	7
Overview .....	7
System presentation .....	7

## R

...Rexroth IndraDrive Cs	
Target applications .....	8
RGS0001/K01	
D-Sub connector for encoder cable and battery connection .....	223
RKB0011.....	127, 128
RKB0013.....	127, 128
RKG0033.....	153, 212
RKG0034.....	212
RKG0035.....	158
RKG0036.....	157
RKG0041	
Encoder cable for MSM motors with ab- solute value encoder .....	217
RKG4200.....	155
RLS0778/K06	
DC bus connector .....	210

## S

S	
Optional module, standard control panel ...	186
Safe Brake Control	
X49 .....	141
Safe Torque Off	
L3 .....	141
X49 .....	141
Safe Torque Off, Safe Brake Control	
L4 .....	141
Safety instructions for electric drives and controls.....	25
Safety technology	
L3 (Safe Torque Off) .....	141
L4 (Safe Torque Off, Safe Brake Control) ..	141
Scope of supply	
HCS01 .....	107
sercos III	
Interface .....	125
Optional .....	137
Shield	
Connection .....	134
Control lines .....	135
Motor cable .....	135
SHL02.1	
Hall sensor box .....	166
SHL03.1-NNN-S-NNN	
Hall sensor adapter box .....	227
Signal lines	
Installation .....	150
Significant components.....	253
Sine signals	
Encoder, input circuit .....	170
Sound pressure level	
HCS01 .....	55
Square-wave signals	
Encoder, input circuit .....	171

## Index

**S**

SSI	
Encoder, 12 V supply voltage .....	163
Encoder, 5 V supply voltage .....	162
Standard control panel.....	186
Standard encoder evaluation EC.....	153
Standard motors	
Voltage load .....	202
State-of-the-art.....	23
Storage	
Of the components .....	108
SUP-E01-MSM-BATTERYBOX	
Battery box .....	211
SUP-E03-DKC*CS-BATTERY.....	213
Supplied components.....	95
Supplied devices.....	95
Supply	
With control voltage 24 V .....	60
With mains voltage .....	66
Supplying components.....	95
Supplying devices.....	95
Support	
See service hotline .....	255
System structure.....	14

**T**

Target applications	
IndraDrive Cs .....	8
Technical data	
Analog input .....	185
Digital inputs .....	181
Digital inputs; safety technology "L options" .....	182
Digital outputs .....	183
Digital outputs; safety technology "L options" .....	184
HCS01, power section .....	187
Relay contact .....	185
See also index entry "Data" .....	153
Test	
Customer-side .....	105
Factory-side .....	105
Insulation resistance .....	105
Voltage test .....	105
Third-party motors	
At drive controllers .....	40
TN-C mains type.....	70
TN-S mains type.....	69
Transformers.....	232
Transport	
Of the components .....	108
TTL	
Encoder, 12 V supply voltage .....	161
Encoder, 5 V supply voltage .....	160
TT system.....	71
Type code	
HAP01 .....	16

**T**

...Type code	
HCS01 .....	15
HLC .....	249
HLR .....	246
HNL .....	242
Type plate	
Arrangement at the device .....	106
Control panel .....	107
Device .....	106
Firmware .....	107
HNL .....	243

**U**

UL	
File numbers .....	101
Listing .....	101, 102
Ratings, HCS01 .....	50
Ungrounded mains.....	70
Use	
Appropriate use .....	23
Inappropriate use .....	24

**V**

Voltage test.....	105
-------------------	-----

**X**

X13	
Control voltage (24 V) .....	125
X22/X23	
Multi-Ethernet / sercos III .....	137
X24, X25	
Multi-Ethernet .....	125
X3	
Mains connection .....	115
X30	
PROFIBUS PB .....	137
X31	
Digital inputs, digital output .....	128
X32	
Analog input .....	129
X4	
Motor encoder .....	117
X47	
Bb relay contact, module bus .....	129
X49	
Safe Torque Off, Safe Brake Control .....	141
X5	
Motor output .....	119
X6	
Motor temperature monitoring and motor holding brake .....	121
X61	
CANopen .....	142
X77	
DC bus connection .....	131

**X**  
...X77  
DC bus connector ..... 210  
**X8**  
Encoder emulation ..... 136

**X**  
...X8  
Optional encoder ..... 135  
**X9**  
Braking resistor ..... 123





# Notes

Bosch Rexroth AG  
Electric Drives and Controls  
P.O. Box 13 57  
97803 Lohr, Germany  
Bgm.-Dr.-Nebel-Str. 2  
97816 Lohr, Germany  
Tel. +49 9352 18 0  
Fax +49 9352 18 8400  
[www.boschrexroth.com/electrics](http://www.boschrexroth.com/electrics)



R911322210